

Canon LASER SHOT LBP6300dn Quick Setup Guide


SPA Guía de instalación rápida

KOR 간편 설치 안내서

POR Guia de Instalação Rápida

THA คู่มือการติดตั้งด่วน

VIE Huống dẫn Cài đặt Nhanh

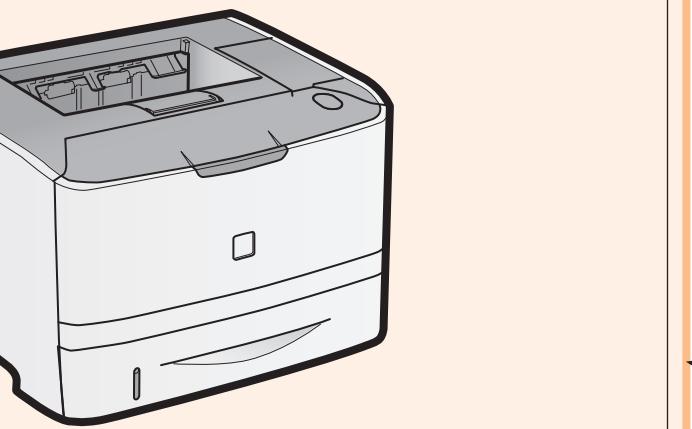

Read this guide first.

Please read this guide before operating this product.
After you finish reading this guide, store it in a safe place for future reference.

SPA Lea esta guía primero.

Por favor, lea esta guía antes de usar este producto.
Después de leer esta guía, guárdela en un lugar seguro para posteriores consultas.

POR Leia este manual primeiro.

Leia este manual antes de utilizar o produto.
Após ter lido o manual, guarde-o em um local seguro para consultas futuras.

VIE Đọc số tay hướng dẫn này trước tiên.

Hãy đọc số tay hướng dẫn này trước khi vận hành sản phẩm này.
Sau khi bạn đọc xong số tay hướng dẫn này, hãy cất nó ở một nơi an toàn để tham khảo về sau.

The precautions to install the printer safely are described on the back side.
Before the installation, read the precautions carefully.

SPA Las precauciones para instalar la impresora de modo seguro se describen en el reverso.

Lea atentamente las precauciones antes de llevar a cabo la instalación.

POR As precauções para a instalação segura estão descritas na parte posterior da impressora.

Antes da instalação, leia com cuidado as precauções.

VIE Các lưu ý để cài đặt máy in một cách an toàn được mô tả ở mặt sau.

Trước khi lắp đặt, đọc những lưu ý này cẩn thận.



1 Confirm the supplied accessories.

SPA Verifique los accesorios suministrados.
THA ตรวจสอบอุปกรณ์เสริมที่ให้มา

KOR 부속된 액세서리를 확인해 주십시오.
VIE Xác nhận các phụ kiện đi kèm.

Check!

Did you remove all the packing materials?

SPA ¿Ha retirado todos los materiales de embalaje?
THA คุณได้นำสิ่งที่ห่อห้อมดหรือไม่?


KOR 모든 포장재를 제거했습니까?
VIE Bạn đã gỡ bỏ tất cả vật liệu đóng gói chưa?

5 Load paper.

SPA Cargue papel.
THA ใส่กระดาษ

KOR 용지를 넣습니다.
VIE Nạp giấy.


POR Carregue o papel.

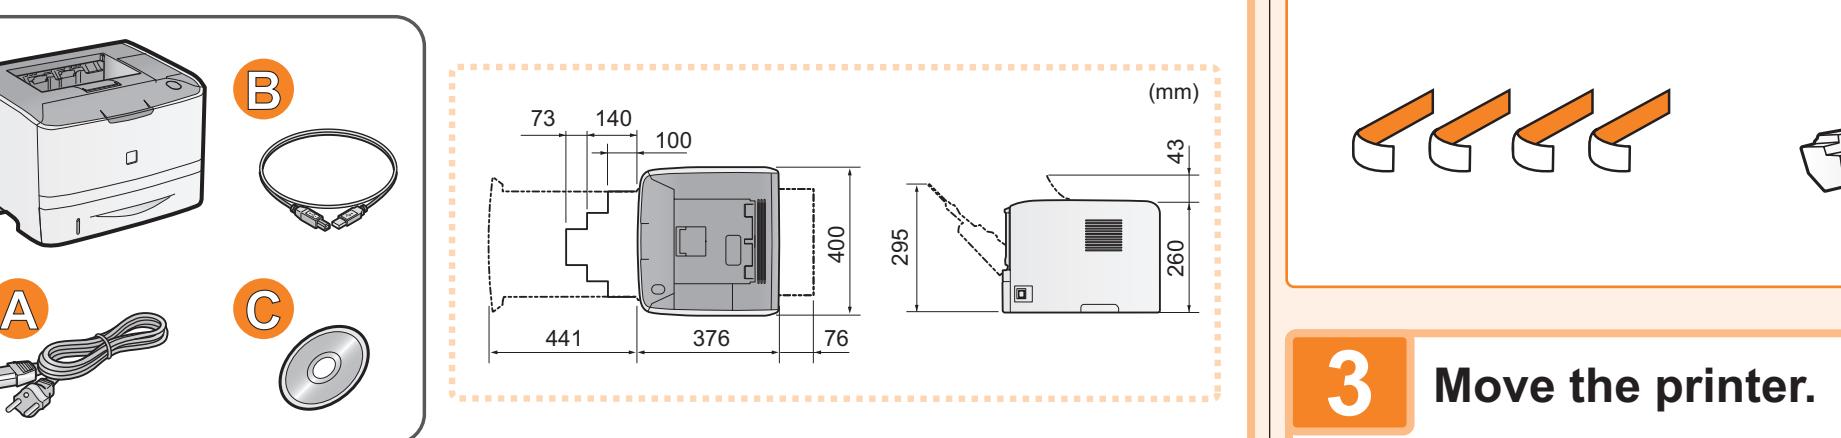

2 Remove the packing materials.

SPA Retire los materiales de embalaje.
THA นำวัสดุที่ห่อห้อม


KOR 포장재를 제거합니다.
VIE Gỡ bỏ vật liệu đóng gói.

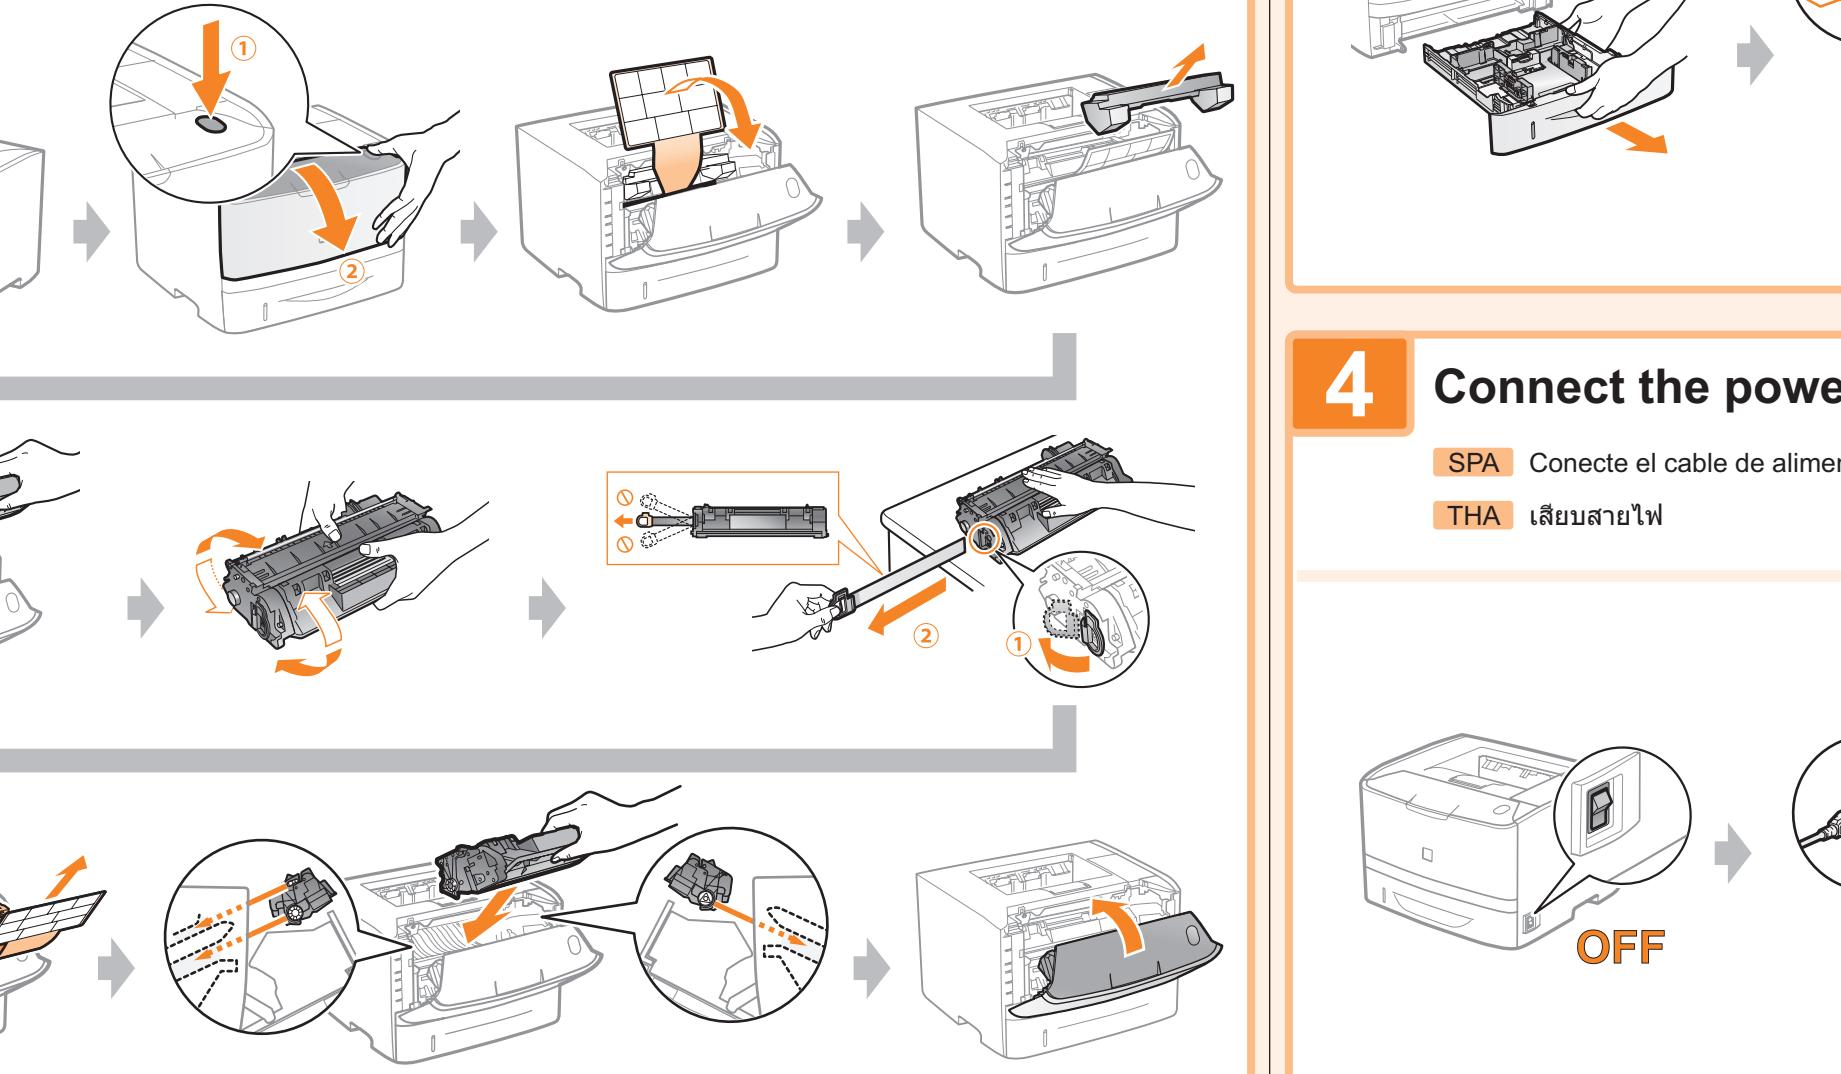

3 Move the printer.

SPA Desplace la impresora.
THA ย้ายเครื่องพิมพ์

KOR 프린터를 이동시킵니다.
VIE Di chuyển máy in.


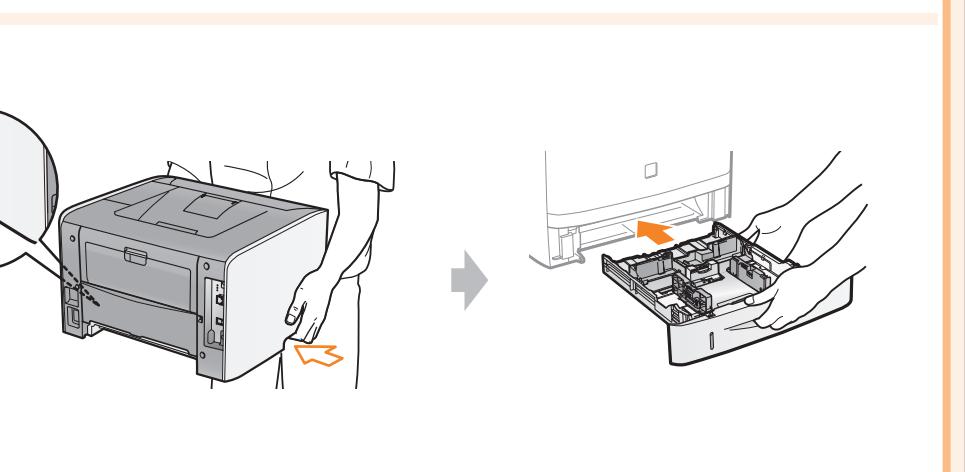


Up to here
SPA Hasta aquí
POR Até aqui
VIE Nâng lên đây

4 Connect the power cord.

SPA Conecte el cable de alimentación.
THA เสียบสายไฟ


KOR 전원 코드를 연결합니다.
VIE Kết nối dây nguồn.

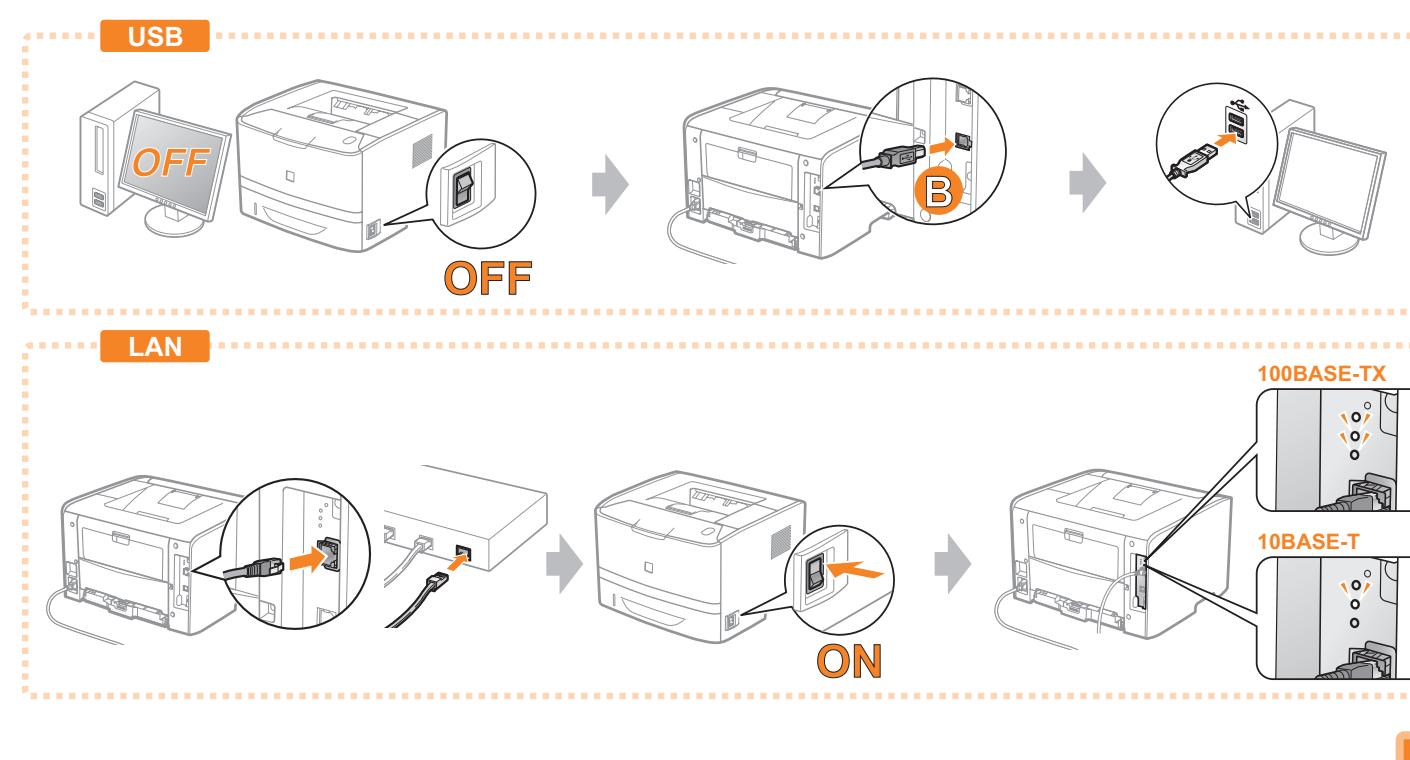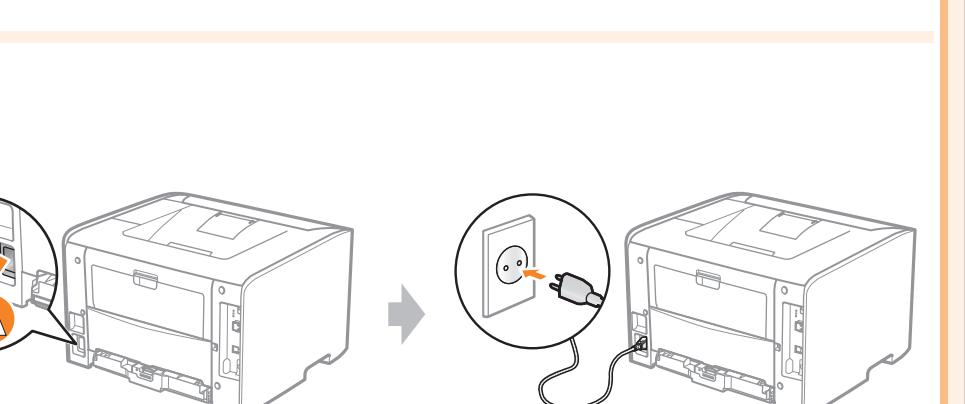

7

Install the driver.


SPA Instale el controlador.
KOR 드라이버를 설치합니다.
POR Instale o driver.
THA ติดตั้งไดรเวอร์

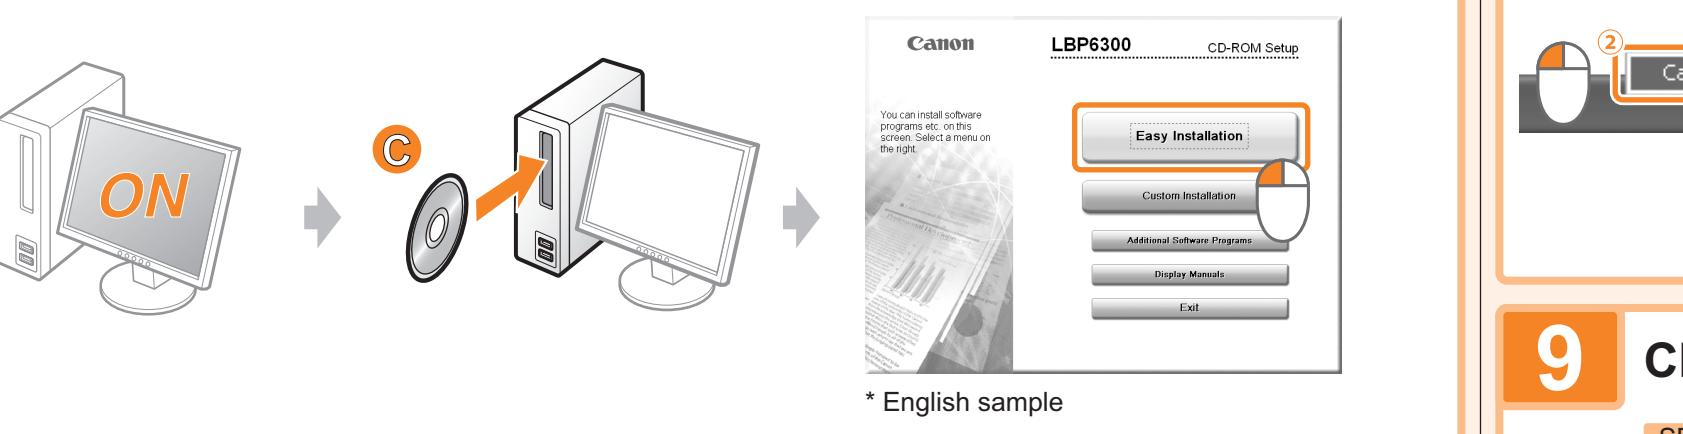**Follow the instructions on the screen.**

SPA Siga las instrucciones de la pantalla.
KOR 화면의 지시에 따릅니다.
POR Siga as instruções na tela.
THA ปฏิบัติตามคำแนะนำบนหน้าจอ

? If you have any questions about operations, see the e-Manual.

SPA Si tiene alguna pregunta sobre las operaciones, consulte el e-Manual.
KOR 조작에 관해 궁금한 점이 있으시면 전자설명서를 참조하십시오.
POR Se tiver qualquer pergunta sobre as operações, consulte o manual eletrônico.
THA หากคุณมีปัญหาใดๆ เกี่ยวกับการท่ามาน โปรดอ่านแบบอิเล็กทรอนิกส์

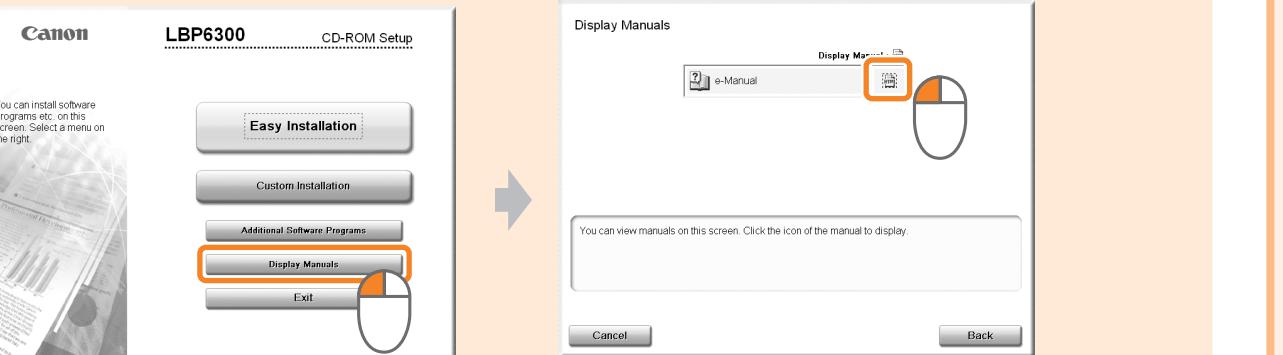


8

Register a paper size.

SPA Registre un tamaño de papel.
KOR 용지 크기를 등록합니다.
POR Registre um tamanho de papel.
THA ลงทะเบียนขนาดกระดาษ
VIE Cài đặt trình điều khiển

**9 Check the operation.**


SPA Compruebe el funcionamiento.
KOR 작동을 확인합니다.
POR Verifique a operação.
THA ตรวจสอบการทำงาน

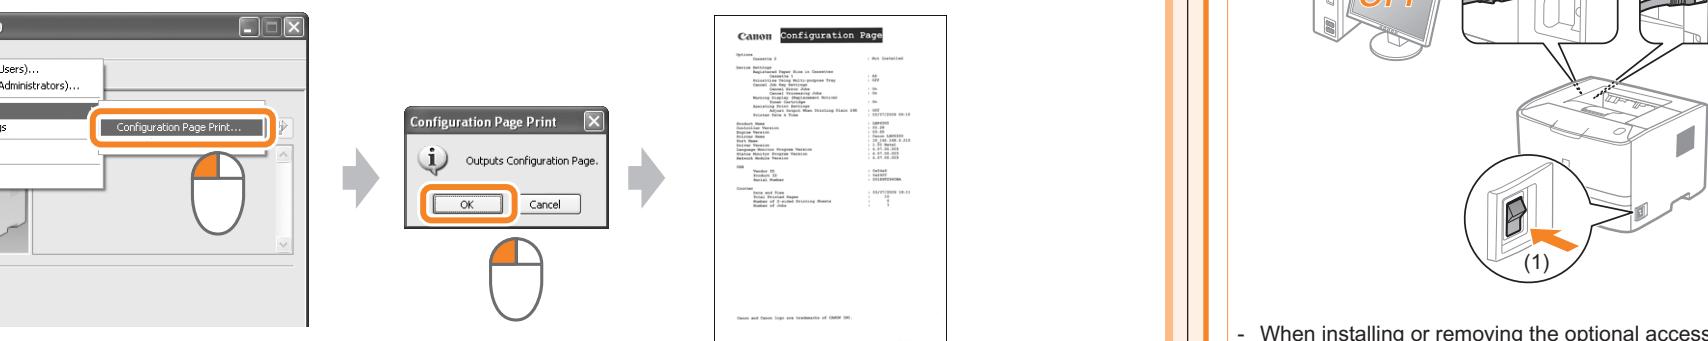**Setup finished.**

SPA Instalación finalizada.
KOR 설치가 완료되었습니다.
POR Instalação concluída.
THA การตั้งค่าเสร็จสิ้น
VIE Cài đặt hoàn tất.

10 Next, see the e-Manual.

SPA A continuación, consulte el e-Manual.
KOR 다음으로 전자설명서를 참조해 주십시오.
POR Em seguida, consulte o manual eletrônico.
THA ขั้นตอนไป โปรดดูคู่มือแบบอิเล็กทรอนิกส์
VIE Tiếp theo, xem Hướng dẫn sử dụng điện tử.

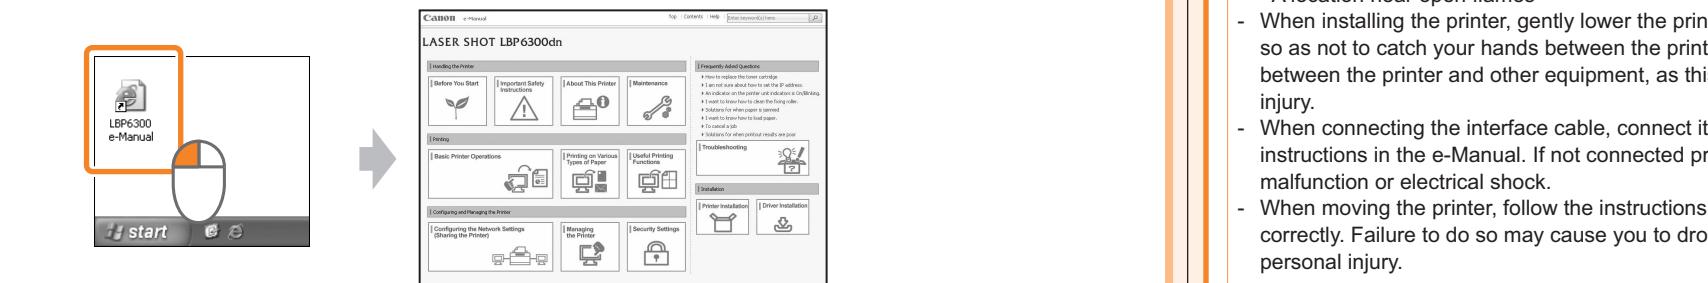

!

Important Safety Instructions

This manual describes only warnings and cautions for the installation and the power supply. Be sure to read "Important Safety Instructions" described in the e-Manual (HTML manual) included in the supplied CD-ROM also.

**Installation****WARNING**

- Do not install the printer in a location near alcohol, paint thinner, or other flammable substances. If flammable substances come into contact with electrical parts inside the printer, this may result in a fire or electrical shock.
- Do not place the following items on the printer.
 - Necklaces and other metal objects
 - Cups, vases, flowerpots, and other containers filled with water or liquids

If these items come into contact with a high-voltage area inside the printer, this may result in a fire or electrical shock.
If these items are dropped or spilled inside the printer, immediately turn OFF the power switch (1) and disconnect the interface cables if they are connected (2). Then, unplug the power plug from the AC power outlet (3) and contact your local authorized Canon dealer.

Symbols**WARNING**

- Indicates a warning concerning operations that may lead to death or injury to persons if not performed correctly. To use the machine safely, always pay attention to these warnings.

CAUTION

- Indicates a caution concerning operations that may lead to injury to persons if not performed correctly. To use the machine safely, always pay attention to these cautions.

Power Supply**WARNING**

- Do not damage or modify the power cord. Also, do not place heavy objects on the power cord or pull on or excessively bend it, as this can cause electrical damage, resulting in fire or electrical shock.
- Keep the power cord away from all heat sources. Failure to do so can cause the power cord insulation to melt, resulting in a fire or electrical shock.

The power cord should not be taut, as this may lead to a loose connection and cause overheating, which could result in a fire.
If the power cord is stepped on, fixed with staples, or if heavy objects are placed on it. Continued use of a damaged power cord can lead to an accident, such as a fire or electrical shock.

- Do not plug or unplug the power plug with wet hands, as this can result in electrical shock.
- Do not plug the power cord into a multi-plug power strip, as this can result in a fire or electrical shock.
- Do not bundle up or tie up the power cord in a knot, as this can result in a fire or electrical shock.
- Insert the power plug completely into the AC power outlet. Failure to do so can result in a fire or electrical shock.

When installing or removing the optional accessories, be sure to turn the printer OFF, unplug the power plug, and then disconnect all the interface cables and power cord from the printer. Otherwise, the power cord or interface cables may be damaged, resulting in a fire or electrical shock.

CAUTION

- If excessive stress is applied to the connection part of the power cord, it may damage the power cord or the wires inside the machine may disconnect. This could result in a fire. Avoid the following situations:
 - Connecting and disconnecting the power cord frequently.
 - Tripping over the power cord.

The power cord is bent near the connection part, and continuous stress is being applied to the power outlet or the connection part.

- Applying a shock to the power connector.
- Do not use power cords other than the one provided, as this can result in a fire or electrical shock.

As a general rule, do not use extension cords. Using an extension cord may result in a fire or electrical shock.

CAUTION

- Do not use a power supply voltage other than that listed herein, as this may result in a fire or electrical shock.
- A damp or dusty location

A location exposed to smoke and steam, such as near a cookery or humidifier

- A location exposed to rain or snow
- A location near a water faucet or water
- A location exposed to direct sunlight
- A location subject to high temperatures
- A location near open flames

When lifting the printer, gently lower the printer to the installation site so as not to catch your hands between the printer and the floor or between the printer and other equipment, as this may result in personal injury.

- When connecting the interface cable, connect it properly by following the instructions in the e-Manual. If not connected properly, this may result in malfunction or electrical shock.

When moving the printer, follow the instructions in the e-Manual to hold it correctly. Failure to do so may cause you to drop the printer, resulting in personal injury.

English**WARNING**

- To avoid the risk of personal injury or damage to the printer, and for legal information, make sure to read the "Legal Notices" and "Important Safety Instructions" in the e-Manual included on the accompanying CD-ROM carefully before using the printer.

**KOR****경고**

- 인적 부상 또는 프린터의 손상을 피하기 위해서, 그리고 법적 정보에 관해서는 프린터 사용 전에 부속된 CD-ROM에 포함된 전자설명서의 "법적 고지 사항" 및 "주요 안전 지침"을 잘 읽어 주십시오.

**SPA****ADVERTENCIA**

- Para evitar el riesgo de sufrir lesiones personales o de causar daños a la impresora (y para información legal), asegúrese de leer atentamente los "Avisos legales" y las "Instrucciones de seguridad importantes" del e-Manual incluido en el CD-ROM suministrado antes de utilizar la impresora.

**POR****ATENÇÃO**

- Para evitar o risco de ferimentos ou danos à impressora e para obter informações legais, leia com cuidado as "Notificações legais" e "Instruções de segurança importantes" no manual eletrônico incluído no CD-ROM fornecido, antes de usar a impressora.

**THA****คำเตือน**

- เพื่อป้องกันความเสี่ยงต่อการบาดเจ็บทางร่างกายหรือความเสียหายต่อเครื่องพิมพ์ ตลอดจนความเสียหายของทรัพย์สิน ให้อ่าน "ข้อความทางกฎหมาย" และ "คู่มือแนะนำความปลอดภัยที่สำคัญ" ในคู่มือแบบอิเล็กทรอนิกส์ในแผ่น CD-ROM ที่แนบมาอยู่ภายในรัมเมอร์ของเครื่องพิมพ์

**VIE****CÁNH BẢO**

- Để tránh rủi ro về thương tích cá nhân hoặc hư hỏng máy in, và để biết thông tin pháp lý, đảm bảo đọc "Các Lưu Ý Về Luật Pháp" và "Các Chỉ dẫn An toàn Quan trọng" trong Hướng dẫn sử dụng điện tử có trong CD-ROM đi kèm một cách cẩn thận trước khi sử dụng máy in.

