



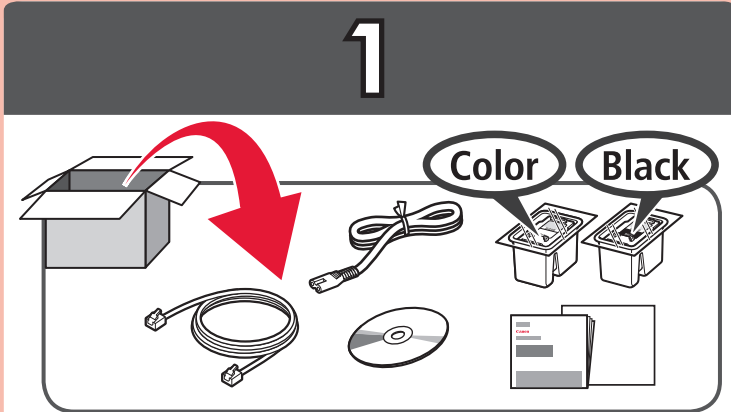


# Canon PIXMA MX397 series

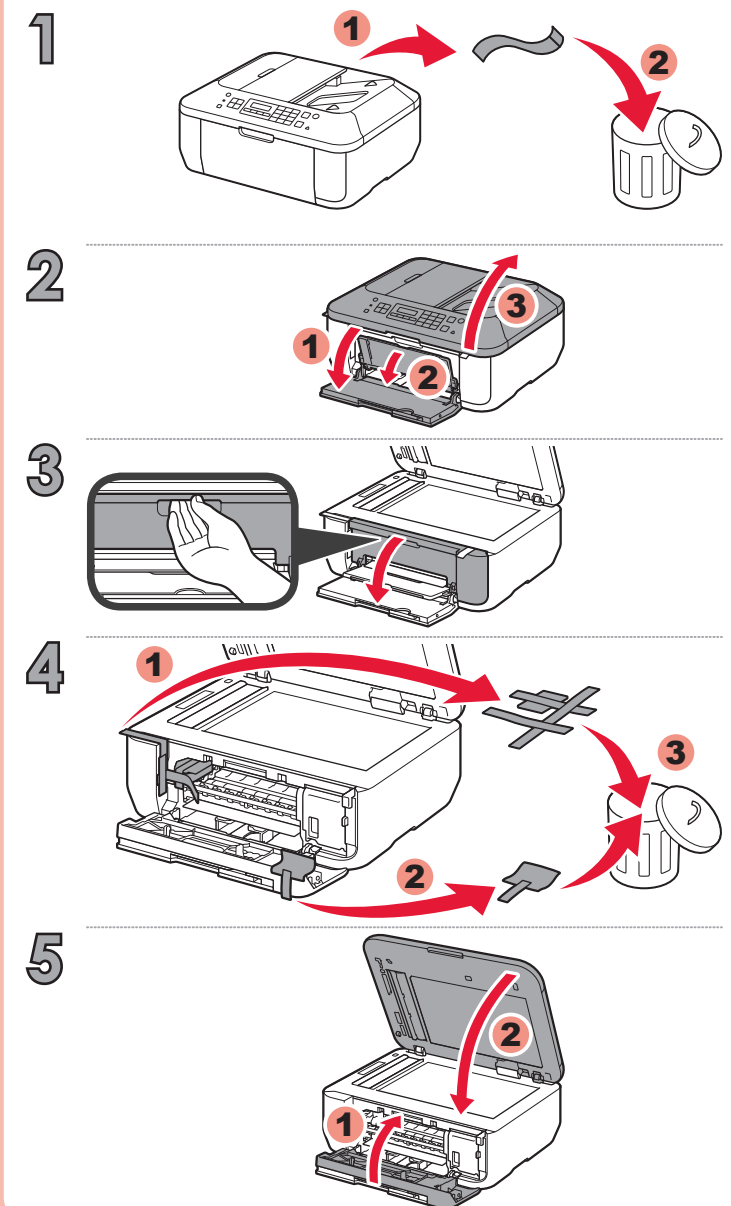


## 2




## 3

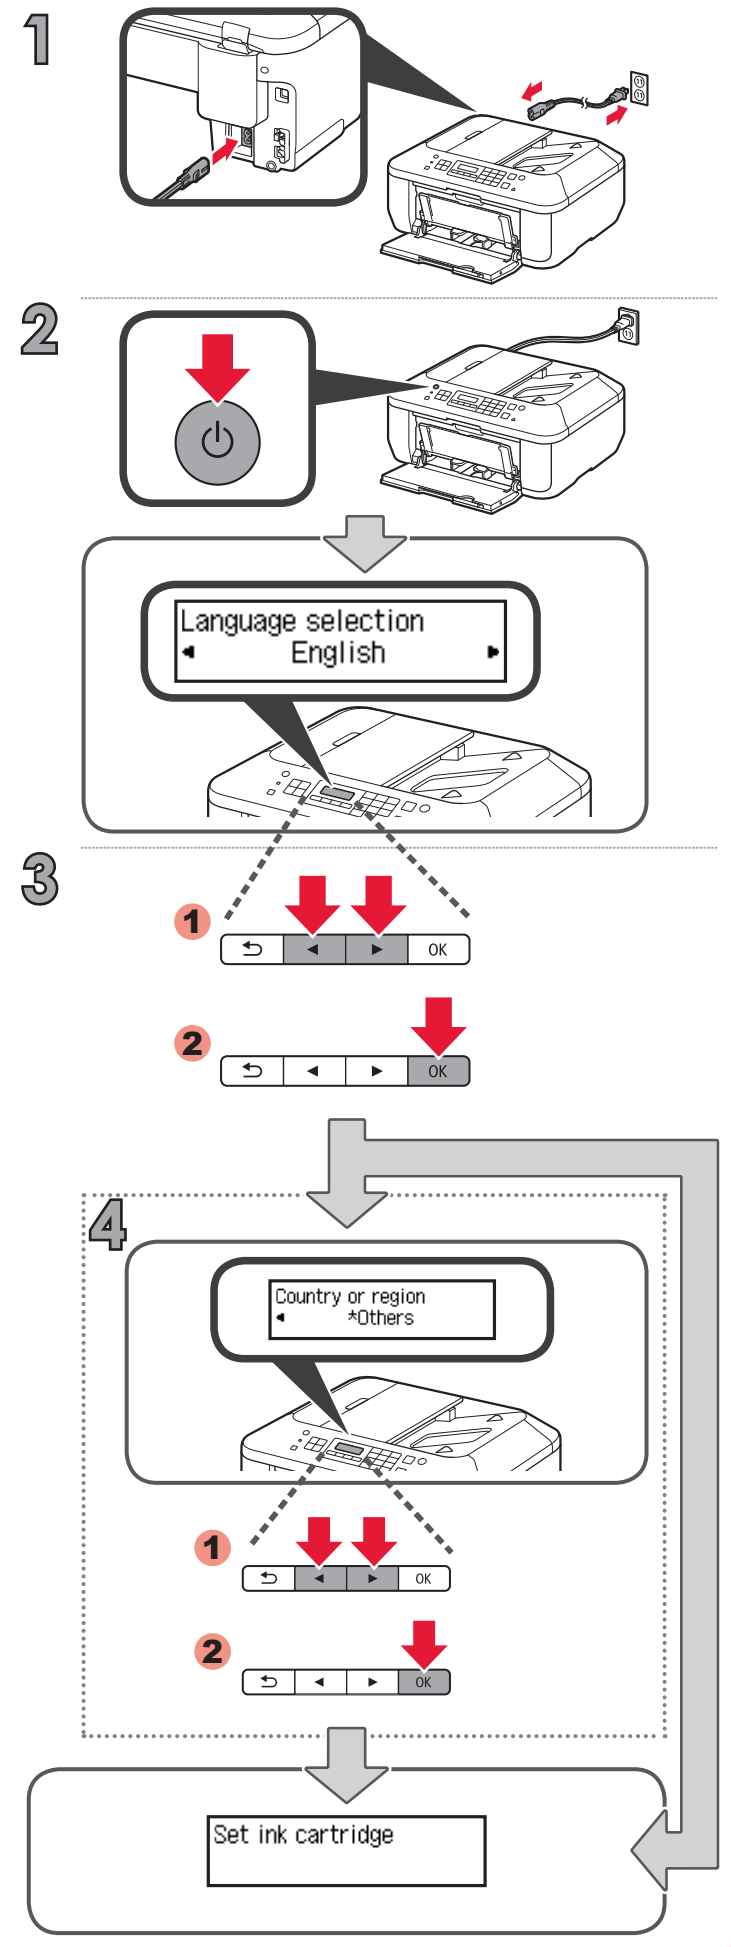


## 4

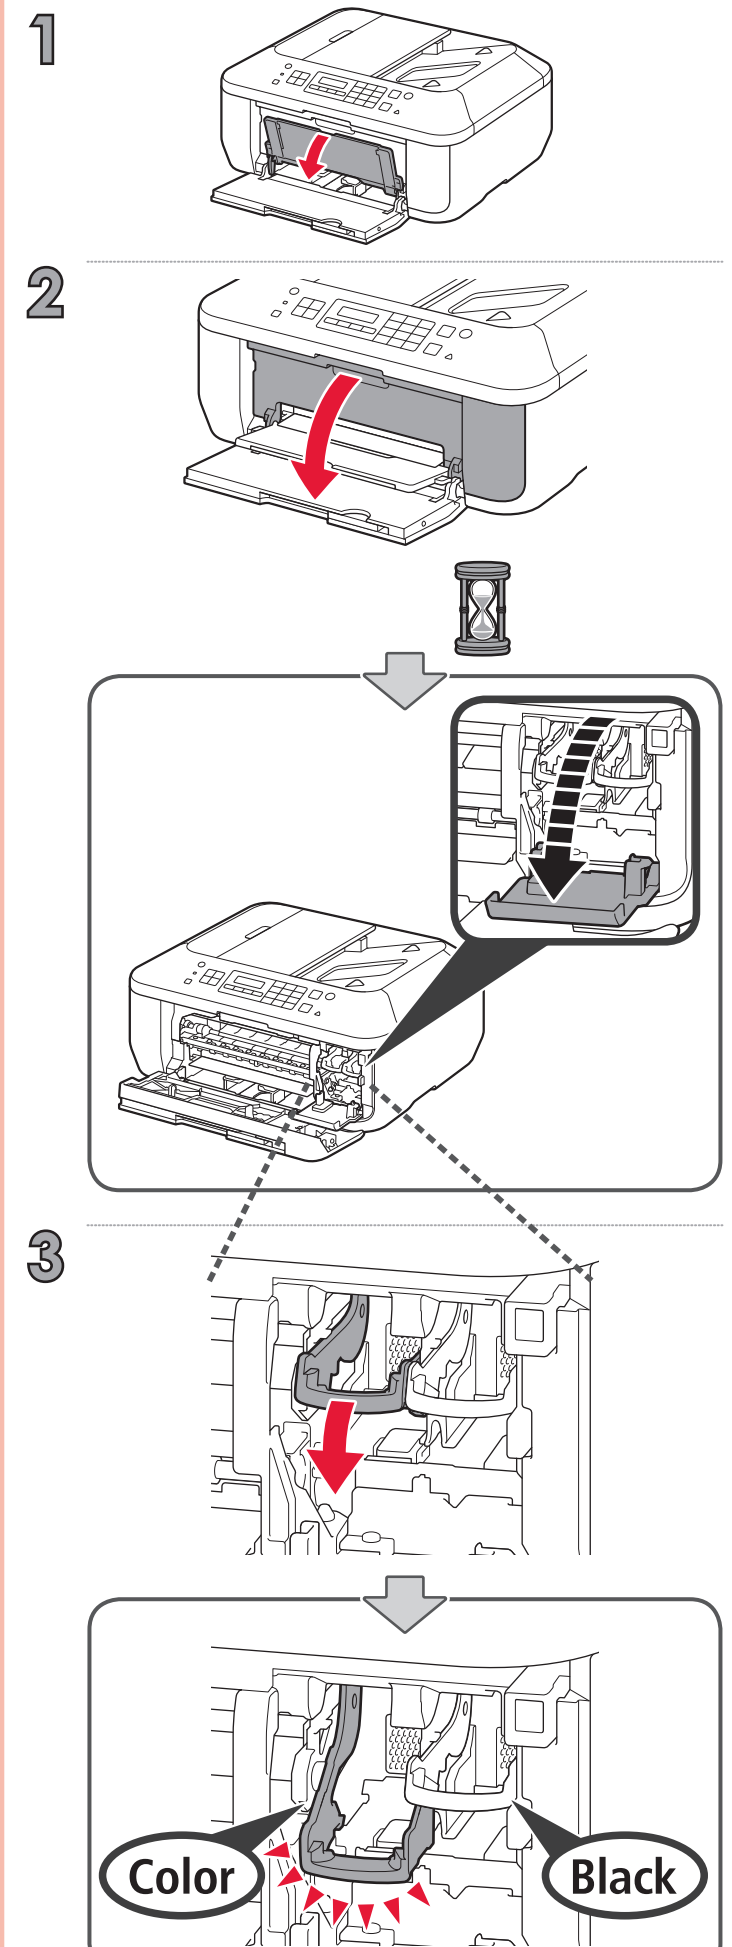


## 4

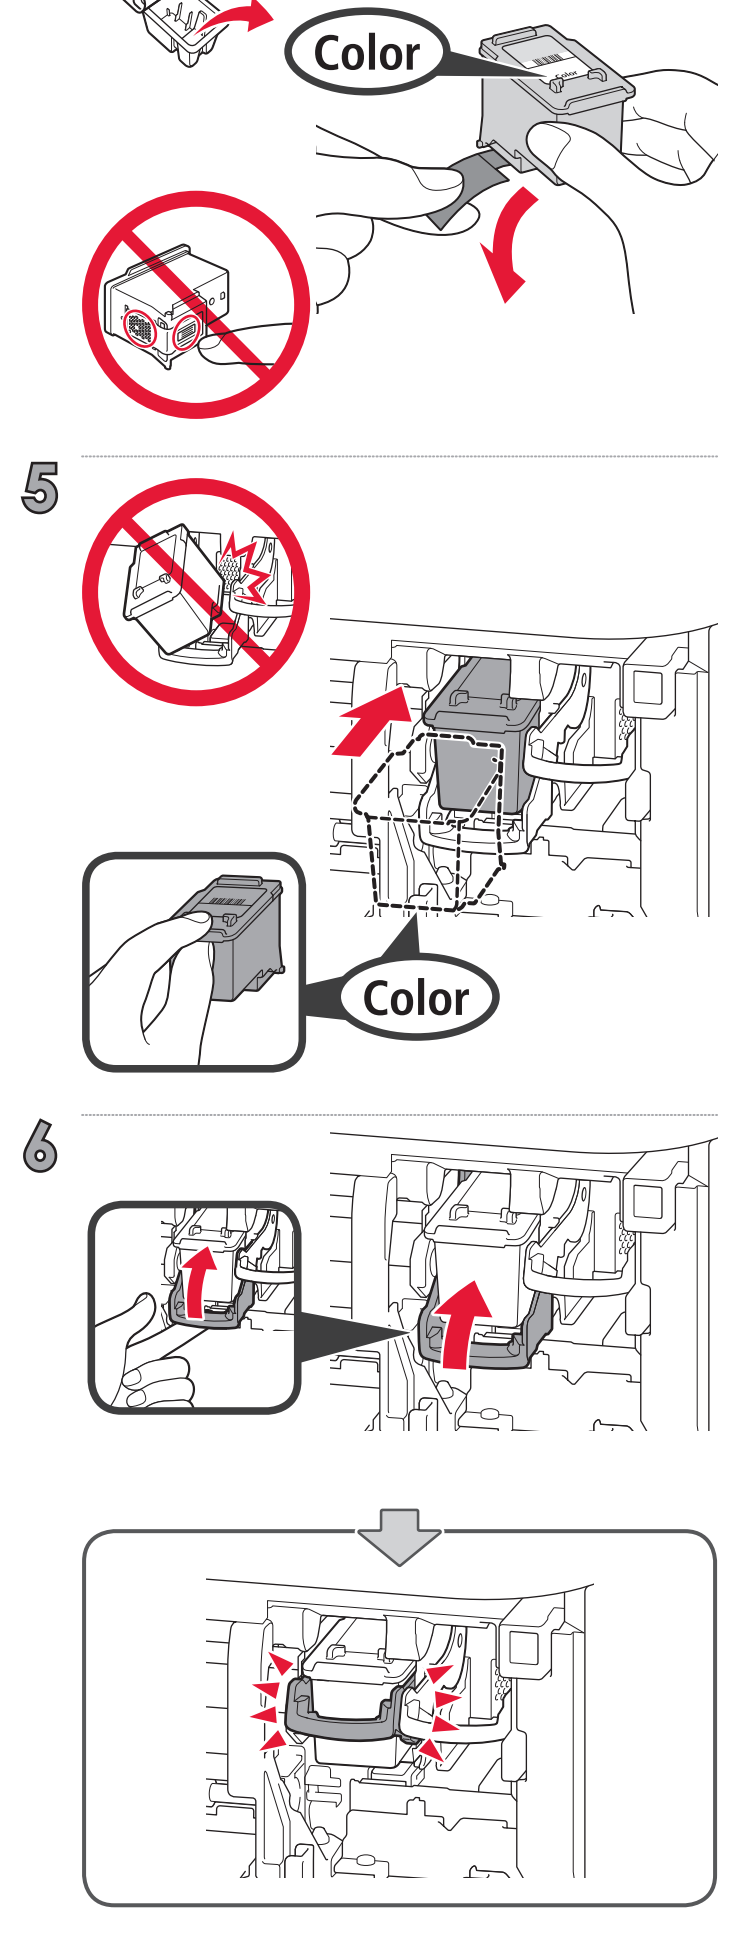

7

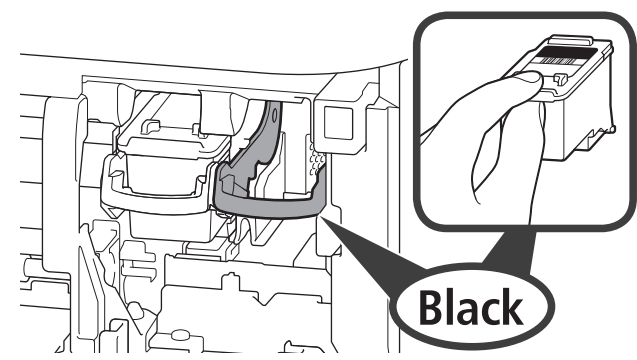


Black


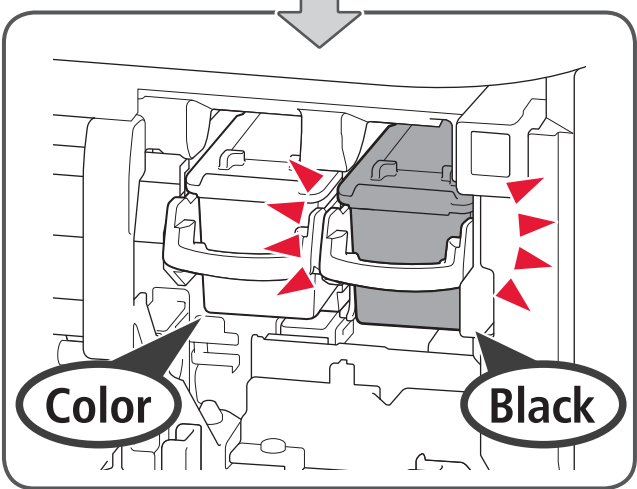


Color







Black

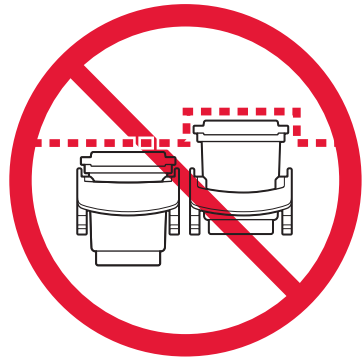





8

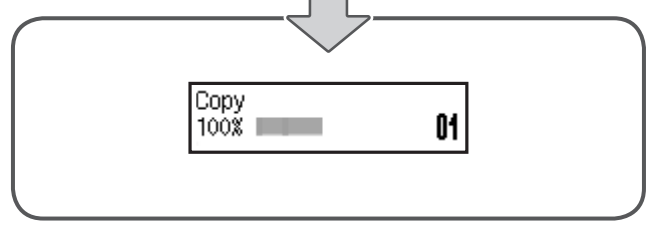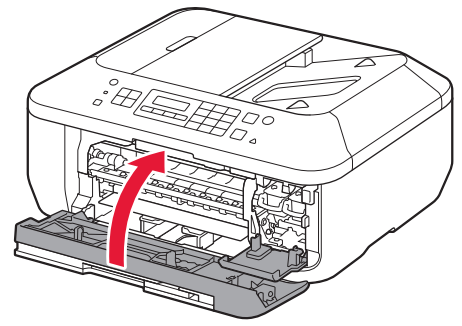

5

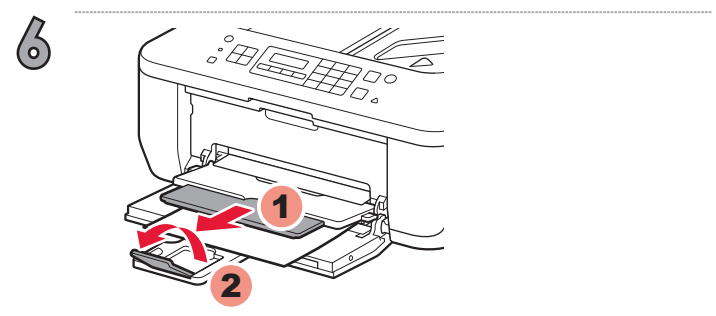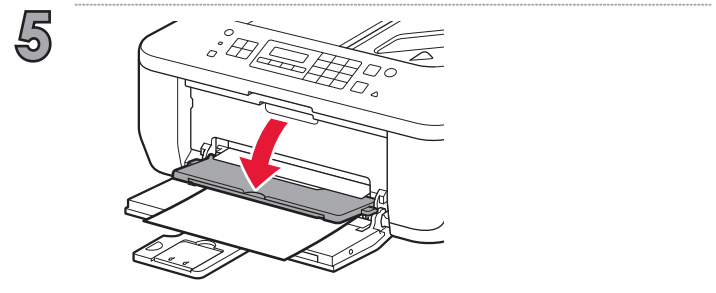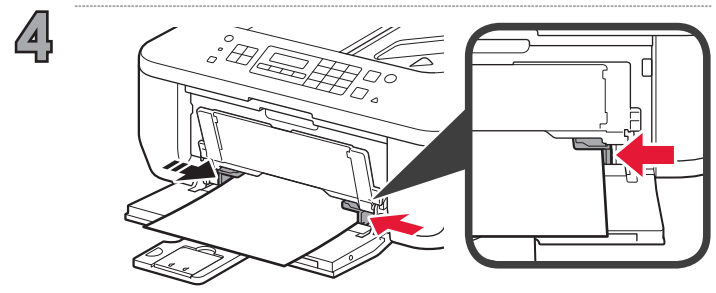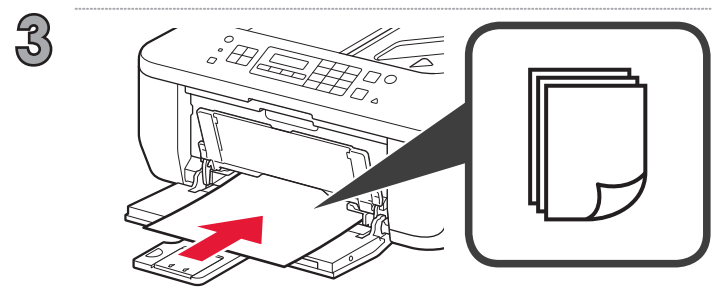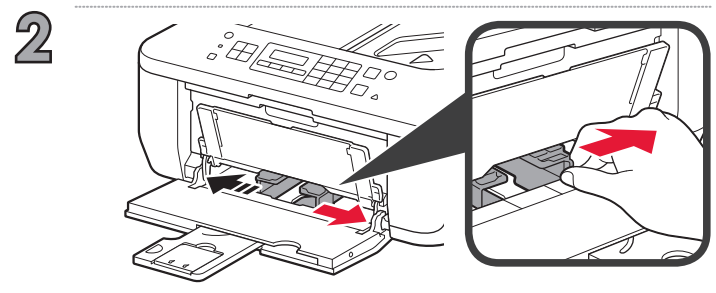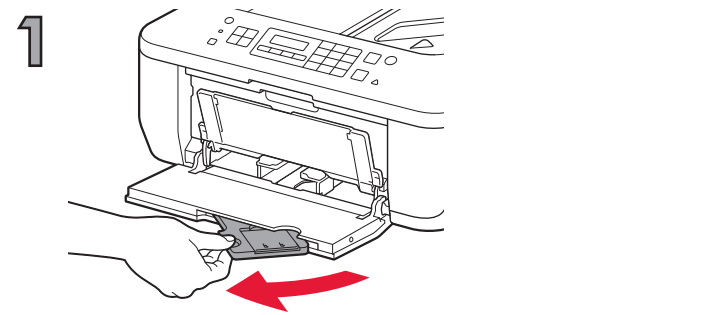

6

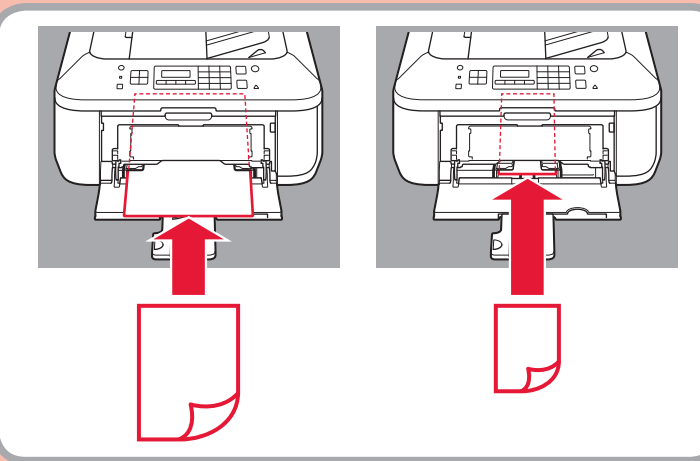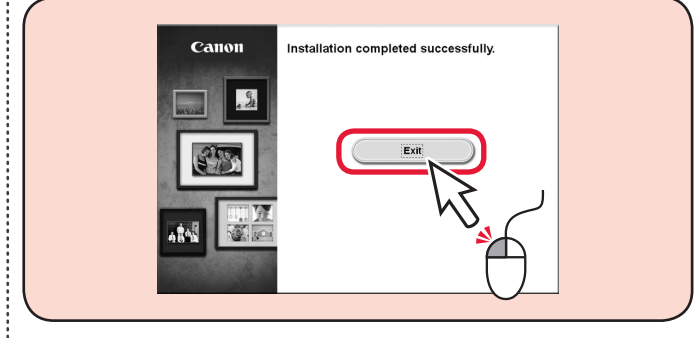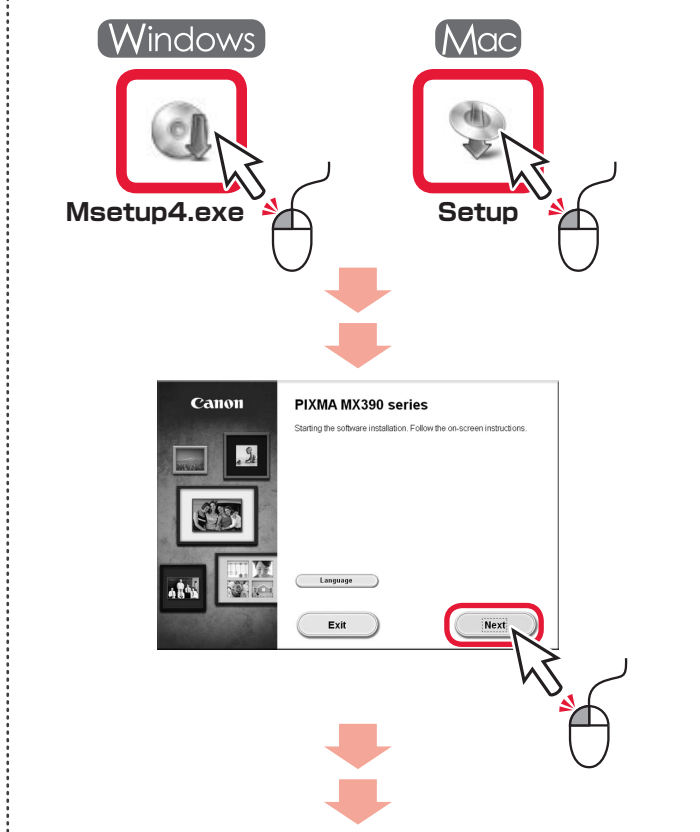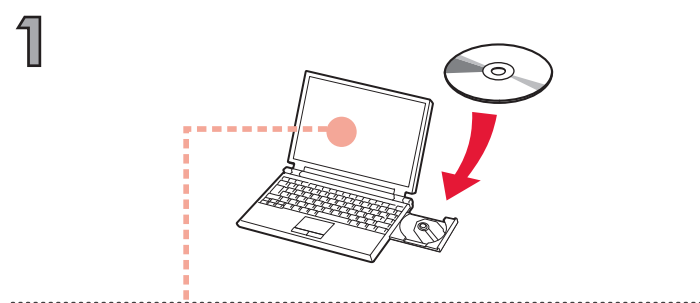

741XL Color, 740XL Black, 741 Color, 740 Black

