

PowerShot A310 SYSTEM MAP

DIGITAL CAMERA



Supplied with Camera



PowerShot A310



AA Alkaline Batteries (x2)

 
 
Soft Case SC-PS900 *2

Interface Cable IFC-400PCU *1

CF Card FC-32MH

Canon Digital Camera Solution Disk ArcSoft Camera Suite Disk

Direct Interface Cable *3

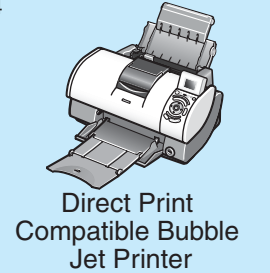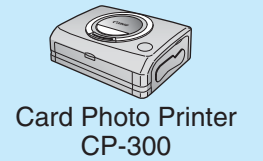


USB Port

PC Card Slot




• Windows
• Macintosh

 Battery and Charger Kit CBK4-200



- Battery Charger CB-4AH / CB-4AHE
- AA-size NiMH batteries NB-2AH (x4) *1
- * NiMH Battery NB4-200 (set of 4 AA-size) also available separately
- * Two batteries are used for this camera

 AC Adapter Kit ACK800

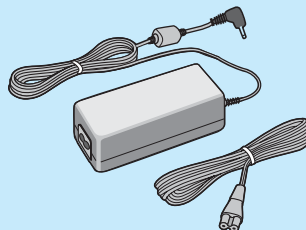

- Compact Power Adapter CA-PS800
- Power Cord

CF Card *2

- FC-16M • FC-128M
- FC-32M • FC-256MH
- FC-64M • FC-512MSH

- This camera can also be connected to the Card Photo Printer CP-100 and CP-10 using the Direct Interface Cable DIF-100 *1 supplied with the printers.
- *1 Also available for purchase separately.
- *2 Not sold in some regions
- *3 See the user guide supplied with the Bubble Jet Printer for more information on the printer and interface cables.
- *4 You can print directly from the CF card by inserting it into a memory card direct print compatible Bubble Jet printer. For instructions on how to insert the CF card, see the user guide supplied with the Bubble Jet printer.

Confirming the Package Contents

The camera package should contain the following items. Contact your camera retailer if any are missing.

- Digital Camera
- Wrist Strap WS-200
- AA Alkaline Batteries (x2)
- CompactFlash™ Card FC-32MH
- Case for CompactFlash Card
- Interface Cable IFC-400PCU
- Canon Digital Camera Solution Disk
- ArcSoft Camera Suite Disk
- Quick Start Guide
- Camera User Guide
- Direct Print User Guide
- Software Starter Guide
- “For Windows® XP and Mac OS X Users” Leaflet
- System Map (this sheet)
- “Canon Customer Support” Leaflet
- Warranty Card

Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

Power Supplies

- **AC Adapter Kit ACK800**
This kit lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.
- **Battery and Charger Kit CBK4-200**
This dedicated battery charger kit includes both a charger unit and four rechargeable AA-size NiMH (nickel metal hydride) batteries. Convenient when taking or playing back large numbers of images.
- **NiMH Battery NB4-200**
A set of four rechargeable AA-size NiMH batteries. (Two batteries are used for this camera.)

Other Accessories

- **CF Cards**
CompactFlash™ (CF) cards are used to store images recorded by the camera. Canon CF cards are available in 16 MB, 32 MB, 64 MB, 128 MB, 256 MB and 512 MB capacities.

Connection Accessories

These connection accessories can be used with computers equipped with the following OS.

Windows: Systems running preinstalled Windows 98 (including Second Edition), Windows Me, Windows 2000, Windows XP
Macintosh: Mac OS 9.0 – 9.2, Mac OS X (v10.1/v10.2)*
* Only systems equipped with genuine Apple-brand built-in USB interfaces.

- **Interface Cable IFC-400PCU**
Use this cable to connect the camera to a computer, Card Photo Printer CP-300 or CP-200, or to a Bubble Jet printer (refer to your Bubble Jet printer user guide).
- **PCMCIA Adapter (PC Card Adapter)**
Allows you to load a CF card into the computer's PC card slot.

- **Soft Case SC-PS900**
Protects the camera from dust and scratches.

Direct Print Compatible Printers

Canon offers the following separately sold printers for use with the camera. You can produce prints quickly and easily by connecting them to the camera with a single cable and operating the camera's controls. **Some accessories are not sold in some regions.**

Card Photo Printers (CP Series)

- **Card Photo Printer CP-300/CP-200/CP-100**
These super-compact, light-weight printers print high-quality postcard size, L-size and card size images. The Canon rechargeable battery* makes these printers portable, even allowing you to print your images outdoors. The rechargeable battery is included with the CP-300.
* CP-300/CP-100 only
 - **Color Ink/Paper Set KP-36IP, KL-36IP, KC-36IP**
 - **Color Ink/Label Set KC-18IL**
 - **Color Ink/Full-Sized Label Set KC-18IF**
Color ink and paper sets.
- **Paper Cassette PCL-CP100**
L-size paper cassettes.
- **Paper Cassette PCC-CP100**
Credit card-size paper cassette (required to print with the CP-200).
- **Computer Connection Kit CCK-CP200**
Connects your computer to the CP-100 or the CP-10, allowing you to print images directly from your computer. With the CP-300 and CP-200 printers, you can use the software included with the printers to print images from your computer.
- **Battery and Charge Adapter Kit BCA-CP100**
This rechargeable lithium-ion battery and charger for the CP-300/CP-100 let you print images on the move.
- **Car Battery Adapter CBA-CP100**
Allows you to print images on the go, using a car cigarette lighter as a power source.
- **Card Photo Printer CP-10**
Prints high-quality, credit card-size images.

Bubble Jet Printers

For more information, visit your nearest Canon retailer.