

# Canon


## imageCLASS LBP 8780 x

# Quick Setup Guide


**Read this guide first.**  
Please read this guide before operating this product. After you finish reading this guide, store it in a safe place for future reference.

Read the "Important Safety Instructions" section on the back side of this Setup Guide carefully to install the printer safely.

### 1 Checking the supplied accessories.

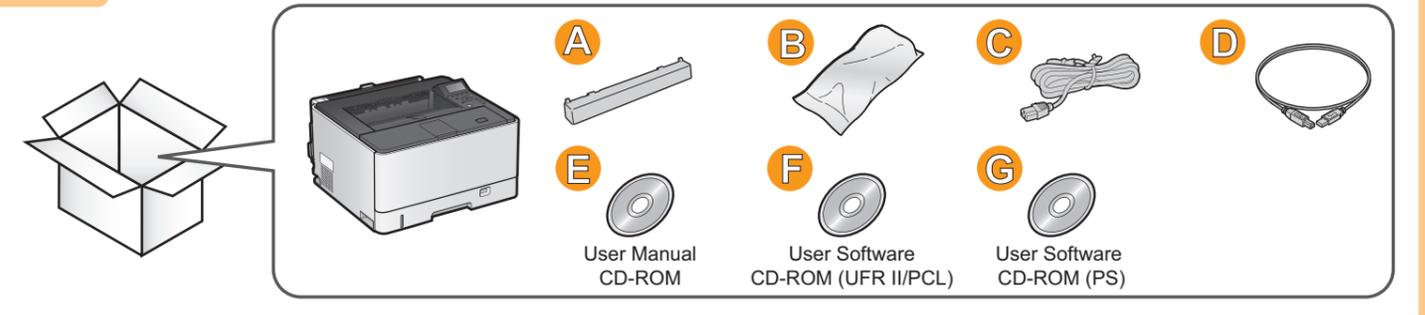


### 2 Moving the printer to the installation site.

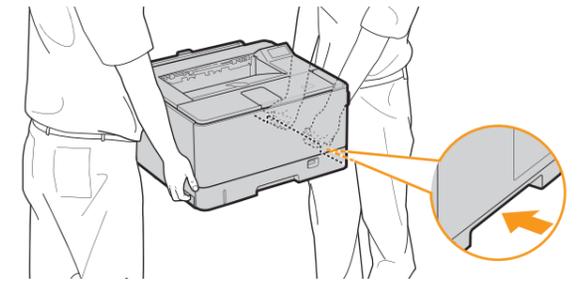

### 3 Removing the packing materials.

**Remove all the tape.**  
Remove all the orange tape attached to the printer when performing the following procedure.  
The packing materials may be changed in form or placement, or may be added or removed without notice.

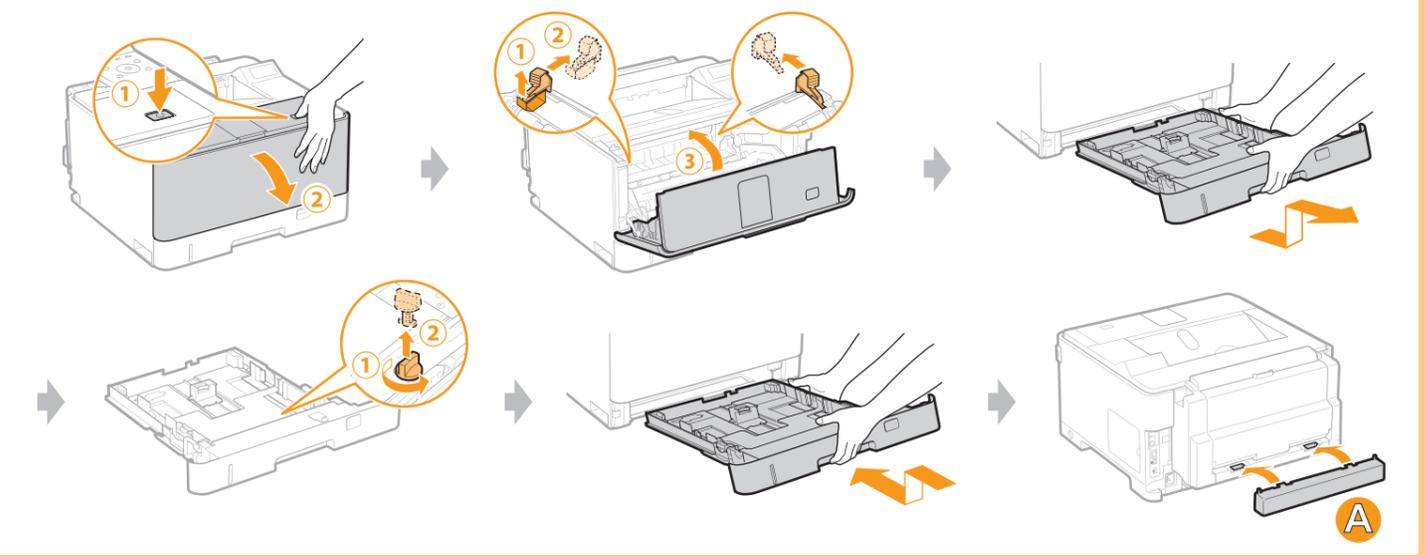


### Check!

#### Did you remove all the packing materials?


Make sure that all the orange tape is completely removed.




### 4 Preparing a Toner Cartridge.

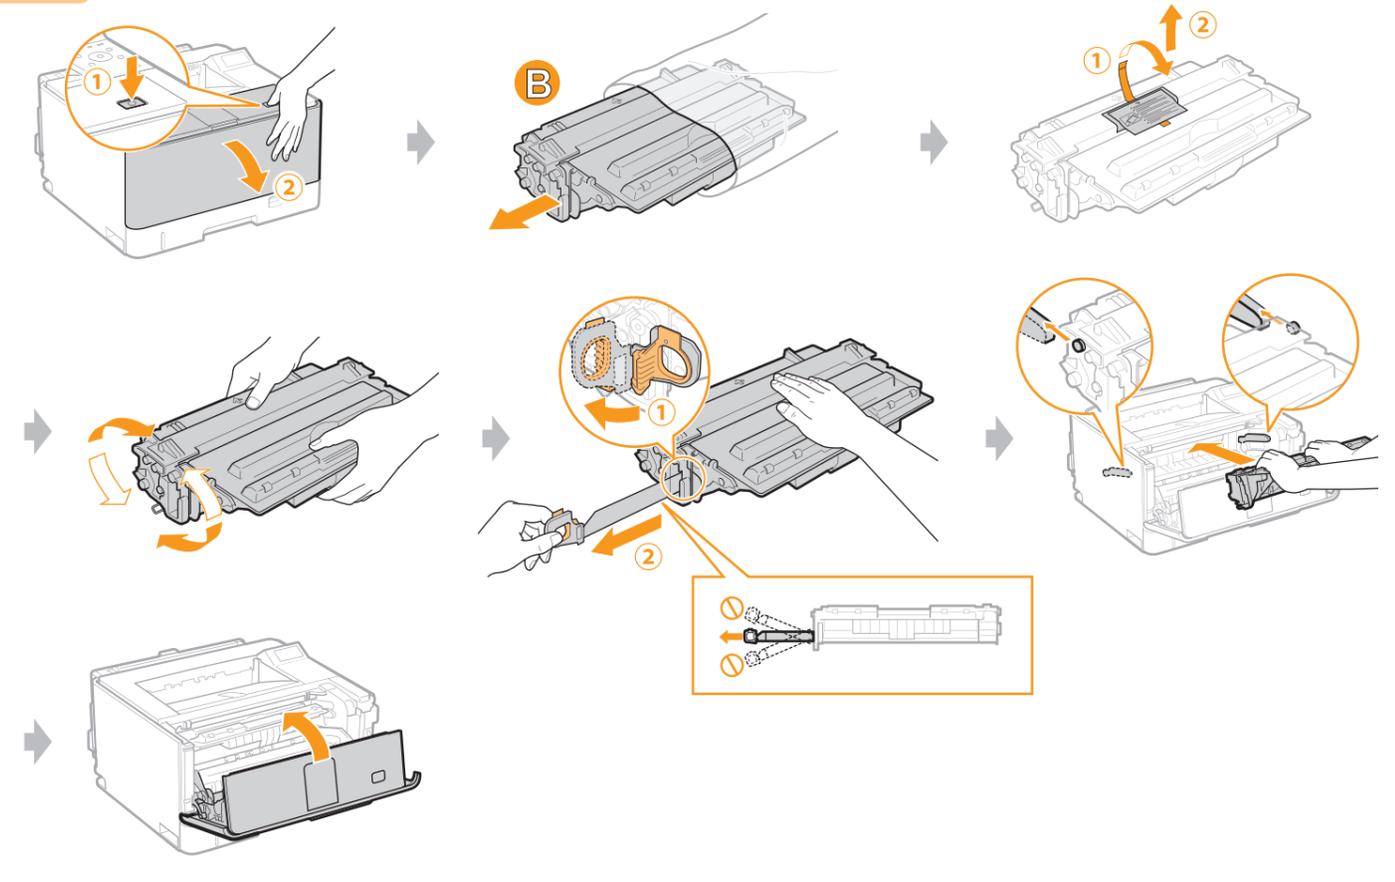

### 5 Loading paper.

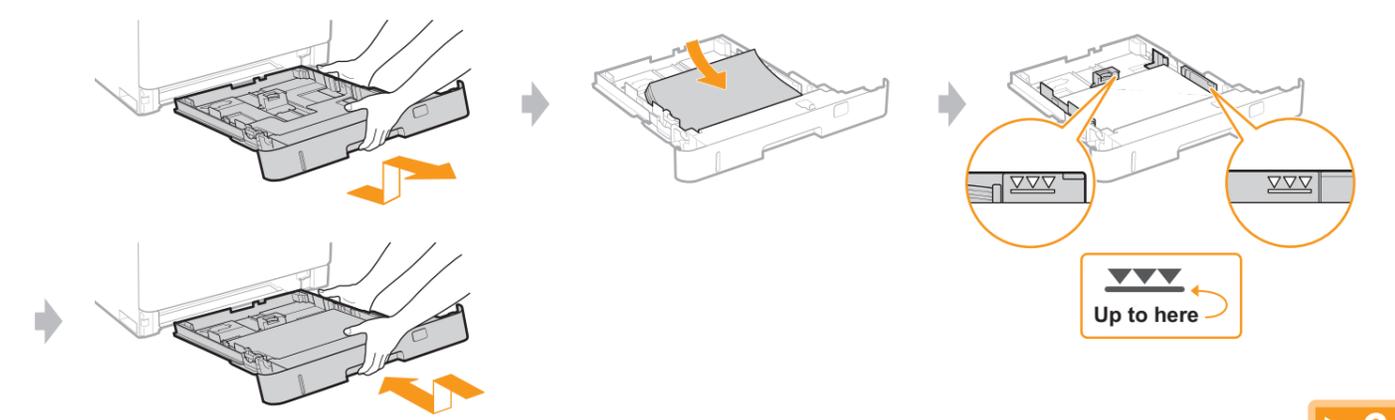

## 6 Connecting the power cord and turning ON the power.

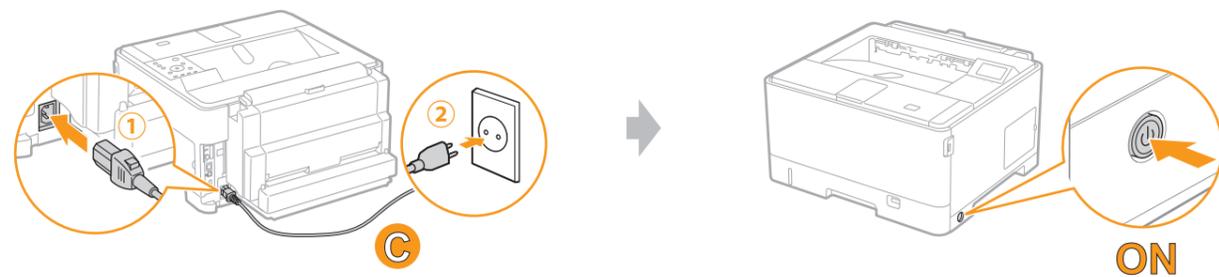


## 7 Connecting to a computer.

### USB




A message prompts you to turn on the printer during the printer driver installation.


### LAN

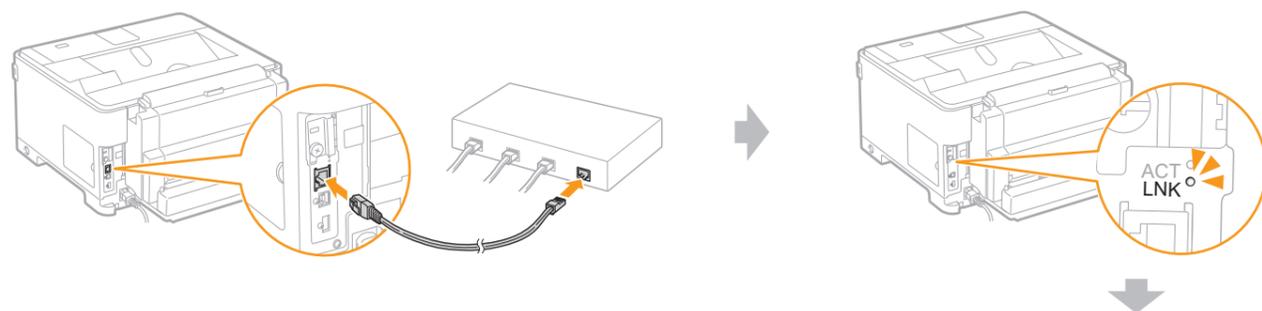

Configure the network settings, if necessary. See the e-Manual.

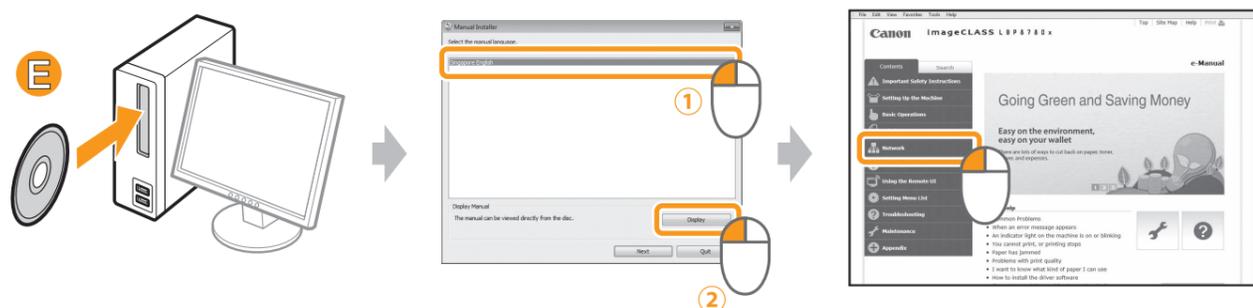

## 8 Installing the Printer Driver.

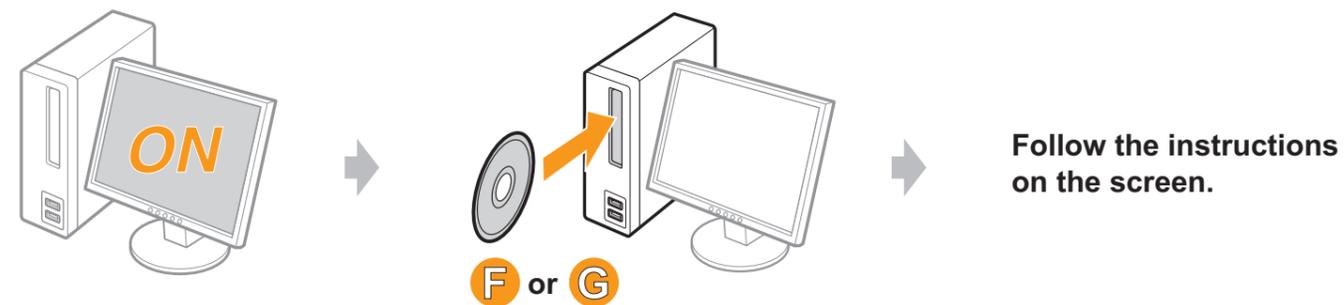

Follow the instructions on the screen.

? If you have any questions about operations, see the "Printer Driver Installation Guide."

## 9 For more about using the printer, see the e-Manual.

### ! Important Safety Instructions

This manual describes only warnings and cautions for the installation and the power supply. Be sure to read "Important Safety Instructions" described in the e-Manual (HTML manual) included in the supplied User Manual CD-ROM also.



User Manual CD-ROM

#### Installation

##### ! WARNING

Do not install in a location that may result in a fire or electrical shock

- A location where the ventilation slots are blocked (too close to walls, beds, sofas, rugs, or similar objects)
- A damp or dusty location
- A location exposed to direct sunlight or outdoors
- A location subject to high temperatures
- A location exposed to open flames
- Near alcohol, paint thinners or other flammable substances

##### Other warnings

- Do not connect unapproved cables to this machine. Doing so may result in a fire or electrical shock.
- Do not place necklaces and other metal objects or containers filled with liquid on the machine. If foreign substances come in contact with electrical parts inside the machine, it may result in a fire or electrical shock.
- When installing and removing the optional accessories, be sure to turn OFF the power, unplug the power plug, and then disconnect all the interface cables and power cord from the machine. Otherwise, the power cord or interface cables may be damaged, resulting in a fire or electrical shock.
- If any foreign substance falls into this machine, unplug the power plug from the AC power outlet and contact your local authorized Canon dealer.

##### ! CAUTION

Do not install in the following locations

- The machine may drop or fall, resulting in injury.
- Unstable location
- Location exposed to vibrations

##### Other cautions

- When carrying this machine, follow the instructions in this manual. If carried improperly, it may fall, resulting in injury.
- When installing this machine, be careful not to get your hands caught between the machine and the floor or walls, or between the paper drawers. Doing so may result in injury.

#### Symbols

##### ! WARNING

Indicates a warning concerning operations that may lead to death or injury to persons if not performed correctly. To use the machine safely, always pay attention to these warnings.

##### ! CAUTION

Indicates a caution concerning operations that may lead to injury to persons if not performed correctly. To use the machine safely, always pay attention to these cautions.

#### Power Supply

##### ! WARNING

- Use only a power supply that meets the voltage requirements specified above. Failure to do so may result in a fire or electrical shock.
- Do not use a power cord other than the one provided, as this may result in a fire or electrical shock.
- Do not modify, pull, forcibly bend, or perform any other act that may damage the power cord. Do not place heavy objects on the power cord. Damaging the power cord may result in a fire or electrical shock.
- Do not plug in or unplug the power plug with wet hands, as this may result in an electrical shock.
- Do not use extension cords or multi-plug power strips with the machine. Doing so may result in a fire or electrical shock.
- Do not wrap the power cord or tie it in a knot, as this may result in a fire or electrical shock.
- Insert the power plug completely into the AC power outlet. Failure to do so may result in a fire or electrical shock.
- Remove the power plug completely from the AC power outlet during a thunder storm. Failure to do so may result in a fire, electrical shock, or damage to the machine.

##### ! CAUTION

Do not obstruct the power outlet where this machine is connected, so that you can unplug the power cord easily in an emergency.

#### Others

##### ! WARNING

To avoid the risk of personal injury or damage to the printer, and for legal information, make sure to read the "Notice" and "Important Safety Instructions" in the e-Manual included on the accompanying User Manual CD-ROM carefully before using the printer.