

Canon

EOS REBEL T3 EOS 1100D

Quick Reference Guide

This quick reference guide explains the basic function settings and how to shoot and playback images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS REBEL T3/EOS 1100D Instruction Manual.



English

© CANON INC. 2011

CT1-7194QE-000

Quick Start Guide

1 Insert the battery.

2 Insert the SD card.

3 Attach the lens.

Align the lens' white or red index with the camera's index in the matching color.

4 Set the lens focus mode switch to <AF>.

5 Set the power switch to <ON>.

6 Set the Mode Dial to <□> (Full Auto).
All the necessary camera settings will be set automatically.

7 Focus the subject.
Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.

8 Take the picture.
Press the shutter button completely to take the picture.

9 View the image.
The captured image will be displayed for approx. 2 sec. on the LCD monitor.

The ★ on the right of the function indicates that the function is available only in Creative Zone modes (P, Tv, Av, M, A-DEP).

Battery Life with viewfinder shooting

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 800 shots	Approx. 700 shots

Image Playback

Index

Magnify

Erase

Playback

DISP. Shooting information

Preparation

Menu Operations

LCD monitor

<SET> button

Cross keys

<MENU> button

- Press the <MENU> button to display the menu.
- Press the <◀▶> key to select a tab, then press the <▲▼> key to select the desired item.
- Press <SET> to display the setting.
- After setting the item, press <SET>.

Basic Zone Modes

Movie Shooting Mode

Creative Zone Modes

Menu items

Menu settings

Image-recording Quality

- Select [Q] Quality, then press <SET>.
- Press the <◀▶> key to select the quality, then press <SET>.

Image-recording quality

Quality

Recorded pixels

Possible shots

S2 S3 RAW+L RAW

Picture Style ★

Picture Style

Select [P] Picture Style, then press <SET>.

Press the <▲▼> key to select the Picture Style, then press <SET>.

Style	Description
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

For <Neutral> (Neutral) and <Faithful> (Faithful), see the camera's instruction manual.

Quick Control

- Press the <Q> button.
- The Quick Control screen will appear.

Basic Zone Modes

Creative Zone Modes

Shutter speed

Aperture

Highlight tone priority

ISO speed

Flash exposure compensation

Auto Lighting Optimizer

Raise built-in flash

Image-recording quality

Metering mode

Shooting mode

Exposure compensation/AEB setting

Picture Style

AF mode

White balance

Drive mode

- In Basic Zone modes, the settable functions differ depending on the shooting mode.
- Press the <◀▶> key to select a function, then turn the <◀▶> dial to set it.
- To raise the built-in flash, select <Flash up>, then press <SET>.

Custom Functions ★

C.Fn I: Exposure

- Exposure level increments
- Flash sync. speed in Av mode

C.Fn II: Image

- Long exposure noise reduction
- High ISO speed noise reduction
- Highlight tone priority

C.Fn III: Autofocus/Drive


- AF-assist beam firing

C.Fn IV: Operation/Others


- Shutter/AE lock button
- Assign SET button
- Flash button function
- LCD display when power ON

Shooting Operation


Nomenclature

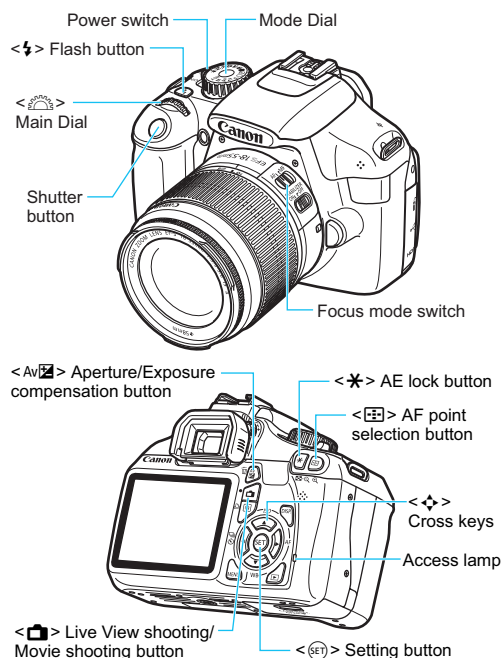

Shooting Settings Display

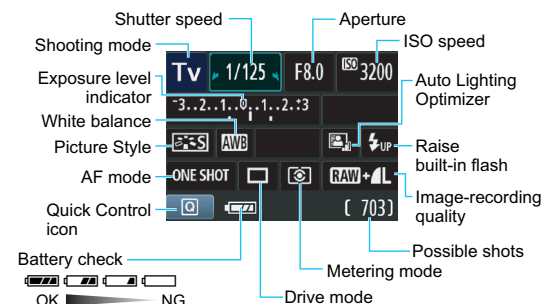

Viewfinder Information

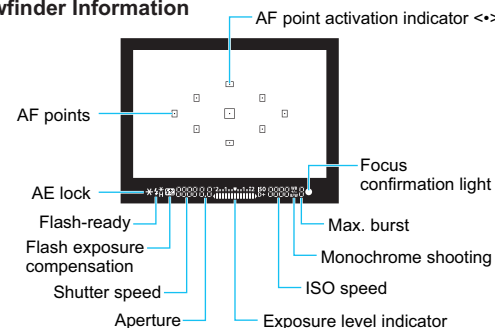

Basic Zone Modes



All the settings necessary for shooting are set automatically. You just press the shutter button, and the camera does the rest.

- Full Auto
- Flash Off
- Creative Auto
- Portrait
- Landscape
- Close-up
- Sports
- Night Portrait


Pressing the <Q> button will display the Quick Control screen. In the <CA>/<P>/<Tv>/<Av>/<M> shooting mode, press the <Δ> key to select the function, then press the <◀> key or turn the <Main Dial> to set it as desired.

Using the Built-in Flash

Basic Zone Modes


If necessary, the built-in flash will pop-up automatically in low-light or backlit conditions (except in the <P> <Tv> <Av> <M> modes).

Creative Zone Modes

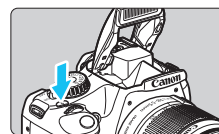

- Press the <Flash> button to raise the built-in flash, then shoot.

Creative Zone Modes

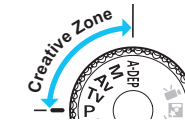

You can change the camera settings as desired to shoot in various ways.

P: Program AE

The camera automatically sets the shutter speed and aperture in the same way as the <P> mode.

- Set the Mode Dial to <P>.

Tv: Shutter-priority AE




- Set the Mode Dial to <Tv>.
- Turn the <Main Dial> to set the desired shutter speed, then focus the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the <Main Dial> until it stops blinking.

Av: Aperture-priority AE



- Set the Mode Dial to <Av>.
- Turn the <Main Dial> to set the desired aperture, then focus the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the <Main Dial> until it stops blinking.

AF: AF Mode★

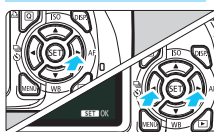

- Set the lens focus mode switch to <AF>.
- Press the <AF> button.
- Press the <Main Dial> key or turn the <Main Dial> to select the AF mode, then press <SET>.

ONE SHOT (One-Shot AF): For still subjects


AI FOCUS (AI Focus AF): Switches the AF mode automatically

AI SERVO (AI Servo AF): For moving subjects


AF Point★




- Press the <AF point selection> button.

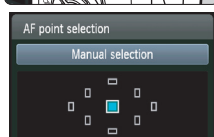

- Press the <Main Dial> key to select the AF point.
- While looking through the viewfinder, you can select the AF point by turning the <Main Dial> until the desired AF point flashes in red.
- Pressing <SET> toggles the AF point selection between the center AF point and automatic AF point selection.

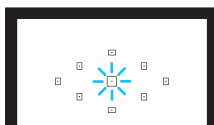


ISO: ISO Speed★

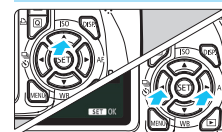


- Press the <ISO> button.
- Press the <Main Dial> key or turn the <Main Dial> to select the ISO speed, then press <SET>.
- When [AUTO] is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting will be displayed.



Drive Mode★

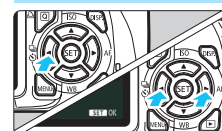

- Press the <Drive mode> button.
- Press the <Main Dial> key or turn the <Main Dial> to select the drive mode, then press <SET>.

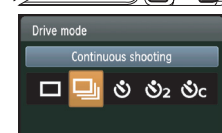

- Single shooting
- Continuous shooting
- Self-timer: 10 sec*
- Self-timer: 2 sec
- Self-timer: Continuous*

* The <Self-timer: 10 sec> and <Self-timer: 2 sec> drive modes can be selected in all shooting modes (except <P>).


Live View Shooting



- Press the <Live View> button to display the Live View image.



- Press the shutter button halfway to focus.

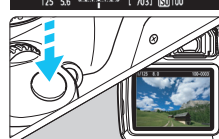


- Press the shutter button completely to take the picture.

- Live View shooting settings will appear under the [Q] menu tab in Basic Zone modes and under the [Q] menu tab in Creative Zone modes.

Battery Life with Live View Shooting

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 240 shots	Approx. 220 shots

 Shooting Movies



- Set the Mode Dial to <Movie>.



- Press the shutter button halfway to focus. (In the <Movie> mode, you cannot take still photos even if you press the shutter button completely.)



- Press the <Movie> button to start shooting a movie.
- To stop movie shooting, press the <Movie> button again.

