

PowerShot SX520 HS Camera User Guide


ENGLISH

- Make sure you read this guide, including the “Safety Precautions” (12) section, before using the camera.
- Reading this guide will help you learn to use the camera properly.
- Store this guide safely so that you can use it in the future.

- Click the buttons in the lower right to access other pages.

: Next page

: Previous page

: Page before you clicked a link

- To jump to the beginning of a chapter, click the chapter title at right.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode /
Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Before Use

Initial Information

Package Contents

 
Before use, make sure the following items are included in the package. If anything is missing, contact your camera retailer.



Camera



Battery Pack
NB-6LH*



Battery Charger
CB-2LY/CB-2LYE



Neck Strap



Lens Cap
(with cord)

* Do not peel off the battery pack label.

- Printed matter is also included.
- A memory card is not included (📖2).

Compatible Memory Cards

The following memory cards (sold separately) can be used, regardless of capacity.

- SD memory cards*
- SDHC memory cards*
- SDXC memory cards*



- Eye-Fi cards
- * Cards conforming to SD standards. However, not all memory cards have been verified to work with the camera.

About Eye-Fi Cards

This product is not guaranteed to support Eye-Fi card functions (including wireless transfer). In case of an issue with an Eye-Fi card, please check with the card manufacturer.

Also note that an approval is required to use Eye-Fi cards in many countries or regions. Without approval, use of the card is not permitted. If it is unclear whether the card has been approved for use in the area, please check with the card manufacturer.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode /
Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Preliminary Notes and Legal Information

- Take and review some test shots initially to make sure the images were recorded correctly. Please note that Canon Inc., its subsidiaries and affiliates, and its distributors are not liable for any consequential damages arising from any malfunction of a camera or accessory, including memory cards, that result in the failure of an image to be recorded or to be recorded in a way that is machine readable.
- Images recorded by the camera shall be for personal use. Refrain from unauthorized recording that infringes on copyright law, and note that even for personal use, photography may contravene copyright or other legal rights at some performances or exhibitions, or in some commercial settings.
- The camera warranty is valid only in the area of purchase. In case of camera problems while abroad, return to the area of purchase before contacting a Canon Customer Support Help Desk.
- Although the LCD monitor is produced under extremely high-precision manufacturing conditions and more than 99.99% of the pixels meet design specifications, in rare cases some pixels may be defective or may appear as red or black dots. This does not indicate camera damage or affect recorded images.
- The LCD monitor may be covered with a thin plastic film for protection against scratches during shipment. If covered, remove the film before using the camera.
- When the camera is used over an extended period, it may become warm. This does not indicate damage.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode /
Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu


8 Accessories

9 Appendix


Index



Part Names and Conventions in This Guide

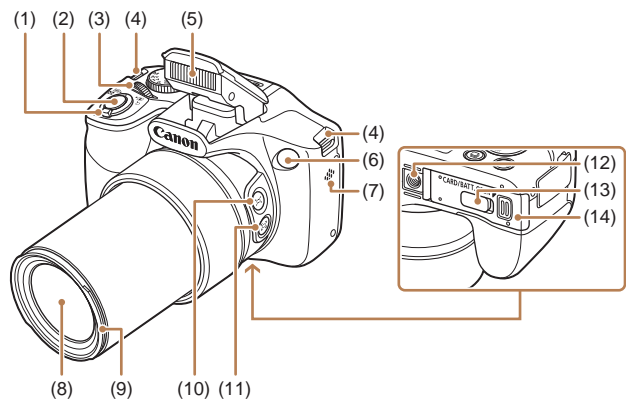




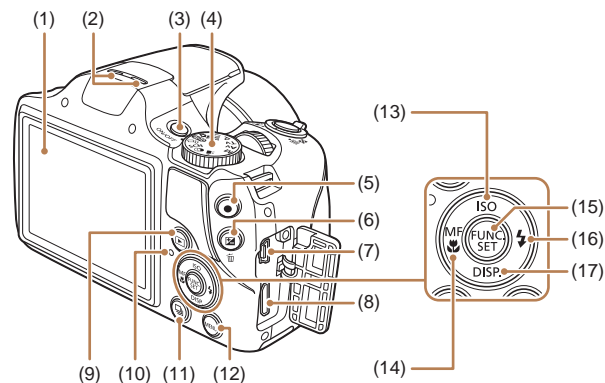


- | | |
|---------------------------------------------------------------------------------------------------------------|--------------------------------------------|
| (1) Zoom lever Shooting: [T] (telephoto) / [W] (wide angle) Playback: [Q] (magnify) / [Z] (index) | (8) Lens |
| (2) Shutter button | (9) Lens hood/filter adapter mount |
| (3) Front dial | (10) [F] (Framing Assist – Seek) button |
| (4) Strap mount | (11) [L] (Framing Assist – Lock) button |
| (5) Flash | (12) Tripod socket |
| (6) Lamp | (13) DC coupler terminal cover |
| (7) Speaker | (14) Memory card/battery cover |

 

- | | |
|------------------------------------------------------------------------|--------------------------------------------------------------|
| (1) Screen (LCD monitor) | (10) Indicator |
| (2) Microphone | (11) [DRIVE] (Drive mode)) button |
| (3) Power button | (12) [MENU] button |
| (4) Mode dial | (13) [ISO] (ISO speed)) / Up button |
| (5) Movie button | (14) [MF] (Manual focus)) / [MACRO] (Macro) / Left button |
| (6) [C] (Exposure compensation)) / [E] (Single-image erase)) button | (15) FUNC./SET button |
| (7) AV OUT (Audio/video output) / DIGITAL terminal | (16) [FLASH] (Flash)) / Right button |
| (8) HDMI™ terminal | (17) [DISP.] (Display)) / Down button |
| (9) [PLAY] (Playback)) button | |

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



- In this guide, icons are used to represent the corresponding camera buttons and dials on which they appear or which they resemble.
- The following camera buttons and controls are represented by icons.
 Front dial (3) on front
 Up button (13) on back
 Left button (14) on back
 Right button (16) on back
 Down button (17) on back
- Shooting modes and on-screen icons and text are indicated in brackets.
- ⓘ: Important information you should know
- ✎: Notes and tips for expert camera use
- 📖xx: Pages with related information (in this example, “xx” represents a page number)
- Instructions in this guide apply to the camera under default settings.
- For convenience, all supported memory cards are simply referred to as the “memory card”.
- The symbols “▶ Still Images” and “▶ Movies” below titles indicate how the function is used—whether for still images or movies.

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



Table of Contents

Before Use

| | |
|------------------------------------------|----------|
| Initial Information | 2 |
| Package Contents | 2 |
| Compatible Memory Cards | 2 |
| About Eye-Fi Cards | 2 |
| Preliminary Notes and Legal Information | 3 |
| Part Names and Conventions in This Guide | 4 |
| Common Camera Operations | 11 |
| Safety Precautions | 12 |

Basic Guide

| | |
|--------------------------------------------|-----------|
| Basic Operations | 15 |
| Initial Preparations | 15 |
| Attaching Accessories | 15 |
| Holding the Camera | 16 |
| Charging the Battery Pack | 16 |
| Inserting the Battery Pack and Memory Card | 17 |
| Removing the Battery Pack and Memory Card | 17 |
| Setting the Date and Time | 18 |
| Changing the Date and Time | 18 |
| Display Language | 19 |
| Trying the Camera Out | 20 |
| Shooting (Smart Auto) | 20 |
| Viewing | 21 |
| Erasing Images | 22 |

Advanced Guide

| | |
|-----------------------------------------------------------------------------|-----------|
| 1 Camera Basics | 23 |
| On/Off | 23 |
| Power-Saving Features (Auto Power Down) | 24 |
| Power Saving in Shooting Mode | 24 |
| Power Saving in Playback Mode | 24 |
| Shutter Button | 24 |
| Shooting Modes | 25 |
| Shooting Display Options | 25 |
| Using the FUNC. Menu | 26 |
| Using the Menu Screen | 27 |
| Indicator Display | 28 |
| Clock | 28 |
| 2 Auto Mode / Hybrid Auto Mode | 29 |
| Shooting with Camera-Determined Settings | 29 |
| Shooting (Smart Auto) | 29 |
| Shooting in Hybrid Auto Mode | 31 |
| Digest Movie Playback | 31 |
| Still Images/Movies | 32 |
| Still Images | 32 |
| Movies | 32 |
| Scene Icons | 33 |
| Image Stabilization Icons | 34 |
| On-Screen Frames | 34 |
| Common, Convenient Features | 35 |
| Zooming In Closer on Subjects (Digital Zoom) | 35 |
| Easily Reacquiring Subjects after Manual Zooming (Framing Assist – Seek) | 36 |
| Easily Composing Shots after Manual Zooming (Framing Assist – Lock) | 36 |

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



| | |
|----------------------------------------------------------------|-----------|
| Auto Zooming to Keep Faces at a Constant Size..... | 37 |
| Adjusting the Constant Face Display Size | 37 |
| Easily Reacquiring Subjects with Auto Zooming (Seek Assist) .. | 38 |
| Using the Self-Timer | 39 |
| Using the Self-Timer to Avoid Camera Shake | 39 |
| Customizing the Self-Timer | 40 |
| Adding a Date Stamp | 40 |
| Continuous Shooting | 41 |
| Image Customization Features | 42 |
| Changing the Aspect Ratio | 42 |
| Changing Image Resolution (Size)..... | 42 |
| Guidelines for Choosing Resolution Based on Paper Size | |
| (for 4:3 Images) | 42 |
| Red-Eye Correction | 43 |
| Changing Movie Image Quality | 43 |
| Helpful Shooting Features..... | 44 |
| Displaying Grid Lines..... | 44 |
| Magnifying the Area in Focus | 44 |
| Checking for Closed Eyes | 45 |
| Customizing Camera Operation | 45 |
| Deactivating the AF-Assist Beam | 45 |
| Deactivating the Red-Eye Reduction Lamp..... | 46 |
| Changing the Image Display Style after Shots | 46 |
| Changing the Image Display Period after Shots | 46 |
| Changing the Screen Displayed after Shots | 47 |
| 3 Other Shooting Modes | 48 |
| Brightness / Color Customization (Live View Control)..... | 48 |
| Enjoying a Variety of Images from Each Shot | |
| (Creative Shot) | 49 |
| Image Display during Playback | 49 |
| Choosing Effects | 50 |

| | |
|--------------------------------------------------------------|-----------|
| Specific Scenes..... | 50 |
| Image Effects (Creative Filters)..... | 51 |
| Shooting with a Fish-Eye Lens Effect (Fish-Eye Effect) | 52 |
| Shots Resembling Miniature Models (Miniature Effect)..... | 52 |
| Playback Speed and Estimated Playback Time | |
| (for One-Minute Clips) | 53 |
| Shooting with a Toy Camera Effect (Toy Camera Effect)..... | 53 |
| Shooting in Monochrome..... | 54 |
| Special Modes for Other Purposes | 54 |
| Auto Shooting after Face Detection (Smart Shutter) | 54 |
| Auto Shooting after Smile Detection | 54 |
| Using the Wink Self-Timer..... | 55 |
| Using the Face Self-Timer..... | 55 |
| High-Speed Continuous Shooting (High-Speed Burst) | 56 |
| Shooting Various Movies..... | 57 |
| Shooting Movies in Movie Mode..... | 57 |
| Locking or Changing Image Brightness before Shooting | 57 |
| 4 P Mode..... | 58 |
| Shooting in Program AE ([P] Mode) | 58 |
| Image Brightness (Exposure)..... | 59 |
| Adjusting Image Brightness (Exposure Compensation) | 59 |
| Locking Image Brightness / Exposure (AE Lock) | 59 |
| Changing the Metering Method | 59 |
| Changing the ISO Speed..... | 60 |
| Correcting Image Brightness (i-Contrast) | 60 |
| Image Colors | 61 |
| Adjusting White Balance..... | 61 |
| Custom White Balance..... | 61 |
| Changing Image Color Tones (My Colors) | 61 |
| Custom Color..... | 62 |


| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



| | |
|-------------------------------------------------------------------------------|-----------|
| Shooting Range and Focusing | 63 |
| Shooting Close-Ups (Macro) | 63 |
| Shooting in Manual Focus Mode | 63 |
| Digital Tele-Converter | 64 |
| Changing the AF Frame Mode | 65 |
| Center | 65 |
| Face AiAF | 65 |
| Choosing Subjects to Focus On (Tracking AF) | 66 |
| Shooting with Servo AF | 66 |
| Changing the Focus Setting | 67 |
| Shooting with the AF Lock | 67 |
| Flash | 68 |
| Changing the Flash Mode | 68 |
| Auto | 68 |
| On | 68 |
| Slow Synchro | 68 |
| Off | 68 |
| Adjusting the Flash Exposure Compensation | 69 |
| Shooting with the FE Lock | 69 |
| Other Settings | 70 |
| Changing the Compression Ratio (Image Quality) | 70 |
| Changing the IS Mode Settings | 70 |
| Shooting Movies with Subjects at the Same Size Shown before Shooting | 70 |
| 5 Tv, Av, and M Mode | 71 |
| Specific Shutter Speeds ([Tv] Mode) | 71 |
| Specific Aperture Values ([Av] Mode) | 72 |
| Specific Shutter Speeds and Aperture Values ([M] Mode) | 72 |
| Adjusting the Flash Output | 73 |

| | |
|----------------------------------------------------------------------------------|-----------|
| 6 Playback Mode | 74 |
| Viewing | 74 |
| Switching Display Modes | 75 |
| Overexposure Warning (for Image Highlights) | 76 |
| Histogram | 76 |
| Viewing Short Movies Created When Shooting Still Images (Digest Movies) | 76 |
| Viewing by Date | 76 |
| Browsing and Filtering Images | 77 |
| Navigating through Images in an Index | 77 |
| Finding Images Matching Specified Conditions | 77 |
| Using the Front Dial to Jump between Images | 78 |
| Viewing Individual Images in a Group | 79 |
| Image Viewing Options | 80 |
| Magnifying Images | 80 |
| Viewing Slideshows | 80 |
| Changing Slideshow Settings | 81 |
| Auto Playback of Related Images (Smart Shuffle) | 81 |
| Protecting Images | 82 |
| Using the Menu | 82 |
| Choosing Images Individually | 83 |
| Selecting a Range | 83 |
| Protecting All Images at Once | 84 |
| Clearing All Protection at Once | 84 |
| Erasing Images | 84 |
| Erasing Multiple Images at Once | 85 |
| Choosing a Selection Method | 85 |
| Choosing Images Individually | 85 |
| Selecting a Range | 86 |
| Specifying All Images at Once | 86 |

| |
|-------------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |

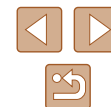 

| | |
|------------------------------------------------|-----------|
| Rotating Images | 86 |
| Using the Menu | 86 |
| Deactivating Auto Rotation | 87 |
| Tagging Images as Favorites | 87 |
| Using the Menu | 87 |
| Editing Still Images..... | 88 |
| Resizing Images | 88 |
| Cropping | 89 |
| Changing Image Color Tones (My Colors) | 90 |
| Correcting Image Brightness (i-Contrast) | 90 |
| Correcting Red-Eye | 91 |
| Editing Movies | 92 |
| Editing Digest Movies | 93 |
| 7 Setting Menu | 94 |
| Adjusting Basic Camera Functions | 94 |
| Silencing Camera Operations..... | 94 |
| Adjusting the Volume..... | 94 |
| Hiding Hints and Tips..... | 95 |
| Date and Time | 95 |
| World Clock | 95 |
| Lens Retraction Timing..... | 96 |
| Using Eco Mode | 96 |
| Power-Saving Adjustment | 96 |
| Screen Brightness | 97 |
| Hiding the Start-Up Screen..... | 97 |
| Formatting Memory Cards..... | 97 |
| Low-Level Formatting | 98 |
| File Numbering | 98 |
| Date-Based Image Storage | 99 |
| Metric / Non-Metric Display | 99 |
| Checking Certification Logos..... | 99 |
| Display Language..... | 99 |

| | |
|------------------------------------------------------|------------|
| Adjusting Other Settings..... | 100 |
| Restoring Defaults | 100 |
| 8 Accessories | 101 |
| System Map | 101 |
| Optional Accessories..... | 102 |
| Power Supplies..... | 102 |
| Flash Unit | 103 |
| Other Accessories | 103 |
| Printer | 103 |
| Using Optional Accessories..... | 104 |
| Playback on a TV | 104 |
| Playback on a High-Definition TV | 104 |
| Playback on a Standard-Definition TV..... | 104 |
| Powering the Camera with Household Power | 105 |
| Using a Lens Hood (Sold Separately) | 106 |
| Using Lens Filters (Sold Separately) | 106 |
| Using the Software | 107 |
| Software | 107 |
| Software Instruction Manual..... | 107 |
| Checking Your Computer Environment | 108 |
| Installing the Software | 108 |
| Saving Images to a Computer | 109 |
| Printing Images | 110 |
| Easy Print | 110 |
| Configuring Print Settings..... | 111 |
| Cropping Images before Printing..... | 112 |
| Choosing Paper Size and Layout before Printing | 112 |
| Available Layout Options..... | 113 |
| Printing ID Photos | 113 |
| Printing Movie Scenes..... | 113 |
| Movie Printing Options | 113 |

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



| | |
|------------------------------------------------------|------------|
| Adding Images to the Print List (DPOF) | 114 |
| Configuring Print Settings..... | 114 |
| Setting Up Printing for Individual Images | 114 |
| Setting Up Printing for a Range of Images..... | 115 |
| Setting Up Printing for All Images..... | 115 |
| Clearing All Images from the Print List | 115 |
| Printing Images Added to the Print List (DPOF) | 115 |
| Adding Images to a Photobook | 116 |
| Choosing a Selection Method | 116 |
| Adding Images Individually..... | 116 |
| Adding All Images to a Photobook | 116 |
| Removing All Images from a Photobook | 117 |
| Using an Eye-Fi Card | 117 |
| Checking Connection Information | 118 |
| Disabling Eye-Fi Transfer | 118 |
| 9 Appendix | 119 |
| Troubleshooting..... | 119 |
| On-Screen Messages..... | 122 |
| On-Screen Information..... | 123 |
| Shooting (Information Display) | 123 |
| Battery Level | 124 |
| Playback (Detailed Information Display)..... | 124 |
| Summary of Movie Control Panel..... | 125 |
| Functions and Menu Tables | 125 |
| Functions Available in Each Shooting Mode | 125 |
| FUNC. Menu..... | 127 |
| Shooting Tab..... | 128 |
| Set Up Tab..... | 132 |
| Playback Tab | 132 |
| Print Tab | 133 |
| Playback Mode FUNC. Menu | 133 |

| | |
|--------------------------------------------------------|-----|
| Handling Precautions | 133 |
| Specifications | 134 |
| Camera Specifications..... | 134 |
| Digital Zoom Focal Length (35mm film equivalent) | 134 |
| Number of Shots/Recording Time, Playback Time | 134 |
| Number of Shots per Memory Card | 135 |
| Recording Time per Memory Card | 135 |
| Flash Range | 135 |
| Shooting Range..... | 136 |
| Continuous Shooting Speed..... | 136 |
| Shutter Speed | 136 |
| Aperture..... | 136 |
| Battery Pack NB-6LH | 136 |
| Battery Charger CB-2LY/CB-2LYE | 136 |
| Lens Hood LH-DC60 (Sold Separately) | 136 |
| Index..... | 137 |
| Trademarks and Licensing | 139 |
| Disclaimer..... | 139 |

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



Common Camera Operations

Shoot

- Use camera-determined settings (Auto Mode, Hybrid Auto Mode)
 - 29, 31
- See several effects applied to each shot, using camera-determined settings (Creative Shot Mode)
 - 49

Shooting people well



Portraits
(50)



Against Snow
(50)

Matching specific scenes



Low Light
(50)



Fireworks
(50)

Applying special effects



Vivid Colors
(51)



Poster Effect
(51)



Fish-Eye Effect
(52)



Miniature Effect
(52)



Toy Camera Effect
(53)



Monochrome
(54)

- While adjusting image settings (Live View Control)
 - 48
- Focus on faces
 - 29, 50, 65
- Without using the flash (Flash Off)
 - 29, 68
- Include yourself in the shot (Self-Timer)
 - 39, 55
- Add a date stamp
 - 40
- Movie clips and photos together (Movie Digest)
 - 31

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode /
Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu







8 Accessories

9 Appendix




Index



View

- View images (Playback Mode)
 -  74
- Automatic playback (Slideshow)
 -  80
- On a TV
 -  104
- On a computer
 -  108
- Browse through images quickly
 -  77
- Erase images
 -  84


Shoot/View Movies

- Shoot movies
 -  29,  57
- View movies (Playback Mode)
 -  74

Print

- Print pictures
 -  110

Save

- Save images to a computer
 -  109

Safety Precautions

- Before using the product, ensure that you read the safety precautions described below. Always ensure that the product is used correctly.
- The safety precautions noted here are intended to prevent you and other persons from being injured or incurring property damage.
- Be sure to also check the guides included with any separately sold accessories you use.



Warning

Denotes the possibility of serious injury or death.

- Do not trigger the flash in close proximity to people's eyes. Exposure to the intense light produced by the flash could damage eyesight. In particular, remain at least 1 meter (3.3 feet) away from infants when using the flash.

- Store this equipment out of the reach of children and infants. A strap wound around a child's neck may result in asphyxiation. If your product uses a power cord, mistakenly winding the cord around a child's neck may result in asphyxiation.

- Use only recommended power sources.
- Do not disassemble, alter, or apply heat to the product.
- Do not peel off the label, if the battery pack has one.
- Avoid dropping or subjecting the product to severe impacts.
- Do not touch the interior of the product if it is broken, such as when dropped.
- Stop using the product immediately if it emits smoke or a strange smell, or otherwise behaves abnormally.
- Do not use organic solvents such as alcohol, benzene, or thinner to clean the product.
- Avoid contact with liquid, and do not allow liquid or foreign objects inside.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



This could result in electrical shock or fire.

If the product gets wet, or if liquid or foreign objects get inside, remove the battery pack/batteries or unplug immediately.

- Do not look through the viewfinder (if your model has one) at intense light sources, such as the sun on a clear day or an intense artificial light source.

This could damage your eyesight.

- Do not touch the product during thunderstorms if it is plugged in. This could result in electrical shock or fire. Immediately stop using the product and distance yourself from it.

- Use only the recommended battery pack/batteries.

- Do not place the battery pack/batteries near or in direct flame.

This may cause the battery pack/batteries to explode or leak, resulting in electrical shock, fire, or injuries. If leaking battery electrolyte comes into contact with eyes, mouth, skin, or clothing, immediately flush with water.

- If the product uses a battery charger, note the following precautions.
 - Remove the plug periodically and, using a dry cloth, wipe away any dust and dirt that has collected on the plug, the exterior of the power outlet, and the surrounding area.
 - Do not insert or remove the plug with wet hands.
 - Do not use the equipment in a manner that exceeds the rated capacity of the electrical outlet or wiring accessories. Do not use if the plug is damaged or not fully inserted in the outlet.
 - Do not allow dust or metal objects (such as pins or keys) to contact the terminals or plug.
 - Do not cut, damage, alter, or place heavy items on the power cord, if your product uses one.

This could result in electrical shock or fire.

- Turn the camera off in places where camera use is prohibited.

The electromagnetic waves emitted by the camera may interfere with the operation of electronic instruments and other devices. Exercise adequate caution when using the product in places where use of electronic devices is restricted, such as inside airplanes and medical facilities.

- Do not allow the camera to maintain contact with skin for extended periods.

Even if the camera does not feel hot, this may cause low-temperature burns, manifested in redness of the skin or blistering. Use a tripod in hot places, or if you have poor circulation or insensitive skin.



Caution

Denotes the possibility of injury.

- When carrying the product by the strap, be careful not to bang it, subject it to strong impacts or shocks, or let it get caught on other objects.

- Be careful not to bump or push strongly on the lens.

This could lead to injury or damage the camera.

- Be careful not to subject the screen to strong impacts.

If the screen cracks, injury may result from the broken fragments.

- When using the flash, be careful not to cover it with your fingers or clothing.

This could result in burns or damage to the flash.

- Avoid using, placing, or storing the product in the following places:

- Places subject to direct sunlight
- Places subject to temperatures above 40 °C (104 °F)
- Humid or dusty places

These could cause leakage, overheating, or an explosion of the battery pack/batteries, resulting in electrical shock, fire, burns, or other injuries. Overheating and damage may result in electrical shock, fire, burns, or other injuries.

- The slideshow transition effects may cause discomfort when viewed for prolonged periods.

- When using optional lenses, lens filters, or filter adapters (if applicable), be sure to attach these accessories firmly.

If the lens accessory becomes loose and falls off, it may crack, and the shards of glass may lead to cuts.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



- On products that raise and lower the flash automatically, make sure to avoid pinching your fingers with the lowering flash. This could result in injury.

Caution

Denotes the possibility of property damage.

- Do not aim the camera at intense light sources, such as the sun on a clear day or an intense artificial light source. Doing so may damage the image sensor or other internal components.

- When using the camera on a sandy beach or at a windy location, be careful not to allow dust or sand to enter the camera.
- On products that raise and lower the flash automatically, do not push the flash down or pry it open.

This may cause the product to malfunction.

- Wipe off any dust, grime, or other foreign matter on the flash with a cotton swab or cloth.

The heat emitted from the flash may cause foreign matter to smoke or the product to malfunction.

- Remove and store the battery pack/batteries when you are not using the product.

Any battery leakage that occurs may cause product damage.

- Before you discard the battery pack/batteries, cover the terminals with tape or other insulators.

Contacting other metal materials may lead to fire or explosions.

- Unplug any battery charger used with the product when not in use. Do not cover with a cloth or other objects when in use.

Leaving the unit plugged in for a long period of time may cause it to overheat and distort, resulting in fire.

- Do not leave any dedicated battery packs near pets. Pets biting the battery pack could cause leakage, overheating, or explosion, resulting in product damage or fire.

- If your product uses multiple batteries, do not use batteries that have different levels of charge together, and do not use old and new batteries together. Do not insert the batteries with the + and – terminals reversed.

This may cause the product to malfunction.

- Do not sit down with the camera in your pant pocket. Doing so may cause malfunctions or damage the screen.

- When putting the camera in your bag, ensure that hard objects do not come into contact with the screen. Also close the screen (so that it faces the body), if your product's screen closes.

- Do not attach any hard objects to the product.

Doing so may cause malfunctions or damage the screen.



Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Basic Guide


Basic Operations

Basic information and instructions, from initial preparations to shooting and playback

Initial Preparations


Prepare for shooting as follows.

Attaching Accessories

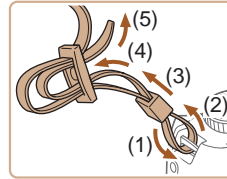


1 Attach the strap.

- Attach the included strap to the camera as shown.
- On the other side of the camera, attach the strap the same way.

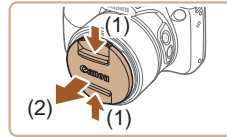

2 Attach the lens cap.

- Remove the lens cap from the lens and attach the lens cap cord to the strap.

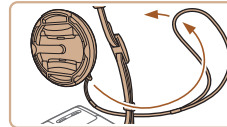

- Always remove the lens cap before turning the camera on. Try clipping the lens cap to the neck strap when the cap is not in use.
- Keep the lens cap on the lens when the camera is not in use.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index




Holding the Camera



- Place the strap around your neck.
- When shooting, keep your arms close to your body and hold the camera securely to prevent it from moving. If you have raised the flash, do not rest your fingers on it.


Charging the Battery Pack

Before use, charge the battery pack with the included charger. Be sure to charge the battery pack initially, because the camera is not sold with the battery pack charged.

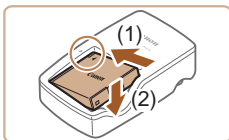



1 Insert the battery pack.

- After aligning the ▲ marks on the battery pack and charger, insert the battery pack by pushing it in (1) and down (2).

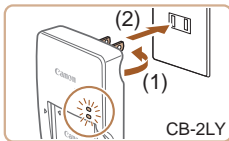

2 Charge the battery pack.

- CB-2LY: Flip out the plug (1) and plug the charger into a power outlet (2).
- CB-2LYE: Plug the power cord into the charger, then plug the other end into a power outlet.
- The charging lamp turns orange, and charging begins.
- When charging is finished, the lamp turns green.

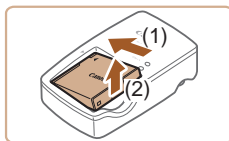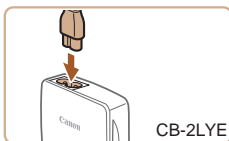

3 Remove the battery pack.

- After unplugging the battery charger, remove the battery pack by pushing it in (1) and up (2).



- To protect the battery pack and keep it in optimal condition, do not charge it continuously for more than 24 hours.
- For battery chargers that use a power cord, do not attach the charger or cord to other objects. Doing so could result in malfunction or damage to the product.



- For details on charging time and the number of shots and recording time possible with a fully charged battery pack, see "Number of Shots/Recording Time, Playback Time" (134).
- Charged battery packs gradually lose their charge, even when they are not used. Charge the battery pack on (or immediately before) the day of use.
- The charger can be used in areas with 100 – 240 V AC power (50/60 Hz). For power outlets in a different format, use a commercially available adapter for the plug. Never use an electrical transformer designed for traveling, which may damage the battery pack.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

Index




Inserting the Battery Pack and Memory Card

Insert the included battery pack and a memory card (sold separately). Note that before using a new memory card (or a memory card formatted in another device), you should format the memory card with this camera (p97).

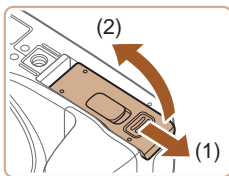


1 Open the cover.

- Slide the cover (1) and open it (2).

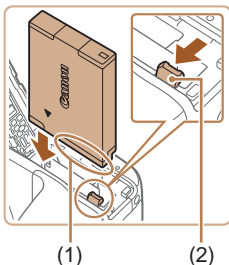


2 Insert the battery pack.

- Holding the battery pack with the terminals (1) facing as shown, press the battery lock (2) in the direction of the arrow and insert the battery pack until the lock clicks shut.
- If you insert the battery pack facing the wrong way, it cannot be locked into the correct position. Always confirm that the battery pack is facing the right way and locks when inserted.

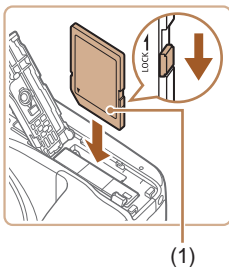

3 Check the card's write-protect tab and insert the memory card.

- Recording is not possible on memory cards with a write-protect tab when the tab is in the locked position. Slide the tab to the unlocked position.
- Insert the memory card with the label (1) facing as shown until it clicks into place.

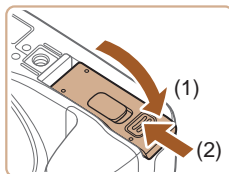


4 Close the cover.

- Lower the cover (1) and hold it down as you slide it, until it clicks into the closed position (2).




- For guidelines on how many shots or hours of recording can be saved on one memory card, see "Number of Shots per Memory Card" (p135).

Removing the Battery Pack and Memory Card

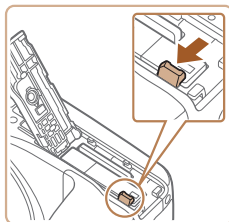

Remove the battery pack.

- Open the cover and press the battery lock in the direction of the arrow.
- The battery pack will pop up.

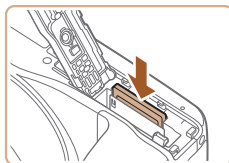

Remove the memory card.

- Push the memory card in until it clicks, and then slowly release it.
- The memory card will pop up.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index




Setting the Date and Time

Set the current date and time correctly as follows if the [Date/Time] screen is displayed when you turn the camera on. Information you specify this way is recorded in image properties when you shoot, and it is used when you manage images by shooting date or print images showing the date. You can also add a date stamp to shots, if you wish (p.40).




1 Turn the camera on.

- Press the power button.
- The [Date/Time] screen is displayed.

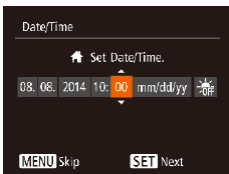

2 Set the date and time.

- Press the [◀][▶] buttons to choose an option.
- Press the [▲][▼] buttons to specify the date and time.
- When finished, press the [OK] button.

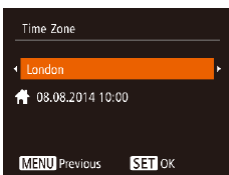

3 Specify your home time zone.

- Press the [◀][▶] buttons to choose your home time zone.



4 Finish the setup process.

- Press the [OK] button when finished. After a confirmation message, the setting screen is no longer displayed.
- To turn off the camera, press the power button.



- Unless you set the date, time, and home time zone, the [Date/Time] screen will be displayed each time you turn the camera on. Specify the correct information.



- To set daylight saving time (1 hour ahead), choose [Σ_{off}] in step 2 and then choose [Σ_{on}] by pressing the [▲][▼] buttons.


Changing the Date and Time

Adjust the date and time as follows.




1 Access the menu screen.

- Press the [MENU] button.

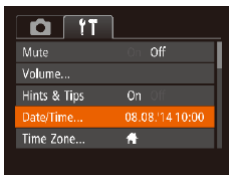

2 Choose [Date/Time].

 - Move the zoom lever to choose the [T] tab.
- Press the [▲][▼] buttons to choose [Date/Time], and then press the [OK] button.



Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



3 Change the date and time.

 
- Follow step 2 in “Setting the Date and Time” (📖18) to adjust the settings.
- Press the [MENU] button to close the menu screen.



- Date/time settings can be retained for about 3 weeks by the camera's built-in date/time battery (backup battery) after the battery pack is removed.
- The date/time battery will be charged in about 4 hours once you insert a charged battery pack or connect the camera to an AC adapter kit (sold separately, 📖102), even if the camera is left off.
- Once the date/time battery is depleted, the [Date/Time] screen will be displayed when you turn the camera on. Set the correct date and time as described in “Setting the Date and Time” (📖18).


Display Language

Change the display language as needed.



1 Enter Playback mode.

 - Press the [PLAY] button.



2 Access the setting screen.

- Press and hold the [FUNC/SET] button, and then immediately press the [MENU] button.

| English | Noisk | Română |
|------------|----------|---------|
| Deutsch | Svenska | Türkçe |
| Français | Español | العربية |
| Nederlands | Ελληνικά | മലയാളം |
| Dansk | Русский | 简体中文 |
| Português | Polski | 繁體中文 |
| Suomi | Čeština | 한국어 |



- The current time is displayed if you wait too long in step 2 after pressing the [ISO] button before you press the [MENU] button. In this case, press the [DISP] button to dismiss the time display and repeat step 2.
- You can also change the display language by pressing the [MENU] button and choosing [Language] (🗨️) on the [Y1] tab.

3 Set the display language.

- Press the [▲][▼][◀][▶] buttons to choose a language, and then press the [DISP] button.
- Once the display language has been set, the setting screen is no longer displayed.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Trying the Camera Out

► Still Images ► Movies

Follow these instructions to turn the camera on, shoot still images or movies, and then view them.

Shooting (Smart Auto)

For fully automatic selection of the optimal settings for specific scenes, simply let the camera determine the subject and shooting conditions.



1 Turn the camera on.

- Press the power button.
- The startup screen is displayed.




 

2 Enter [AUTO] mode.

- Set the mode dial to [AUTO].
- Aim the camera at the subject. The camera will make a slight clicking noise as it determines the scene.
- Icons representing the scene and image stabilization mode are displayed in the upper right of the screen.
- Frames displayed around any detected subjects indicate that they are in focus.



3 Compose the shot.

- To zoom in and enlarge the subject, move the zoom lever toward [mountain icon] (telephoto), and to zoom away from the subject, move it toward [wide angle icon] (wide angle).

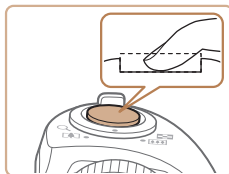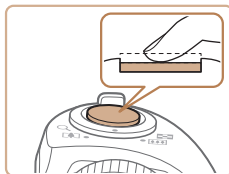

4 Shoot. Shooting Still Images

1) Focus.

- Press the shutter button lightly, halfway down. The camera beeps twice after focusing, and AF frames are displayed to indicate image areas in focus.
- If [Raise the flash] is displayed, lift the flash with your finger to prepare it for use. If you prefer not to use the flash, push it down with your finger, into the camera.

2) Shoot.

- Press the shutter button all the way down.
- As the camera shoots, a shutter sound is played, and in low-light conditions when you have raised the flash, it fires automatically.
- Keep the camera still until the shutter sound ends.
- After displaying your shot, the camera will revert to the shooting screen.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index






Shooting Movies

1) Start shooting.

- Press the movie button. The camera beeps once as recording begins, and [●Rec] is displayed with the elapsed time (1).
- Black bars are displayed on the top and bottom edges of the screen, and the subject is slightly enlarged. The black bars indicate image areas not recorded.
- Frames displayed around any detected faces indicate that they are in focus.
- Once recording begins, take your finger off the movie button.

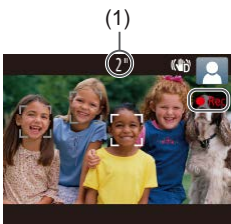


2) Finish shooting.

- Press the movie button again to stop shooting. The camera beeps twice as recording stops.

Viewing

 After shooting images or movies, you can view them on the screen as follows.




1 Enter Playback mode.

- Press the [▶] button.
- Your last shot is displayed.



2 Browse through your images.

- To view the previous image, press the [◀] button. To view the next image, press the [▶] button.

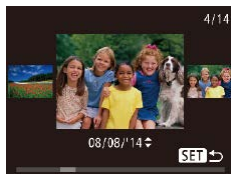

- To access this screen (Scroll Display mode), press and hold the [◀][▶] buttons for at least one second. In this mode, press the [◀][▶] buttons to browse through images.
- To return to single-image display, press the [SET] button.
- Movies are identified by a [SET ▶] icon. To play movies, go to step 3.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode


7 Setting Menu

8 Accessories

9 Appendix

Index



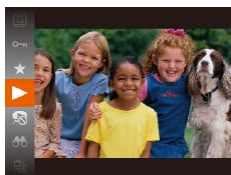

3 Play movies.

- Press the [M] button, press the [▲][▼] buttons to choose [▶], and then press the [M] button again.
- Playback now begins, and after the movie is finished, [SET ▶] is displayed.
- To adjust the volume, press the [▲][▼] buttons.



- To switch to Shooting mode from Playback mode, press the shutter button halfway.

Erasing Images

You can choose and erase unneeded images one by one. Be careful when erasing images, because they cannot be recovered.


1 Choose an image to erase.

- Press the [◀][▶] buttons to choose an image.



2 Erase the image.

- Press the [W] button.
- After [Erase?] is displayed, press the [◀][▶] buttons to choose [Erase], and then press the [M] button.
- The current image is now erased.
- To cancel erasure, press the [◀][▶] buttons to choose [Cancel], and then press the [M] button.

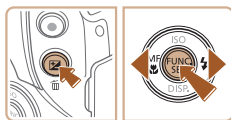

- You can choose multiple images to erase at once (85).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index




Advanced Guide

1

Camera Basics


Other basic operations and more ways to enjoy your camera, including shooting and playback options

On/Off

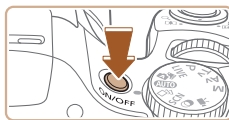

Shooting Mode

 - Press the power button to turn the camera on and prepare for shooting.
- To turn the camera off, press the power button again.



Playback Mode

- Press the [▶] button to turn the camera on and view your shots.
- To turn the camera off, press the [▶] button again.



- To switch to Playback mode from Shooting mode, press the [▶] button.
- To switch to Shooting mode from Playback mode, press the shutter button halfway (p. 24).
- The lens will be retracted after about one minute once the camera is in Playback mode. You can turn the camera off when the lens is retracted by pressing the [▶] button.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Power-Saving Features (Auto Power Down)

As a way to conserve battery power, the camera automatically deactivates the screen (Display Off) and then turns itself off after a specific period of inactivity.

Power Saving in Shooting Mode

The screen is automatically deactivated after about one minute of inactivity. In about two more minutes, the lens is retracted and the camera turns itself off. To activate the screen and prepare for shooting when the screen is off but the lens is still out, press the shutter button halfway (📖24).

Power Saving in Playback Mode

The camera turns itself off automatically after about five minutes of inactivity.




- You can deactivate Auto Power Down and adjust the timing of Display Off, if you prefer (📖96).
- Power saving is not active while the camera is connected to a computer (📖109).

Shutter Button


To ensure your shots are in focus, always begin by holding the shutter button halfway down, and once the subject is in focus, press the button all the way down to shoot.

In this manual, shutter button operations are described as pressing the button *halfway* or *all the way down*.

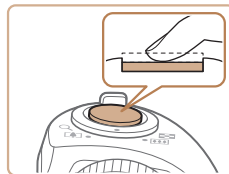

1 Press halfway. (Press lightly to focus.)

- Press the shutter button halfway. The camera beeps twice, and AF frames are displayed around image areas in focus.

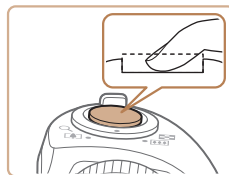

2 Press all the way down. (From the halfway position, press fully to shoot.)

- The camera shoots, as a shutter sound is played.
- Keep the camera still until the shutter sound ends.



- Images may be out of focus if you shoot without initially pressing the shutter button halfway.
- Length of shutter sound playback varies depending on the time required for the shot. It may take longer in some shooting scenes, and images will be blurry if you move the camera (or the subject moves) before the shutter sound ends.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

Index



Shooting Modes

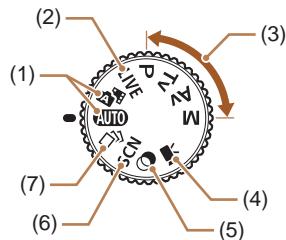

Use the mode dial to access each shooting mode.



- | | |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>(1) Auto Mode / Hybrid Auto Mode Fully automatic shooting, with camera-determined settings (📖20, 📖29, 📖31).</p> <p>(2) Live View Control Mode Customize image brightness or colors when shooting (📖48).</p> <p>(3) P, Tv, Av, and M Modes Take a variety of shots using your preferred settings (📖58, 📖71).</p> | <p>(4) Movie Mode For shooting movies (📖57). You can also shoot movies when the mode dial is not set to Movie mode, simply by pressing the movie button.</p> <p>(5) Creative Filters Mode Add a variety of effects to images when shooting (📖51).</p> <p>(6) Special Scene Mode Shoot with optimal settings for specific scenes (📖50).</p> <p>(7) Creative Shot Mode You can capture multiple still images with effects using camera-determined settings (📖49).</p> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Shooting Display Options

Press the [▼] button to view other information on the screen, or to hide the information. For details on the information displayed, see “On-Screen Information” (📖123).

| | |
|-------------------------------------------------------------------------------------|-----------------------------|
|  | Information is displayed |
|  | No information is displayed |



- Screen brightness is automatically increased by the night view function when you are shooting under low light, making it easier to check how shots are composed. However, on-screen image brightness may not match the brightness of your shots. Note that any on-screen image distortion or jerky subject motion will not affect recorded images.
- For playback display options, see “Switching Display Modes” (📖75).

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |




Using the FUNC. Menu

Configure commonly used functions through the FUNC. menu as follows. Note that menu items and options vary depending on the shooting mode (127) or playback mode (133).



1 Access the FUNC. menu.

- Press the [FUNC] button.

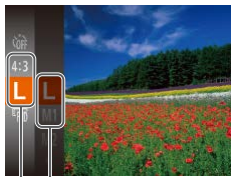

2 Choose a menu item.

- Press the [▲][▼] buttons to choose a menu item (1), and then press the [FUNC] or [▶] button.
- Available options (2) are listed next to menu items, on the right.
- Depending on the menu item, functions can be specified simply by pressing the [FUNC] or [▶] button, or another screen is displayed for configuring the function.



3 Choose an option.

- Press the [▲][▼] buttons to choose an option.
- Options labeled with a [MENU] icon can be configured by pressing the [MENU] button.
- To return to the menu items, press the [◀] button.



4 Finish the setup process.

- Press the [FUNC] button.
- The screen before you pressed the [FUNC] button in step 1 is displayed again, showing the option you configured.



- To undo any accidental setting changes, you can restore the camera's default settings (100).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

Index

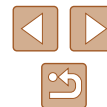


Using the Menu Screen

 Configure a variety of camera functions through the menu screen as follows. Menu items are grouped by purpose on tabs, such as shooting [📷], playback [▶], and so on. Note that available menu items vary depending on the selected shooting or playback mode (📖128 – 📖133).






1 Access the menu screen.

- Press the [MENU] button.

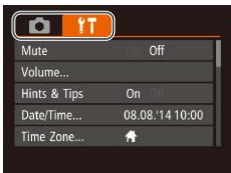

2 Choose a tab.

 - Move the zoom lever to choose a tab.
- After you have turned the [🔍] dial or pressed the [▲][▼] buttons to choose a tab initially, you can switch between tabs by pressing the [◀][▶] buttons.

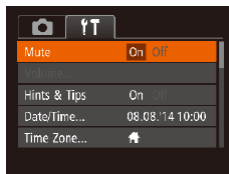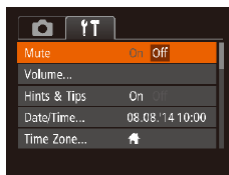

3 Choose a menu item.

- Press the [▲][▼] buttons to choose a menu item.
- For menu items with options not shown, first press the [⊕] or [⊖] button to switch screens, and then press the [▲][▼] buttons to select the menu item.
- To return to the previous screen, press the [MENU] button.

4 Choose an option.

- Press the [◀][▶] buttons to choose an option.

5 Finish the setup process.

- Press the [MENU] button to return to the screen displayed before you pressed the [MENU] button in step 1.



- To undo any accidental setting changes, you can restore the camera's default settings (📖100).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Indicator Display

The indicator on the back of the camera (📖4) lights up or blinks depending on the camera status.


| Color | Indicator Status | Camera Status |
|-------|------------------|-------------------------------------------------------------------------------------------|
| Green | On | Connected to a computer (📖109), or display off (📖24, 📖96, 📖96) |
| | Blinking | Starting up, recording/reading/transmitting images, or shooting long exposures (📖71, 📖72) |



- When the indicator blinks green, never turn the camera off, open the memory card/battery cover, or shake or jolt the camera, which may corrupt images or damage the camera or memory card.

Clock

You can check the current time.

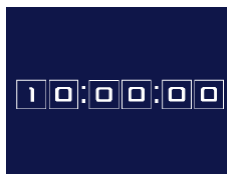

- Press and hold the [📖] button.
- The current time appears.
- If you hold the camera vertically while using the clock function, it will switch to vertical display. Press the [◀][▶] buttons to change the display color.
- Press the [📖] button again to cancel the clock display.



- When the camera is off, press and hold the [📖] button, then press the power button to display the clock.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



2

Auto Mode / Hybrid Auto Mode

Convenient mode for easy shots with greater control over shooting

Shooting with Camera-Determined Settings

For fully automatic selection of the optimal settings for specific scenes, simply let the camera determine the subject and shooting conditions.

Shooting (Smart Auto)

► Still Images ► Movies



1 Turn the camera on.

- Press the power button.
- The startup screen is displayed.



2 Enter [AUTO] mode.

- Set the mode dial to [AUTO].
- Aim the camera at the subject. The camera will make a slight clicking noise as it determines the scene.
- Icons representing the scene and image stabilization mode are displayed in the upper right of the screen (📖33, 📖34).
- Frames displayed around any detected subjects indicate that they are in focus.



Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode


7 Setting Menu

8 Accessories

9 Appendix

Index



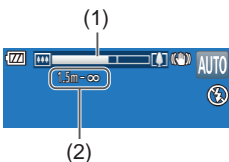

3 Compose the shot.

 


- To zoom in and enlarge the subject, move the zoom lever toward [T] (telephoto), and to zoom away from the subject, move it toward [W] (wide angle). (A zoom bar (1) showing the zoom position is displayed, along with the area in focus (2).)
- To zoom in or out quickly, move the zoom lever all the way toward [T] (telephoto) or [W] (wide angle), and to zoom in or out slowly, move it just a little in the desired direction.

4 Shoot.


Shooting Still Images

1) Focus.

- Press the shutter button halfway. The camera beeps twice after focusing, and AF frames are displayed to indicate image areas in focus.
- Several AF frames are displayed when multiple areas are in focus.

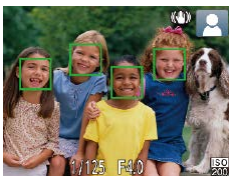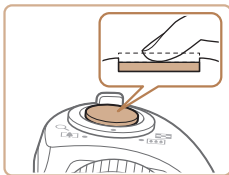


- If [Raise the flash] is displayed, lift the flash with your finger to prepare it for use. If you prefer not to use the flash, push it down with your finger, into the camera.

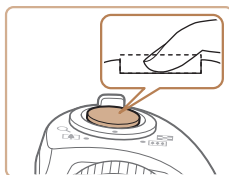

2) Shoot.


- Press the shutter button all the way down.
- As the camera shoots, a shutter sound is played, and in low-light conditions when you have raised the flash, it fires automatically.
- Keep the camera still until the shutter sound ends.
- After displaying your shot, the camera will revert to the shooting screen.

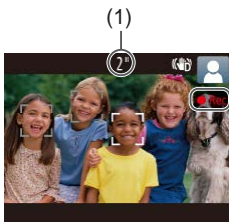

Shooting Movies

1) Start shooting.

 - Press the movie button. The camera beeps once as recording begins, and [●Rec] is displayed with the elapsed time (1).
- Black bars are displayed on the top and bottom edges of the screen, and the subject is slightly enlarged. The black bars indicate image areas not recorded.
- Frames displayed around any detected faces indicate that they are in focus.
- Once recording begins, take your finger off the movie button.



2) Resize the subject and recompose the shot as needed.

- To resize the subject, repeat the operations in step 3. However, note that the sound of camera operations will be recorded. Note that movies shot at zoom factors shown in blue will look grainy.
- When you recompose shots, the focus, brightness, and colors will be automatically adjusted.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index





3) Finish shooting.

- Press the movie button again to stop shooting. The camera beeps twice as recording stops.
- Recording will stop automatically when the memory card becomes full.

Shooting in Hybrid Auto Mode

► Still Images ► Movies

You can make a short movie of the day just by shooting still images. The camera records 2 – 4-second clips of scenes before each shot, which are later combined in a digest movie.



1 Enter [Hybrid Auto] mode.

- Follow step 2 in “Shooting (Smart Auto)” (p.29) and choose [Hybrid Auto].

2 Compose the shot.

- Follow steps 3 – 4 in “Shooting (Smart Auto)” (p.29) to compose the shot and focus.
- For more impressive digest movies, aim the camera at subjects about four seconds before shooting still images.

3 Shoot.

- Follow step 4 in “Shooting (Smart Auto)” (p.29) to shoot a still image.
- The camera records both a still image and movie clip. The clip, which ends with the still image and a shutter sound, forms a single chapter in the digest movie.



- Battery life is shorter in this mode than in [AUTO] mode, because digest movies are recorded for each shot.
- A digest movie may not be recorded if you shoot a still image immediately after turning the camera on, choosing [Hybrid Auto] mode, or operating the camera in other ways.
- Camera operating sounds will be recorded in digest movies.



- Digest movie quality is [FHD] and cannot be changed.
- Sounds are not played when you press the shutter button halfway or trigger the self-timer.
- Digest movies are saved as separate movie files in the following cases even if they were recorded on the same day in [Hybrid Auto] mode.
 - The digest movie file size reaches approximately 4 GB, or the total recording time reaches approximately 29 minutes and 59 seconds.
 - The digest movie is protected (p.82).
 - Daylight saving time (p.18) or time zone (p.95) settings are changed.
 - A new folder is created (p.99).
- Recorded shutter sounds cannot be modified or erased.
- If you prefer to record digest movies without still images, adjust the setting in advance. Choose MENU (p.27) > [Camera] tab > [Digest Type] > [No Stills] (p.27).
- Individual chapters can be edited (p.93).

Digest Movie Playback

Display a still image shot in [Hybrid Auto] mode to play a digest movie, or specify the date of the digest movie to play (p.76).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Still Images/Movies



- If the camera is turned on while the [▼] button is held down, the camera will no longer sound. To activate sounds again, press the [MENU] button and choose [Mute] on the [Ft] tab, and then press the [◀][▶] buttons to choose [Off].

Still Images



- A blinking [📷] icon warns that images are more likely to be blurred by camera shake. In this case, mount the camera on a tripod or take other measures to keep it still.
- If your shots are dark despite the flash firing, move closer to the subject. For details on the flash range, see "Flash Range" (📖135).
- The subject may be too close if the camera only beeps once when you press the shutter button halfway. For details on the focusing range (shooting range), see "Shooting Range" (📖136).
- To reduce red-eye and to assist in focusing, the lamp may be activated when shooting in low-light conditions.
- A blinking [🔋] icon displayed when you attempt to shoot indicates that shooting is not possible until the flash has finished recharging. Shooting can resume as soon as the flash is ready, so either press the shutter button all the way down and wait, or release it and press it again.
- Although you can shoot again before the shooting screen is displayed, your previous shot may determine the focus, brightness, and colors used.



- You can change how long images are displayed after shots (📖46).

Movies



- Before shooting a movie, lower the flash with your finger. Be careful not to touch the microphone (1) when shooting a movie. Leaving the flash raised, or blocking the microphone may prevent audio from being recorded or may cause the recording to sound muffled.



- Avoid touching camera controls other than the movie button when shooting movies, because sounds made by the camera will be recorded.
- Once movie recording begins, the image display area changes and subjects are enlarged to allow for correction of significant camera shake. To shoot subjects at the same size shown before shooting, adjust the image stabilization setting (📖70).



- Audio is recorded in stereo.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Scene Icons

► Still Images ► Movies

In **[AUTO]** mode, shooting scenes determined by the camera are indicated by the icon displayed, and corresponding settings are automatically selected for optimal focusing, subject brightness, and color.

| Background | When Shooting People | | | Icon Background Color |
|----------------------|----------------------|-------------------------|-------------------------------|-----------------------|
| | People | In Motion* ¹ | Shadows on Face* ¹ | |
| Bright | | | | Gray |
| Bright and Backlit | | | — | |
| With Blue Sky | | | | Light Blue |
| Blue Sky and Backlit | | | — | |
| Spotlights | | | | Dark Blue |
| Dark | | | | |
| Dark, Using Tripod | | — | — | |

| Background | When Shooting Other Subjects | | | Icon Background Color |
|----------------------|------------------------------|-------------------------|----------------|-----------------------|
| | Other Subjects | In Motion* ¹ | At Close Range | |
| Bright | | | | Gray |
| Bright and Backlit | | | | |
| With Blue Sky | | | | Light Blue |
| Blue Sky and Backlit | | | | |
| Sunsets | | | — | Orange |
| Spotlights | | | | Dark Blue |
| Dark | | | | |
| Dark, Using Tripod | | — | — | |

*¹ Not displayed for movies.

*² Displayed in dark scenes when the camera is held still, as when mounted on a tripod.



- Try shooting in **[P]** mode (p.58) if the scene icon does not match actual shooting conditions, or if it is not possible to shoot with your expected effect, color, or brightness.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix







Index



Image Stabilization Icons

► Still Images ► Movies

Optimal image stabilization for the shooting conditions is automatically applied (Intelligent IS). Additionally, the following icons are displayed in [A/AF] and [AUTO] modes.

| | |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Image stabilization for still images (Normal) |
|  | Image stabilization for still images when panning (Panning)* |
|  | Image stabilization for macro shots. During movie recording, [A/AF] is displayed, and image stabilization for macro movie recording is used (Hybrid IS). |
|  | Image stabilization for movies, reducing strong camera shake, as when shooting while walking (Dynamic) |
|  | Image stabilization for slow camera shake, such as when shooting movies at telephoto (Powered) |
|  | No image stabilization, because the camera is mounted on a tripod or held still by other means. However, during movie recording, [A/AF] is displayed, and image stabilization to counteract wind or other sources of vibration is used (Tripod IS). |

* Displayed when you pan, following moving subjects with the camera. When you follow subjects moving horizontally, image stabilization only counteracts vertical camera shake, and horizontal stabilization stops. Similarly, when you follow subjects moving vertically, image stabilization only counteracts horizontal camera shake.



- To cancel image stabilization, set [IS Mode] to [Off] (70). In this case, an IS icon is not displayed.
- In [A/AF] mode, no [Panning] icon is displayed.

On-Screen Frames

► Still Images ► Movies

In [AUTO] mode, a variety of frames are displayed once the camera detects subjects you are aiming the camera at.

- A white frame is displayed around the subject (or person's face) determined by the camera to be the main subject, and gray frames are displayed around other detected faces. Frames follow moving subjects within a certain range to keep them in focus. However, if the camera detects subject movement, only the white frame will remain on the screen.
- When you are pressing the shutter button halfway and the camera detects subject movement, a blue frame is displayed, and the focus and image brightness are constantly adjusted (Servo AF).



- Try shooting in [P] mode (58) if no frames are displayed, if frames are not displayed around desired subjects, or if frames are displayed on the background or similar areas.


| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |

Common, Convenient Features

Zooming In Closer on Subjects (Digital Zoom)

► Still Images ► Movies

 When distant subjects are too far away to enlarge using the optical zoom, use digital zoom for up to about 168x enlargement.




1 Move the zoom lever toward [🔍].

- Hold the lever until zooming stops.
- Zooming stops at the largest possible zoom factor (before the image becomes noticeably grainy), which is then indicated on the screen.

2 Move the zoom lever toward [🔍] again.

- The camera zooms in even closer on the subject.
- (1) is the current zoom factor.

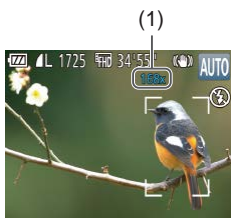

- Moving the zoom lever will display the zoom bar (which indicates the zoom position). The color of the zoom bar will change depending on the zoom range.
 - White range: optical zoom range where the image will not appear grainy.
 - Yellow range: digital zoom range where the image is not noticeably grainy (ZoomPlus).
 - Blue range: digital zoom range where the image will appear grainy.
- Because the blue range will not be available at some resolution settings (📖 42), the maximum zoom factor can be achieved by following step 1.



- To deactivate digital zoom, choose MENU (📖 27) > [📷] tab > [Digital Zoom] > [Off].

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix


Index



Easily Reacquiring Subjects after Manual Zooming (Framing Assist – Seek)


► Still Images ► Movies

If you lose track of a subject while zoomed in, you can find it more easily by temporarily zooming out.

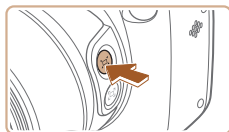

1 Look for the lost subject.

- Press and hold the [Framing Assist] button.
- The camera zooms out and displays a white frame around the area shown before you pressed the [Framing Assist] button.

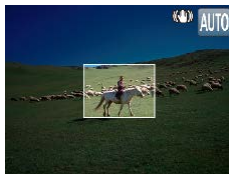

2 Reacquire the subject.

- Aim the camera so that the subject enters the white frame, and then release the [Framing Assist] button.
- The previous magnification is now restored, so that the area within the white frame fills the screen again.



- Some shooting information is not displayed while the camera is zoomed out.
- During movie shooting, the white frame is not displayed if you press the [Framing Assist] button. Also note that a changed zoom factor and camera operating sounds are recorded.




- If you prefer to shoot at the zoom factor of the screen in step 1, press the shutter button all the way down.
- You can adjust the zoom factor that the camera reverts to when you release the [Framing Assist] button by moving the zoom lever to resize the white frame while you hold the [Framing Assist] button.
- To adjust the area displayed when the [Framing Assist] button is pressed, access MENU (p. 27) > [Camera] tab > [Framing Assist] Display Area, and choose one of the three options (p. 27).
- The zoom factor cannot be changed with the [Framing Assist] button after you press the shutter button all the way down in self-timer mode (p. 39).

Easily Composing Shots after Manual Zooming (Framing Assist – Lock)


► Still Images ► Movies

You can reduce camera shake at the telephoto end, which makes it easier to compose shots.

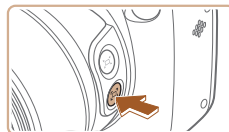

1 Compensate camera shake at the telephoto end.

- Press and hold the [Framing Assist] button. [Framing Assist] is displayed, and image stabilization optimal for shooting at the telephoto end is applied.

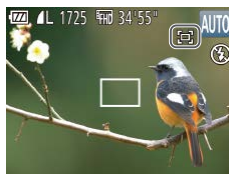

2 Shoot.

- While holding the [Framing Assist] button, press the shutter button halfway to focus on the subject, and then press it all the way down.

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |





- The zoom factor cannot be adjusted by pressing the [ZOOM] button (P.36) while you are holding down the [ZOOM] button.
- Recomposing the shot while holding down the [ZOOM] button may make image stabilization less effective. In this case, [ZOOM] is displayed in gray. If this occurs, release the [ZOOM] button, compose the shot, and then press it again.
- If you start recording a movie while holding down the [ZOOM] button, image stabilization may cause the shot to be recomposed.




- Although no image stabilization icon is shown while you hold down the [ZOOM] button, image stabilization optimal for shooting at the telephoto end is applied.
- To fine-tune the size of subjects gradually, move the zoom lever while holding down the [ZOOM] button.

Auto Zooming to Keep Faces at a Constant Size


► Still Images ► Movies

The camera automatically zooms in and out to keep a detected face (P.65) at a constant size on the screen. If the person moves closer, the camera automatically zooms out, and vice versa. This size can also be adjusted, as needed.

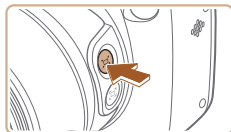

1 Enter [ZOOM] Auto mode.

- Press and release the [ZOOM] button quickly.
- [ZOOM] Auto: On] is displayed.

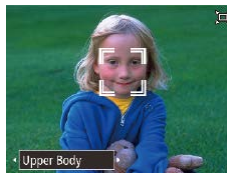

2 Choose the face.

- [ZOOM] is displayed once a face has been detected.
- If multiple faces are detected, press the [ZOOM] button to switch to the face to keep at a constant size.
- The camera zooms in and out to keep the face framed by [ZOOM] at a constant size on the screen.

3 Shoot.

- Even after you shoot, [ZOOM] remains around the face displayed at a constant size.
- To cancel constant face display size, press the [ZOOM] button again. [ZOOM] Auto: Off] is displayed.

Adjusting the Constant Face Display Size



- When [ZOOM] Auto is on, press the [ZOOM] buttons or turn the [ZOOM] dial to choose the desired option.
- The camera zooms automatically to keep faces at the specified size.

| | |
|------------|----------------------------------------------------------------------------------------------------------------------------|
| Face | Keep faces large enough to show facial expressions clearly. |
| Upper Body | Keep faces small enough to show the person's upper body. |
| Whole Body | Keep faces small enough to show the person's entire body. |
| Manual | Keep faces at the size specified by moving the zoom lever. Release the zoom lever once the desired size has been obtained. |

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index





- A face may not be displayed at a constant size at some zoom factors, or if the subject's head is tilted or facing the camera indirectly.
- During movie recording, a changed zoom factor and camera operating sounds are recorded.
- When [Auto] is on, some shooting information is not displayed, and some shooting settings cannot be configured.



- If the person whose face is framed with [Face] moves toward the edge of the screen, the camera zooms out to keep the person in view.
- In step 3, switching [Face] to another face with the [Face] button is not possible during movie recording.
- The zoom factor remains the same after you press the shutter button all the way down in self-timer mode ([39]), even if the person's size relative to the screen changes.
- The face size can also be adjusted in MENU ([27]) > [Camera] tab > [Auto Settings] > [Auto Zoom]. You can choose [Off] to deactivate this feature and use only the feature described in "Easily Reacquiring Subjects with Auto Zooming (Seek Assist)".
- You can zoom in or out with the zoom lever when [Face], [Upper Body], or [Whole Body] is selected, but the original zoom factor will be restored in a few seconds after you release the lever.
- You can clear your specified face size during movie recording by pressing the [Auto] button.
- Face sizes cannot be changed during movie recording.

Easily Reacquiring Subjects with Auto Zooming (Seek Assist)

► Still Images ► Movies

If you lose track of a subject while zoomed in and move the camera to look for it, the camera detects this movement and automatically zooms out, which makes it easier to find the subject.



1 Enter [Auto] mode ([37]).

2 Look for the lost subject.

- When you move the camera to look for the subject, the camera zooms out to help you find it.

3 Reacquire the subject.

- Once you find the subject and stop moving the camera, the camera zooms in again.

4 Shoot.

- To cancel this mode, press the [Auto] button again. [Auto: Off] is displayed.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu





8 Accessories

9 Appendix

Index





- The camera does not zoom out automatically while  is displayed around a detected face, even if you move the camera.
- When the feature described in “Auto Zooming to Keep Faces at a Constant Size” is deactivated,  is displayed around a detected face, and the camera automatically zooms out when moved.
- Zooming is not possible while the shutter button is pressed halfway.
- To deactivate this feature and use only the feature described in “Auto Zooming to Keep Faces at a Constant Size”, choose MENU (M27) >  tab >  Auto Settings > [Seek Assist] > [Off].




 
Using the Self-Timer


► Still Images ► Movies

With the self-timer, you can include yourself in group photos or other timed shots. The camera will shoot about 10 seconds after you press the shutter button.





 1 Configure the setting.

- Press the  button, choose  in the menu, and then choose  (M26).
- Once the setting is complete,  is displayed.




2 Shoot.



- For Still Images: Press the shutter button halfway to focus on the subject, and then press it all the way down.
- For Movies: Press the movie button.
- Once you start the self-timer, the lamp will blink and the camera will play a self-timer sound.
- Two seconds before the shot, the blinking and sound will speed up. (The lamp will remain lit in case the flash fires.)
- To cancel shooting after you have triggered the self-timer, press the  button.
- To restore the original setting, choose  in step 1.

Using the Self-Timer to Avoid Camera Shake

► Still Images ► Movies

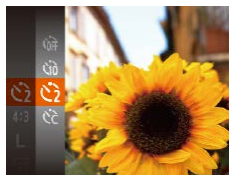This option delays shutter release until about two seconds after you have pressed the shutter button. If the camera is unsteady while you are pressing the shutter button, it will not affect your shot.



- Follow step 1 in “Using the Self-Timer” (M39) and choose .
- Once the setting is complete,  is displayed.
- Follow step 2 in “Using the Self-Timer” (M39) to shoot.

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



Customizing the Self-Timer

► Still Images ► Movies

You can specify the delay (0 – 30 seconds) and number of shots (1 – 10).

1 Choose [C].

- Following step 1 in “Using the Self-Timer” (139), choose [C] and press the [MENU] button.



2 Configure the setting.

- Press the [▲][▼] buttons to choose [Delay] or [Shots].
- Press the [◀][▶] buttons to choose a value, and then press the [OK] button.
- Once the setting is complete, [C] is displayed.
- Follow step 2 in “Using the Self-Timer” (139) to shoot.



- For movies shot using the self-timer, [Delay] represents the delay before recording begins, but the [Shots] setting has no effect.




 
- When you specify multiple shots, image brightness and white balance are determined by the first shot. More time is required between shots when the flash fires or when you have specified to take many shots. Shooting will stop automatically when the memory card becomes full.
- When a delay longer than two seconds is specified, two seconds before the shot, the lamp blinking and self-timer sound will speed up. (The lamp will remain lit in case the flash fires.)

Adding a Date Stamp

► Still Images ► Movies

The camera can add the shooting date to images, in the lower-right corner.

However, note that date stamps cannot be edited or removed, so confirm beforehand that the date and time are correct (118).

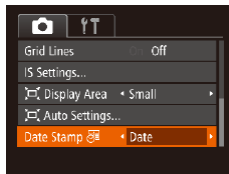

1 Configure the setting.

- Press the [MENU] button, choose [Date Stamp] on the [C] tab, and then choose the desired option (127).
- Once the setting is complete, [C] is displayed.

2 Shoot.

- As you take shots, the camera adds the shooting date or time to the lower-right corner of images.
- To restore the original setting, choose [Off] in step 1.



- Date stamps cannot be edited or removed.

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |





- Shots taken without adding a date stamp can be printed with one as follows.

However, adding a date stamp this way to images that already have one may cause it to be printed twice.


 
- Print using printer functions (110)
- Use camera DPOF print settings (114) to print
- Use the software downloaded from the Canon website (107) to print

Continuous Shooting

► Still Images ► Movies

In [AUTO] mode, hold the shutter button all the way down to shoot continuously.

For details on the continuous shooting speed, see “Continuous Shooting Speed” (136).

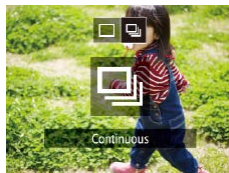

1 Configure the setting.

- Press the [MENU] button, press the [◀][▶] buttons to choose [SHOOT], and then press the [OK] button.
- Once the setting is complete, [SHOOT] is displayed.

2 Shoot.

- Hold the shutter button all the way down to shoot continuously.



- During continuous shooting, focus and exposure are locked at the position/level determined when you pressed the shutter button halfway.
- Cannot be used with the self-timer (39).
- Shooting may stop momentarily or continuous shooting may slow down depending on shooting conditions, camera settings, and the zoom position.
- As more shots are taken, shooting may slow down.
- Shooting may slow down if the flash fires.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Image Customization Features


Changing the Aspect Ratio

► Still Images ► Movies

Change the image aspect ratio (ratio of width to height) as follows.



- Press the **[Fn]** button, choose **[4:3]** in the menu, and choose the desired option (p.26).
- Once the setting is complete, the screen aspect ratio will be updated.
- To restore the original setting, repeat this process but choose **[4:3]**.

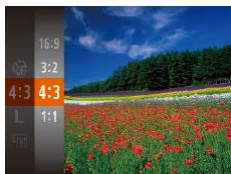

| | |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 16:9 | Used for display on widescreen HDTVs or similar display devices. |
| 3:2 | Same aspect ratio as 35mm film, used for printing images at 5 x 7-inch or postcard sizes. |
| 4:3 | Native aspect ratio of the camera screen, also used for display on standard-definition televisions or similar display devices, or for printing images at 3.5 x 5-inch or A-series sizes. |
| 1:1 | Square aspect ratio. |



• Not available in **[A]** mode.


Changing Image Resolution (Size)

► Still Images ► Movies

Choose from 4 levels of image resolution, as follows. For guidelines on how many shots at each resolution setting can fit on a memory card, see "Number of Shots per Memory Card" (p.135).



- Press the **[Fn]** button, choose **[L]** in the menu, and choose the desired option (p.26).
- The option you configured is now displayed.
- To restore the original setting, repeat this process but choose **[L]**.

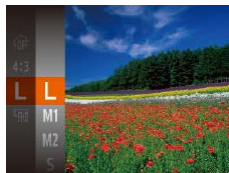

Guidelines for Choosing Resolution Based on Paper Size (for 4:3 Images)

| | |
|-----------|---------------------------------------|
| L | A2 (16.5 x 23.4 in.) |
| M1 | A3 – A5 (11.7 x 16.5 – 5.8 x 8.3 in.) |
| M2 | 3.5 x 5 in., 5 x 7 in., Postcard |
| S | For e-mailing and similar purposes |



• Not available in **[A]** mode.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

 
Index



Red-Eye Correction



► Still Images ► Movies

Red-eye that occurs in flash photography can be automatically corrected as follows.



1 Access the [Flash Settings] screen.

- Press the [MENU] button, choose [Flash Settings] on the [] tab, and then press the [] button (135).

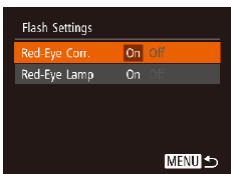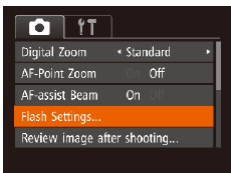

2 Configure the setting.

- Choose [Red-Eye Corr.], and then choose [On] (135).
- Once the setting is complete, [] is displayed.
- To restore the original setting, repeat this process but choose [Off].



- Red-eye correction may be applied to image areas other than eyes (if the camera misinterprets red eye makeup as red pupils, for example).




- You can also correct existing images (91).
- You can also access the screen in step 2 when the flash is up by pressing the [] button and immediately pressing the [MENU] button.

Changing Movie Image Quality

► Still Images ► Movies

3 image quality settings are available. For guidelines on the maximum movie length at each level of image quality that will fit on a memory card, see "Recording Time per Memory Card" (135).

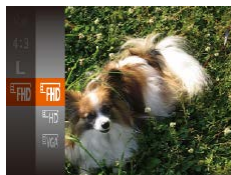

- Press the [] button, choose [FHD] in the menu, and choose the desired option (26).
- The option you configured is now displayed.
- To restore the original setting, repeat this process but choose [FHD].

| Image Quality | Resolution | Frame Rate | Details |
|---------------|-------------|------------|-------------------------------------|
| FHD | 1920 x 1080 | 30 fps | For shooting in Full HD |
| HD | 1280 x 720 | 30 fps | For shooting in HD |
| VGA | 640 x 480 | 30 fps | For shooting in standard definition |



- In [FHD] and [HD] modes, black bars displayed on the top and bottom edges of the screen indicate image areas not recorded.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index

 


Helpful Shooting Features


Displaying Grid Lines

► Still Images ► Movies

Grid lines can be displayed on the screen for vertical and horizontal reference while shooting.



- Press the [MENU] button, choose [Grid Lines] on the [📷] tab, and then choose [On] (📖27).
- Once the setting is complete, grid lines are displayed on the screen.
- To restore the original setting, repeat this process but choose [Off].



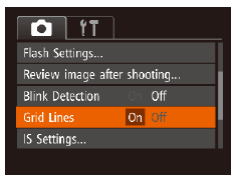


- Grid lines are not recorded in your shots.

Magnifying the Area in Focus

► Still Images ► Movies

 You can check the focus by pressing the shutter button halfway, which will enlarge the portion of the image in focus in the AF frame.

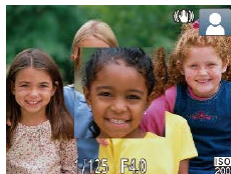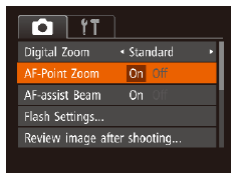

1 Configure the setting.

- Press the [MENU] button, choose [AF-Point Zoom] on the [📷] tab, and then choose [On] (📖27).

2 Check the focus.

- Press the shutter button halfway. The face detected as the main subject is now magnified.
- To restore the original setting, choose [Off] in step 1.



- The area in focus is not magnified in the following cases when the shutter button is pressed halfway.
 - If a face was not detected, if the person is too close to the camera and their face is too large for the screen, or if the camera detects subject movement
 - When digital zoom is used (📖35)
 - When Tracking AF is used (📖66)
 - When a TV is used as a display (📖104)
- Not available in [📷] mode.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

 
Index



Checking for Closed Eyes


► Still Images ► Movies

[] is displayed when the camera detects that people may have closed their eyes.




1 Configure the setting.

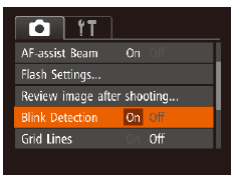


- Press the [MENU] button, choose [Blink Detection] on the [] tab, and then choose [On] (27).




2 Shoot.


- [] flashes when the camera detects a person whose eyes are closed.
- To restore the original setting, choose [Off] in step 1.



- When you have specified multiple shots in [] mode, this function is only available for the final shot.
- A frame is displayed around people whose eyes are closed when you have selected [2 sec.], [4 sec.], [8 sec.], or [Hold] in [Display Time] (46).
- This feature is not available in continuous shooting mode (41).

Customizing Camera Operation


Customize shooting functions on the [] tab of the menu screen as follows.



For instructions on menu functions, see “Using the Menu Screen” (27).

Deactivating the AF-Assist Beam

► Still Images ► Movies

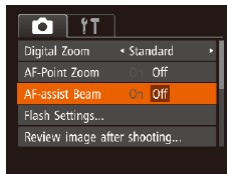You can deactivate the lamp that normally lights up to help you focus when you press the shutter button halfway in low-light conditions.



- Press the [MENU] button, choose [AF-assist Beam] on the [] tab, and then choose [Off] (27).
- To restore the original setting, repeat this process but choose [On].

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index




Deactivating the Red-Eye Reduction Lamp

► Still Images ► Movies

You can deactivate the red-eye reduction lamp that lights up to reduce red-eye when the flash is used in low-light shots.

1 Access the [Flash Settings] screen.

- Press the [MENU] button, choose [Flash Settings] on the [📷] tab, and then press the [ⓘ] button (📖27).

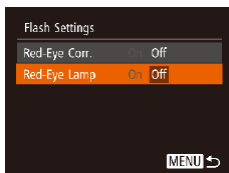

2 Configure the setting.

- Choose [Red-Eye Lamp], and then choose [Off] (📖27).
- To restore the original setting, repeat this process but choose [On].

Changing the Image Display Style after Shots


► Still Images ► Movies

You can change how long images are displayed and what information is displayed immediately after shooting.

Changing the Image Display Period after Shots

1 Access the [Review image after shooting] screen.

- Press the [MENU] button, choose [Review image after shooting] on the [📷] tab, and then press the [ⓘ] button (📖27).

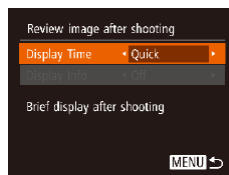

2 Configure the setting.

- Choose [Display Time], and then choose the desired option.
- To restore the original setting, repeat this process but choose [Quick].

| | |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Quick | Displays images only until you can shoot again. |
| 2 sec., 4 sec., 8 sec. | Displays images for the specified time. Even while the shot is displayed, you can take another shot by pressing the shutter button halfway again. |
| Hold | Displays images until you press the shutter button halfway. |
| Off | No image display after shots. |

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode /
Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix


Index



Changing the Screen Displayed after Shots

Change the way images are displayed after shots as follows.

1 Set [Display Time] to [2 sec.], [4 sec.], [8 sec.], or [Hold] (146).

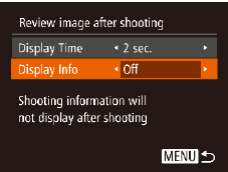

2 Configure the setting.

- Choose [Display Info], and then choose the desired option.
- To restore the original setting, repeat this process but choose [Off].

| | |
|----------|----------------------------------|
| Off | Displays only the image. |
| Detailed | Displays shooting details (124). |



- When [Display Time] (29) is set to [Off] or [Quick], [Display Info] is set to [Off] and cannot be changed.
- By pressing the [▼] button while an image is displayed after shooting, you can switch the display information. Note that the settings of [Display Info] are not changed. You can also erase images by pressing the [] button, or protect (82) or tag images as favorites (87) by pressing the [] button.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix


Index



3

Other Shooting Modes


Shoot more effectively in various scenes, and take shots enhanced with unique image effects or captured using special functions

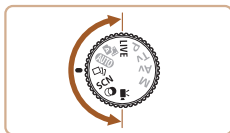

Brightness / Color Customization (Live View Control)

► Still Images ► Movies

Image brightness or colors when shooting can be easily customized as follows.

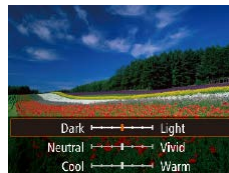

1 Enter [LIVE] mode.

- Set the mode dial to [LIVE].

2 Configure the setting.

- Press the [▼] button to access the setting screen. Press the [▲][▼] buttons to choose a setting item, and then press the [◀][▶] buttons to adjust the value as you watch the screen.
- Press the [Ⓢ] button.

3 Shoot.

| | |
|------------|--------------------------------------------------------------------------------------------------------------|
| Brightness | For brighter images, adjust the level to the right, and for darker images, adjust it to the left. |
| Color | For more vivid images, adjust the level to the right, and for more subdued images, adjust it to the left. |
| Tone | For a warm, reddish tone, adjust the level to the right, and for a cool, bluish tone, adjust it to the left. |

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Enjoying a Variety of Images from Each Shot (Creative Shot)

► Still Images ► Movies

The camera determines the subject and shooting conditions, automatically applying special effects and recomposing the shot to emphasize the subject. Six still images are recorded for each shot. You can capture multiple still images with effects using camera-determined settings.



1 Enter [Creative Shot] mode.

- Set the mode dial to [Creative Shot].

2 Shoot.

- Press the shutter button all the way down. As you shoot, the shutter sound is played three times.
- After the six images are displayed in succession, they are displayed simultaneously for about two seconds.
- To keep the images displayed until you press the shutter halfway, press the [OK] button. For full-screen display in this state, choose an image by pressing the [▲][▼][◀][▶] buttons, and then press the [OK] button.
- To return to the original display, press the [MENU] button.



- Shooting will take some time when the flash fires, but hold the camera steady until the shutter sound is played three times.

Image Display during Playback

The six images from each shot are managed together as a group, and only the first image in the series is displayed during playback. To indicate that the image is part of a group, [SET] is displayed in the upper left of the screen.



- If you erase a grouped image (84), all images in the group are also erased. Be careful when erasing images.



- Grouped images can be played back individually (79) and ungrouped (79).
- Protecting (82) a grouped image will protect all images in the group.
- Grouped images can be viewed individually when played back using Image Search (77) or Smart Shuffle (81). In this case, images are temporarily ungrouped.
- The following actions are not available for grouped images: magnifying (80), tagging as favorites (87), editing (88), printing (110), setting up individual image printing (114), or adding to a photobook (116). To do these things, either view grouped images individually (79) or cancel grouping (79) first.
- Simultaneous display as shown in step 2 is only available immediately after you shoot.

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



Choosing Effects

► Still Images ► Movies

You can choose effects for images captured in [] mode.



- After choosing [] mode, turn the [] dial to choose the effect.

| | |
|----------------|-----------------------------------|
| [A] Auto | All effects |
| [R] Retro | Images resemble old photos |
| [M] Monochrome | Images are generated in one color |
| [S] Special | Bold, distinctive-looking images |
| [N] Natural | Subdued, natural-looking images |

Specific Scenes

Choose a mode matching the shooting scene, and the camera will automatically configure the settings for optimal shots.



1 Enter [SCN] mode.

- Set the mode dial to [SCN].



2 Choose a shooting mode.

- Press the [] button, choose [] in the menu, and then choose a shooting mode ([26]).

3 Shoot.



[P] Shooting Portraits (Portrait)

► Still Images ► Movies

- Take shots of people with a softening effect.



[L] Shooting under Low Light (Low Light)

► Still Images ► Movies

- Shoot with minimal camera and subject shake even in low-light conditions.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index





Shooting with Snowy Backgrounds (Snow)

► Still Images ► Movies

- Bright, natural-colored shots of people against snowy backgrounds.



Shooting Fireworks (Fireworks)

► Still Images ► Movies

- Vivid shots of fireworks.



- In [] mode, mount the camera on a tripod or take other measures to keep it still and prevent camera shake. Additionally, you should set [IS Mode] to [Off] when using a tripod or other means to secure the camera (p. 70).



- [] mode resolution is [] (2304 x 1728) and cannot be changed.
- In [] mode, although no frames are displayed when you press the shutter button halfway, optimal focus is still determined.

Image Effects (Creative Filters)

Add a variety of effects to images when shooting.



1 Enter [] mode.

- Set the mode dial to [].



2 Choose a shooting mode.

- Press the [] button, choose [] in the menu, and then choose a shooting mode (p. 26).

3 Shoot.



Shooting in Vivid Colors (Super Vivid)

► Still Images ► Movies

- Shots in rich, vivid colors.



Posterized Shots (Poster Effect)

► Still Images ► Movies

- Shots that resemble an old poster or illustration.



- In [] and [] modes, try taking some test shots first, to make sure you obtain the desired results.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index




Shooting with a Fish-Eye Lens Effect (Fish-Eye Effect)

► Still Images ► Movies

Shoot with the distorting effect of a fish-eye lens.

1 Choose [📷].

- Follow steps 1 – 2 in “Image Effects (Creative Filters)” (📖51) and choose [📷].

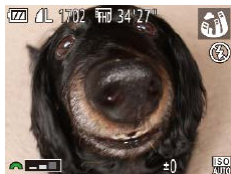

2 Choose an effect level.

- Turn the [🌓] dial to choose an effect level.
- A preview is shown of how your shot will look with the effect applied.

3 Shoot.



- Try taking some test shots first, to make sure you obtain the desired results.

Shots Resembling Miniature Models (Miniature Effect)

► Still Images ► Movies

Creates the effect of a miniature model, by blurring image areas above and below your selected area.

You can also make movies that look like scenes in miniature models by choosing the playback speed before the movie is recorded. People and objects in the scene will move quickly during playback. Note that sound is not recorded.

1 Choose [📷].

- Follow steps 1 – 2 in “Image Effects (Creative Filters)” (📖51) and choose [📷].
- A white frame is displayed, indicating the image area that will not be blurred.

2 Choose the area to keep in focus.

- Press the [▼] button.
- Move the zoom lever to resize the frame, and press the [▲][▼] buttons to move it.



3 For movies, choose the movie playback speed.

- Turn the [🌓] dial to choose the speed.

4 Return to the shooting screen and shoot.

- Press the [📷] button to return to the shooting screen, and then shoot.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Playback Speed and Estimated Playback Time (for One-Minute Clips)

| Speed | Playback Time |
|-------|-----------------|
| 5x | Approx. 12 sec. |
| 10x | Approx. 6 sec. |
| 20x | Approx. 3 sec. |



- The zoom is not available when shooting movies. Be sure to set the zoom before shooting.
- Try taking some test shots first, to make sure you obtain the desired results.



- To switch the orientation of the frame to vertical, press the [◀][▶] buttons in step 2. To return the frame to horizontal orientation, press the [▲][▼] buttons.
- Holding the camera vertically will change the orientation of the frame.
- Movie image quality is [FVGA] at an aspect ratio of [4:3] and [FHD] at an aspect ratio of [16:9] (42). These quality settings cannot be changed.
- The zoom factor cannot be changed with the [ZOOM] button on the screens in steps 2 and 3, or while shooting movies.

Shooting with a Toy Camera Effect (Toy Camera Effect)

► Still Images ► Movies

This effect makes images resemble shots from a toy camera by vignetting (darker, blurred image corners) and changing the overall color.

1 Choose [📷].

- Follow steps 1 – 2 in “Image Effects (Creative Filters)” (51) and choose [📷].

2 Choose a color tone.

- Turn the [🌓] dial to choose a color tone.
- A preview is shown of how your shot will look with the effect applied.



3 Shoot.

| | |
|----------|-------------------------------------------------|
| Standard | Shots resemble toy camera images. |
| Warm | Images have a warmer tone than with [Standard]. |
| Cool | Images have a cooler tone than with [Standard]. |



- Try taking some test shots first, to make sure you obtain the desired results.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Shooting in Monochrome

► Still Images ► Movies

Shoot images in black and white, sepia, or blue and white.

1 Choose [🖼️].

- Follow steps 1 – 2 in “Image Effects (Creative Filters)” (📖51) and choose [🖼️].



2 Choose a color tone.

- Turn the [🌞] dial to choose a color tone.
- A preview is shown of how your shot will look with the effect applied.

3 Shoot.

| | |
|-------|------------------------|
| B/W | Black and white shots. |
| Sepia | Sepia tone shots. |
| Blue | Blue and white shots. |


Special Modes for Other Purposes

Auto Shooting after Face Detection (Smart Shutter)

► Still Images ► Movies

Auto Shooting after Smile Detection

The camera shoots automatically after detecting a smile, even without you pressing the shutter button.

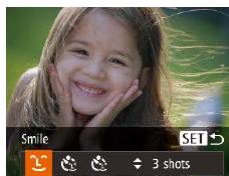


1 Choose [😊].

- Follow steps 1 – 2 in “Specific Scenes” (📖50) and choose [😊], and then press the [▼] button.
- Press the [⏪][⏩] buttons to choose [😊], and then press the [🔍] button.
- The camera now enters shooting standby mode, and [Smile Detection on] is displayed.

2 Aim the camera at a person.

- To pause smile detection, press the [▲] button. Press the [▲] button again to resume detection.

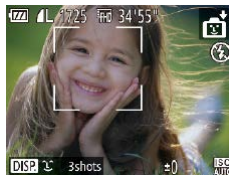

- Switch to another mode when you finish shooting, or the camera will continue shooting each time a smile is detected.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index





- You can also shoot as usual by pressing the shutter button.
- The camera can detect smiles more easily when subjects face the camera and open their mouth wide enough so that teeth are visible.
- To change the number of shots, press the [▲][▼] buttons after choosing [📖] in step 1. [Blink Detection] (📖45) is only available for the final shot.
- Automatic shooting is not available while you are holding down the [📖] button.

Using the Wink Self-Timer

► Still Images ► Movies

Aim the camera at a person and press the shutter button all the way down. The camera will shoot about two seconds after a wink is detected.



1 Choose [📖].


- Follow steps 1 – 2 in “Specific Scenes” (📖50) and choose [📖], and then press the [▼] button.
- Press the [◀][▶] buttons to choose [📖], and then press the [📖] button.

2 Compose the shot and press the shutter button halfway.

- Make sure a green frame is displayed around the face of the person who will wink.

3 Press the shutter button all the way down.

- The camera now enters shooting standby mode, and [Wink to take picture] is displayed.
- The lamp blinks and the self-timer sound is played.

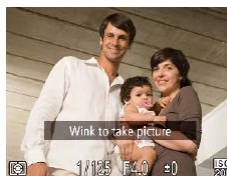

- If the wink is not detected, wink again slowly and deliberately.
- Winking may not be detected if eyes are obscured by hair, a hat, or glasses.
- Closing and opening both eyes at once will also be detected as a wink.
- If winking is not detected, the camera will shoot about 15 seconds later.
- To change the number of shots, press the [▲][▼] buttons after choosing [📖] in step 1. [Blink Detection] (📖45) is only available for the final shot.
- If no one is in the shooting area when the shutter button is pressed all the way down, the camera will shoot after a person enters the shooting area and winks.
- The zoom factor cannot be changed with the [📖] button after you press the shutter button all the way down.

4 Face the camera and wink.

- The camera will shoot about two seconds after detecting a wink by the person whose face is inside the frame.
- To cancel shooting after you have triggered the self-timer, press the [MENU] button.

Using the Face Self-Timer

► Still Images ► Movies

The camera will shoot about two seconds after detecting that the face of another person (such as the photographer) has entered the shooting area (📖65). This is useful when including yourself in group photos or similar shots.



1 Choose [📖].

- Follow steps 1 – 2 in “Specific Scenes” (📖50) and choose [📖], and then press the [▼] button.
- Press the [◀][▶] buttons to choose [📖], and then press the [📖] button.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



2 Compose the shot and press the shutter button halfway.

- Make sure a green frame is displayed around the face you focus on and white frames around other faces.

3 Press the shutter button all the way down.

- The camera now enters shooting standby mode, and [Look straight at camera to start count down] is displayed.
- The lamp blinks and the self-timer sound is played.

4 Join the subjects in the shooting area and look at the camera.

- After the camera detects a new face, the lamp blinking and self-timer sound will speed up. (When the flash fires, the lamp will remain lit.) About two seconds later, the camera will shoot.
- To cancel shooting after you have triggered the self-timer, press the [MENU] button.



- Even if your face is not detected after you join the others in the shooting area, the camera will shoot about 15 seconds later.
- To change the number of shots, press the [▲][▼] buttons after choosing [Blink Detection] (p.45) is only available for the final shot.
- The zoom factor cannot be changed with the [ZOOM] button after you press the shutter button all the way down.

High-Speed Continuous Shooting (High-Speed Burst)

► Still Images ► Movies

You can shoot a series of shots in rapid succession by holding the shutter button all the way down. For details on the continuous shooting speed, see "Continuous Shooting Speed" (p.136).



1 Choose [P].

- Follow steps 1 – 2 in "Specific Scenes" (p.50) and choose [P].


2 Shoot.

- Hold the shutter button all the way down to shoot continuously.



- The resolution is 12MP (2304 x 1728) and cannot be changed.
- Focus, image brightness, and color are determined by the first shot.
- Shooting may stop momentarily or continuous shooting may slow down depending on shooting conditions, camera settings, and the zoom position.
- As more shots are taken, shooting may slow down.

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |

 

Shooting Various Movies

► Still Images ► Movies

Shooting Movies in Movie Mode

► Still Images ► Movies



1 Enter [M] mode.

- Set the mode dial to [M].
- Black bars are displayed on the top and bottom edges of the screen, and the subject is slightly enlarged. The black bars indicate image areas not recorded.

2 Configure the settings to suit the movie (125).

3 Shoot.

- Press the movie button.
- To stop movie recording, press the movie button again.

Locking or Changing Image Brightness before Shooting

► Still Images ► Movies

Before recording, you can lock the exposure or change it in 1/3-stop increments within a range of -2 to +2 stops.



1 Lock the exposure.

- Press the [L] button to lock the exposure. The exposure shift bar is displayed.
- To unlock the exposure, press the [L] button again.

2 Adjust the exposure.

- Turn the [W] dial to adjust the exposure, as you watch the screen.

3 Shoot (57).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index

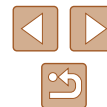

4

P Mode

More discerning shots, in your preferred shooting style



- Instructions in this chapter apply to the camera with the mode dial set to **[P]** mode.
- **[P]**: Program AE; AE: Auto Exposure
- Before using a function introduced in this chapter in modes other than **[P]**, make sure the function is available in that mode (125).

Shooting in Program AE ([P] Mode)

► Still Images ► Movies

You can customize many function settings to suit your preferred shooting style.



1 Enter **[P]** mode.

- Set the mode dial to **[P]**.

2 Customize the settings as desired (59 – 70), and then shoot.



- If adequate exposure cannot be obtained when you press the shutter button halfway, shutter speeds and aperture values are displayed in orange. In this case, try adjusting the ISO speed (60) or activating the flash (if subjects are dark, 68), which may enable adequate exposure.
- Movies can be recorded in **[P]** mode as well, by pressing the movie button. However, some FUNC. (26) and MENU (27) settings may be automatically adjusted for movie recording.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index

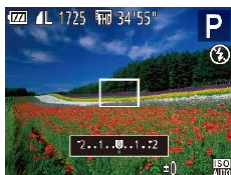


Image Brightness (Exposure)

Adjusting Image Brightness (Exposure Compensation)

► Still Images ► Movies

The standard exposure set by the camera can be adjusted in 1/3-stop increments, in a range of -2 to +2.

 


- Press the button. As you watch the screen, turn the dial to adjust brightness, and then press the button again when finished.
- The correction level you specified is now displayed.

Locking Image Brightness / Exposure (AE Lock)

► Still Images ► Movies

Before shooting, you can lock the exposure, or you can specify focus and exposure separately.



1 Lock the exposure.

- Aim the camera at the subject to shoot with the exposure locked. With the shutter button pressed halfway, press the button.
- is displayed, and the exposure is locked.
- To unlock AE, release the shutter button and press the button again. In this case, is no longer displayed.

2 Compose the shot and shoot.



- AE: Auto Exposure
- After the exposure is locked, you can adjust the combination of shutter speed and aperture value by turning the dial (Program Shift).

Changing the Metering Method

► Still Images ► Movies

Adjust the metering method (how brightness is measured) to suit shooting conditions as follows.



- Press the button, choose in the menu, and choose the desired option (book 26).
- The option you configured is now displayed.

| | |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Evaluative | For typical shooting conditions, including backlit shots. Automatically adjusts exposure to match the shooting conditions. |
| Center Weighted Avg. | Determines the average brightness of light across the entire image area, calculated by treating brightness in the central area as more important. |
| Spot | Metering restricted to within the (Spot AE Point frame), displayed in the center of the screen. |

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

Index



Changing the ISO Speed

► Still Images ► Movies

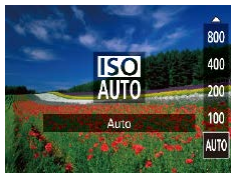

- Press the [▲] button, press the [▲][▼] buttons to choose an option, and then press the [OK] button.
- The option you configured is now displayed.

| | | |
|------------|-------------------------------------------------------------------------------|----------------------------------------------------|
| AUTO | Automatically adjusts the ISO speed to suit the shooting mode and conditions. | |
| 100, 200 | Low | For shooting outdoors in fair weather. |
| 400, 800 | Slightly Low | For shooting in cloudy conditions, or at twilight. |
| 1600, 3200 | Slightly High | For shooting night scenes, or in dark rooms. |




- To view the automatically determined ISO speed when you have set the ISO speed to [AUTO], press the shutter button halfway.
- Although choosing a lower ISO speed may reduce image graininess, there may be a greater risk of subject and camera shake in some shooting conditions.
- Choosing a higher ISO speed will increase shutter speed, which may reduce subject and camera shake and increase the flash range. However, shots may look grainy.

Correcting Image Brightness (i-Contrast)

► Still Images ► Movies

Before shooting, excessively bright or dark image areas (such as faces or backgrounds) can be detected and automatically adjusted to the optimal brightness. Insufficient overall image contrast can also be automatically corrected before shooting to make subjects stand out better.

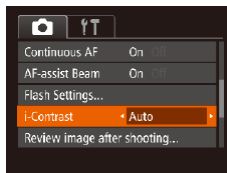

- Press the [MENU] button, choose [i-Contrast] on the [CAMERA] tab, and then choose [Auto] (p. 27).
- Once the setting is complete, [C_i] is displayed.



- Under some shooting conditions, correction may be inaccurate or may cause images to appear grainy.



- You can also correct existing images (p. 90).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index


 



Image Colors





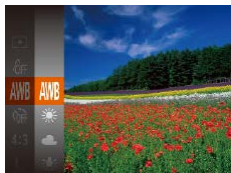

Adjusting White Balance

► Still Images ► Movies

By adjusting white balance (WB), you can make image colors look more natural for the scene you are shooting.



- Press the  button, choose [AWB] in the menu, and choose the desired option (📖26).
- The option you configured is now displayed.


| | | |
|-----------------------------------------------------------------------------------|---------------|---------------------------------------------------------------------------|
| AWB | Auto | Automatically sets the optimal white balance for the shooting conditions. |
|  | Day Light | For shooting outdoors in fair weather. |
|  | Cloudy | For shooting in cloudy weather or at twilight. |
|  | Tungsten | For shooting under ordinary incandescent lighting. |
|  | Fluorescent | For shooting under white fluorescent lighting. |
|  | Fluorescent H | For shooting under daylight fluorescent lighting. |
|  | Custom | For manually setting a custom white balance (📖61). |

Custom White Balance

► Still Images ► Movies

For image colors that look natural under the light in your shot, adjust white balance to suit the light source where you are shooting. Set the white balance under the same light source that will illuminate your shot.



- Follow the steps in "Adjusting White Balance" (📖61) to choose .
- Aim the camera at a plain white subject, so that the entire screen is white. Press the [MENU] button.
- The tint of the screen changes once the white balance data has been recorded.




- Colors may look unnatural if you change camera settings after recording white balance data.

Changing Image Color Tones (My Colors)

► Still Images ► Movies

Change image color tones as desired, such as converting images to sepia or black and white.



- Press the  button, choose [My Colors] in the menu, and choose the desired option (📖26).
- The option you configured is now displayed.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



| | |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| ☞ My Colors Off | — |
| Av Vivid | Emphasizes contrast and color saturation, making images sharper. |
| AN Neutral | Tones down contrast and color saturation for subdued images. |
| Se Sepia | Creates sepia tone images. |
| BW B/W | Creates black and white images. |
| AP Positive Film | Combines the effects of Vivid Blue, Vivid Green, and Vivid Red to produce intense yet natural-looking colors resembling images on positive film. |
| AL Lighter Skin Tone | Lightens skin tones. |
| AD Darker Skin Tone | Darkens skin tones. |
| AB Vivid Blue | Emphasizes blues in images. Makes the sky, ocean, and other blue subjects more vivid. |
| AG Vivid Green | Emphasizes greens in images. Makes mountains, foliage, and other green subjects more vivid. |
| AR Vivid Red | Emphasizes reds in images. Makes red subjects more vivid. |
| AC Custom Color | Adjust contrast, sharpness, color saturation, and other qualities as desired (62). |




- White balance (61) cannot be set in [Se] or [BW] modes.
- With [AL] and [AD] modes, colors other than people's skin tone may change. These settings may not produce the expected results with some skin tones.

Custom Color

► Still Images ► Movies

Choose the desired level of image contrast, sharpness, color saturation, red, green, blue, and skin tones in a range of 1 – 5.

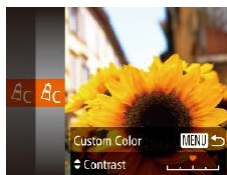

1 Access the setting screen.

- Follow the steps in “Changing Image Color Tones (My Colors)” (61) to choose [AC], and then press the [MENU] button.

2 Configure the setting.

- Press the [▲][▼] buttons to choose an option, and then specify the value by pressing the [◀][▶] buttons.
- For stronger/more intense effects (or darker skin tones), adjust the value to the right, and for weaker/lighter effects (or lighter skin tones), adjust the value to the left.
- Press the [MENU] button to complete the setting.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index




Shooting Range and Focusing

Shooting Close-Ups (Macro)

► Still Images ► Movies

To restrict the focus to subjects at close range, set the camera to [M]. For details on the focusing range, see “Shooting Range” (p. 136).

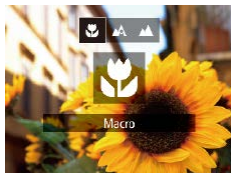

- Press the [◀] button, press the [◀][▶] buttons to choose [M], and then press the [OK] button.
- Once the setting is complete, [M] is displayed.



- If the flash fires, vignetting may occur.
- Be careful to avoid damaging the lens.
- In the yellow bar display area below the zoom bar, [M] will turn gray and the camera will not focus.



- To prevent camera shake, try mounting the camera on a tripod and shooting with the camera set to [C] (p. 39).

Shooting in Manual Focus Mode

► Still Images ► Movies

When focusing is not possible in AF mode, use manual focus. You can specify the general focal position and then press the shutter button halfway to have the camera determine the optimal focal position near the position you specified. For details on the focusing range, see “Shooting Range” (p. 136).



(1)

1 Choose [MF].

- Press the [◀] button, press the [◀][▶] buttons to choose [MF], and then press the [OK] button.
- [MF] and the MF indicator are displayed.

2 Specify the general focal position.

- Referring to the on-screen MF indicator bar (1, which shows the distance and focal position) and the magnified display area, press the [▲][▼] buttons to specify the general focal position, and then press the [OK] button.

3 Fine-tune the focus.

- Press the shutter button halfway to have the camera fine-tune the focal position (Safety MF).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index





- When you focus manually, the AF frame mode (📖65) is [Center] and AF frame size is [Normal], and these settings cannot be changed.
- Focusing is possible when using the digital zoom (📖35) or digital tele-converter (📖64), or when using a TV as a display (📖104), but the magnified display will not appear.




- To focus more accurately, try attaching the camera to a tripod to stabilize it.
- To hide the magnified display area, choose MENU (📖27) > [📷] tab > [MF-Point Zoom] > [Off].
- To deactivate automatic focus fine-tuning when the shutter button is pressed halfway, choose MENU (📖27) > [📷] tab > [Safety MF] > [Off].

Digital Tele-Converter

► Still Images ► Movies

The focal length of the lens can be increased by approximately 1.6x or 2.0x. This can reduce camera shake because the shutter speed is faster than it would be if you zoomed (including using digital zoom) in to the same zoom factor.

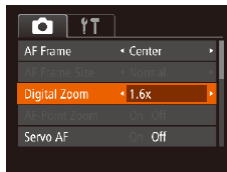

- Press the [MENU] button, choose [Digital Zoom] on the [📷] tab, and then choose the desired option (📖27).
- The view is enlarged and the zoom factor is displayed on the screen.



- The digital tele-converter cannot be used with digital zoom (📖35) or AF-point zoom (📖44).



- The shutter speed may be equivalent when you move the zoom lever all the way toward [📷] for maximum telephoto, and when you zoom in to enlarge the subject to the same size following step 2 in "Zooming In Closer on Subjects (Digital Zoom)" (📖35).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix


Index



Changing the AF Frame Mode

► Still Images ► Movies

Change the AF (auto focus) frame mode to suit the shooting conditions as follows.

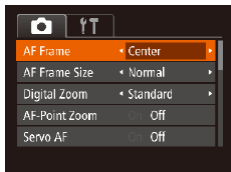

- Press the [MENU] button, choose [AF Frame] on the [CAMERA] tab, and then choose the desired option (p27).

Center

► Still Images ► Movies

One AF frame is displayed in the center. Effective for reliable focusing.



- A yellow AF frame is displayed with [AF-LOCK] if the camera cannot focus when you press the shutter button halfway.



- To reduce the AF frame size, press the [MENU] button and set [AF Frame Size] on the [CAMERA] tab to [Small] (p27).
- The AF frame size is set to [Normal] when you use the digital zoom (p35) or digital tele-converter (p64), and in manual focus mode (p63).
- To compose shots so that subjects are positioned at the edge or in a corner, first aim the camera to capture the subject in an AF frame, and then hold the shutter button halfway down. As you continue to hold the shutter button halfway, recompose the shot as desired, and then press the shutter button all the way down (Focus Lock).
- The AF frame position is enlarged when you press the shutter button halfway and [AF-Point Zoom] (p44) is set to [On].

Face AiAF

► Still Images ► Movies

- Detects people's faces, and then sets the focus, exposure (evaluative metering only), and white balance ([AWB] only).
- After you aim the camera at the subject, a white frame is displayed around the person's face determined by the camera to be the main subject, and up to two gray frames are displayed around other detected faces.
- When the camera detects movement, frames will follow moving subjects, within a certain range.
- After you press the shutter button halfway, up to nine green frames are displayed around faces in focus.



- If faces are not detected, or when only gray frames are displayed (without a white frame), up to nine green frames are displayed in the areas in focus when you press the shutter button halfway.
- If faces are not detected when Servo AF (p66) is set to [On], the AF frame is displayed in the center of the screen when you press the shutter button halfway.
- Examples of faces that cannot be detected:
 - Subjects that are distant or extremely close
 - Subjects that are dark or light
 - Faces in profile, at an angle, or partly hidden
- The camera may misinterpret non-human subjects as faces.
- No AF frames are displayed if the camera cannot focus when you press the shutter button halfway.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index




Choosing Subjects to Focus On (Tracking AF)

► Still Images ► Movies



Shoot after choosing a subject to focus on as follows.

1 Choose [Tracking AF].




- Follow the steps in “Changing the AF Frame Mode” (p.65) to choose [Tracking AF].
- [) is displayed in the center of the screen.



 


2 Choose a subject to focus on.

- Aim the camera so that [) is on the desired subject, and then press the [) button.





- When the subject is detected, the camera beeps and [) is displayed. Even if the subject moves, the camera will continue to track the subject within a certain range.
- If no subject is detected, [) is displayed.
- To cancel tracking, press the [) button again.

 


3 Shoot.

- Press the shutter button halfway. [) changes to a blue [) which follows the subject as the camera continues to adjust the focus and exposure (Servo AF) (p.66).
- Press the shutter button all the way down to shoot.
- Even after your shot, [) is still displayed and the camera continues to track the subject.



- [Servo AF] (p.66) is set to [On] and cannot be changed.
- Tracking may not be possible when subjects are too small or move too rapidly, or when subject color or brightness matches that of the background too closely.
- [AF-Point Zoom] on the [) tab is not available.
- [) is not available.




- The camera can detect subjects even if you press the shutter button halfway without pressing the [) button. After your shot, [) is displayed in the center of the screen.
- When shooting in [MF] mode (p.63), press and hold the [) button for at least one second.


Shooting with Servo AF

► Still Images ► Movies

This mode helps avoid missing shots of subjects in motion, because the camera continues to focus on the subject and adjust the exposure as long as you press the shutter button halfway.

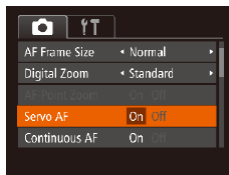

1 Configure the setting.

- Press the [MENU] button, choose [Servo AF] on the [) tab, and then choose [On] (p.27).

2 Focus.

- The focus and exposure are maintained where the blue AF frame is displayed while you are pressing the shutter button halfway.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index






- Focusing may not be possible in some shooting conditions.
- In low-light conditions, Servo AF may not be activated (AF frames may not turn blue) when you press the shutter button halfway. In this case, the focus and exposure are set according to the specified AF frame mode.
- If adequate exposure cannot be obtained, shutter speeds and aperture values are displayed in orange. Release the shutter button, and then press it halfway again.
- AF lock shooting is not available.
- [AF-Point Zoom] on the [] tab (27) is not available.
- Not available when using the self-timer (39).

Changing the Focus Setting

► Still Images ► Movies

You can change default camera operation of constantly focusing on subjects it is aimed at, even when the shutter button is not pressed. Instead, you can limit camera focusing to the moment you press the shutter button halfway.

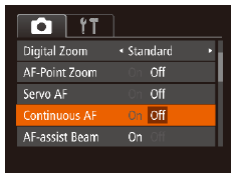


- Press the [MENU] button, choose [Continuous AF] on the [] tab, and then choose [Off] (27).

| | |
|-----|-----------------------------------------------------------------------------------------------------------------------------------------------|
| On | Helps avoid missing sudden photo opportunities, because the camera constantly focuses on subjects until you press the shutter button halfway. |
| Off | Conserves battery power, because the camera does not focus constantly. |

Shooting with the AF Lock

► Still Images ► Movies

 The focus can be locked. After you lock the focus, the focal position will not change even when you release your finger from the shutter button.



1 Lock the focus.

- With the shutter button pressed halfway, press the [] button.
- The focus is now locked, and [MF] and the MF indicator are displayed.
- To unlock the focus, hold the shutter button halfway down and press the [] button again.

2 Compose the shot and shoot.

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



Flash

Changing the Flash Mode

► Still Images ► Movies

You can change the flash mode to match the shooting scene. For details on the flash range, see “Flash Range” (📖 135).

1 Lift the flash.

2 Configure the setting.

- Press the [▶] button, press the [◀▶] buttons to choose a flash mode, and then press the [OK] button.
- The option you configured is now displayed.



- The setting screen cannot be accessed by pressing the [▶] button when the flash is lowered. Lift the flash with your finger in advance.
- If the flash fires, vignetting may occur.

Auto

Fires automatically in low-light conditions.

On

Fires for each shot.

Slow Synchro

Fires to illuminate the main subject (such as people) while shooting at a slower shutter speed to illuminate backgrounds out of flash range.



- In [📷] mode, mount the camera on a tripod or take other measures to keep it still and prevent camera shake. Additionally, you should set [IS Mode] to [Off] when using a tripod or other means to secure the camera (📖 70).
- In [📷] mode, even after the flash fires, ensure that the main subject does not move until the shutter sound is finished playing.

Off

For shooting without the flash.



- If a blinking [📷] icon is displayed when you press the shutter button halfway in camera-shake inducing, low-light conditions, mount the camera on a tripod or take other measures to keep it still.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index

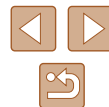

Adjusting the Flash Exposure Compensation

► Still Images ► Movies

Just as with regular exposure compensation (📖59), you can adjust the flash exposure from -2 to +2 stops, in 1/3-stop increments.



- Raise the flash, press the [▶] button and immediately turn the [🔆] dial to choose the compensation level, and then press the [⏻] button.
- Once the setting is complete, [🔆] is displayed.




- When there is a risk of overexposure, the camera automatically adjusts the shutter speed or aperture value during the flash shots to reduce washed-out highlights and shoot at optimal exposure. However, you can deactivate automatic adjustment of the shutter speed and aperture value by accessing MENU (📖27) and choosing [📷] tab > [Flash Settings] > [Safety FE] > [Off].
- You can also configure the flash exposure compensation by accessing MENU (📖27) and choosing [📷] tab > [Flash Settings] > [Flash Exp. Comp].
- You can also access the [Flash Settings] MENU screen (📖27) when the flash is up by pressing the [▶] button and immediately pressing the [MENU] button.

Shooting with the FE Lock

► Still Images ► Movies

Just as with the AE lock (📖59), you can lock the exposure for the flash shots.

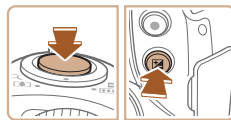

1 Lift the flash and set the flash to [🔆] (📖68).

2 Lock the flash exposure.

- Aim the camera at the subject to shoot with the exposure locked. With the shutter button pressed halfway, press the [🔆] button.
- The flash fires, and when [✱] is displayed, the flash output level is retained.
- To unlock FE, release the shutter button and press the [🔆] button again. In this case, [✱] is no longer displayed.

3 Compose the shot and shoot.

- After one shot, FE is unlocked and [✱] is no longer displayed.



- FE: Flash Exposure

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Other Settings

Changing the Compression Ratio (Image Quality)

► Still Images ► Movies

Choose from two compression ratios, [S] (Super Fine) and [F] (Fine), as follows. For guidelines on how many shots at each compression ratio can fit on a memory card, see “Number of Shots per Memory Card” (135).




- Press the [MENU] button, choose [F] in the menu, and choose the desired option (26).

Changing the IS Mode Settings

► Still Images ► Movies

1 Access the setting screen.

- Press the [MENU] button, choose [IS Settings] on the [CAMERA] tab, and then press the [OK] button (27).

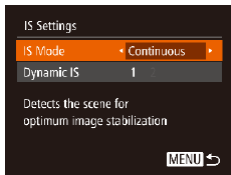

2 Configure the setting.

- Choose [IS Mode], and then choose the desired option (27).

| | |
|-------------|---------------------------------------------------------------------------------------------------------|
| Continuous | Optimal image stabilization for the shooting conditions is automatically applied (Intelligent IS) (34). |
| Shoot Only* | Image stabilization is active only at the moment of shooting. |
| Off | Deactivates image stabilization. |

* The setting is changed to [Continuous] for movie recording.




- If image stabilization cannot prevent camera shake, mount the camera on a tripod or take other measures to hold it still. In this case, set [IS Mode] to [Off].

Shooting Movies with Subjects at the Same Size Shown before Shooting

► Still Images ► Movies

Normally, once movie recording begins, the image display area changes and subjects are enlarged to allow for correction of significant camera shake. To shoot subjects at the same size shown before shooting, you can choose not to reduce significant camera shake.

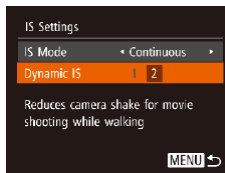

- Follow the steps in “Changing the IS Mode Settings” (70) to access the [IS Settings] screen.
- Choose [Dynamic IS], and then choose [2] (27).



- You can also set [IS Mode] to [Off], so that subjects are recorded at the same size shown before shooting.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

 
Index



5

Tv, Av, and M Mode

Take smarter, more sophisticated shots



- Instructions in this chapter apply to the camera as set to the respective mode.

Specific Shutter Speeds ([Tv] Mode)

► Still Images ► Movies

Set your preferred shutter speed before shooting as follows. The camera automatically adjusts the aperture value to suit your shutter speed. For details on available shutter speeds, see “Shutter Speed” (136).



1 Enter [Tv] mode.

- Set the mode dial to [Tv].

2 Set the shutter speed.

- Turn the [Shutter Speed] dial to set the shutter speed.



- In conditions requiring slower shutter speeds, there may be a delay before you can shoot again, as the camera processes images to reduce noise.
- When shooting at low shutter speeds on a tripod, you should set [IS Mode] to [Off] (70).
- With shutter speeds of 1.3 seconds or slower, ISO speed is $\frac{160}{100}$ and cannot be changed.
- Orange display of aperture values when you press the shutter button halfway indicates that the settings deviate from standard exposure. Adjust the shutter speed until the aperture value is displayed in white, or use safety shift (72).



- [Tv]: Time value

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Specific Aperture Values ([Av] Mode)

► Still Images ► Movies

Set your preferred aperture value before shooting as follows. The camera automatically adjusts the shutter speed to suit your aperture value. For details on available aperture values, see “Aperture” (136).



1 Enter [Av] mode.

- Set the mode dial to [Av].

2 Set the aperture value.

- Turn the [] dial to set the aperture value.



- Orange display of shutter speeds when you press the shutter button halfway indicates that the settings deviate from standard exposure. Adjust the aperture value until the shutter speed is displayed in white, or use safety shift (see below).




- [Av]: Aperture value (size of the opening made by the iris in the lens)
- To avoid exposure problems in [Tv] and [Av] modes, you can have the camera automatically adjust the shutter speed or aperture value, even when standard exposure cannot otherwise be obtained. Press the [MENU] button and set [Safety Shift] on the [] tab to [On] (27). However, safety shift is disabled when the flash fires.

Specific Shutter Speeds and Aperture Values ([M] Mode)

► Still Images ► Movies

Follow these steps before shooting to set your preferred shutter speed and aperture value to obtain the desired exposure. For details on available shutter speeds and aperture values, see “Shutter Speed” (136) and “Aperture” (136).

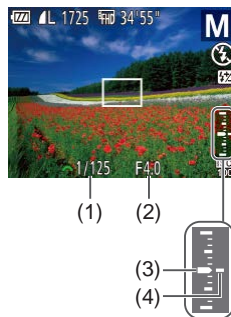

1 Enter [M] mode.

- Set the mode dial to [M].

2 Configure the setting.

- Press the [] button, choose adjustment of shutter speed (1) or aperture value (2), and turn the [] dial to specify a value.
- An exposure level mark (4) based on your specified value is shown on the exposure level indicator for comparison to the standard exposure level (3).
- The exposure level mark is shown in orange when the difference from standard exposure exceeds 2 stops. [-2] or [+2] is displayed in orange in the lower right when you press the shutter button halfway.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index





- After you set the shutter speed or aperture value, the exposure level may change if you adjust the zoom or recompose the shot.
- Screen brightness may change depending on your specified shutter speed or aperture value. However, screen brightness remains the same when the flash is up and the mode is set to [M].
- To have the setting you did not configure in step 2 (whether shutter speed or aperture value) automatically adjusted to obtain standard exposure, hold the shutter button halfway and press the [1/2] button. Note that standard exposure may not be possible with some settings.
- With shutter speeds of 1/3 seconds or slower, ISO speed is [ISO 100] and cannot be changed.




- [M]: Manual
- Calculation of standard exposure is based on the specified metering method ([M59]).

Adjusting the Flash Output

► Still Images ► Movies

Choose from the three flash levels in [M] mode.

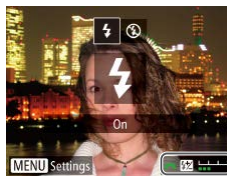

1 Enter [M] mode.

- Set the mode dial to [M].

2 Configure the setting.

- Raise the flash, press the [▶] button and immediately turn the [1/2] dial to choose the flash level, and then press the [OK] button.
- Once the setting is complete, [1/2] is displayed.



- You can also set the flash level by accessing MENU ([M27]) and choosing [1/2] tab > [Flash Settings] > [Flash Output].
- You can set the flash level in [TV] or [Av] mode by accessing MENU ([M27]) and choosing [1/2] tab > [Flash Settings] > [Flash Mode] > [Manual].
- You can also access the [Flash Settings] MENU screen ([M27]) when the flash is up by pressing the [▶] button and immediately pressing the [MENU] button.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



6

Playback Mode

Have fun reviewing your shots, and browse or edit them in many ways

- To prepare the camera for these operations, press the [▶] button to enter Playback mode.

 


- It may not be possible to play back or edit images that were renamed or already edited on a computer, or images from other cameras.

Viewing

▶ Still Images ▶ Movies

After shooting images or movies, you can view them on the screen as follows.




1 Enter Playback mode.

- Press the [▶] button.
- Your last shot is displayed.



2 Browse through your images.

- To view the previous image, press the [◀] button. To view the next image, press the [▶] button.

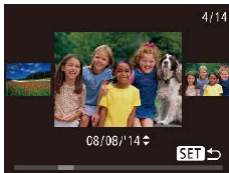

- To access this screen (Scroll Display mode), press and hold the [◀][▶] buttons for at least one second. In this mode, press the [◀][▶] buttons to browse through images.
- To return to single-image display, press the [⏏] button.
- To browse images grouped by shooting date, press the [▲][▼] buttons in Scroll Display mode.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

Index






- Movies are identified by a [SET ▶] icon. To play movies, go to step 3.

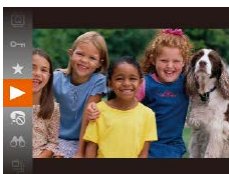

3 Play movies.

- To start playback, press the [⏮] button, press the [▲][▼] buttons to choose [▶], and then press the [⏮] button again.

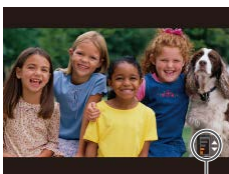

(1)

4 Adjust the volume.

- Press the [▲][▼] buttons to adjust the volume.
- To adjust the volume when the volume indicator (1) is no longer displayed, press the [▲][▼] buttons.

5 Pause playback.

- To pause or resume playback, press the [⏮] button.
- After the movie is finished, [SET ▶] is displayed.





- To switch to Shooting mode from Playback mode, press the shutter button halfway.
- To deactivate Scroll Display, choose MENU (📖27) > [▶] tab > [Scroll Display] > [Off].
- To have the most recent shot displayed when you enter Playback mode, choose MENU (📖27) > [▶] tab > [Resume] > [Last shot].
- To change the transition shown between images, access MENU (📖27) and choose your desired effect on the [▶] tab > [Transition].

Switching Display Modes

▶ Still Images ▶ Movies

Press the [▼] button to view other information on the screen, or to hide the information. For details on the information displayed, see "Playback (Detailed Information Display)" (📖124).

| | |
|-------------------------------------------------------------------------------------|------------------------------|
|  | No Information Display |
|  | Simple Information Display |
|  | Detailed Information Display |

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |




Overexposure Warning (for Image Highlights)

► Still Images ► Movies

Washed-out highlights in the image flash on the screen in detailed information display (75).

Histogram

 ► Still Images ► Movies



- The graph in detailed information display (75) is a histogram showing the distribution of brightness in the image. The horizontal axis represents the degree of brightness, and the vertical axis, how much of the image is at each level of brightness. Viewing the histogram is a way to check exposure.

Viewing Short Movies Created When Shooting Still Images (Digest Movies)


► Still Images ► Movies

View digest movies recorded automatically in [A] mode (31) on a day of still image shooting as follows.



1 Choose an image.

- Still images shot in [A] mode are labeled with an [SET] icon.

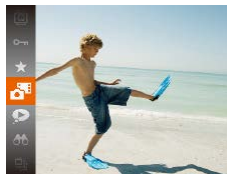

2 Play the movie.


- Press the [Q] button, and then choose [A] in the menu (26).
- The movie recorded automatically on the day of still image shooting is played back, from the beginning.



- After a moment, [SET] will no longer be displayed when you are using the camera with information display deactivated (75).

Viewing by Date

Digest movies can be viewed by date.

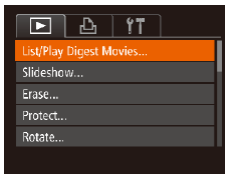

1 Choose a movie.

- Press the [MENU] button, choose [List/Play Digest Movies] on the [P] tab, and then choose a date (27).

2 Play the movie.

- Press the [Q] button to start playback.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Browsing and Filtering Images

Navigating through Images in an Index

► Still Images ► Movies

By displaying multiple images in an index, you can quickly find the images you are looking for.



1 Display images in an index.

- Move the zoom lever toward [] to display images in an index. Moving the lever again will increase the number of images shown.
- To display fewer images, move the zoom lever toward [Q]. Fewer images are shown each time you move the lever.



2 Choose an image.

- Press the [▲][▼][◀][▶] buttons to choose an image.
- An orange frame is displayed around the selected image.
- Press the [Ⓢ] button to view the selected image in single-image display.

Finding Images Matching Specified Conditions

► Still Images ► Movies

Find desired images quickly on a memory card full of images by filtering image display according to your specified conditions. You can also protect (82) or delete (84) these images all at once.

| | |
|-------------------|-----------------------------------------------------------------|
| People | Displays images with detected faces. |
| Date | Displays the images shot on a specific date. |
| Favorites | Displays images tagged as favorites (87). |
| Still image/Movie | Displays still images, movies, or movies shot in [] mode (31). |

1 Choose a search condition.

- Press the [Ⓢ] button, choose [] in the menu, and choose a condition (26).
- When you have selected [] or [], choose the condition by pressing the [▲][▼][◀][▶] buttons on the screen displayed, and then press the [Ⓢ] button.

2 View the filtered images.

- Images matching your conditions are displayed in yellow frames. To view only these images, press the [◀][▶] buttons.
- To cancel filtered display, choose [] in step 1.



- When the camera has found no corresponding images for some conditions, those conditions will not be available.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index





- To show or hide information, press the [▼] button in step 2.
- Options for viewing the images found (in step 2) include “Navigating through Images in an Index” (p. 77), “Magnifying Images” (p. 80), and “Viewing Slideshows” (p. 80). You can also apply image operations to all images found, by choosing [Protect All Images in Search] in “Protecting Images” (p. 82) or [Select All Images in Search] in “Erasing Multiple Images at Once” (p. 85), “Adding Images to the Print List (DPOF)” (p. 114), or “Adding Images to a Photobook” (p. 116).
- If you edit images and save them as new images (p. 88 – p. 93), a message is displayed, and the images that were found are no longer shown.

Using the Front Dial to Jump between Images

| | |
|-------------------|-----------------------------------------------------------------------------------|
| Jump to Favorites | Displays images tagged as favorites (p. 87). |
| Jump Shot Date | Jumps to the first image in each group of images that were shot on the same date. |
| Jump 10 Images | Jumps by 10 images at a time. |
| Jump 100 Images | Jumps by 100 images at a time. |



1 Choose a condition.

- Choose a condition (or jump method) in single-image display by turning the [Sun] dial and then pressing the [▲][▼] buttons.

2 View images matching your specified condition, or jump by the specified amount.

- Turn the [Sun] dial to view only images matching the condition or jump by the specified number of images forward or back.



- When the camera has found no corresponding images for some conditions, those conditions will not be available.



- Turning the [Sun] dial when browsing images in index display will jump to the previous or next image according to the jump method chosen in single-image display. However, if you have chosen [10] or [100], the jump method will be switched to [Sun].
- Options for viewing the images found (in step 2) include “Navigating through Images in an Index” (p. 77), “Magnifying Images” (p. 80), and “Viewing Slideshows” (p. 80). You can also apply image operations to all images found, by choosing [Protect All Images in Search] in “Protecting Images” (p. 82) or [Select All Images in Search] in “Erasing Multiple Images at Once” (p. 85), “Adding Images to the Print List (DPOF)” (p. 114), or “Adding Images to a Photobook” (p. 116).
- If you edit images and save them as new images (p. 88 – p. 91), a message is displayed, and the images that were found are no longer shown.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index

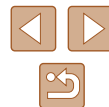

Viewing Individual Images in a Group

► Still Images ► Movies

Images shot in [] or [] mode (49, 56) are grouped for display, and these grouped images can be viewed one at a time.



1 Choose a grouped image.

- Press the [][] buttons to choose an image labeled with [SET].



2 Choose [].

- Press the [] button, and then choose [] in the menu (26).



3 View images in the group individually.

- Pressing the [][] buttons will display only images in the group.
- To cancel group playback, press the [] button, choose [] in the menu, and press the [] button again (26).



- During group playback (step 3), you can use the menu functions accessed by pressing the [] button. You can also browse through images quickly "Navigating through Images in an Index" (77) and magnify them "Magnifying Images" (80). By choosing [Protect All Images in Search] in "Protecting Images" (82) or [All Images in Group] in "Erasing Multiple Images at Once" (85), "Adding Images to the Print List (DPOF)" (114), or "Adding Images to a Photobook" (116), all images in the group can be manipulated at once.
- To ungroup images so that they are displayed only as single still images, choose MENU (27) > [] tab > [Group Images] > [Off] (27). However, grouped images cannot be ungrouped during individual playback.
- In [] mode, the simultaneous display after step 2 in "Enjoying a Variety of Images from Each Shot (Creative Shot)" (49) is only shown immediately after you shoot.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix


Index



Image Viewing Options

Magnifying Images

 ► Still Images ► Movies



1 Magnify an image.

- Moving the zoom lever toward [Q] will zoom in and magnify the image, and [SET] is displayed. You can magnify images up to about 10x by continuing to hold the zoom lever.
- The approximate position of the displayed area (1) is shown for reference.
- To zoom out, move the zoom lever toward . You can return to single-image display by continuing to hold it.

2 Move the display position and switch images as needed.

- To move the display position, press the [][][][] buttons.
- While [SET] is displayed, you can switch to [SET] by pressing the [] button. To switch to other images while zoomed, press the [][] buttons. Press the [] button again to restore the original setting.



- You can return to single-image display from magnified display by pressing the [MENU] button.

Viewing Slideshows

► Still Images ► Movies

Automatically play back images from a memory card as follows. Each image is displayed for about three seconds.



- Press the [] button, choose [] in the menu, and choose the desired option (26).
- The slideshow will start after [Loading image] is displayed for a few seconds.
- Press the [MENU] button to stop the slideshow.



- The camera's power-saving functions (24) are deactivated during slideshows.



- To pause or resume slideshows, press the [] button.
- You can switch to other images during playback by pressing the [][] buttons. For fast-forward or fast-rewind, hold the [][] buttons down.
- In filtered display (77), only images matching search conditions are played.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index




Changing Slideshow Settings

You can set up slideshows to repeat, and you can change the transitions between images and the display duration of each image.

1 Access the setting screen.

- Press the [MENU] button, and then choose [Slideshow] on the [▶] tab (📖27).

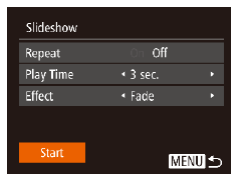

2 Configure the settings.

- Choose a menu item to configure, and then choose the desired option (📖27).
- To start the slideshow with your settings, choose [Start] and press the [GO] button.
- To return to the menu screen, press the [MENU] button.



- [Play Time] cannot be modified when [Bubble] is chosen in [Effect].

Auto Playback of Related Images (Smart Shuffle)

► Still Images ► Movies

Based on the current image, the camera offers four images that you may wish to view. After you choose to view one of those images, the camera offers four more images. This is an enjoyable way to play back images in an unexpected order. Try this feature after you have taken many shots, in many kinds of scenes.



1 Choose Smart Shuffle.

- Press the [GO] button, and then choose [GO] in the menu (📖26).
- Four candidate images are displayed.



2 Choose an image.

- Press the [▲][▼][◀][▶] buttons to choose the image you want to view next.
- Your chosen image is displayed in the center, surrounded by the next four candidate images.
- For full-screen display of the center image, press the [GO] button. To restore the original display, press the [GO] button again.
- Press the [MENU] button to restore single-image display.



- Smart Shuffle is not available in the following cases:
 - There are less than 50 shots taken with this camera
 - An unsupported image is currently displayed
 - Images are shown in filtered display (📖77)
 - During group playback (📖79)

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix


Index



Protecting Images

► Still Images ► Movies

Protect important images to prevent accidental erasure by the camera (84).

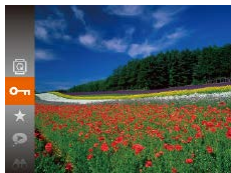

- Press the [MENU] button, and then choose [Protect] in the menu (26). [Protected] is displayed.
- To cancel protection, repeat this process and choose [Protect] again, and then press the [MENU] button.





- Protected images on a memory card will be erased if you format the card (97, 98).



- Protected images cannot be erased using the camera's erasure function. To erase them this way, first cancel protection.

Using the Menu

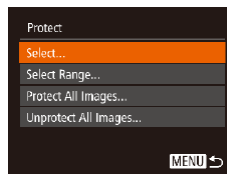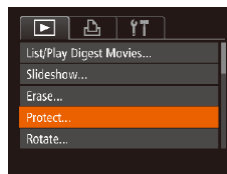

1 Access the setting screen.

- Press the [MENU] button and choose [Protect] on the [] tab (27).

2 Choose a selection method.

- Choose a menu item and an option as desired (27).
- To return to the menu screen, press the [MENU] button.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

Index









Choosing Images Individually

1 Choose [Select].





- Following step 2 in “Using the Menu” (p. 82), choose [Select] and press the  button.




2 Choose an image.

- Press the   buttons to choose an image, and then press the  button.  is displayed.
- To cancel selection, press the  button again.  is no longer displayed.
- Repeat this process to specify other images.

3 Protect the image.


- Press the  button. A confirmation message is displayed.
- Press the   buttons to choose [OK], and then press the  button.

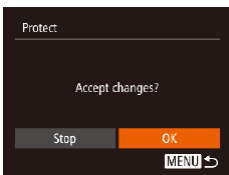


- Images will not be protected if you switch to Shooting mode or turn the camera off before finishing the setup process in step 3.

Selecting a Range

1 Choose [Select Range].

- Following step 2 in “Using the Menu” (p. 82), choose [Select Range] and press the  button.

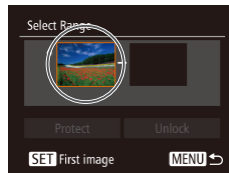


2 Choose a starting image.



- Press the  button.



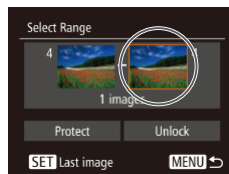


- Press the   buttons to choose an image, and then press the  button.



3 Choose an ending image.

- Press the  button to choose [Last image], and then press the  button.



- Press the   buttons to choose an image, and then press the  button.
- Images before the first image cannot be selected as the last image.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index





4 Protect the images.

- Press the [▼] button to choose [Protect], and then press the [Ⓜ] button.




- To cancel protection for groups of images, choose [Unlock] in step 4.

Protecting All Images at Once

1 Choose [Protect All Images].

- Following step 2 in “Using the Menu” (82), choose [Protect All Images] and press the [Ⓜ] button.

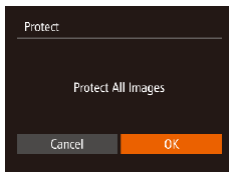

2 Protect the images.

- Press the [◀][▶] buttons to choose [OK], and then press the [Ⓜ] button.

Clearing All Protection at Once

You can clear protection from all images at once.

To clear protection, choose [Unprotect All Images] in step 1 of “Protecting All Images at Once”, and then complete step 2.

Erasing Images

► Still Images ► Movies

You can choose and erase unneeded images one by one. Be careful when erasing images, because they cannot be recovered. However, protected images (82) cannot be erased.

1 Choose an image to erase.

- Press the [◀][▶] buttons to choose an image.



2 Erase the image.

- Press the [Ⓜ] button.
- After [Erase?] is displayed, press the [◀][▶] buttons to choose [Erase], and then press the [Ⓜ] button.
- The current image is now erased.
- To cancel erasure, press the [◀][▶] buttons to choose [Cancel], and then press the [Ⓜ] button.



| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



Erasing Multiple Images at Once

You can choose multiple images to erase at once. Be careful when erasing images, because they cannot be recovered. However, protected images (📖82) cannot be erased.

Choosing a Selection Method

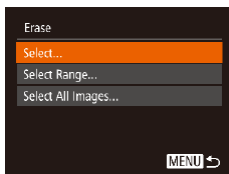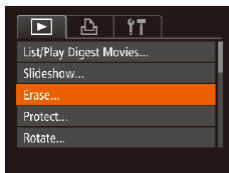

1 Access the setting screen.

- Press the [MENU] button, and then choose [Erase] on the [▶] tab (📖27).

2 Choose a selection method.

- Choose a menu item and an option as desired (📖27).
- To return to the menu screen, press the [MENU] button.

Choosing Images Individually



1 Choose [Select].

- Following step 2 in "Choosing a Selection Method" (📖85), choose [Select] and press the [⏏] button.

2 Choose an image.

- Once you choose an image following step 2 in "Choosing Images Individually" (📖83), [✓] is displayed.
- To cancel selection, press the [⏏] button again. [✓] is no longer displayed.
- Repeat this process to specify other images.

3 Erase the image.

- Press the [MENU] button. A confirmation message is displayed.
- Press the [◀][▶] buttons to choose [OK], and then press the [⏏] button.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Selecting a Range

1 Choose [Select Range].

- Following step 2 in "Choosing a Selection Method" (85), choose [Select Range] and press the [Q] button.

2 Choose images.

- Follow steps 2 – 3 in "Selecting a Range" (83) to specify images.

3 Erase the images.

- Press the [▼] button to choose [Erase], and then press the [Q] button.




Specifying All Images at Once

1 Choose [Select All Images].

- Following step 2 in "Choosing a Selection Method" (85), choose [Select All Images] and press the [Q] button.

2 Erase the images.


- Press the [◀][▶] buttons to choose [OK], and then press the [Q] button.

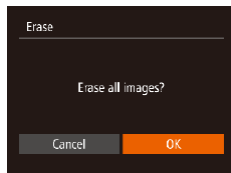

Rotating Images

► Still Images ► Movies

Change the orientation of images and save them as follows.

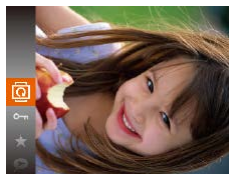

1 Choose [Q].


- Press the [Q] button, and then choose [Q] in the menu (26).



2 Rotate the image.

- Press the [◀] or [▶] button, depending on the desired direction. Each time you press the button, the image is rotated 90°. Press the [Q] button to complete the setting.

Using the Menu

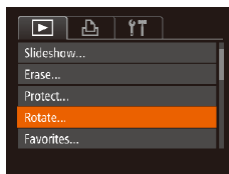


1 Choose [Rotate].

- Press the [MENU] button and choose [Rotate] on the [▶] tab (27).

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



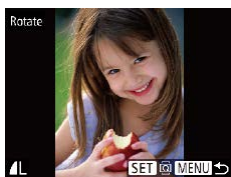

2 Rotate the image.


- Press the [◀][▶] buttons to choose an image.
- The image is rotated 90° each time you press the [⌂] button.
- To return to the menu screen, press the [MENU] button.



- Rotation is not possible when [Auto Rotate] is set to [Off] (187).

Deactivating Auto Rotation

Follow these steps to deactivate automatic image rotation, which rotates images based on the current camera orientation.

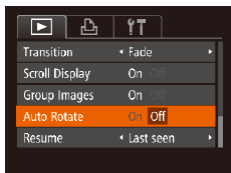

- Press the [MENU] button, choose [Auto Rotate] on the [▶] tab, and then choose [Off] (127).




- Images cannot be rotated (186) when you set [Auto Rotate] to [Off]. Additionally, images already rotated will be displayed in the original orientation.
- In Smart Shuffle (181) mode, even if [Auto Rotate] is set to [Off], images shot vertically will be displayed vertically, and rotated images will be displayed in the rotated orientation.

Tagging Images as Favorites

► Still Images ► Movies


You can organize images by tagging them as favorites. By choosing a category in filtered playback, you can restrict the following operations to all of those images.

- “Viewing” (174), “Viewing Slideshows” (180), “Protecting Images” (182), “Erasing Images” (184), “Adding Images to the Print List (DPOF)” (114), “Adding Images to a Photobook” (116)

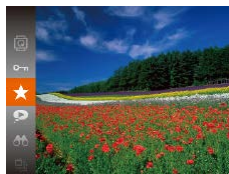

- Press the [⌂] button, and then choose [★] in the menu (126).
- [Tagged as Favorite] is displayed.
- To untag the image, repeat this process and choose [★] again, and then press the [⌂] button.

Using the Menu

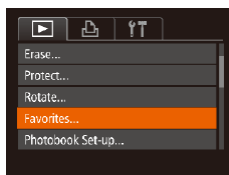

1 Choose [Favorites].

- Press the [MENU] button and choose [Favorites] on the [▶] tab (127).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix


Index





2 Choose an image.

- Press the [◀][▶] buttons to choose an image, and then press the [Ⓢ] button. [★] is displayed.
- To untag the image, press the [Ⓢ] button again. [★] is no longer displayed.
- Repeat this process to choose additional images.

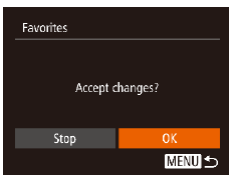

3 Finish the setup process.

- Press the [MENU] button. A confirmation message is displayed.
- Press the [◀][▶] buttons to choose [OK], and then press the [Ⓢ] button.



- Images will not be tagged as favorites if you switch to Shooting mode or turn the camera off before finishing the setup process in step 3.



- Favorite images will have a three-star rating (★★★★☆☆) when transferred to computers running Windows 8 or Windows 7. (Does not apply to movies.)

Editing Still Images




- Image editing (88 – 91) is only available when the memory card has sufficient free space.

Resizing Images

► Still Images ► Movies

Save a copy of images at a lower resolution.

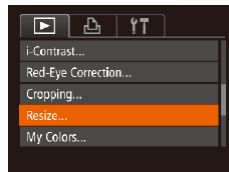

1 Choose [Resize].

- Press the [MENU] button and choose [Resize] on the [▶] tab (27).

2 Choose an image.

- Press the [◀][▶] buttons to choose an image, and then press the [Ⓢ] button.

3 Choose an image size.

- Press the [◀][▶] buttons to choose the size, and then press the [Ⓢ] button.
- [Save new image?] is displayed.



Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode


7 Setting Menu

8 Accessories

9 Appendix


Index



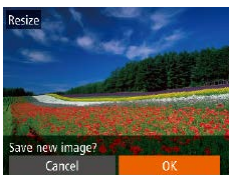

4 Save the new image.

- Press the [◀][▶] buttons to choose [OK], and then press the [⏏] button.
- The image is now saved as a new file.

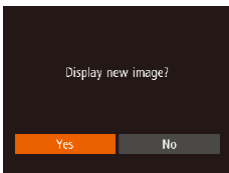

5 Review the new image.

- Press the [MENU] button. [Display new image?] is displayed.
- Press the [◀][▶] buttons to choose [Yes], and then press the [⏏] button.
- The saved image is now displayed.



- Editing is not possible for images shot at a resolution of [S] (42).




- Images cannot be resized to a higher resolution.

Cropping


► Still Images ► Movies

You can specify a portion of an image to save as a separate image file.

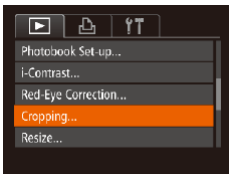

1 Choose [Cropping].

- Press the [MENU] button, and then choose [Cropping] on the [⏏] tab (827).

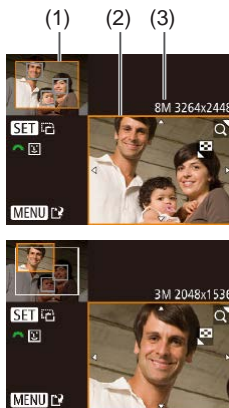

2 Choose an image.

- Press the [◀][▶] buttons to choose an image, and then press the [⏏] button.

3 Adjust the cropping area.

- A frame is displayed around the portion of the image to be cropped (1).
- The original image is shown in the upper left, and a preview of the image as cropped (2) is shown in the lower right. You can also see the resolution after cropping (3).
- To resize the frame, move the zoom lever.
- To move the frame, press the [▲][▼][◀][▶] buttons.
- To change the frame orientation, press the [⏏] button.
- Faces detected in the image are enclosed in gray frames in the upper-left image. To crop the image based on this frame, turn the [⚙] dial to switch to the other frame.
- Press the [MENU] button.


4 Save as a new image and review.

- Follow steps 4 – 5 in "Resizing Images" (88).



- Editing is not possible for images shot at a resolution of [S] (42) or resized to [S] (88).

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |

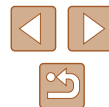 




- Images supported for cropping will have the same aspect ratio after cropping.
- Cropped images will have a lower resolution than uncropped images.

Changing Image Color Tones (My Colors)

► Still Images ► Movies

You can adjust image colors and then save the edited image as a separate file. For details on each option, see “Changing Image Color Tones (My Colors)” (p.61).

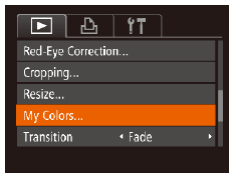

1 Choose [My Colors].

- Press the [MENU] button, and then choose [My Colors] on the [▶] tab (p.27).

2 Choose an image.

- Press the [◀][▶] buttons to choose an image, and then press the [OK] button.

3 Choose an option.

- Press the [◀][▶] buttons to choose an option, and then press the [OK] button.

4 Save as a new image and review.

- Follow steps 4 – 5 in “Resizing Images” (p.88).



- Image quality of pictures you repeatedly edit this way will be a little lower each time, and you may not be able to obtain the desired color.




- The color of images edited using this function may vary slightly from the color of images shot using My Colors (p.61).

Correcting Image Brightness (i-Contrast)

► Still Images ► Movies

Excessively dark image areas (such as faces or backgrounds) can be detected and automatically adjusted to the optimal brightness. Insufficient overall image contrast is also automatically corrected, to make subjects stand out better. Choose from four correction levels, and then save the image as a separate file.

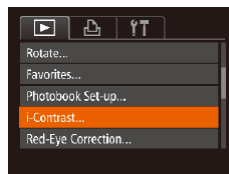

1 Choose [i-Contrast].

- Press the [MENU] button, and then choose [i-Contrast] on the [▶] tab (p.27).

2 Choose an image.

- Press the [◀][▶] buttons to choose an image, and then press the [OK] button.

3 Choose an option.

- Press the [◀][▶] buttons to choose an option, and then press the [OK] button.



Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



4 Save as a new image and review.

- Follow steps 4 – 5 in “Resizing Images” (88).



- For some images, correction may be inaccurate or may cause images to appear grainy.
- Images may look grainy after repeated editing using this function.




- If [Auto] does not produce the expected results, try correcting images using [Low], [Medium], or [High].

Correcting Red-Eye

► Still Images ► Movies

Automatically corrects images affected by red-eye. You can save the corrected image as a separate file.

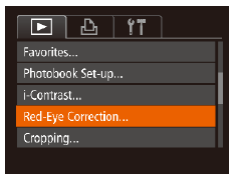

1 Choose [Red-Eye Correction].

- Press the [MENU] button, and then choose [Red-Eye Correction] on the [] tab (27).

2 Choose an image.

- Press the [◀][▶] buttons to choose an image.

3 Correct the image.

- Press the [] button.
- Red-eye detected by the camera is now corrected, and frames are displayed around corrected image areas.
- Enlarge or reduce images as needed. Follow the steps in “Magnifying Images” (80).



4 Save as a new image and review.

- Press the [▲][▼][◀][▶] buttons to choose [New File], and then press the [] button.
- The image is now saved as a new file.
- Follow step 5 in “Resizing Images” (88).



- Some images may not be corrected accurately.
- To overwrite the original image with the corrected image, choose [Overwrite] in step 4. In this case, the original image will be erased.
- Protected images cannot be overwritten.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix


Index



Editing Movies

► Still Images ► Movies

You can cut movies to remove unneeded portions at the beginning or end.


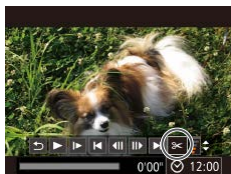


1 Choose [F7].

- Following steps 1 – 5 in “Viewing” (1074), choose [F7] and press the [OK] button.
- The movie editing panel and editing bar are now displayed.

2 Specify portions to cut.

- (1) is the movie editing panel, and (2) is the editing bar.
- Press the [▲][▼] buttons to choose [L/⏮] or [R/⏭].
- To view the portions you can cut (identified by [L/⏮] on the screen), press the [◀][▶] buttons to move [I]. Cut the beginning of the movie (from [L/⏮]) by choosing [L/⏮], and cut the end of the movie by choosing [R/⏭].
- If you move [I] to a position other than a [L/⏮] mark, in [L/⏮] the portion before the nearest [L/⏮] mark on the left will be cut, while in [R/⏭] the portion after the nearest [L/⏮] mark on the right will be cut.

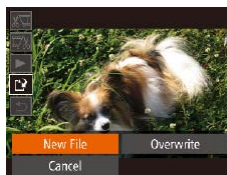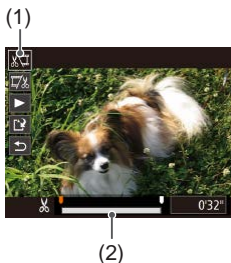

3 Review the edited movie.

- Press the [▲][▼] buttons to choose [I], and then press the [OK] button. The edited movie is now played.
- To edit the movie again, repeat step 2.
- To cancel editing, press the [▲][▼] buttons to choose [L/⏮]. Press the [OK] button, press the [◀][▶] buttons to choose [OK], and then press the [OK] button again.

4 Save the edited movie.

- Press the [▲][▼] buttons to choose [I], and then press the [OK] button.
- Press the [▲][▼][◀][▶] buttons to choose [New File], and then press the [OK] button.
- The movie is now saved as a new file.



- To overwrite the original movie with the cut one, choose [Overwrite] in step 4. In this case, the original movie will be erased.
- If the memory card lacks sufficient space, only [Overwrite] will be available.
- Movies may not be saved if the battery pack runs out while saving is in progress.
- When editing movies, you should use a fully charged battery pack or an AC adapter kit (sold separately, 102).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Editing Digest Movies

► Still Images ► Movies

Individual chapters (clips) (📖31) recorded in [📹] mode can be erased, as needed. Be careful when erasing clips, because they cannot be recovered.




1 Select the clip to erase.

- Follow steps 1 – 2 in “Viewing Short Movies Created When Shooting Still Images (Digest Movies)” (📖76) to play a movie created in [📹] mode, and then press the [⏮] button to access the movie control panel.
- Press the [⏮][⏭] buttons to choose [⏮] or [⏭], and then press the [⏮] button.

2 Choose [🗑].

- Press the [⏮][⏭] buttons to choose [🗑], and then press the [⏮] button.
- The selected clip is played back repeatedly.

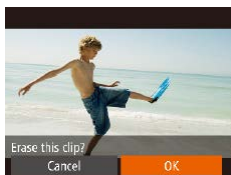

3 Confirm erasure.

- Press the [⏮][⏭] buttons to choose [OK], and then press the [⏮] button.
- The clip is erased, and the short movie is overwritten.



- [🗑] is not displayed if you select a clip when the camera is connected to a printer.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



7

Setting Menu


Customize or adjust basic camera functions for greater convenience

Adjusting Basic Camera Functions

MENU (📖27) functions on the (🔼🔽) tab can be configured. Customize commonly used functions as desired, for greater convenience.

Silencing Camera Operations

Silence camera sounds and movies as follows.

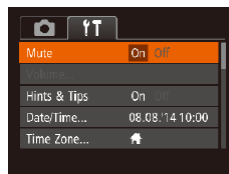


- Choose [Mute], and then choose [On].



- Operation can also be silenced by holding down the [▼] button as you turn the camera on.
- Sound is not played during movies (📖74) if you mute camera sounds. To restore sound during movies, press the [▲] button. Adjust volume with the [▲][▼] buttons, as needed.


Adjusting the Volume

Adjust the volume of individual camera sounds as follows.

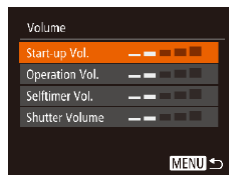


- Choose [Volume], and then press the (🔊) button.
- Choose an item, and then press the [◀][▶] buttons to adjust the volume.

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |

 

Hiding Hints and Tips


Hints and tips are normally shown when you choose FUNC. (📖26) or MENU (📖27) items. If you prefer, you can deactivate this information.

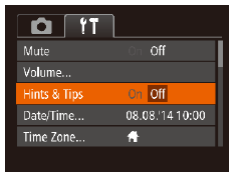

- Choose [Hints & Tips], and then choose [Off].

Date and Time

Adjust the date and time as follows.

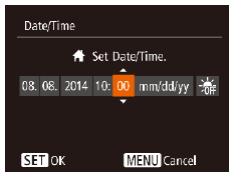


- Choose [Date/Time], and then press the [🕒] button.
- Press the [⏮][⏭] buttons to choose an option, and then press the [▲][▼] buttons to adjust the setting.

World Clock

To ensure that your shots will have the correct local date and time when you travel abroad, simply register the destination in advance and switch to that time zone. This convenient feature eliminates the need to change the Date/Time setting manually.

Before using the world clock, be sure to set the date and time and your home time zone, as described in “Setting the Date and Time” (📖18).

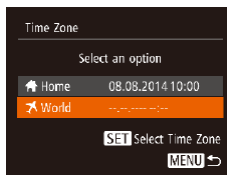


1 Specify your destination.

- Choose [Time Zone], and then press the [🕒] button.
- Press the [▲][▼] buttons to choose [🌐 World], and then press the [🕒] button.
- Press the [⏮][⏭] buttons to choose the destination.
- To set daylight saving time (1 hour ahead), choose [🌞] by pressing the [▲][▼] buttons, and then choose [🌞] by pressing the [⏮][⏭] buttons.
- Press the [🕒] button.

2 Switch to the destination time zone.

- Press the [▲][▼] buttons to choose [🌐 World], and then press the [MENU] button.
- [🌐] is now shown on the shooting screen (📖123).

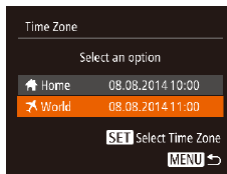

- Adjusting the date or time while in [🌐] mode (📖18) will automatically update your [🏠 Home] time and date.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

Index



Lens Retraction Timing


The lens is normally retracted for safety about one minute after you press the [Z] button in Shooting mode (123). To have the lens retracted immediately after you press the [Z] button, set the retraction timing to [0 sec.].

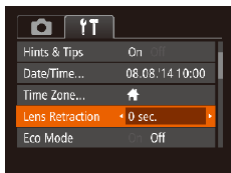

- Choose [Lens Retraction], and then press the [Z] button to choose [0 sec.].

Using Eco Mode

This function allows you to conserve battery power in Shooting mode. When the camera is not in use, the screen quickly darkens to reduce battery consumption.

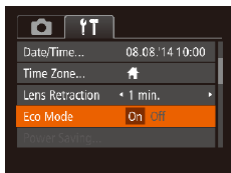

1 Configure the setting.


- Choose [Eco Mode], and then choose [On].
- [ECO] is now shown on the shooting screen (123).
- The screen darkens when the camera is not used for approximately two seconds; approximately ten seconds after darkening, the screen turns off. The camera turns off after approximately three minutes of inactivity.

2 Shoot.

- To activate the screen and prepare for shooting when the screen is off but the lens is still out, press the shutter button halfway.

Power-Saving Adjustment

Adjust the timing of automatic camera and screen deactivation (Auto Power Down and Display Off, respectively) as needed (124).

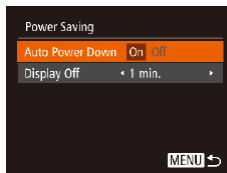

- Choose [Power Saving], and then press the [Z] button.
- After choosing an item, press the [Left] [Right] buttons to adjust it as needed.



- To conserve battery power, you should normally choose [On] for [Auto Power Down] and [1 min.] or less for [Display Off].



- The [Display Off] setting is applied even if you set [Auto Power Down] to [Off].
- These power-saving functions are not available when you have set Eco mode (196) to [On].

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

Index



Screen Brightness

Adjust screen brightness as follows.

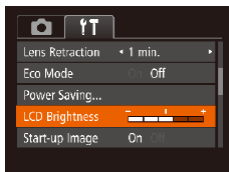


- Choose [LCD Brightness], and then press the [◀][▶] buttons to adjust the brightness.



- For maximum brightness, press and hold the [▼] button for at least one second when the shooting screen is displayed or when in single-image display. (This will override the [LCD Brightness] setting on the [⏏] tab.) To restore the original brightness, press and hold the [▼] button again for at least one second or restart the camera.

Hiding the Start-Up Screen

If you prefer, you can deactivate display of the start-up screen normally shown when you turn the camera on.

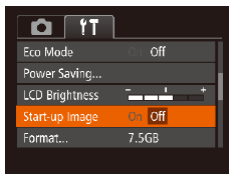

- Choose [Start-up Image], and then choose [Off].

Formatting Memory Cards

Before using a new memory card or a card formatted in another device, you should format the card with this camera.

Formatting erases all data on a memory card. Before formatting, copy images on the memory card to a computer, or take other steps to back them up.


An Eye-Fi card (📖 117) contains software on the card itself. Before formatting an Eye-Fi card, install the software on a computer.

1 Access the [Format] screen.

- Choose [Format], and then press the [⏏] button.


2 Choose [OK].

- Press the [▲][▼] buttons to choose [Cancel], press the [◀][▶] buttons to choose [OK], and then press the [⏏] button.

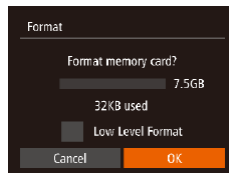

3 Format the memory card.

- To begin the formatting process, press the [▲][▼] buttons to choose [OK], and then press the [⏏] button.
- When formatting is finished, [Memory card formatting complete] is displayed. Press the [⏏] button.

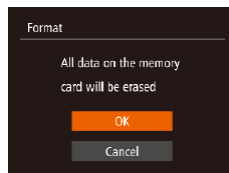

- Formatting or erasing data on a memory card only changes file management information on the card and does not erase the data completely. When transferring or disposing of memory cards, take steps to protect personal information if necessary, as by physically destroying cards.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index






- The total card capacity indicated on the formatting screen may be less than the advertised capacity.

Low-Level Formatting

Perform low-level formatting in the following cases: [Memory card error] is displayed, the camera is not working correctly, card image reading/writing is slower, continuous shooting is slower, or movie recording suddenly stops. Low-level formatting erases all data on a memory card. Before low-level formatting, copy images on the memory card to a computer, or take other steps to back them up.

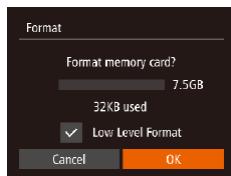


- On the screen in step 2 of “Formatting Memory Cards” (197), press the [▲][▼] buttons to choose [Low Level Format], and then press the [◀][▶] buttons to select this option. A [✓] icon is displayed.
- Follow steps 2 – 3 in “Formatting Memory Cards” (197) to continue with the formatting process.



- Low-level formatting takes longer than “Formatting Memory Cards” (197), because data is erased from all storage regions of the memory card.
- You can cancel low-level formatting in progress by choosing [Stop]. In this case, all data will be erased, but the memory card can be used normally.

File Numbering

Your shots are automatically numbered in sequential order (0001 – 9999) and saved in folders that store up to 2,000 images each. You can change how the camera assigns file numbers.

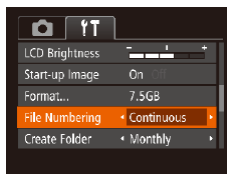

- Choose [File Numbering], and then choose an option.

| | |
|------------|-----------------------------------------------------------------------------------------------------------|
| Continuous | Images are numbered consecutively (until the 9999th shot is taken/saved) even if you switch memory cards. |
| Auto Reset | Image numbering is reset to 0001 if you switch memory cards, or when a new folder is created. |



- Regardless of the option selected in this setting, shots may be numbered consecutively after the last number of existing images on newly inserted memory cards. To start saving shots from 0001, use an empty (or formatted (197)) memory card.
- Refer to “Software Instruction Manual” (107) for information on the card folder structure and image formats.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

Index



Date-Based Image Storage


Instead of saving images in folders created each month, you can have the camera create folders each day you shoot to store shots taken that day.

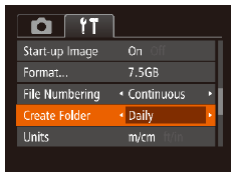

- Choose [Create Folder], and then choose [Daily].
- Images will now be saved in folders created on the shooting date.

Metric / Non-Metric Display


Change the unit of measurement shown in the zoom bar (📖29), the MF indicator (📖63), and elsewhere from m/cm to ft/in as needed.

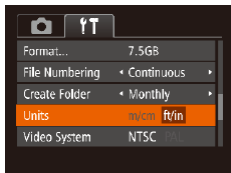

- Choose [Units], and then choose [ft/in].

Checking Certification Logos

Some logos for certification requirements met by the camera can be viewed on the screen. Other certification logos are printed in this guide, on the camera packaging, or on the camera body.

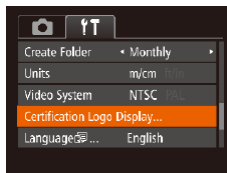

- Choose [Certification Logo Display], and then press the [INFO] button.

Display Language

Change the display language as needed.



- Choose [Language] (📖), and then press the [INFO] button.
- Press the [▲][▼][◀][▶] buttons to choose a language, and then press the [INFO] button.



- You can also access the [Language] screen in Playback mode by pressing and holding the [INFO] button and immediately pressing the [MENU] button.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Adjusting Other Settings

The following settings can also be adjusted on the [Ft] tab.


- [Video System] (104)
- [Eye-Fi Settings] (117)

Restoring Defaults

If you accidentally change a setting, you can restore default camera settings.

1 Access the [Reset All] screen.

- Choose [Reset All], and then press the [Menu] button.

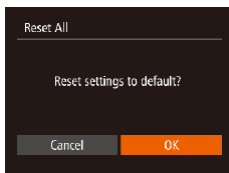

2 Restore default settings.

- Press the [Left][Right] buttons to choose [OK], and then press the [Menu] button.
- Default settings are now restored.



- The following functions are not restored to default settings.
 - [Ft] tab settings [Date/Time] (95), [Time Zone] (95), [Language] (99), and [Video System] (104)
 - Custom white balance data you have recorded (61)
 - Shooting mode chosen in [SCN] (50) and [Q] (51) modes

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index




8

Accessories

Enjoy the camera in more ways with optional Canon accessories and other compatible accessories sold separately

System Map

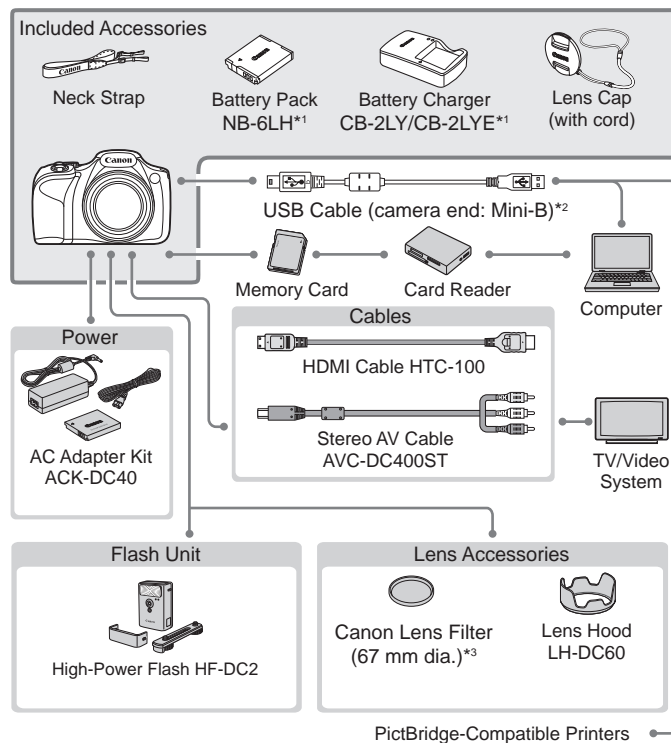

*1 Also available for purchase separately.

*2 A genuine Canon accessory is also available (Interface Cable IFC-400PCU).

*3 Requires Filter Adapter FA-DC67A.

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



 
Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

Optional Accessories

The following camera accessories are sold separately. Note that availability varies by area, and some accessories may no longer be available.

Power Supplies




Battery Pack NB-6LH

- Rechargeable lithium-ion battery

Battery Charger CB-2LY/CB-2LYE

- Charger for Battery Pack NB-6LH

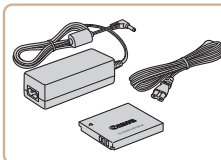

AC Adapter Kit ACK-DC40

- For powering the camera using household power. Recommended when using the camera over extended periods, or when connecting the camera to a printer or computer. Cannot be used to charge the battery pack in the camera.



- The battery pack includes a convenient cover which you can attach to know the charge status at a glance. Attach the cover so that ▲ is visible on a charged battery pack, and attach it so that ▲ is not visible on an uncharged battery pack.
- Battery Pack NB-6L is also supported.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index





- The battery charger and AC adapter kit can be used in areas with 100 – 240 V AC power (50/60 Hz).
- For power outlets in a different format, use a commercially available adapter for the plug. Never use an electrical transformer designed for traveling, which may damage the battery pack.

Flash Unit



 
High-Power Flash HF-DC2

- External flash for illuminating subjects that are out of range of the built-in flash.




- High-Power Flash units cannot be used in **[M]** shooting mode, or in **[Av]** or **[Tv]** mode when [Flash Mode] is set to [Manual].

Other Accessories




Interface Cable IFC-400PCU

 - For connecting the camera to a computer or printer.



Stereo AV Cable AVC-DC400ST

 - Connect the camera to a TV to enjoy playback on the larger TV screen.



HDMI Cable HTC-100

- For connecting the camera to an HDMI input of a high-definition TV.



Lens Hood LH-DC60

- Prevents extraneous light outside the angle of view from entering the lens and causing flares or ghosting, which reduce image quality.



Filter Adapter FA-DC67A

- Adapter required when mounting a 67 mm filter.



- A lens filter and lens cap cannot be attached to the camera at the same time.

Printer



Canon-Brand PictBridge-Compatible Printers

- Even without using a computer, you can print images by connecting the camera directly to a printer. For details, visit your nearest Canon retailer.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Using Optional Accessories

► Still Images ► Movies

Playback on a TV

► Still Images ► Movies

By connecting the camera to a TV, you can view your shots on the larger screen of the TV.

For details on connection or how to switch inputs, refer to the TV manual.



- Some information may not be displayed when viewing images on a TV (p.124).

Playback on a High-Definition TV



► Still Images ► Movies

Connecting the camera to an HDTV with the HDMI Cable HTC-100 (sold separately) enables you to view your shots on the larger screen of the TV. Movies shot at a resolution of [FHD] or [HD] can be viewed in high definition.

1 Make sure the camera and TV are off.

2 Connect the camera to the TV.

- On the TV, insert the cable plug fully into the HDMI input as shown.

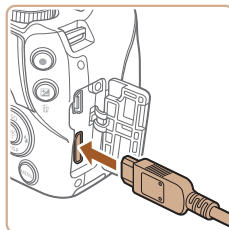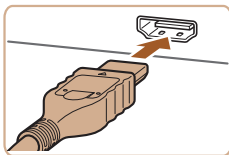


- On the camera, open the terminal cover and insert the cable plug fully into the camera terminal.

3 Turn the TV on and switch to video input.

- Switch the TV input to the video input you connected the cable to in step 2.

4 Turn the camera on.

 - Press the [] button to turn the camera on.
- Images from the camera are now displayed on the TV. (Nothing is displayed on the camera screen.)
- When finished, turn off the camera and TV before disconnecting the cable.



- Camera operating sounds are not played while the camera is connected to an HDTV.


Playback on a Standard-Definition TV


► Still Images ► Movies

Connecting the camera to a TV with the Stereo AV Cable AVC-DC400ST (sold separately) enables you to view your shots on the larger screen of the TV as you control the camera.

1 Make sure the camera and TV are off.


| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |

 

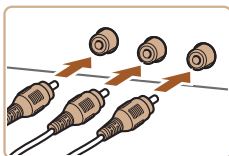

2 Connect the camera to the TV.

- On the TV, insert the cable plugs fully into the video inputs as shown.
- Make sure the cable plugs are in video inputs of the same color.
- On the camera, open the terminal cover and insert the cable plug fully into the camera terminal.

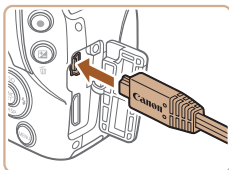

3 Display images.

- Follow steps 3 – 4 in “Playback on a High-Definition TV” (104) to display images.



- Correct display is not possible unless the camera video output format (NTSC or PAL) matches the TV format. To change the video output format, press the **[MENU]** button and choose [Video System] on the **[1]** tab.




- When the camera and TV are connected, you can also shoot while previewing shots on the larger screen of the TV. To shoot, follow the same steps as when using the camera screen. However, AF-Point Zoom (44) and MF-Point Zoom (63) are not available.



Powering the Camera with Household Power

► Still Images ► Movies

Powering the camera with AC Adapter Kit ACK-DC40 (sold separately) eliminates the need to monitor the remaining battery level.

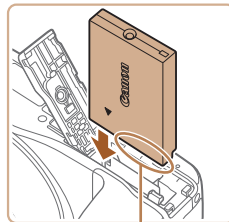

 (1)

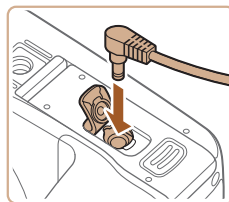

1 Make sure the camera is off.

2 Insert the coupler.

- Follow step 1 in “Inserting the Battery Pack and Memory Card” (17) to open the cover.
- Holding the coupler with the terminals (1) facing as shown, insert the coupler just as you would a battery pack (following step 2 in “Inserting the Battery Pack and Memory Card” (17)).
- Follow step 4 in “Inserting the Battery Pack and Memory Card” (17) to close the cover.

3 Connect the adapter to the coupler.

- Open the cover and insert the adapter plug fully into the coupler.

4 Connect the power cord.

- Insert one end of the power cord into the compact power adapter, and then plug the other end into a power outlet.
- Turn the camera on and use it as desired.
- When finished, turn the camera off and unplug the power cord from the outlet.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index






- Do not disconnect the adapter or unplug the power cord while the camera is still on. This may erase your shots or damage the camera.
- Do not attach the adapter or adapter cord to other objects. Doing so could result in malfunction or damage to the product.



Using a Lens Hood (Sold Separately)

► Still Images ► Movies

For wide-angle shots of backlit subjects without using the flash, attach optional Lens Hood LH-DC60 to prevent light outside the angle of view from entering the lens.

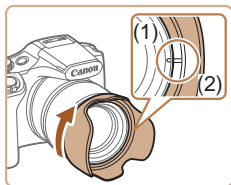

- Make sure the camera is off.
- Align the lens hood mark (2) with the camera mark (1), and turn the lens hood in the direction of the arrow until it locks in place.
- To remove the lens hood, turn it in the opposite direction.

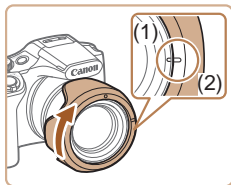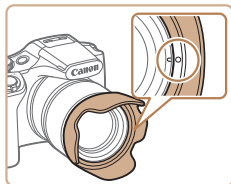

- To attach the lens hood inverted (as shown) when the hood is not used, align the lens hood mark (2) with the camera mark (1), and turn the lens hood in the direction of the arrow until it locks in place.



- Vignetting may occur if you use the built-in flash when the lens hood is attached.




- The filter adapter and a lens hood cannot be attached to the camera at the same time.

Using Lens Filters (Sold Separately)


► Still Images ► Movies

Attaching a lens filter to the camera protects the lens and allows you to shoot with various effects. To attach a lens filter, you will need Filter Adapter FA-DC67A (sold separately).

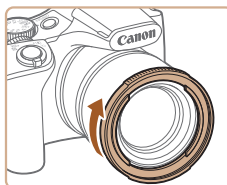

1 Attach the filter adapter.

- Make sure the camera is off.
- Align the notches on the camera and the filter adapter and turn the adapter in the direction of the arrow until locked.
- To remove the filter adapter, turn it in the opposite direction.

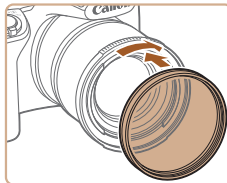

2 Attach a filter.

- Turn the filter in the direction of the arrow to attach it to the camera.
- Make sure not to attach the filter too tightly. Doing so could prevent removal of the filter and damage the camera.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index





- We recommend the use of genuine Canon filters (67 mm dia.).
- When not using auto focus to shoot, set the manual focus option [Safety MF] to [On].
- If you use the built-in flash with the filter adapter attached, portions of the image may appear darker.
- When using the filter adapter, be sure to use only one filter at a time. Attaching multiple filters, or accessories such as a heavy lens, may cause the attachments to fall off and become damaged.
- Do not grip the filter adapter tightly.
- Remove the filter adapter when not using a filter.



- The filter adapter and a lens hood cannot be attached to the camera at the same time.

Using the Software

The software available for download from the Canon website is introduced below, with instructions for installation and saving images to a computer.

Software

After downloading the software from the Canon website and installing it, you can do the following things on your computer.

- CameraWindow
 - Import images and change camera settings
- ImageBrowser EX
 - Manage images: view, search, and organize
 - Print and edit images



- Internet access is required, and any ISP account charges and access fees must be paid separately.



Software Instruction Manual

Refer to the instruction manual when using the software. The manual can be accessed from the help system of software (some software excluded).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode /
Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Checking Your Computer Environment

The software can be used on the following computers. For detailed system requirements and compatibility information, including support in new operating systems, visit the Canon website.

| Operating System | Windows | Mac OS |
|------------------|--------------------------------|--------------------------------|
| | Windows 8/8.1 Windows 7 SP1 | Mac OS X 10.9 Mac OS X 10.8 |



- Check the Canon website for the latest system requirements, including supported OS versions.

Installing the Software

Windows 7 and Mac OS X 10.8 are used here for the sake of illustration.

1 Download the software.

- With a computer connected to the Internet, access <http://www.canon.com/icpd/>.
- Access the site for your country or region.
- Download the software.

2 Install the files.

- Click [Easy Installation] and follow the on-screen instructions to complete the installation process.
- Installation may take some time, depending on computer performance and the Internet connection.
- Click [Finish] or [Restart] on the screen after installation.



- Using the software, you can update to the latest version, and download new functions via the Internet (some software excluded).
- The first time you connect the camera to the computer, drivers will be installed, so it may take a few minutes until camera images are accessible.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

Index




Saving Images to a Computer

Windows 7 and Mac OS X 10.8 are used here for the sake of illustration. For other functions, refer to the help system of the relevant software (some software excluded).

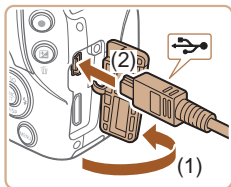


1 Connect the camera to the computer.

 - With the camera turned off, open the cover (1). With the smaller plug of the USB cable in the orientation shown, insert the plug fully into the camera terminal (2).




 - Insert the larger plug of the USB cable in the computer's USB port. For details about USB connections on the computer, refer to the computer user manual.



2 Turn the camera on to access CameraWindow.

- Press the [▶] button to turn the camera on.
- Mac OS: CameraWindow is displayed when a connection is established between the camera and computer.
- Windows: Follow the steps introduced below.
- In the screen that displays, click the [🖥️] link to modify the program.

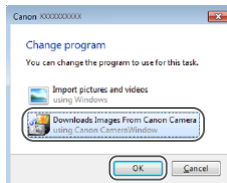


- Choose [Downloads Images From Canon Camera] and then click [OK].

- Double-click [🖥️].


3 Save the images to the computer.

- Click [Import Images from Camera], and then click [Import Untransferred Images].
- Images are now saved to the Pictures folder on the computer, in separate folders named by date.
- After images are saved, close CameraWindow, press the [▶] button to turn the camera off, and unplug the cable.
- For instructions on viewing images on a computer, refer to "Software Instruction Manual" (📖107).

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |

 



- Windows 7: If the screen in step 2 is not displayed, click the  icon in the taskbar.
- Mac OS: If CameraWindow is not displayed after step 2, click the [CameraWindow] icon in the Dock.
- Although you can save images to a computer simply by connecting your camera to the computer without using the software, the following limitations apply.
 - It may take a few minutes after you connect the camera to the computer until camera images are accessible.
 - Images shot in vertical orientation may be saved in horizontal orientation.
 - Image protection settings may be cleared from images saved to a computer.
 - Some problems may occur when saving images or image information, depending on the operating system version, the software in use, or image file sizes.
 - Some functions provided by the software may not be available, such as movie editing.

Printing Images

► Still Images ► Movies



Your shots can easily be printed by connecting the camera to a printer. On the camera, you can specify images to set up batch printing, prepare orders for photo development services, and prepare orders or print images for photobooks.

A Canon SELPHY CP series compact photo printer is used here for the sake of illustration. Screens displayed and available functions vary by printer. Also refer to the printer manual for additional information.

Easy Print

► Still Images ► Movies

Easily print your shots by connecting the camera to a PictBridge-compatible printer (sold separately) with the USB cable.

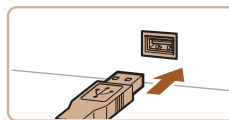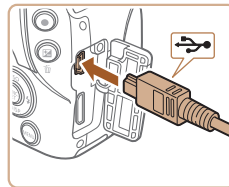

1 Make sure the camera and printer are off.

2 Connect the camera to the printer.

- Open the terminal cover. Holding the smaller cable plug in the orientation shown, insert the plug fully into the camera terminal.
- Connect the larger cable plug to the printer. For other connection details, refer to the printer manual.

3 Turn the printer on.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

 
7 Setting Menu

8 Accessories

9 Appendix

Index





4 Turn the camera on.

- Press the [▶] button to turn the camera on.

5 Choose an image.

- Press the [◀][▶] buttons to choose an image.

6 Access the printing screen.



- Press the [P] button, choose [Print], and press the [P] button again.

7 Print the image.

- Press the [▲][▼] buttons to choose [Print], and then press the [P] button.
- Printing now begins.
- To print other images, repeat the above procedures starting from step 5 after printing is finished.
- When you are finished printing, turn the camera and printer off and disconnect the cable.




- For Canon-brand PictBridge-compatible printers (sold separately), see "Printer" (103).

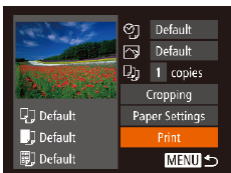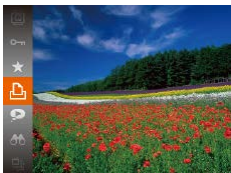

Configuring Print Settings

► Still Images ► Movies

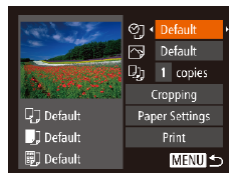

1 Access the printing screen.

- Follow steps 1 – 6 in "Easy Print" (110) to access this screen.

2 Configure the settings.

- Press the [▲][▼] buttons to choose an item, and then press the [◀][▶] buttons to choose an option.

| | | |
|----------------|---------------|-----------------------------------------------------------------------------|
| | Default | Matches current printer settings. |
| | Date | Prints images with the date added. |
| | File No. | Prints images with the file number added. |
| | Both | Prints images with both the date and file number added. |
| | Off | – |
| | Default | Matches current printer settings. |
| | Off | – |
| | On | Uses information from the time of shooting to print under optimal settings. |
| | Red-Eye 1 | Corrects red-eye. |
| | No. of Copies | Choose the number of copies to print. |
| Cropping | – | Specify a desired image area to print (112). |
| Paper Settings | – | Specify the paper size, layout, and other details (112). |

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix


Index



Cropping Images before Printing

► Still Images ► Movies

By cropping images before printing, you can print a desired image area instead of the entire image.

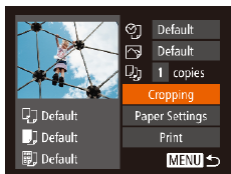

1 Choose [Cropping].

- After following step 1 in “Configuring Print Settings” (111) to access the printing screen, choose [Cropping] and press the [OK] button.
- A cropping frame is now displayed, indicating the image area to print.

2 Adjust the cropping frame as needed.


- To resize the frame, move the zoom lever.
- To move the frame, press the [▲][▼][◀][▶] buttons.
- To rotate the frame, press the [⊞] button.
- Press the [MENU] button, press the [▲][▼] buttons to choose [OK], and then press the [⊞] button.

3 Print the image.

- Follow step 7 in “Easy Print” (110) to print.




- Cropping may not be possible at small image sizes, or at some aspect ratios.
- Dates may not be printed correctly if you crop images shot with [Date Stamp] selected.

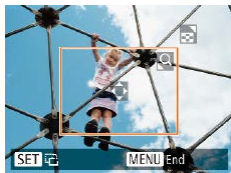


Choosing Paper Size and Layout before Printing

► Still Images ► Movies

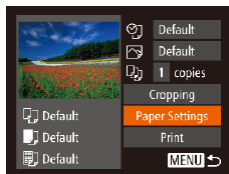


1 Choose [Paper Settings].

- After following step 1 in “Configuring Print Settings” (111) to access the printing screen, choose [Paper Settings] and press the [OK] button.

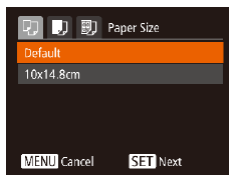


2 Choose a paper size.

- Press the [▲][▼] buttons to choose an option, and then press the [OK] button.

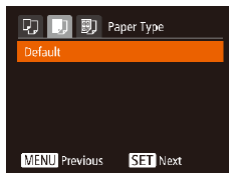

3 Choose a type of paper.

- Press the [▲][▼] buttons to choose an option, and then press the [OK] button.

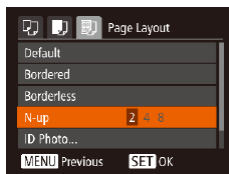

4 Choose a layout.

- Press the [▲][▼] buttons to choose an option.
- When choosing [N-up], press the [◀][▶] buttons to specify the number of images per sheet.
- Press the [OK] button.

5 Print the image.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Available Layout Options


| | |
|------------|-------------------------------------------------------------------------------------------------------------------------|
| Default | Matches current printer settings. |
| Bordered | Prints with blank space around the image. |
| Borderless | Borderless, edge-to-edge printing. |
| N-up | Choose how many images to print per sheet. |
| ID Photo | Prints images for identification purposes. Only available for images with a resolution of L and an aspect ratio of 4:3. |
| Fixed Size | Choose the print size. Choose from 3.5 x 5 in., postcard, or wide-format prints. |

Printing ID Photos

► Still Images ► Movies

1 Choose [ID Photo].

- Following steps 1 – 4 in “Choosing Paper Size and Layout before Printing” (112), choose [ID Photo] and press the $\left[\text{ID Photo}\right]$ button.

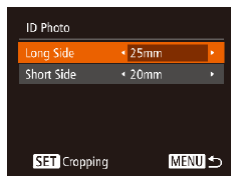

2 Choose the long and short side length.

- Press the $\left[\blacktriangle\right]\left[\blacktriangledown\right]$ buttons to choose an item. Choose the length by pressing the $\left[\leftarrow\right]\left[\rightarrow\right]$ buttons, and then press the $\left[\text{ID Photo}\right]$ button.




3 Choose the printing area.

- Follow step 2 in “Cropping Images before Printing” (112) to choose the printing area.

4 Print the image.

Printing Movie Scenes

► Still Images ► Movies

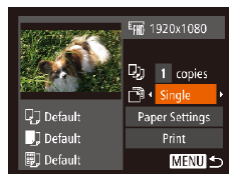

1 Access the printing screen.

- Follow steps 1 – 6 in “Easy Print” (110) to choose a movie. This screen is displayed.

2 Choose a printing method.

- Press the $\left[\blacktriangle\right]\left[\blacktriangledown\right]$ buttons to choose $\left[\text{ID Photo}\right]$, and then press the $\left[\leftarrow\right]\left[\rightarrow\right]$ buttons to choose the printing method.

3 Print the image.

Movie Printing Options

| | |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Single | Prints the current scene as a still image. |
| Sequence | Prints a series of scenes, a certain interval apart, on a single sheet of paper. You can also print the folder number, file number, and elapsed time for the frame by setting [Caption] to [On]. |



- To cancel printing in progress, press the $\left[\text{ID Photo}\right]$ button, choose [OK], and then press the $\left[\text{ID Photo}\right]$ button again.
- [ID Photo] and [Sequence] cannot be chosen on Canon-brand PictBridge-compatible printers from CP720/CP730 and earlier models.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Adding Images to the Print List (DPOF)


► Still Images ► Movies

Batch printing (115) and ordering prints from a photo development service can be set up on the camera. Choose up to 998 images on a memory card and configure relevant settings, such as the number of copies, as follows. The printing information you prepare this way will conform to DPOF (Digital Print Order Format) standards.

Configuring Print Settings

► Still Images ► Movies

Specify the printing format, whether to add the date or file number, and other settings as follows. These settings apply to all images in the print list.

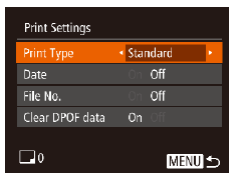

- Press the [MENU] button, and then choose [Print Settings] on the [P] tab. Choose and configure items as desired (27).

| | | |
|-----------------|----------|------------------------------------------------------------|
| Print Type | Standard | One image is printed per sheet. |
| | Index | Smaller versions of multiple images are printed per sheet. |
| | Both | Both standard and index formats are printed. |
| Date | On | Images are printed with the shooting date. |
| | Off | — |
| File No. | On | Images are printed with the file number. |
| | Off | — |
| Clear DPOF data | On | All image print list settings are cleared after printing. |
| | Off | — |




- Not all of your DPOF settings may be applied in printing by the printer or photo development service, in some cases.
- [P] may be displayed on the camera to warn you that the memory card has print settings that were configured on another camera. Changing the print settings using this camera may overwrite all previous settings.
- Setting [Date] to [On] may cause some printers to print the date twice.



- Specifying [Index] will prevent you from choosing [On] for both [Date] and [File No.] at the same time.
- Index printing is not available on some Canon-brand PictBridge-compatible printers (sold separately).
- The date is printed in a format matching setting details in [Date/Time] on the [P] tab (18).

Setting Up Printing for Individual Images

► Still Images ► Movies

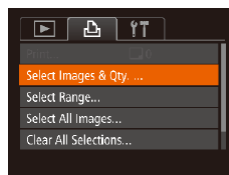

1 Choose [Select Images & Qty.].

- Press the [MENU] button, choose [Select Images & Qty.] on the [P] tab, and then press the [P] button.

2 Choose an image.

- Press the [◀][▶] buttons to choose an image, and then press the [P] button.
- You can now specify the number of copies.
- If you specify index printing for the image, it is labeled with a [✓] icon. To cancel index printing for the image, press the [P] button again. [✓] is no longer displayed.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index






3 Specify the number of prints.

- Press the [▲][▼] buttons to specify the number of prints (up to 99).
- To set up printing for other images and specify the number of prints, repeat steps 2 – 3.
- Printing quantity cannot be specified for index prints. You can only choose which images to print, by following step 2.
- When finished, press the [MENU] button to return to the menu screen.

Setting Up Printing for a Range of Images


► Still Images ► Movies

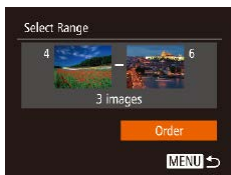

- Following step 1 in “Setting Up Printing for Individual Images” (114), choose [Select Range] and press the [OK] button.
- Follow steps 2 – 3 in “Selecting a Range” (83) to specify images.
- Press the [▲][▼] buttons to choose [Order], and then press the [OK] button.


Setting Up Printing for All Images

► Still Images ► Movies

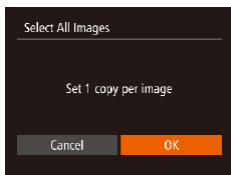

- Following step 1 in “Setting Up Printing for Individual Images” (114), choose [Select All Images] and press the [OK] button.
- Press the [◀][▶] buttons to choose [OK], and then press the [OK] button.


Clearing All Images from the Print List

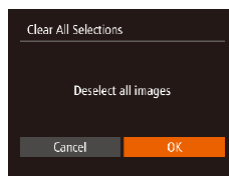

- Following step 1 in “Setting Up Printing for Individual Images” (114), choose [Clear All Selections] and press the [OK] button.
- Press the [◀][▶] buttons to choose [OK], and then press the [OK] button.

Printing Images Added to the Print List (DPOF)

► Still Images ► Movies

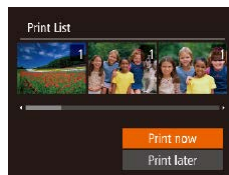

- When images have been added to the print list (114 – 115), this screen is displayed after you connect the camera to a PictBridge-compatible printer. Press the [▲][▼] buttons to choose [Print now], and then simply press the [OK] button to print the images in the print list.
- Any DPOF print job that you temporarily stop will be resumed from the next image.

| |
|--------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |




Adding Images to a Photobook

► Still Images ► Movies

Photobooks can be set up on the camera by choosing up to 998 images on a memory card and importing them into the software on your computer, where they are stored in their own folder. This is convenient when ordering printed photobooks online or printing photobooks with your own printer.

Choosing a Selection Method

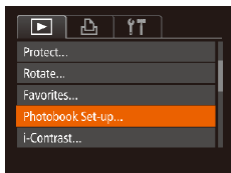

- Press the [MENU] button, choose [Photobook Set-up] on the [▶] tab, and then choose how you will select images.




- [!] may be displayed on the camera to warn you that the memory card has print settings that were configured on another camera. Changing the print settings using this camera may overwrite all previous settings.



- After importing images to your computer, also refer to “Software Instruction Manual” (107) and the printer manual for further information.

Adding Images Individually

► Still Images ► Movies

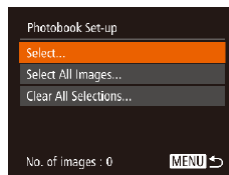

1 Choose [Select].


- Following the procedure in “Choosing a Selection Method” (116), choose [Select] and press the [Ⓜ] button.

2 Choose an image.

- Press the [◀][▶] buttons to choose an image, and then press the [Ⓜ] button.
- [✓] is displayed.
- To remove the image from the photobook, press the [Ⓜ] button again. [✓] is no longer displayed.
- Repeat this process to specify other images.
- When finished, press the [MENU] button to return to the menu screen.

Adding All Images to a Photobook

► Still Images ► Movies

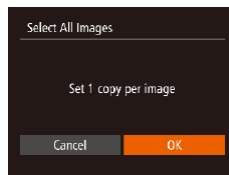

- Following the procedure in “Choosing a Selection Method” (116), choose [Select All Images] and press the [Ⓜ] button.
- Press the [◀][▶] buttons to choose [OK], and then press the [Ⓜ] button.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories


9 Appendix

Index



Removing All Images from a Photobook

► Still Images ► Movies

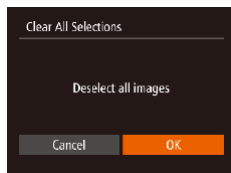

- Following the procedure in “Choosing a Selection Method” (116), choose [Clear All Selections] and press the [OK] button.
- Press the [◀][▶] buttons to choose [OK], and then press the [OK] button.

Using an Eye-Fi Card

► Still Images ► Movies

Before using an Eye-Fi card, always confirm that local use is permitted (112).

Inserting a prepared Eye-Fi card enables automatic wireless transfer of images to a computer or uploading to a photo-sharing website. Images are transferred by the Eye-Fi card. Refer to the card's user manual or contact the manufacturer for instructions on preparing and using cards or resolving transfer problems.



- When using an Eye-Fi card, keep the following points in mind.
 - Cards may continue to transmit radio waves even when [Eye-Fi trans.] is set to [Disable] (118). Remove the Eye-Fi card before entering hospitals, aircraft, or other areas where transmission is prohibited.
 - When troubleshooting image transfer issues, check the card and computer settings. For details, refer to the card's user manual.
 - Poor Eye-Fi connections may cause image transfer to take a long time, and transfer may be interrupted in some cases.
 - Eye-Fi cards may become hot, due to their transfer functions.
 - Battery power will be consumed faster than in normal use.
 - Camera operation may become sluggish. To resolve this, try setting [Eye-Fi trans.] to [Disable].

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu








8 Accessories

9 Appendix

Index



Connection status of Eye-Fi cards in the camera can be checked on the shooting screen (in regular information display mode) or playback screen (in simple information display mode).


 
| | |
|----------------------------------------------------------------------------------------------------|-------------------------------------------|
|  (Gray) | Not connected |
|  (Blinking white) | Connecting |
|  (White) | Connected |
|  (Animated) | Transfer in progress*1 |
|  | Interrupted |
|  | Not communicating |
|  | Error acquiring Eye-Fi card information*2 |

*1 Power saving (📖24) on the camera is temporarily disabled during image transfer.

*2 Restart the camera. Repeated display of this icon may indicate a problem with the card.


Images labeled with a  icon have been transferred.



- Choosing  mode will interrupt the Eye-Fi connection. Although the Eye-Fi connection will be restored after you choose another shooting mode or enter Playback mode, the camera may transfer any movies made in  mode again.

Checking Connection Information


Check the access point SSID used by the Eye-Fi card or the connection status, as needed.

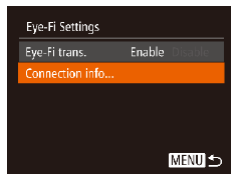

- Press the **[MENU]** button, choose [Eye-Fi Settings] on the **[P]** tab, and then press the **[INFO]** button.
- Choose [Connection info], and then press the **[INFO]** button.
- The connection information screen is displayed.

Disabling Eye-Fi Transfer

Configure the setting as follows to disable Eye-Fi transfer by the card, if necessary.

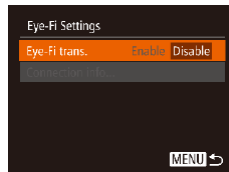

- Press the **[MENU]** button, choose [Eye-Fi Settings] on the **[P]** tab, and then press the **[INFO]** button.
- Choose [Eye-Fi trans.], and then choose [Disable].



- [Eye-Fi Settings] is not shown unless an Eye-Fi card is in the camera with its write-protect tab in the unlocked position. For this reason, you cannot change settings for an inserted Eye-Fi card if the write-protect tab is in the locked position.

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



9

Appendix

Helpful information when using the camera

Troubleshooting

If you think there is a problem with the camera, first check the following. If the items below do not solve your problem, contact a Canon Customer Support Help Desk.

Power

Nothing happens when the power button is pressed.

- Confirm that the battery pack is charged (16).
- Confirm that the battery pack is inserted facing the correct way (17).
- Confirm that the memory card/battery cover is fully closed (17).
- Dirty battery terminals reduce battery performance. Try cleaning the terminals with a cotton swab and reinserting the battery pack a few times.

The battery pack runs out of power quickly.

- Battery performance decreases at low temperatures. Try warming the battery pack a little by putting it in your pocket, for example, ensuring that the terminals do not touch any metal objects.
- Dirty battery terminals reduce battery performance. Try cleaning the terminals with a cotton swab and reinserting the battery pack a few times.
- If these measures do not help and the battery pack still runs out of power soon after charging, it has reached the end of its life. Purchase a new battery pack.

The lens is not retracted.

- Do not open the memory card/battery cover while the camera is on. Close the cover, turn the camera on, and then turn it off again (17).

The battery pack is swollen.

- Battery swelling is normal and does not pose any safety concerns. However, if battery swelling prevents the battery pack from fitting in the camera, contact a Canon Customer Support Help Desk.

Display on a TV

Camera images look distorted or not displayed on a TV (104).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode /
Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Shooting

Cannot shoot.

- In Playback mode (📖74), press the shutter button halfway (📖24).

Strange display on the screen under low light (📖25).

Strange display on the screen when shooting.

- Note that the following display problems are not recorded in still images but are recorded in movies.
 - The screen may flicker and horizontal banding may appear under fluorescent or LED lighting.

No date stamp is added to images.

- Configure the [Date Stamp] (📖) setting (📖18). Note that date stamps are not added to images automatically, merely because you have configured the [Date/Time] setting (📖40).
- Date stamps are not added in shooting modes (📖128) in which this setting cannot be configured (📖40).

⚡ flashes on the screen when the shutter button is pressed, and shooting is not possible (📖32).

📷 is displayed when the shutter button is pressed halfway (📖32).

- Set [IS Mode] to [Continuous] (📖70).
- Raise the flash and set the flash mode to ⚡ (📖68).
- Increase the ISO speed (📖60).
- Mount the camera on a tripod or take other measures to keep it still. Additionally, you should set [IS Mode] to [Off] when using a tripod or other means to secure the camera (📖70).

Shots are out of focus.

- Press the shutter button halfway to focus on subjects before pressing it all the way down to shoot (📖24).
- Make sure subjects are within focusing range (📖136).
- Set [AF-assist Beam] to [On] (📖45).
- Confirm that unneeded functions such as macro are deactivated.
- Try shooting with focus lock or AF lock (📖67).

No AF frames are displayed and the camera does not focus when the shutter button is pressed halfway.

- To have AF frames displayed and the camera focus correctly, try composing the shot with higher-contrast subject areas centered before you press the shutter button halfway. Otherwise, try pressing the shutter button halfway repeatedly.

Subjects in shots look too dark.

- Raise the flash and set the flash mode to ⚡ (📖68).
- Adjust brightness by using exposure compensation (📖59).
- Adjust contrast by using i-Contrast (📖60, 📖90).
- Use AE lock or spot metering (📖59, 📖59).

Subjects look too bright, highlights are washed-out.

- Lower the flash and set the flash mode to [📷] (📖29).
- Adjust brightness by using exposure compensation (📖59).
- Use AE lock or spot metering (📖59, 📖59).
- Reduce the lighting on subjects.

Shots look too dark despite the flash firing (📖32).

- Shoot within flash range (📖135).
- Adjust brightness by using flash exposure compensation or changing the flash output level (📖69, 📖73).
- Increase the ISO speed (📖60).

Subjects in flash shots look too bright, highlights are washed-out.

- Shoot within flash range (📖135).
- Lower the flash and set the flash mode to [📷] (📖29).
- Adjust brightness by using flash exposure compensation or changing the flash output level (📖69, 📖73).

White spots appear in flash shots.

- This is caused by light from the flash reflecting off dust or airborne particles.

Shots look grainy.

- Lower the ISO speed (📖60).

Subjects are affected by red-eye (📖43).

- Set [Red-Eye Lamp] to [On] (📖46) to activate the red-eye reduction lamp (📖4) in flash shots. Note that while the red-eye reduction lamp is on (for about one second), it is not possible to shoot, because the lamp is counteracting red-eye. For best results, have subjects look at the red-eye reduction lamp. Also try increasing the lighting in indoor scenes and shooting at closer range.
- Edit images using red-eye correction (📖91).

Recording to the memory card takes too long, or continuous shooting is slower.

- Use the camera to perform low-level formatting of the memory card (📖98).

Shooting settings or FUNC. menu settings are not available.

- Available setting items vary by shooting mode. Refer to "Functions Available in Each Shooting Mode", "FUNC. Menu", and "Shooting Tab" (📖125 – 📖128).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Shooting Movies

The elapsed time shown is incorrect, or recording is interrupted.

- Use the camera to format the memory card, or switch to a card that supports high-speed recording. Note that even if the elapsed time display is incorrect, the length of movies on the memory card corresponds to the actual recording time (📖97, 📖135).

[!] is displayed and shooting stops automatically.

- The camera's internal memory buffer filled up as the camera could not record to the memory card quickly enough. Try one of the following measures.
 - Use the camera to perform low-level formatting of the memory card (📖98).
 - Lower the image quality (📖43).
 - Switch to a memory card that supports high-speed recording (📖135).

Zooming is not possible.

- Zooming is not possible when shooting movies in [📷] mode (📖52).

Subjects look distorted.

- Subjects that pass in front of the camera quickly may look distorted. This is not a malfunction.

Playback

Playback is not possible.

- Image or movie playback may not be possible if a computer is used to rename files or alter the folder structure. Refer to "Software Instruction Manual" (📖107) for details on folder structure and file names.

Playback stops, or audio skips.

- Switch to a memory card that you have performed low-level formatting on with the camera (📖98).
- There may be brief interruptions when playing movies copied to memory cards that have slow read speeds.
- When movies are played on a computer, frames may be dropped and audio may skip if computer performance is inadequate.

Sound is not played during movies.

- Adjust the volume (📖94) if you have activated [Mute] (📖94) or the sound in the movie is faint.
- No sound is played for movies shot in [📷] mode (📖52) because audio is not recorded in this mode.

Memory Card

The memory card is not recognized.

- Restart the camera, with the memory card in it (📖23).

Computer

Cannot transfer images to a computer.

- When attempting to transfer images to the computer via a cable, try reducing the transfer speed as follows.
 - Press the [▶] button to enter Playback mode. Hold the [MENU] button down as you press the [▲] and [📷] buttons at the same time. On the next screen, press the [◀] [▶] buttons to choose [B], and then press the [📷] button.

Eye-Fi Cards

Cannot transfer images (📖117).

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index

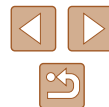

On-Screen Messages

If an error message is displayed, respond as follows.

Capture or Playback

No memory card

- The memory card may be inserted facing the wrong way. Reinsert the memory card facing the correct way (117).

Memory card locked

- The write-protect tab of the memory card is set to the locked position. Switch the write-protect tab to the unlocked position (117).

Cannot record!

- Shooting was attempted without a memory card in the camera. To shoot, insert a memory card facing the correct way (117).

Memory card error (198)

- If the same error message is displayed even after you have formatted a supported memory card (112) and have inserted it facing the correct way (117), contact a Canon Customer Support Help Desk.

Insufficient space on card

- There is not enough free space on the memory card to shoot (129, 148, 158, 171) or edit images (188). Either erase unneeded images (184) or insert a memory card with enough free space (117).

Charge the battery (116)

No Image.

- The memory card does not contain any images that can be displayed.

Protected! (182)

Unidentified Image/Incompatible JPEG/Image too large./Cannot play back MOV/Cannot play back MP4

- Unsupported or corrupt images cannot be displayed.
- It may not be possible to display images that were edited or renamed on a computer, or images shot with another camera.

Cannot magnify/Cannot play back this content in Smart Shuffle/Cannot rotate/Cannot modify image/Cannot modify/Cannot assign to category/Unselectable image.

- The following functions may be unavailable for images that were renamed or already edited on a computer, or images shot with another camera. Note that starred (*) functions are not available for movies. Magnify* (180), Smart Shuffle* (181), Rotate* (186), Favorites (187), Edit* (188), Print List* (114), and Photobook Set-up* (116).

Invalid selection range

- When specifying a range for image selection (183, 186, 115), you attempted to choose an initial image that was after the final image, or vice-versa.

Exceeded selection limit

- More than 998 images were selected for Print List (114) or Photobook Set-up (116). Choose 998 images or less.
- Print List (114) or Photobook Set-up (116) settings could not be saved correctly. Reduce the number of selected images and try again.
- You attempted to choose more than 500 images in Protect (182), Erase (184), Favorites (187), Print List (114), or Photobook Set-up (116).

Naming error!

- The folder could not be created or images could not be recorded, because the highest supported folder number (999) for storing images on the card has been reached and the highest supported image number (9999) for images in folders has been reached. On the (11) tab, change [File Numbering] to [Auto Reset] (198), or format the memory card (197).

Lens Error

- This error may occur if the lens is held while it is moving, or when the camera is used in dusty or sandy locations.
- Frequent display of this error message may indicate camera damage. In this case, contact a Canon Customer Support Help Desk.

A camera error was detected (error number)

- If this error message is displayed immediately after a shot, the image may not have been saved. Switch to Playback mode to check for the image.
- Frequent display of this error message may indicate camera damage. In this case, write down the error number (Exx) and contact a Canon Customer Support Help Desk.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



File Error

- Correct printing (110) may not be possible for photos from other cameras or images that have been altered using computer software, even if the camera is connected to the printer.

Print error


- Check the paper size setting (112). If this error message is displayed when the setting is correct, restart the printer and complete the setting on the camera again.

Ink absorber full

- Contact a Canon Customer Support Help Desk to request assistance with ink absorber replacement.

On-Screen Information

Shooting (Information Display)

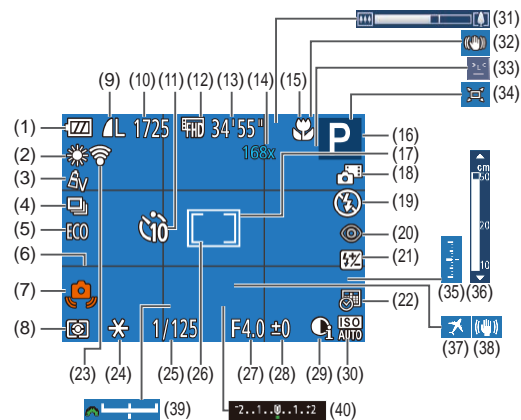

- | | |
|------------------------------------------------------|----------------------------------------------------------------------|
| (1) Battery level (124) | (11) Self-timer (139) |
| (2) White balance (61) | (12) Movie quality (43) |
| (3) My Colors (61) | (13) Remaining time (135) |
| (4) Drive mode (41) | (14) Digital zoom magnification (35), Digital tele-converter (64) |
| (5) Eco mode (96) | (15) Focusing range (63, 63), AF lock (67) |
| (6) Grid lines (44) | (16) Shooting mode (125), Scene icon (33) |
| (7) Camera shake warning (32) | (17) AF frame (65) |
| (8) Metering method (59) | (18) Hybrid Auto mode (31) |
| (9) Still image compression (70), Resolution (42) | |
| (10) Recordable shots (135)* | |

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



- (19) Flash mode (📖68)
- (20) Red-eye correction (📖43)
- (21) Flash exposure compensation / Flash output level (📖69, 📖73)
- (22) Date stamp (📖40)
- (23) Eye-Fi connection status (📖117)
- (24) AE lock (📖59), FE lock (📖69)
- (25) Shutter speed (📖71, 📖72)
- (26) Spot AE point frame (📖59)
- (27) Aperture value (📖72, 📖72)
- (28) Exposure compensation level (📖59)
- (29) i-Contrast (📖60)
- (30) ISO speed (📖60)
- (31) Zoom bar (📖29)
- (32) IS mode icon (📖34)
- (33) Blink detection (📖45)
- (34) "Auto" (📖37)
- (35) Exposure level (📖72)
- (36) MF indicator (📖63)
- (37) Time zone (📖95)
- (38) Image stabilization (📖70)
- (39) Exposure shift bar (📖70)
- (40) Exposure compensation bar (📖59)


* In [📷] mode, indicates the number of shots available.

Battery Level

An on-screen icon or message indicates the battery charge level.

| Display | Details |
|----------------------|----------------------------------------------|
| 🔋 | Sufficient charge |
| 🔋 | Slightly depleted, but sufficient |
| 🔋 (Blinking red) | Nearly depleted—charge the battery pack soon |
| [Charge the battery] | Depleted—charge the battery pack immediately |

Playback (Detailed Information Display)

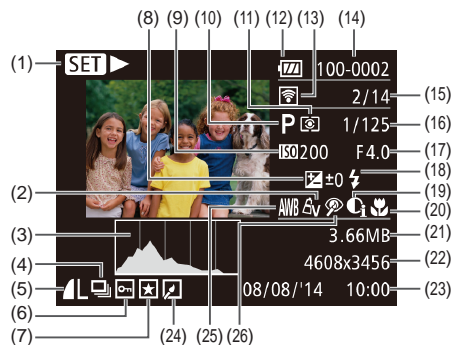

- (1) Movies (📖29, 📖74)
- (2) My Colors (📖61, 📖90)
- (3) Histogram (📖76)
- (4) Group playback (📖79)
- (5) Compression (image quality) (📖70) / Resolution (📖42), MOV (movies)
- (6) Protection (📖82)
- (7) Favorites (📖87)
- (8) Exposure compensation level (📖59), Exposure shift level (📖57)
- (9) ISO speed (📖60), Playback speed (📖53)
- (10) Shooting mode (📖125)
- (11) Metering method (📖59)
- (12) Battery level (📖124)
- (13) Transferred via Eye-Fi (📖117)
- (14) Folder number - File number (📖98)
- (15) Current image no. / Total no. of images
- (16) Shutter speed (still images) (📖71, 📖72), Image quality / Frame rate (movies) (📖43)
- (17) Aperture value (📖72)
- (18) Flash (📖68), Flash exposure compensation (📖69)
- (19) i-Contrast (📖60, 📖90)
- (20) Focusing range (📖63)
- (21) File size
- (22) Still images: Resolution (📖135) Movies: Playback time (📖135)
- (23) Shooting date/time (📖18)
- (24) Image editing (📖88)

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



(25) White balance (📖61)

(26) Red-eye correction (📖43,
📖91)



- Some information may not be displayed when viewing images on a TV (📖104).

Summary of Movie Control Panel

The following operations are available on the movie control panel accessed as described in “Viewing” (📖74).

| | |
|---|----------------------------------------------------------------------------------------------------------|
| ⏮ | Exit |
| ▶ | Play |
| ⏭ | Slow Motion (Press the [⏮][⏭] buttons to adjust the playback speed. No sound is played.) |
| ⏮ | Skip Backward* or Previous Clip (📖93) (To continue skipping backward, keep holding down the [⏮] button.) |
| ⏮ | Previous Frame (For fast-rewind, keep holding down the [⏮] button.) |
| ⏭ | Next Frame (For fast-forward, keep holding down the [⏭] button.) |
| ⏭ | Skip Forward* or Next Clip (📖93) (To continue skipping forward, keep holding down the [⏭] button.) |
| 🗑 | Erase Clip (displayed when a digest movie is selected (📖93)) |
| ✂ | Edit (📖92) |
| 🖨 | Shown when the camera is connected to a PictBridge-compatible printer (📖110). |

* Displays the frame approx. 4 sec. before or after the current frame.



- During movie playback, you can skip back or forward (or to the previous or next clip) by pressing the [⏮][⏭] buttons.

Functions and Menu Tables

Available or automatically set functions are indicated by black icons, such as **M**.

Unavailable functions are indicated by gray icons, such as **M**.

Functions Available in Each Shooting Mode

Exposure Compensation (📖59)

M / **Av** / **Tv** / **P** / **LIVE***1 / / / / / / / / / / /

ISO Speed (📖60)

ISO
AUTO

M / **Av** / **Tv** / **P** / **LIVE** / / **AUTO** / / / / / / / / / /

ISO
100 / 200 / 400 / 800 / 1600 / 3200

M / **Av** / **Tv** / **P** / **LIVE** / / **AUTO** / / / / / / / / / /

Drive Mode (📖41)

M / **Av** / **Tv** / **P** / **LIVE** / / **AUTO** / / / / / / / / / /

M / **Av** / **Tv** / **P** / **LIVE** / / **AUTO** / / / / / / / / / /

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode /
Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



FUNC. Menu

Metering Method (📖59)



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /

My Colors (📖61)



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /

Av / AN / AS*1 / AW*1 / Ap / AL / AD / AB / AG / AR / AC*2

M / Av / Tv / P / LIVE / / AUTO / / / / / / / /

White Balance (📖61)



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /

Self-Timer (📖39)



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /

Self-Timer Settings (📖40)



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /

Still Image Aspect Ratio (📖42)



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /



M / Av / Tv / P / LIVE / / AUTO / / / / / / / /

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



AF-Point Zoom (📖44)

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / /

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / /

Servo AF (📖66)

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /  /

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /
 /  /  /  /  /  /  /  /  /  /  /

Continuous AF (📖67)

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  / 

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / /

AF-assist Beam (📖45)

On

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / /

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  / 

MF-Point Zoom (📖 63)

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / /

M / Av / Tv / P / LIVE / AUTO /

Safety MF (📖63)

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /  /

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  / 

Flash Settings (📖69)

Flash Mode

Auto

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /

Manual

M / **Av** / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /

Flash Exp. Comp

M / **Av** / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  /  / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / / /

M / Av / Tv / P / LIVE /  / AUTO /  /  /  /  /  /  /  /

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

Camera Basics

2 Auto Mode / Hybrid Auto Mode

4 P Mode

5 =

5 Tv, Av, and M Mode











 
 







 
 






 
 























 
 













6 Playback Mode









































































7 Setting Menu

8 Accessories


9 Appendix



| |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Red-Eye Corr. |
| On |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Off |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Red-Eye Lamp |
| On/Off |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Safety FE |
| On |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Off |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| i-Contrast (46) |
| Auto |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Off |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Safety Shift (72) |
| On |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |

| |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Off |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Review image after shooting (46) |
| Display Time |
| Off |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Quick |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| 2 sec./4 sec./8 sec./Hold |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Display Info |
| Off |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Detailed |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Blink Detection (45) |
| On |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |
| Off |
| M / Av / Tv / P / LIVE /  AUTO /  /  /  /  /  /  /  /  |

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |

 

Grid Lines (📖44)

On/Off

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

IS Settings (📖70)

IS Mode

Off/Continuous

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

Shoot Only

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

Dynamic IS

1

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

2

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

📺 Display Area (📖36)

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

📺 Auto Settings (📖37, 📖38)

Seek Assist

On

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

Off

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

📺 Auto Zoom

Face/Upper Body/Whole Body/Manual

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

Off

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

Date Stamp (📖40)

Off

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

Date/Date & Time

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

Digest Type (📖31)

Include Stills/No Stills

M / Av / Tv / P / LIVE / / AUTO / / / / / / / / /

*1 Operation when no faces are detected varies by shooting mode.

*2 Available when the AF frame is set to [Center].

*3 [On] when subject movement is detected in [AUTO] mode.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Set Up Tab

| Item | Ref. Page |
|----------------------------|-----------|
| Mute | 94 |
| Volume | 94 |
| Hints & Tips | 95 |
| Date/Time | 18 |
| Time Zone | 95 |
| Lens Retraction | 96 |
| Eco Mode | 96 |
| Power Saving | 24, 96 |
| LCD Brightness | 97 |
| Start-up Image | 97 |
| Format | 97, 98 |
| File Numbering | 98 |
| Create Folder | 99 |
| Units | 99 |
| Video System | 104 |
| Eye-Fi Settings | 117 |
| Certification Logo Display | 99 |
| Language | 19 |
| Reset All | 100 |

Playback Tab

| Item | Ref. Page |
|-------------------------|-----------|
| List/Play Digest Movies | 76 |
| Slideshow | 80 |
| Erase | 84 |
| Protect | 82 |
| Rotate | 86 |
| Favorites | 87 |
| Photobook Set-up | 116 |
| i-Contrast | 90 |
| Red-Eye Correction | 91 |
| Cropping | 89 |
| Resize | 88 |
| My Colors | 90 |
| Transition | 74 |
| Scroll Display | 74 |
| Group Images | 79 |
| Auto Rotate | 87 |
| Resume | 74 |

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode /
Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Print Tab

| Item | Ref. Page |
|----------------------|-----------|
| Print | — |
| Select Images & Qty. | 114 |
| Select Range | 115 |
| Select All Images | 115 |
| Clear All Selections | 115 |
| Print Settings | 114 |

Playback Mode FUNC. Menu

| Item | Ref. Page |
|-------------------------|-----------|
| Rotate | 86 |
| Protect | 82 |
| Favorites | 87 |
| Print | 110 |
| Group Playback | 79 |
| Play Movie | 74 |
| List/Play Digest Movies | 76 |
| Smart Shuffle | 81 |
| Image Search | 77 |
| Slideshow | 80 |

Handling Precautions

- The camera is a high-precision electronic device. Avoid dropping it or subjecting it to strong impact.
- Never bring the camera near magnets, motors, or other devices that generate strong electromagnetic fields, which may cause malfunction or erase image data.
- If water droplets or dirt adheres to the camera or screen, wipe with a dry soft cloth, such as an eyeglass cloth. Do not rub hard or apply force.
- Never use cleaners containing organic solvents to clean the camera or screen.
- Use a blower brush to remove dust from the lens. If cleaning is difficult, contact a Canon Customer Support Help Desk.
- To prevent condensation from forming on the camera after sudden temperature changes (when the camera is transferred from cold to warm environments), put the camera in an airtight, resealable plastic bag and let it gradually adjust to the temperature before removing it from the bag.
- If condensation does form on the camera, stop using it immediately. Continuing to use the camera in this state may damage it. Remove the battery pack and memory card, and wait until the moisture has evaporated before resuming use.
- Before long-term battery storage, use up the battery pack's remaining charge, remove it from the camera, and store it in a plastic bag or similar container. Storing a partially charged battery pack over extended periods (about a year) may shorten its life or affect performance.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode /
Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Specifications

Camera Specifications

| | |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Camera Effective Pixels (Max.) | Approx. 16 million pixels |
| Lens Focal Length | 42x zoom: 4.3 (W) – 180.6 (T) mm (35mm film equivalent: 24 (W) – 1008 (T) mm) |
| LCD Monitor | 3.0-type color TFT LCD Effective Pixels: Approx. 461,000 dots |
| File Format | Design rule for Camera File system, DPOF (version 1.1) compliant |
| Data Type | Still Images: Exif 2.3 (JPEG) Movies: MOV (Video: MPEG-4 AVC/H.264; Audio: Linear PCM (stereo)) |
| Interface | Hi-speed USB HDMI output Analog audio output (stereo) Analog video output (NTSC/PAL) |
| Power Source | Battery Pack NB-6LH AC Adapter Kit ACK-DC40 |
| Dimensions (Based on CIPA Guidelines) | 120.0 x 81.7 x 91.9 mm (4.72 x 3.22 x 3.62 in.) |
| Weight (Based on CIPA Guidelines) | Approx. 441 g (approx. 15.56 oz.; including the battery pack and memory card) Approx. 417 g (approx. 14.71 oz.; camera body only) |

Digital Zoom Focal Length (35mm film equivalent)

| | |
|-----------------------------|-------------------------------------------------------------------------------------|
| Digital Zoom [Standard] | 24 – 4032 mm (Represents the combined focal length of optical and digital zoom.) |
| Digital Tele-Converter 1.6x | 38.4 – 1612.8 mm |
| Digital Tele-Converter 2.0x | 48.0 – 2016.0 mm |

Number of Shots/Recording Time, Playback Time

| | |
|----------------------------------------------|----------------------------|
| Number of Shots | Approx. 210 |
| Number of Shots (Eco Mode On) | Approx. 290 |
| Movie Recording Time*1 | Approx. 50 minutes |
| Movie Recording Time (Continuous Shooting*2) | Approx. 1 hour, 30 minutes |
| Playback Time | Approx. 5 hours |

*1 Time under default camera settings, when normal operations are performed, such as shooting, pausing, turning the camera on and off, and zooming.

*2 Time available when shooting the maximum movie length (until recording stops automatically) repeatedly.

- The number of shots that can be taken is based on measurement guidelines of the Camera & Imaging Products Association (CIPA).
- Under some shooting conditions, the number of shots and recording time may be less than mentioned above.
- Number of shots/time with a fully charged battery pack.

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu









8 Accessories

9 Appendix

Index









Number of Shots per Memory Card

| Recording Pixels | Compression Ratio | Number of Shots per Memory Card (Approx. shots) | |
|--------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------|--------|
| | | 8 GB | 32 GB |
| L (Large) 16M/4608x3456 |  | 1058 | 4272 |
| |  | 1705 | 6883 |
| M1 (Medium 1) 8M/3264x2448 |  | 1996 | 8059 |
| |  | 3069 | 12391 |
| M2 (Medium 2) 3M/2048x1536 |  | 4723 | 19064 |
| |  | 8469 | 34184 |
| S (Small) 0.3M/640x480 |  | 27291 | 110150 |
| |  | 40937 | 165225 |



- The values in the table are based on Canon measurement conditions and may change depending on the subject, memory card and camera settings.

 Recording Time per Memory Card

| Image Quality | Recording Time per Memory Card | |
|------------------------------------------------------------------------------------|--------------------------------|------------------------|
| | 8 GB | 32 GB |
|  | 33 min. 14 sec. | 2 hr. 14 min. 16 sec. |
|  | 1 hr. 44 min. 50 sec. | 7 hr. 03 min. 31 sec. |
|  | 3 hr. 24 min. 26 sec. | 13 hr. 45 min. 52 sec. |

- The values in the table are based on Canon measurement conditions and may change depending on the subject, memory card and camera settings.
- Recording will automatically stop when the clip file size reaches 4 GB, or when the recording time reaches approximately 29 minutes and 59 seconds when shooting in  or , or approximately 1 hour when shooting in .
- Recording may stop even if the maximum clip length has not been reached on some memory cards. SD Speed Class 4 or higher memory cards are recommended.

Flash Range

| | |
|------------------------------------------------------------------------------------------------------------|------------------------------|
| Maximum wide angle () | 50 cm – 5.5 m (1.6 – 18 ft.) |
| Maximum telephoto () | 1.3 – 3.0 m (4.3 – 9.8 ft.) |

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu





8 Accessories

9 Appendix

Index




Shooting Range

| Shooting Mode | Focusing Range | Maximum Wide Angle () | Maximum Telephoto () |
|---------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| AUTO | — | 0 cm (0.0 in.) – infinity | 1.3 m (4.3 ft.) – infinity |
| Other modes |  | 5 cm (2.0 in.) – infinity | 1.3 m (4.3 ft.) – infinity |
| |  * | 0 – 50 cm (0.0 in. – 1.6 ft.) | — |
| | MF* | 0 cm (0.0 in.) – infinity | 1.3 m (4.3 ft.) – infinity |

* Not available in some shooting modes.

Continuous Shooting Speed

| Shooting Mode | Speed |
|-----------------------------------------------------------------------------------|------------------------|
| AUTO P | Approx. 1.6 shots/sec. |
|  | Approx. 10 shots/sec. |

Shutter Speed

| | |
|--------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [AUTO] mode, automatically set range | 1 – 1/2000 sec. |
| Available values in [Tv] mode (sec.) | 15, 13, 10, 8, 6, 5, 4, 3.2, 2.5, 2, 1.6, 1.3, 1, 0.8, 0.6, 0.5, 0.4, 0.3, 1/4, 1/5, 1/6, 1/8, 1/10, 1/13, 1/15, 1/20, 1/25, 1/30, 1/40, 1/50, 1/60, 1/80, 1/100, 1/125, 1/160, 1/200, 1/250, 1/320, 1/400, 1/500, 1/640, 1/800, 1/1000, 1/1250, 1/1600, 1/2000 |

Aperture

| | |
|--------------------------------------------|--------------------------------------------------------|
| f/number | f/3.4 – f/8.0 (W), f/6.0 – f/8.0 (T) |
| Available values in [Av] mode* | f/3.4, f/4.0, f/4.5, f/5.0, f/5.6, f/6.3, f/7.1, f/8.0 |

* Depending on the zoom position, some aperture values may not be available.

Battery Pack NB-6LH

Type: Rechargeable lithium-ion battery
 Nominal Voltage: 3.7 V DC
 Nominal Capacity: 1060 mAh
 Charging Cycles: Approx. 300 times
 Operating Temperatures:

0 – 40 °C (32 – 104 °F)

Dimensions: 34.4 x 41.8 x 6.9 mm (1.35 x 1.65 x 0.27 in.)

Weight: Approx. 22 g (approx. 0.78 oz.)

Battery Charger CB-2LY/CB-2LYE

Rated Input: 100 – 240 V AC (50/60 Hz),
 0.085 A (100 V) – 0.05 A (240 V)

Rated Output: 4.2 V DC, 0.7 A

Charging Time: Approx. 2 hr. (when using NB-6LH)

Charge Indicator: Charging: orange / Fully charged: green (two-indicator system)

Operating Temperatures:

0 – 40 °C (32 – 104 °F)

Lens Hood LH-DC60 (Sold Separately)

Camera Mount: Bayonet

Max. Diameter x Length:
 ø69.6 x 27.0 mm (ø2.74 x 1.06 in.)

Weight: Approx. 10 g (approx. 0.35 oz.)

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode /
Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



Index

A

AC adapter kit 102, 105
Accessories 102
AE lock 59
AF frames 65
AF lock 67
Aspect ratio 42
AUTO mode (shooting mode) 20, 29
Av (shooting mode) 72
AV cable 104

B

Batteries → Date/time (date/time battery)
 Power saving 24
Battery charger 2, 102
Battery pack
 Charging 16
 Eco mode 96
 Level 124
 Power saving 24
Black and white images 62
Blink detection 45

C

Camera
 Reset all 100
CameraWindow (computer) 107
Center (AF frame mode) 65
Clock 28
Color (white balance) 61
Compression ratio (image quality) 70

Continuous shooting

 High-speed burst (shooting mode) 56
Creative filters (shooting mode) 51
Creative Shot 49
Cropping 89, 112
Custom white balance 61

D

Date/time
 Adding date stamps 40
 Changing 18
 Date/time battery 19
 Settings 18
 World clock 95
DC coupler 105
Defaults → Reset all
Digital tele-converter 64
Digital zoom 35
Display language 19
DPOF 114

E

Eco mode 96
Editing
 Cropping 89
 i-Contrast 90
 My Colors 90
 Red-eye correction 91
 Resizing images 88
Erasing 84
Error messages 122
Exposure
 AE lock 59

Compensation 59
FE lock 69
Eye-Fi cards 2, 117

F

Face AiAF (AF frame mode) 65
Face self-timer (shooting mode) 55
Favorites 87
FE lock 69
File numbering 98
Fireworks (shooting mode) 51
Fish-eye effect (shooting mode) 52
Flash
 Flash exposure compensation 69
 On 68
 Slow synchro 68
Focusing
 AF frames 65
 AF lock 67
 AF-point zoom 44
 Servo AF 66
Focusing range
 Macro 63
 Manual focus 63
Focus lock 65
FUNC. menu
 Basic operations 26
 Table 127, 133

G

Grid lines 44

H

HDMI cable 103, 104
High-speed burst (shooting mode) 56
Household power 105
Hybrid Auto (shooting mode) 31

I

i-Contrast 60, 90
Image quality → Compression ratio (image quality)
Images
 Display period 46
 Erasing 84
 Playback → Viewing
 Protecting 82
Image stabilization 70
Indicator 28, 45, 46
ISO speed 60

L

Live View Control (shooting mode) 48
Low light (shooting mode) 50

M

M (shooting mode) 72
Macro (focusing range) 63
Magnified display 80
Manual focus (focusing range) 63
Memory cards 2
 Recording time 135

Menu

 Basic operations 27
 Table 125

Metering method 59

Miniature effect (shooting mode) 52
Monochrome (shooting mode) 54

Movies

 Editing 92
 Image quality (resolution/frame rate) 42, 43
 Recording time 135
 My Colors 61, 90

Before Use

Basic Guide

Advanced Guide

1 Camera Basics

2 Auto Mode / Hybrid Auto Mode

3 Other Shooting Modes

4 P Mode

5 Tv, Av, and M Mode

 
6 Playback Mode

7 Setting Menu

8 Accessories

9 Appendix

Index



N

Neck strap → Strap

P

P (shooting mode) 58
Package contents 2
Photobook set-up 116
PictBridge 103, 110
Playback → Viewing
Portrait (shooting mode) 50
Poster effect (shooting mode) 51
Power 102 → AC adapter kit,
→ Battery charger, → Battery pack
Power saving 24
Printing 110
Program AE 58
Protecting 82

R

Red-eye correction 43, 91
Reset all 100
Resizing images 88
Resolution (image size) 42
Rotating 86

S

Saving images to a computer 109
Screen
 Display language 19
 Icons 123, 124
 Menu → FUNC. menu, Menu
SD/SDHC/SDXC memory cards
 → Memory cards
Searching 77
Self-timer 39
 2-second self-timer 39
 Customizing the self-timer 40

Face self-timer (shooting mode)
 55
Wink self-timer (shooting mode)
 55

Sepia tone images 62
Servo AF 66
Shooting
 Shooting date/time → Date/time
 Shooting information 123
Slideshow 80
Smart Shuffle 81
Smart Shutter (shooting mode) 54
Smile (shooting mode) 54
Snow (shooting mode) 51
Software
 Installation 108
 Saving images to a computer
 109
Sounds 94
Stereo AV cable 103, 104
Strap 2, 15
Super vivid (shooting mode) 51

T

Terminal 104, 105, 110
Toy camera effect (shooting mode)
 53
Tracking AF 66
Traveling with the camera 95
Troubleshooting 119
TV display 104
Tv (shooting mode) 71

V

Viewing 21
 Image search 77
 Index display 77
 Magnified display 80

Single-image display 21
Slideshow 80
Smart Shuffle 81
TV display 104

W

White balance (color) 61
Wink self-timer (shooting mode) 55
World clock 95

Z

Zoom 20, 30, 35
Zoom framing assist 36

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |



■ Trademarks and Licensing

- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- The SDXC logo is a trademark of SD-3C, LLC.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.
- All other trademarks are the property of their respective owners.
- This device incorporates exFAT technology licensed from Microsoft.
- This product is licensed under AT&T patents for the MPEG-4 standard and may be used for encoding MPEG-4 compliant video and/or decoding MPEG-4 compliant video that was encoded only (1) for a personal and non-commercial purpose or (2) by a video provider licensed under the AT&T patents to provide MPEG-4 compliant video. No license is granted or implied for any other use for MPEG-4 standard.

■ Disclaimer

- Unauthorized reproduction of this guide is prohibited.
- All measurements based on Canon testing standards.
- Information subject to change without notice, as are product specifications and appearance.
- Illustrations and screenshots in this guide may differ slightly from the actual equipment.
- The above items notwithstanding, Canon cannot be held liable for any loss arising from the use of this product.

| |
|---------------------------------------|
| Before Use |
| Basic Guide |
| Advanced Guide |
| 1 Camera Basics |
| 2 Auto Mode / Hybrid Auto Mode |
| 3 Other Shooting Modes |
| 4 P Mode |
| 5 Tv, Av, and M Mode |
| 6 Playback Mode |
| 7 Setting Menu |
| 8 Accessories |
| 9 Appendix |
| Index |

