

Canon

EOS REBEL SL1 EOS 100D

Quick Reference Guide

This quick reference guide explains the basic function settings and how to shoot and play back images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS REBEL SL1/EOS 100D Instruction Manual.

CPQ-E061-000

© CANON INC. 2013

E

English

Quick Start Guide

1 Insert the battery.

2 Insert a SD card.

3 Attach the lens.

Align the lens' white or red index with the camera's index in the matching color.

4 Set the lens focus mode switch to <AF>.

5 Set the power switch to <ON>.

6 Set the Mode Dial to <[A]> (Scene Intelligent Auto).

7 Focus the subject.

Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.

8 Take the picture.

Press the shutter button completely to take the picture.

9 View the image.

The captured image will be displayed for 2 sec. on the LCD monitor.

The ★ on the right of the function indicates that the function is available only in Creative Zone modes.

Number of Possible Shots (Viewfinder Shooting)

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 480 shots	Approx. 380 shots

Image Playback

Index

Magnify

Select image

Erase

Playback

INFO. Shooting information

Preparation

Menu Operations

<MENU> button

<SET> button

LCD monitor/Touch screen

cross keys

1. Press the <MENU> button to display the menu.
2. Press the <◀> <▶> keys to select a tab, then press the <▲> <▼> keys to select the desired item.
3. Press <SET> to display the setting.
4. After setting the item, press <SET>.

Basic Zone Modes

Image quality

Drive/self-timer

Release shutter without card

Image review

Lens aberration correction

Red-eye reduction

Creative Zone Modes

Image quality

Beep

Drive/self-timer

Release shutter without card

Image review

Lens aberration correction

Red-eye reduction

Menu items

Menu settings

Image-Recording Quality

- Select [1: Image quality], then press <SET>.
- Press the <◀> <▶> keys to select the quality, then press <SET>.

Image-recording quality

Recorded pixels

Possible shots

Picture Style★

- Select [3: Picture Style], then press <SET>.
- Press the <▲> <▼> keys to select the Picture Style, then press <SET>.

Style	Description
Auto	Color tones optimized for the particular scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

- For <[3: Neutral]> (Neutral) and <[3: Faithful]> (Faithful), refer to the camera's instruction manual.

Quick Control

- Press the <Q> button.
- The Quick Control screen will appear.

Basic Zone Modes

Shooting mode

Exposure compensation/AEB setting

Picture Style

AF operation

White balance

White balance correction

Creative Zone Modes

Highlight tone priority

ISO speed

Flash exposure compensation

Auto Lighting Optimizer

Metering mode

Image-recording quality

Drive/self-timer

Shutter speed

Aperture

ISO speed

Flash exposure compensation

Auto Lighting Optimizer

Metering mode

Image-recording quality

Drive/self-timer

- In Basic Zone modes, the settable functions differ depending on the shooting mode.
- Press the <◀> <▶> cross keys to select a function, then turn the <Q> dial to set it.

Touch Screen

- The LCD monitor is a touch-sensitive panel that you can operate with your fingers.
- For information on touch screen operations, see the camera's instruction manual.

Custom Functions★

C.Fn I: Exposure

- 1 Exposure level increments
- 2 ISO expansion

C.Fn II: Image

- 3 Highlight tone priority

C.Fn III: Autofocus/Drive

 
- 4 AF-assist beam firing
- 5 Mirror lockup

C.Fn IV: Operation/Others


- 6 Shutter/AE lock button
- 7 Assign SET button
- 8 LCD display when power ON

Shooting Operation


Nomenclature

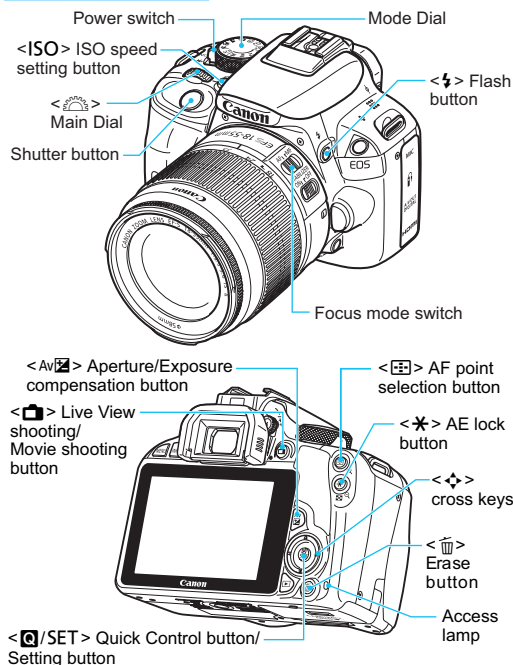


Shooting Settings

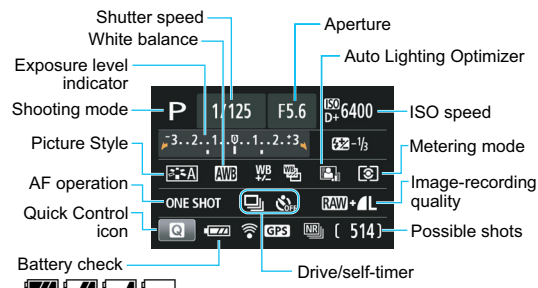 

Viewfinder Information

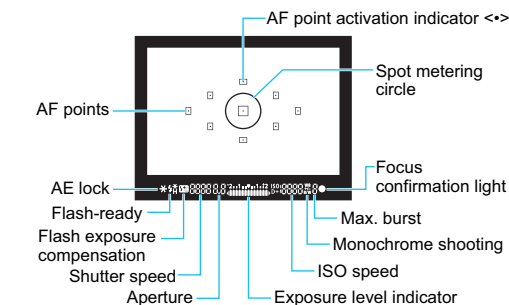 

Basic Zone Modes

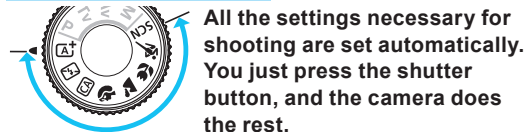 


- Scene Intelligent Auto**
- Flash Off**
- Creative Auto**
- Portrait**
- Landscape**
- Close-up**
- Sports**
- SCN Special scene**
- Kids**
- Food**
- Candlelight**
- Night Portrait**
- Handheld Night Scene**
- HDR Backlight Control**

Using the Built-in Flash

Basic Zone Modes

If necessary, the built-in flash will be raised and fire automatically in low-light or backlit conditions (with certain shooting modes).

 Creative Zone Modes

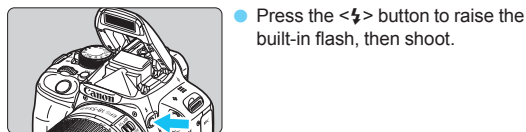

Creative Zone Modes

You can change the camera settings as desired to shoot in various ways.

P: Program AE

The camera automatically sets the shutter speed and aperture in the same way as the <A+> mode.

- Set the Mode Dial to <P>.

Tv: Shutter-priority AE



- Set the Mode Dial to <Tv>.
- Turn the <Main Dial> dial to set the desired shutter speed, then focus the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the <Main Dial> dial until it stops blinking.

Av: Aperture-priority AE



- Set the Mode Dial to <Av>.
- Turn the <Main Dial> dial to set the desired aperture, then focus the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the <Main Dial> dial until it stops blinking.

AF: AF Operation☆

 
- Set the lens focus mode switch to <AF>.
- Select [3: AF operation], then press <SET>.
- Press the <Left> <Right> keys to select the AF operation, then press <SET>.

- ONE SHOT (One-Shot AF):** For still subjects
- AI FOCUS (AI Focus AF):** Switches the AF operation automatically
- AI SERVO (AI Servo AF):** For moving subjects

AF Point☆

- Press the <AF point selection> button.
- Press the <Cross keys> to select the AF point.
- While looking through the viewfinder, you can select the AF point by turning the <Main Dial> dial until the desired AF point flashes in red.
- Pressing <SET> toggles the AF point selection between the center AF point and automatic AF point selection.


ISO: ISO Speed☆

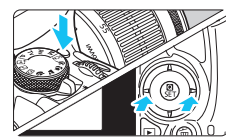

- Press the <ISO> button.
- Press the <Left> <Right> keys or turn the <Main Dial> dial to select the ISO speed, then press <SET>.
- When [AUTO] is selected, the ISO speed is set automatically.

- When you press the shutter button halfway, the ISO speed setting is displayed.

 
Drive Mode

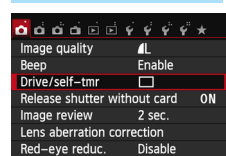

- Select [1: Drive/self-tmr], then press <SET>.
- Press the <Left> <Right> keys to select the drive mode, then press <SET>.
- Single shooting**
- Continuous shooting**
- Silent single shooting***
- Silent continuous shooting***
- Self-timer: 10 sec./Remote control**
- Self-timer: 2 sec.**
- Self-timer: Continuous**

* Not selectable in Basic Zone modes.

 Live View Shooting

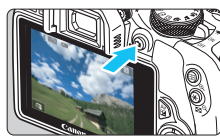

- Press the <Live View> button to display the Live View image.



- Press the shutter button halfway to focus.





- Press the shutter button completely to take the picture.

Number of Possible Shots (Live View Shooting)

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 160 shots	Approx. 150 shots

  Movie Shooting (Autoexposure)

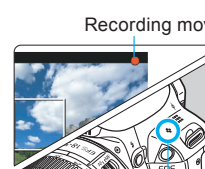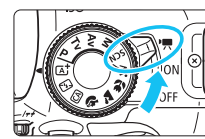

Recording movie

Microphone

- Set the power switch to <Movie>.
- Set the Mode Dial to any shooting mode except <M>.
- Press the <Live View> button to start shooting a movie.
- To stop movie shooting, press the <Live View> button again.