

EOS 760D

EOS 760D (W)

Quick Reference Guide






This quick reference guide explains the basic function settings and how to shoot and play back images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS 760D (W) Instruction Manual.





ENGLISH


CEL-SV8RA210

© CANON INC. 2015

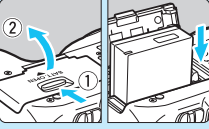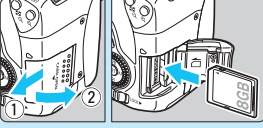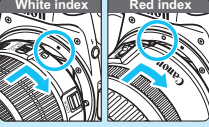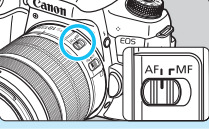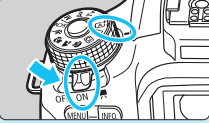Quick Start Guide

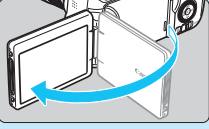- 1**  **Insert the battery.**
- 2**  **Insert a card.**
- 3**  **Attach the lens.** Align the lens's white or red mount index with the camera's mount index of the same color.
- 4**  **Set the lens focus mode switch to <AF>.**
- 5**  **Set the power switch to <ON>, then set the Mode Dial to <A+> (Scene Intelligent Auto).**


- 6**  **Flip out the LCD monitor.**
- 7**  **Focus on the subject.** Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.
- 8**  **Take the picture.** Press the shutter button completely to take the picture.
- 9**  **Review the picture.** The captured image will be displayed for 2 sec. on the LCD monitor.

 The ☆ on the right of the function indicates that the function is available only in Creative Zone modes.

Number of Possible Shots (Viewfinder Shooting)

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 550 shots	Approx. 440 shots


Image Playback

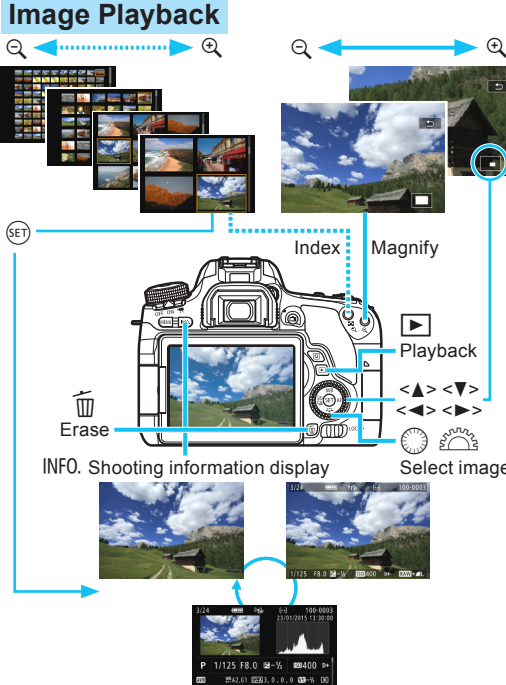

Eraser, INFO. Shooting information display, Select image, Index, Magnify, Playback, SET

Preparation

Menu Operations

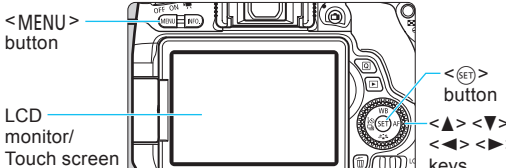

<MENU> button, LCD monitor/Touch screen, <SET> button, <▲><▼><▶><◀> keys

- Press the <MENU> button to display the menu.
- Press the <▲><▼> keys to select a tab, then press the <▶><◀> keys to select the desired item.
- Press <SET> to display the setting.
- After selecting the setting, press <SET>.

Basic Zone Modes



Image quality, Beep, Release shutter without card, Image review, Lens aberration correction, Red-eye reduc., Flash control

Creative Zone Modes

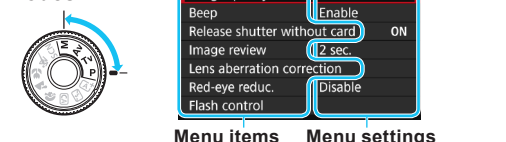


Image quality, Beep, Release shutter without card, Image review, Lens aberration correction, Red-eye reduc., Flash control

Image-recording Quality

- Select [📷 1: Image quality], then press <SET>.
- Press the <▲><▼> keys to select the image-recording quality, then press <SET>.

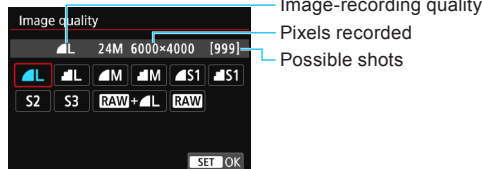


Image-recording quality, Pixels recorded, Possible shots

Picture Style ☆

- Press the <▼><▲> button.
- Press the <▲><▼> keys to select a Picture Style, then press <SET>.


Style	Description
Auto	Color tones optimized for the particular scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

- For <Auto> (Neutral) and <Faithful> (Faithful), refer to the Camera Instruction Manual.

Quick Control

- Press the <Q> button.
- The Quick Control screen will appear.

Basic Zone Modes

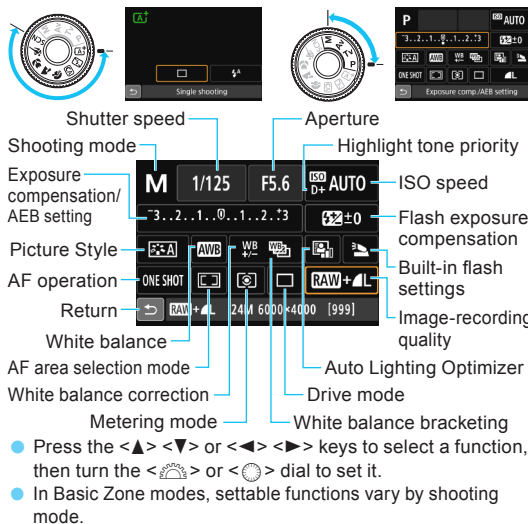

Shooting mode, Exposure compensation/AEB setting, Picture Style, AF operation, Return, White balance, AF area selection mode, White balance correction, Metering mode, Shutter speed, Aperture, Highlight tone priority, ISO speed, Flash exposure compensation, Built-in flash settings, Image-recording quality, Auto Lighting Optimizer, Drive mode, White balance bracketing

- Press the <▲><▼> or <▶><◀> keys to select a function, then turn the <Q> or <Q> dial to set it.
- In Basic Zone modes, settable functions vary by shooting mode.

Touch Screen

- The LCD monitor is a touch-sensitive panel that you can operate with your fingers.
- For information on touch screen operations, refer to the Camera Instruction Manual.

Custom Functions ☆

C.Fn I: Exposure

- Exposure level increments
- ISO expansion

C.Fn II: Image

- Highlight tone priority

C.Fn III: Autofocus/Drive

 
- AF-assist beam firing
- Auto AF point selection: Color Tracking
- AF point display during focus
- VF display illumination
- Mirror lockup

C.Fn IV: Operation/Others


- Shutter/AE lock button
- Assign SET button
- LCD display when power ON
- Multi function lock
- Retract lens on power off

Shooting Operation


Nomenclature

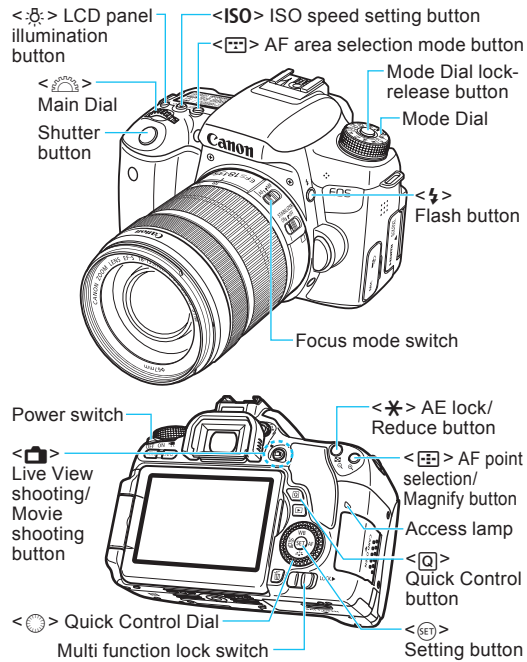

LCD Panel

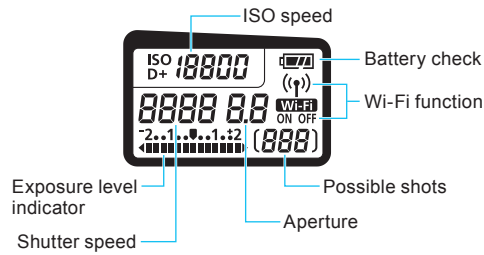 

Viewfinder Information

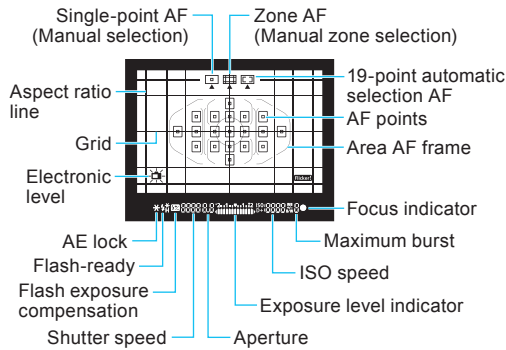 

Basic Zone Modes



All the settings necessary for shooting are set automatically. You just press the shutter button, and the camera does the rest.

- Scene Intelligent Auto
- Flash Off
- Creative Auto
- Portrait
- Landscape
- Close-up
- Sports
- SCN Special scene
- Kids
- Food
- Candlelight
- Night Portrait
- Handheld Night Scene
- HDR Backlight Control

Using the Built-in Flash

 
Basic Zone Modes

If necessary, the built-in flash will be automatically raised and fired in low-light or backlit conditions (with certain shooting modes).

Creative Zone Modes

- Press the <Flash> button to raise the built-in flash, then shoot.

Creative Zone Modes

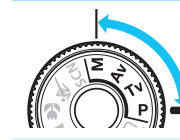


You can change the camera settings as desired to shoot in various ways.

* Set the <LOCK> switch (Multi function lock released) to the left.

P: Program AE


- Set the Mode Dial to <P>.
- The camera automatically sets the shutter speed and aperture in the same way as the <A+> mode.

 Tv: Shutter-priority AE

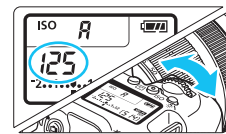


- Set the Mode Dial to <Tv>.
- Turn the <Shutter speed> dial to set the desired shutter speed, then focus on the subject.
- The aperture will be set automatically.
- If the aperture display blinks, turn the <Shutter speed> dial until it stops blinking.

 Av: Aperture-priority AE

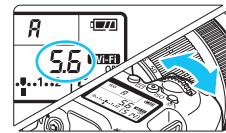


- Set the Mode Dial to <Av>.
- Turn the <Aperture> dial to set the desired aperture, then focus on the subject.
- The shutter speed will be set automatically.
- If the shutter speed display blinks, turn the <Aperture> dial until it stops blinking.

 ISO: ISO Speed *

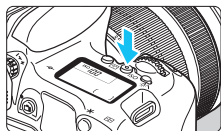

 
- Press the <ISO> button, turn the <Shutter speed> or <Aperture> dial.
- When "A" is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting is displayed.

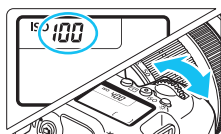

Drive Mode




 - Press the <Drive mode> button, press the <Left> or <Right> keys to select the drive mode, then press <Set>.

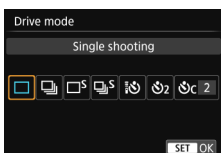


- Single shooting
- Continuous shooting
- Silent single shooting
- Silent continuous shooting
- 10-sec. self-timer/remote control
- Self-timer: 2 sec.
- Self-timer: Continuous

 AF: AF Operation *

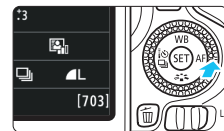


 - Set the lens focus mode switch to <AF>.
- Press the <AF> button, press the <Left> or <Right> keys to select the AF operation, then press <Set>.

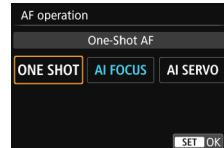


- ONE SHOT (One-Shot AF):** For still subjects
- AI FOCUS (AI Focus AF):** Switches the AF operation automatically
- AI SERVO (AI Servo AF):** For moving subjects

 AF Point Selection *

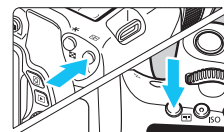


- Press the <Left> or <Right> button.

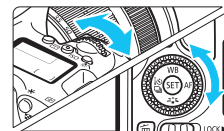 


- You can shift the AF point horizontally by turning the <Shutter speed> dial, and vertically by turning the <Aperture> dial. If you press <Set> straight down, the center AF point (or center zone) will be selected.

 AF Area Selection Mode *

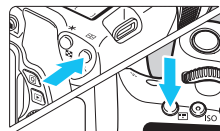


- Press the <AF area selection> or <AF area selection> button.
- Look through the viewfinder and press the <AF area selection> button.
- Each time you press the <AF area selection> button, the AF area selection mode changes.

 Live View Shooting

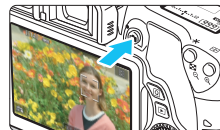

 - Press the <Live View> button to display the Live View image.

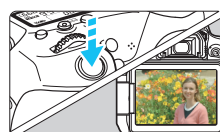


- Press the shutter button halfway to focus, then press it completely to take the picture.

Number of Possible Shots (Live View Shooting)

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 200 shots	Approx. 180 shots

 
Movie Shooting (Autoexposure)

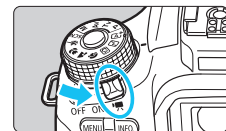

- Set the power switch to <Movie>.
- Set the Mode Dial to any shooting mode except <M>.



 - Press the <Movie> button to start shooting a movie.
- To stop movie shooting, press the <Movie> button again.

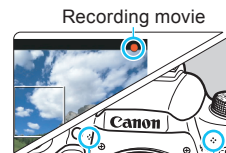

Built-in microphones

- When the shooting mode is <M>, you can shoot movies with manual exposure.
- You can set movie shooting settings with the menu options under the [1] or [2] tab.