 
 


Canon PIXMA MG5550

 
1

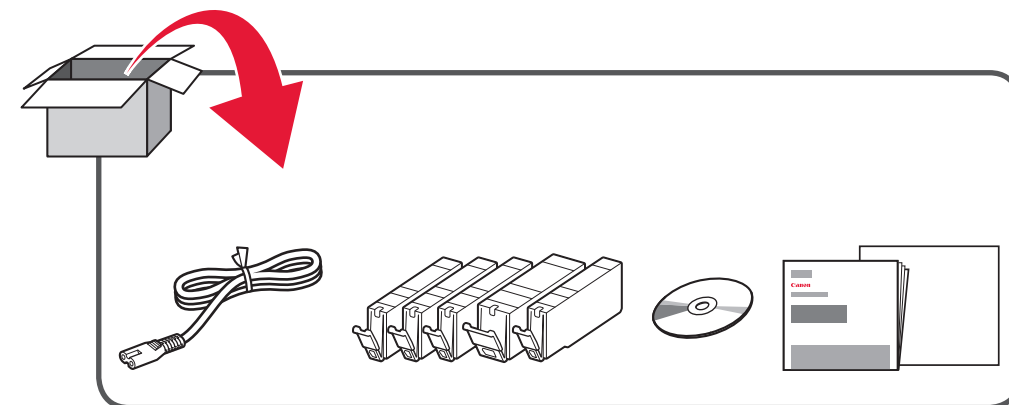


2

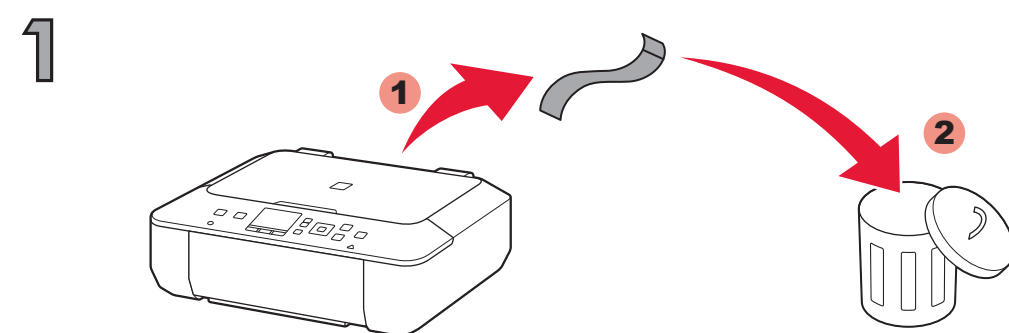


2

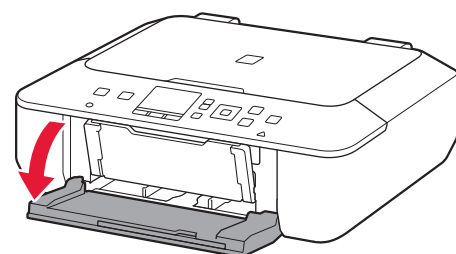



3

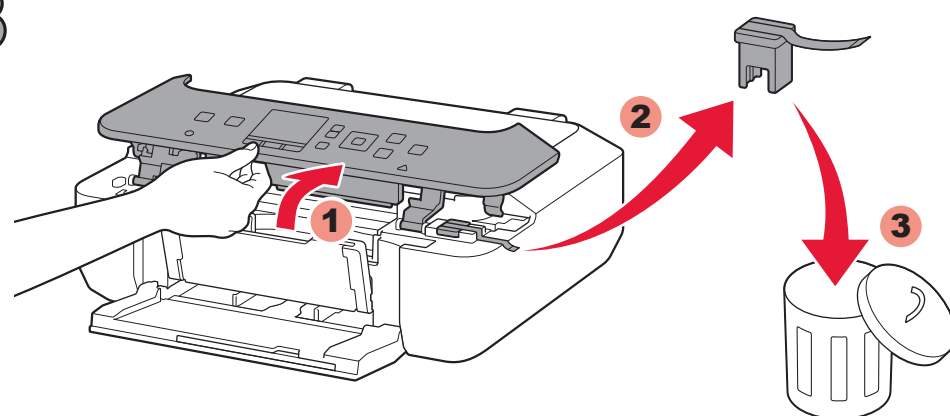 


4

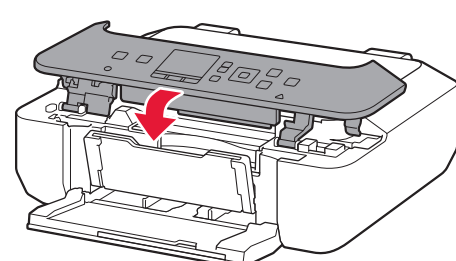 


3

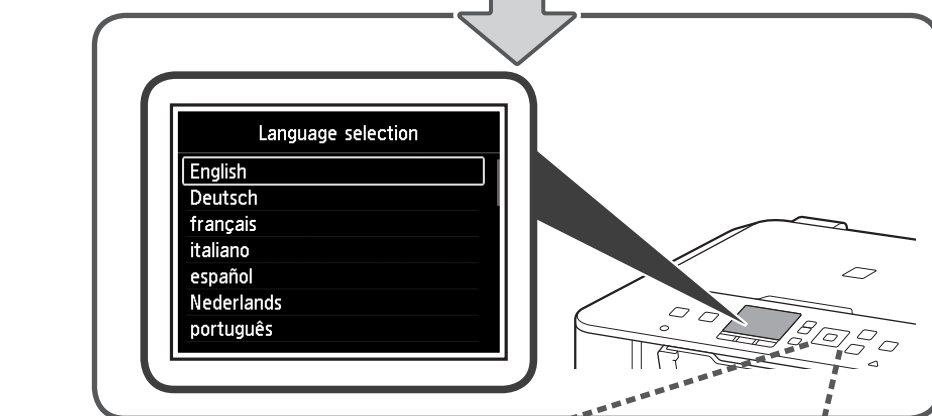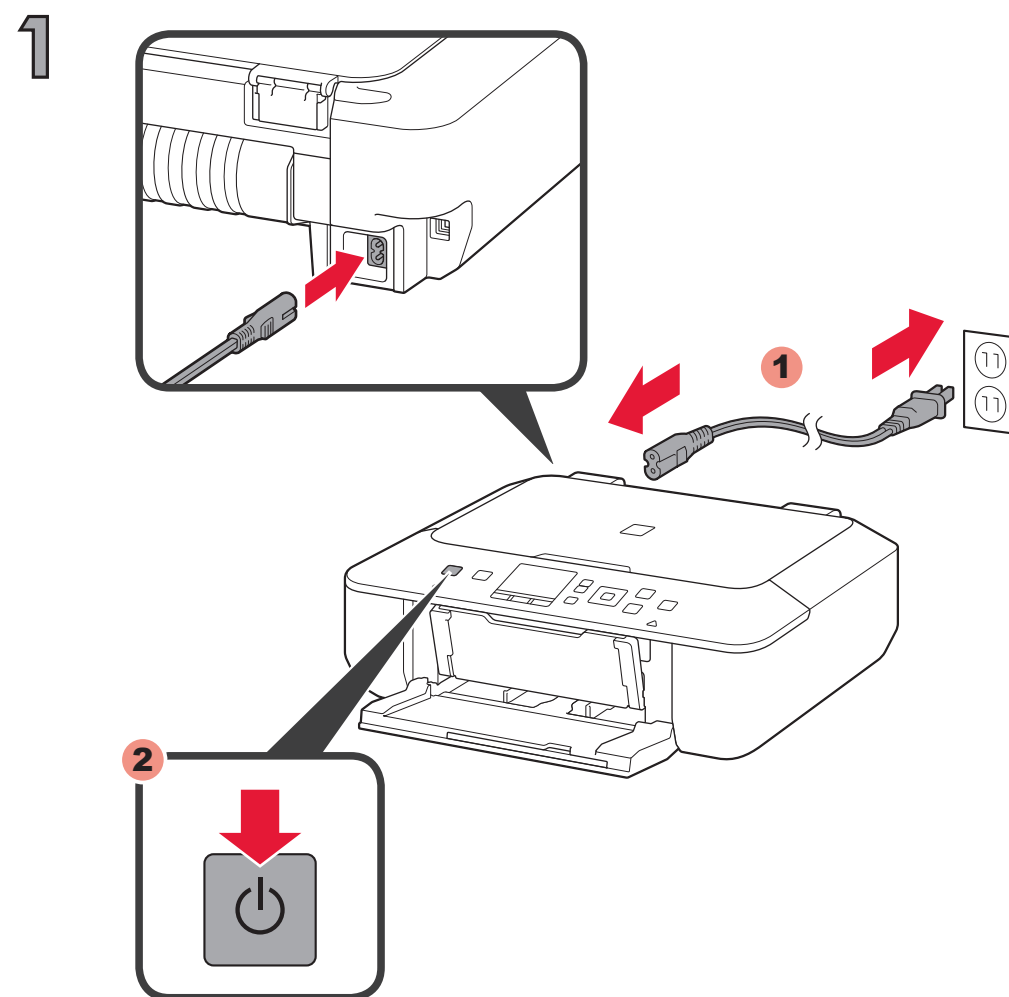  


2

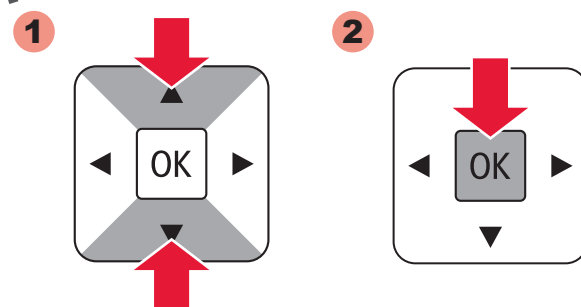 


3

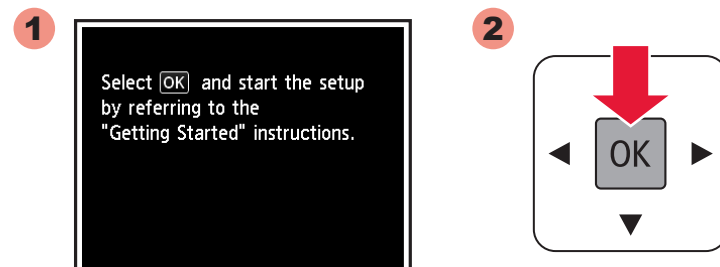 


4

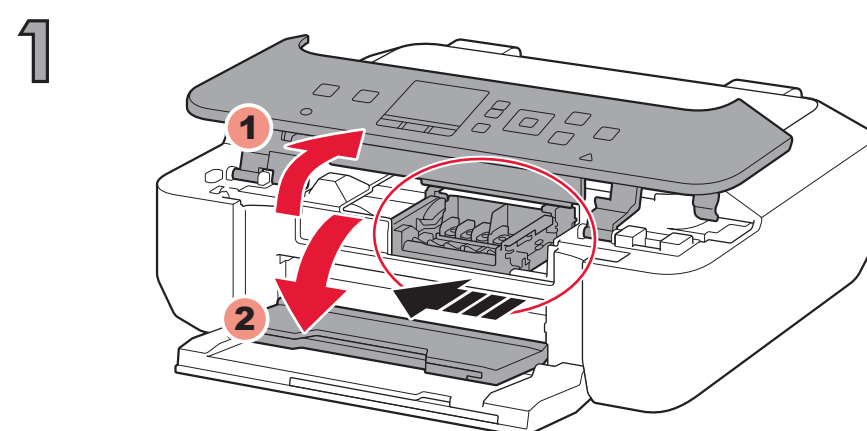 


2

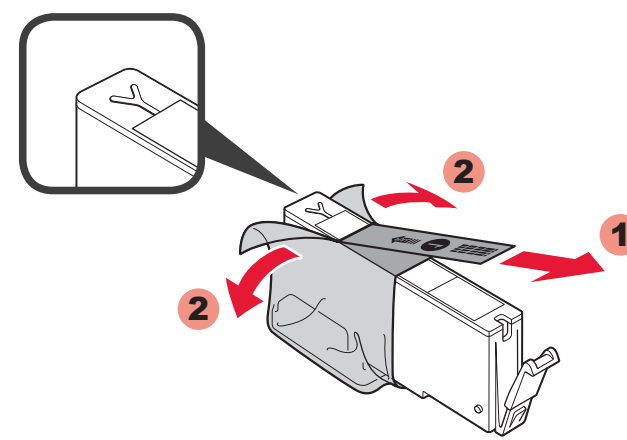 


3

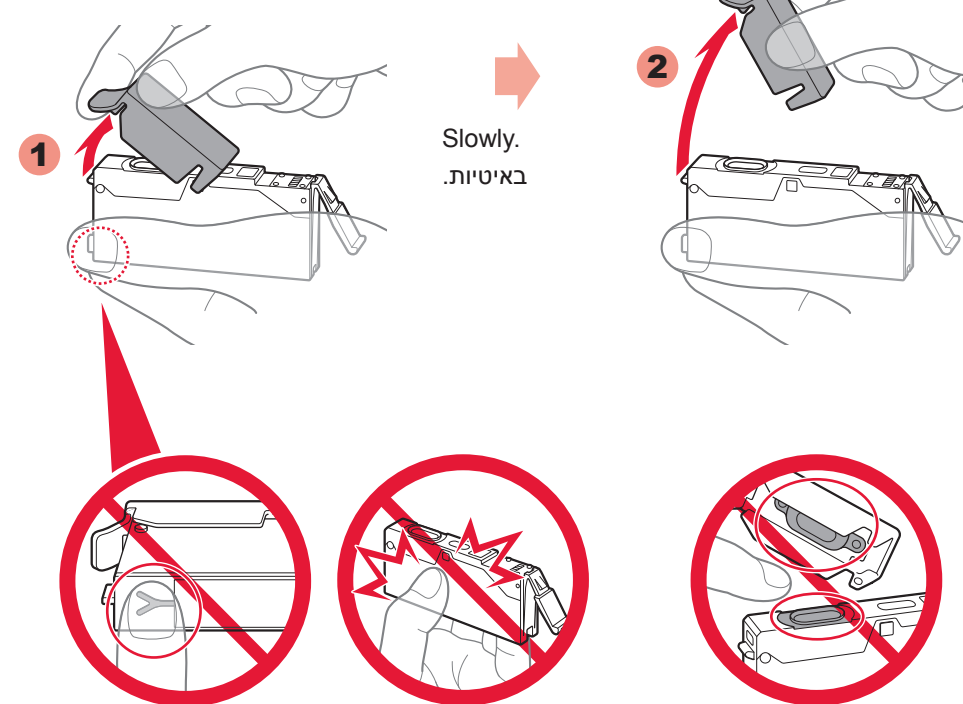 


4

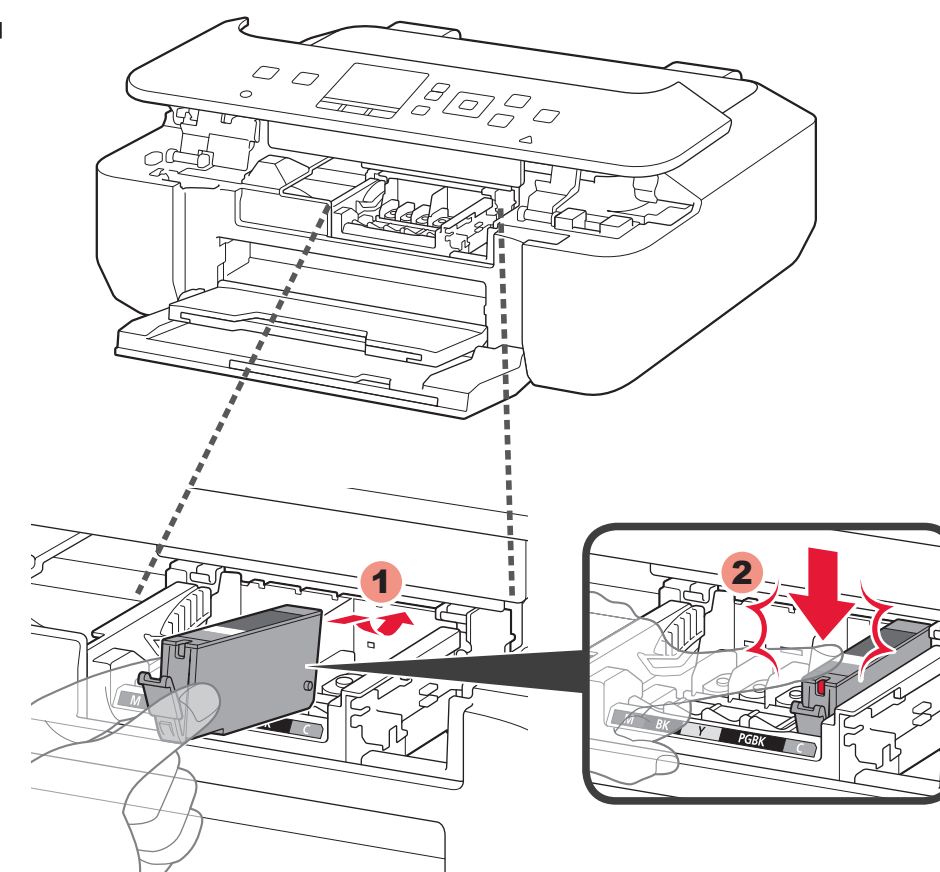 


5

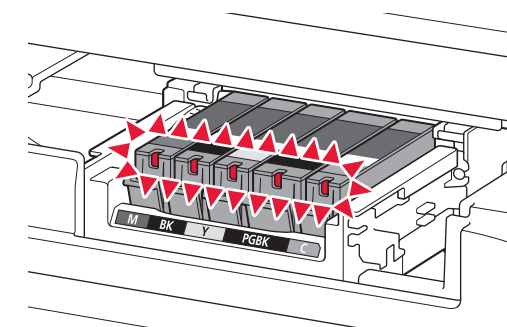 

6

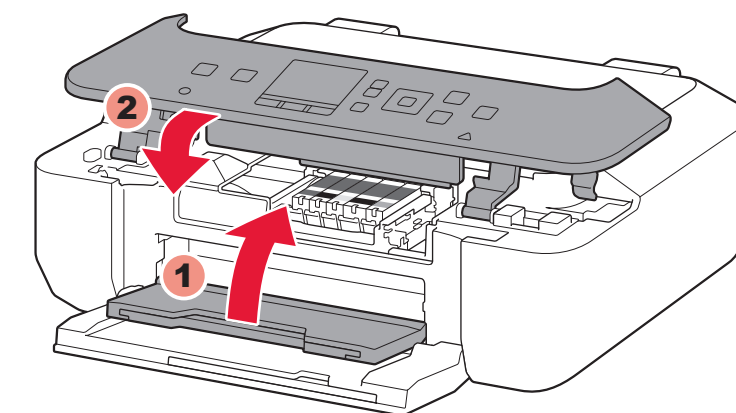 


7

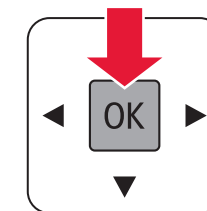 


5

 
1

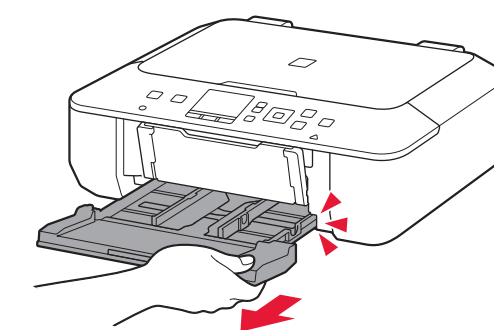


2

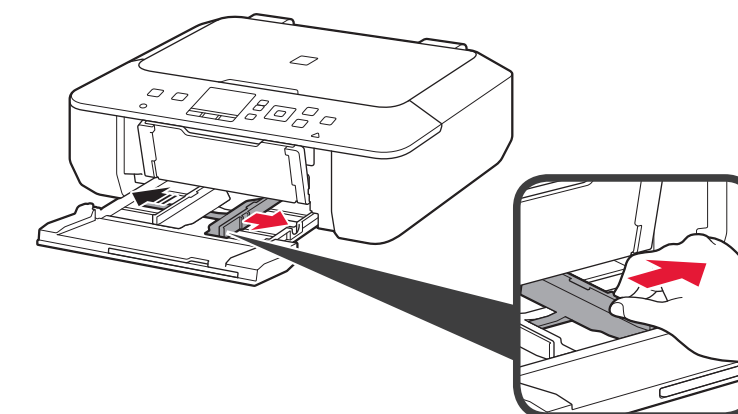 



3

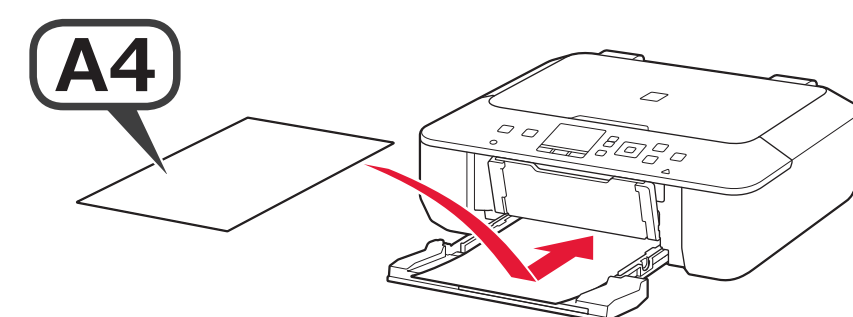 

4

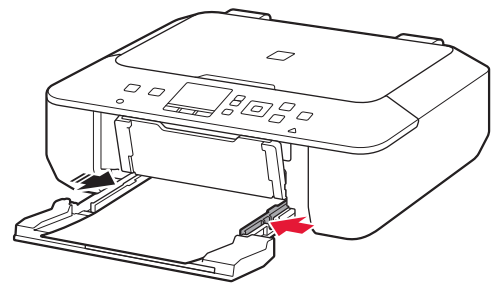 


5

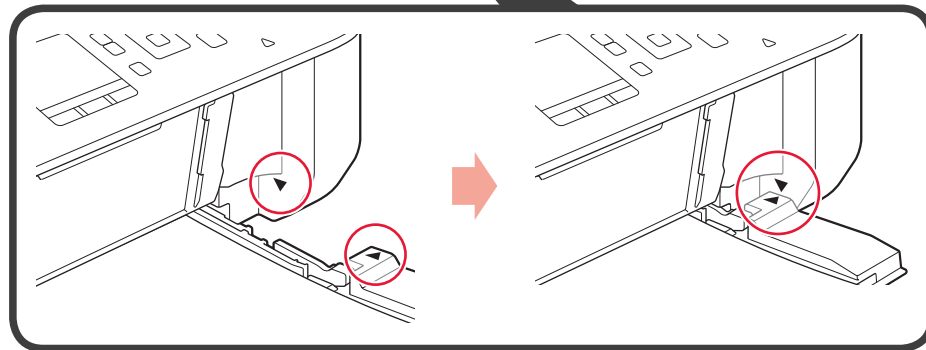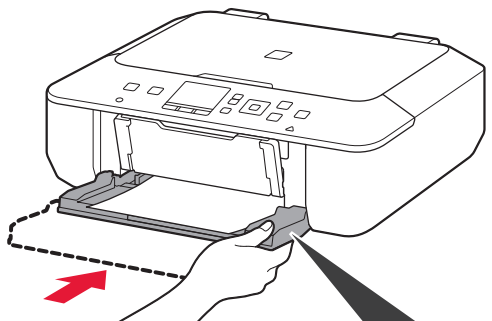  


Push the Feeder back until ► and ◀ line up.

דחף את המזין אחורה עד ש-► ◀ - י- מיושרים.

 6


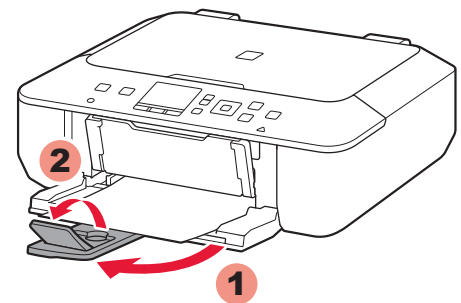


7

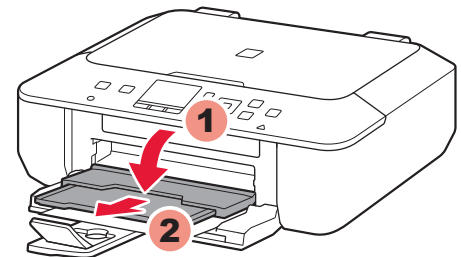 


6

 
 
1

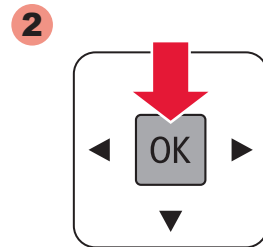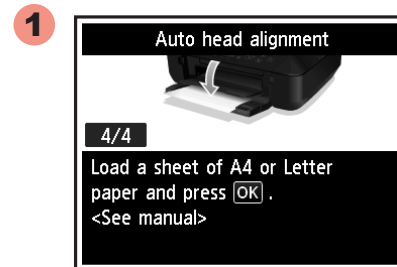


2

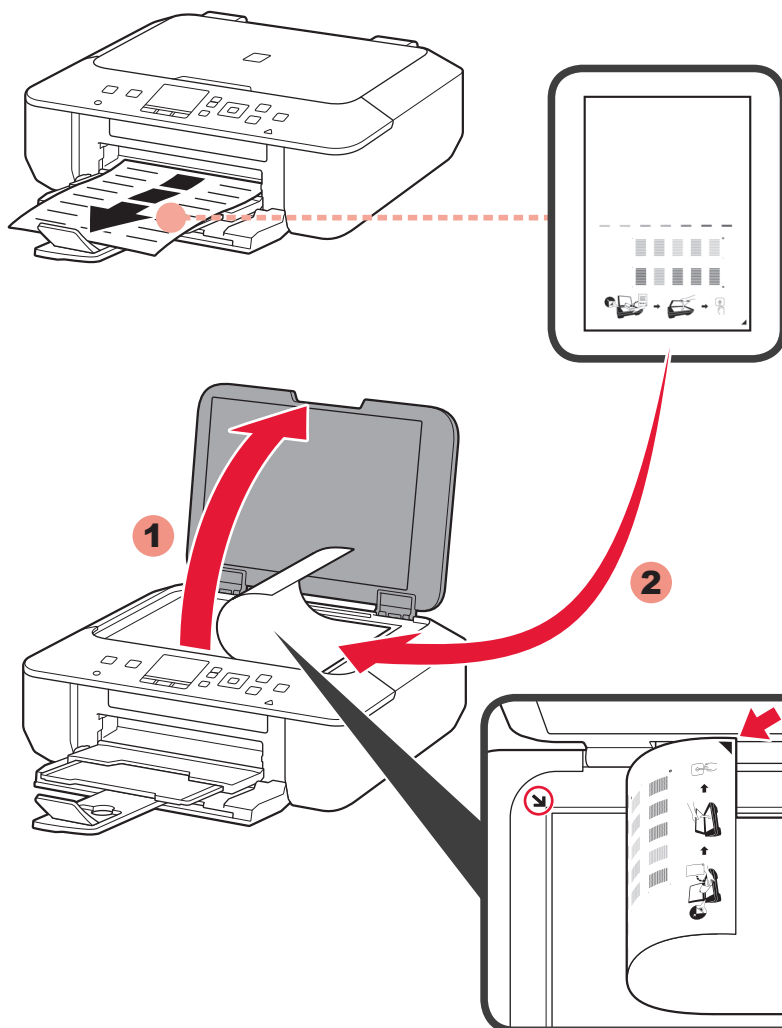 



3

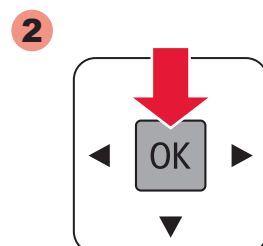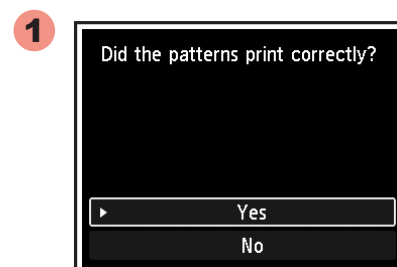  


4

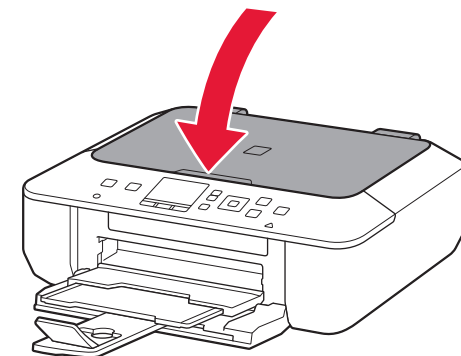 



5

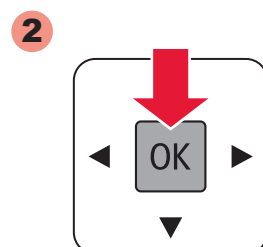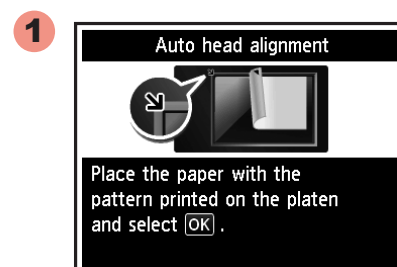  


6

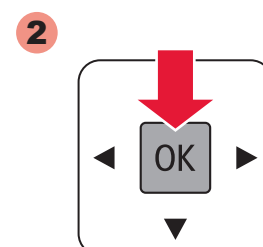 


7

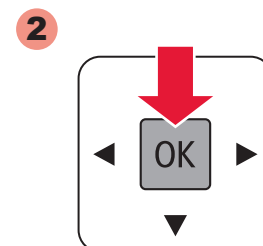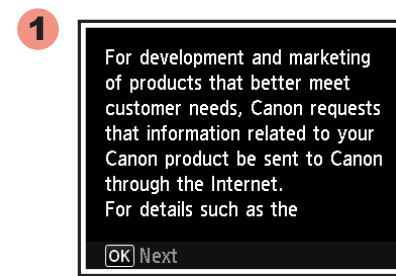  

8

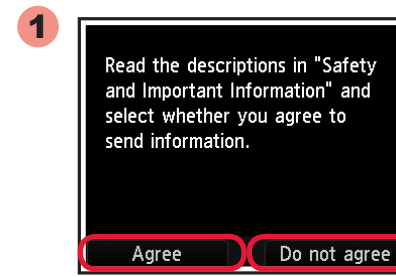 

7

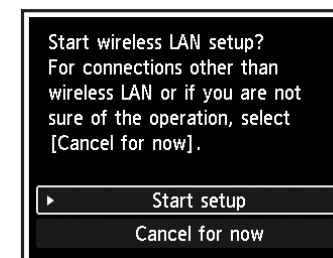 

To connect to wireless LAN, select **Start setup** on the screen, then follow the on-screen instruction.

If you do not want to connect the machine to wireless LAN, select **Cancel for now**, then proceed to **8**.

* You can select USB connection by following the instruction shown on the computer screen in **8**.

כדי להתחבר לרשת אלחוטית, בחר את האפשרות **<Start Setup>** (התחל התקנה) שעל המסך ולאחר מכן פעל לפי ההוראות שעל המסך.

אם אינך מעונין לחבר את המכשיר לרשת LAN אלחוטית, בחר באפשרות **<Cancel for now>** (בטל לעת עתה), ולאחר מכן המשיך אל **8**.

* באפשרותך לבחור חיבור USB על ידי מילוי ההוראות המוצגות במסך המחשב ב- **8**.

8

