 
 
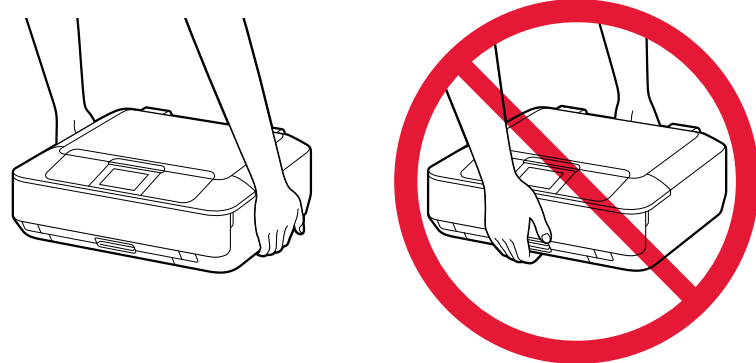 
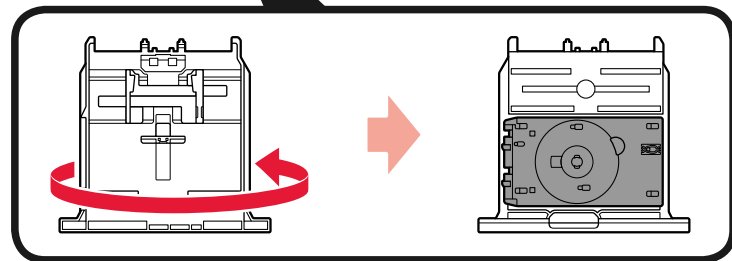 


Canon PIXMA MG7500 series

 
 
 
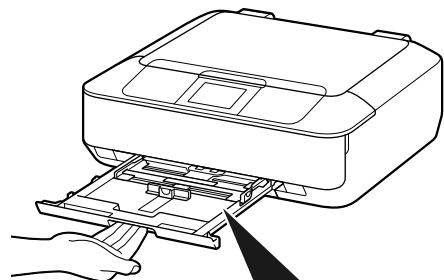 


RMC: K10406


1

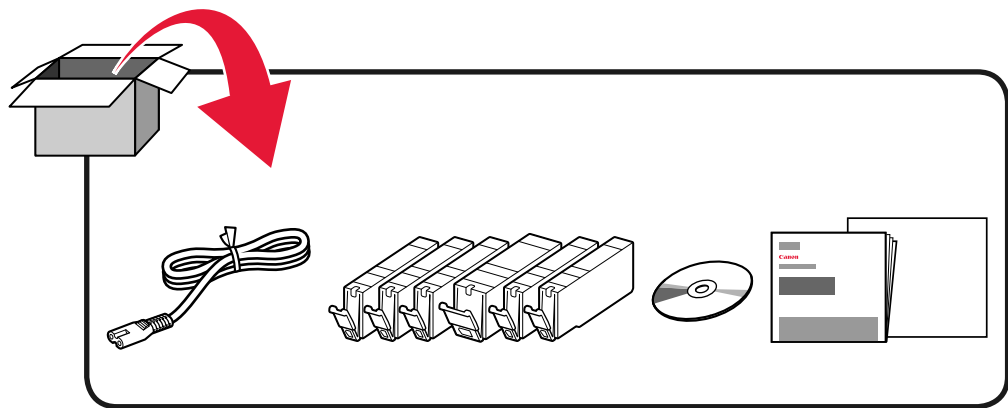


2

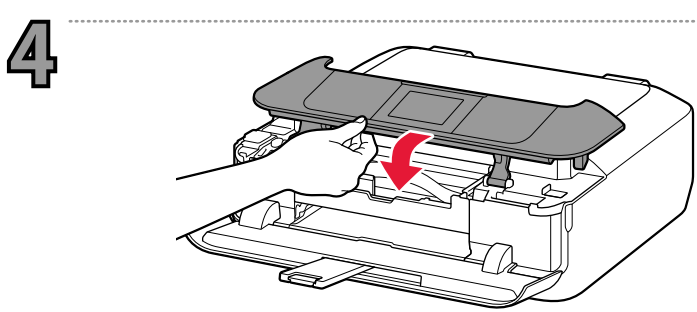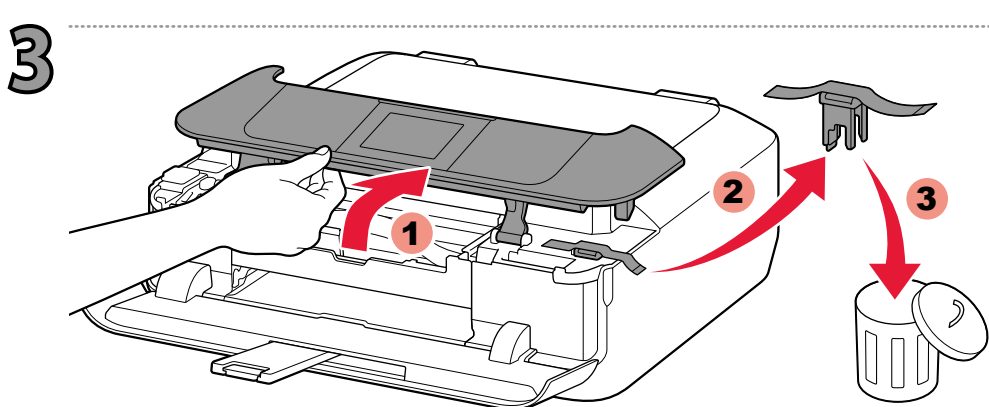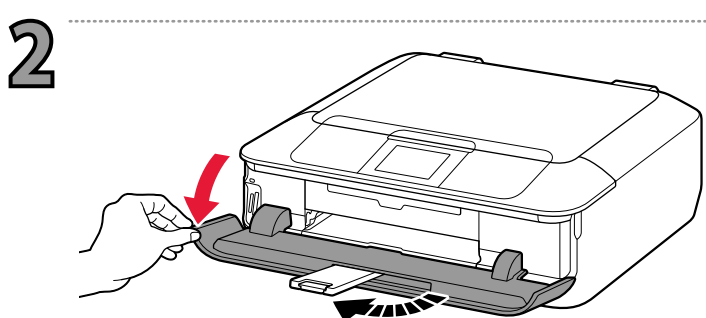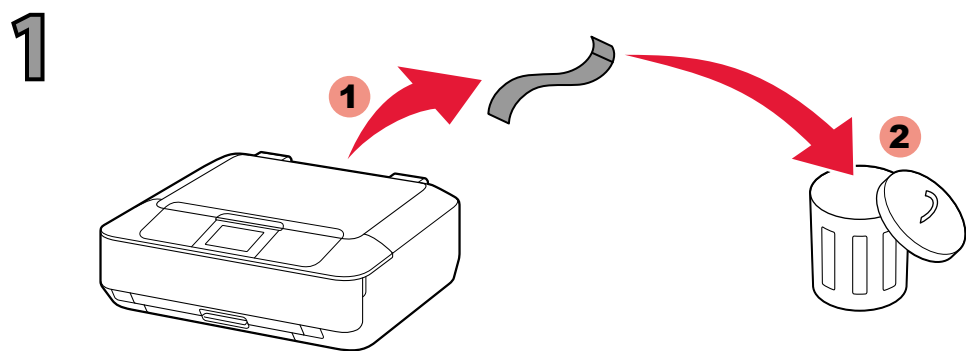


3

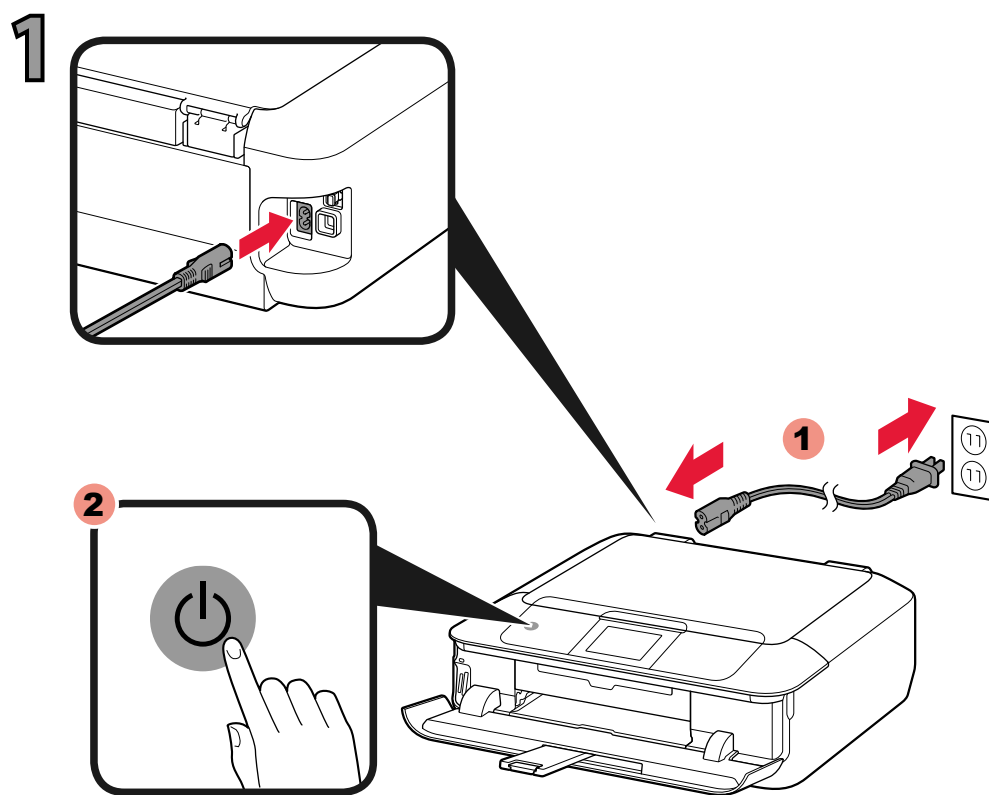 


2

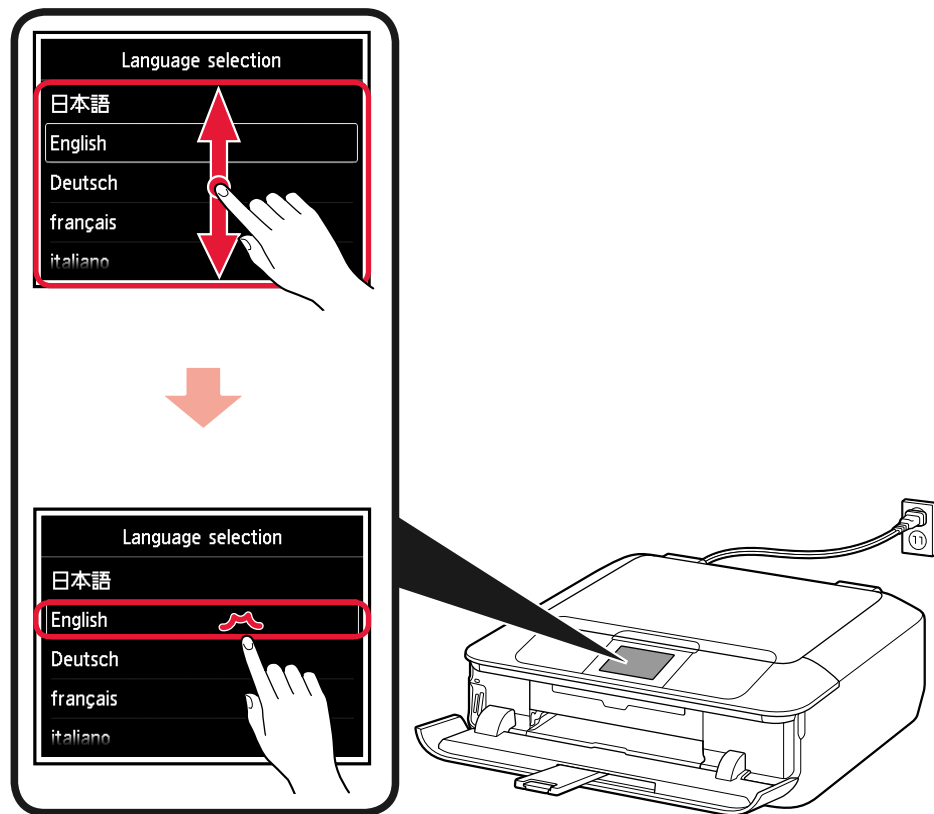 


3

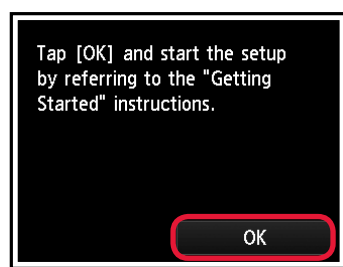 


4

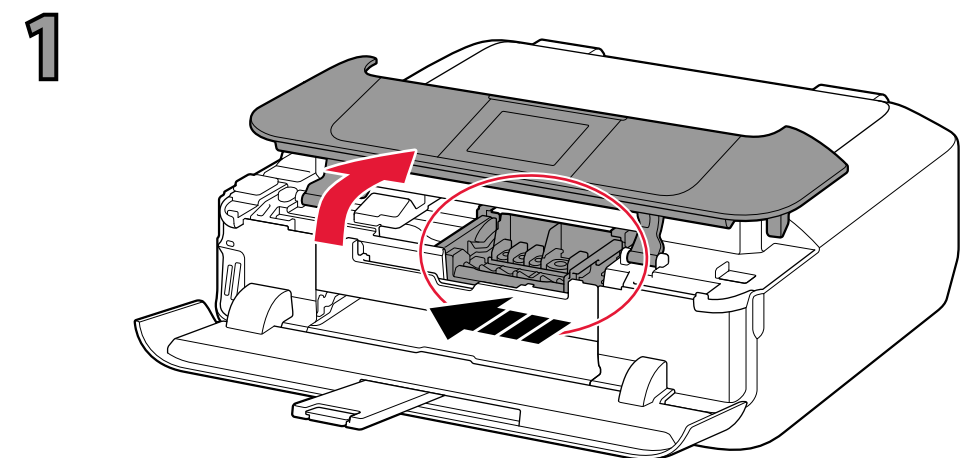 


2

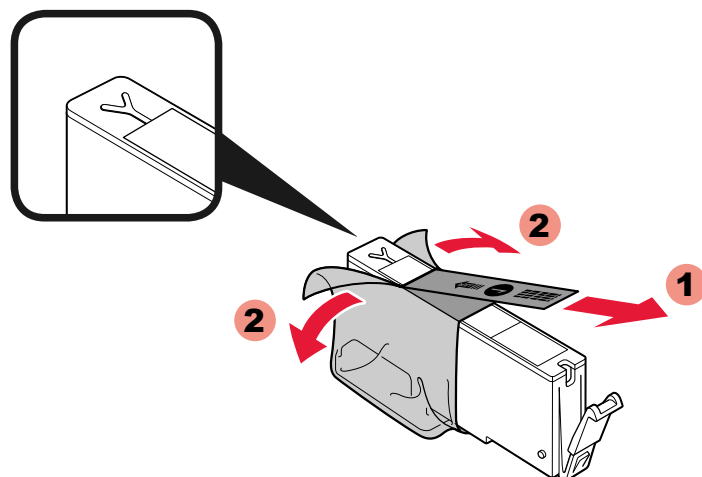 


3

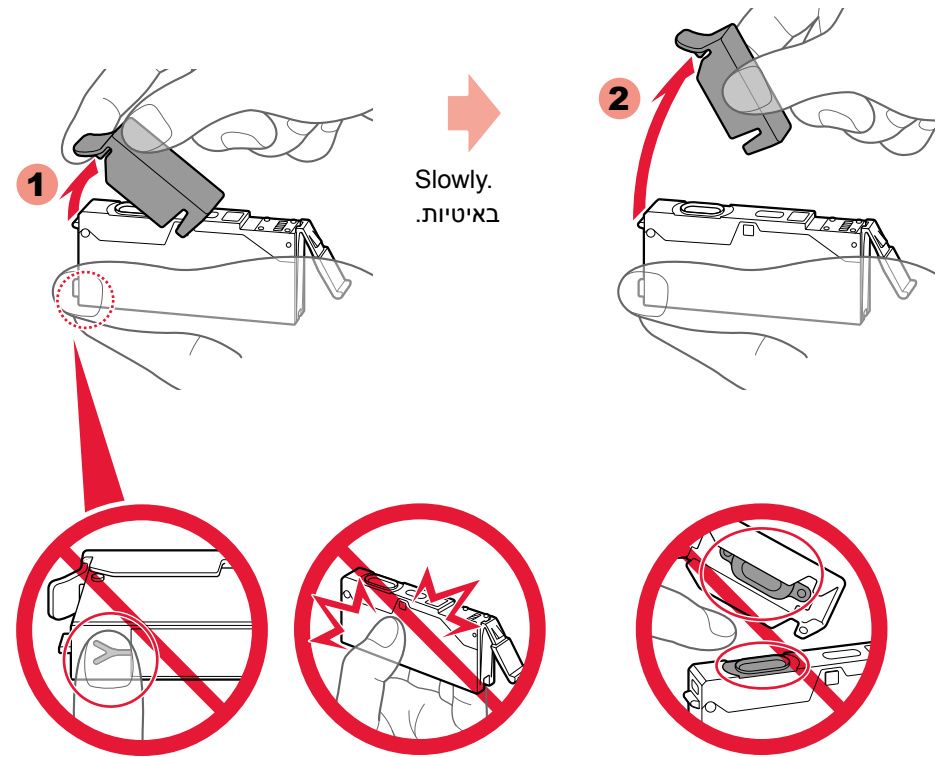 


4

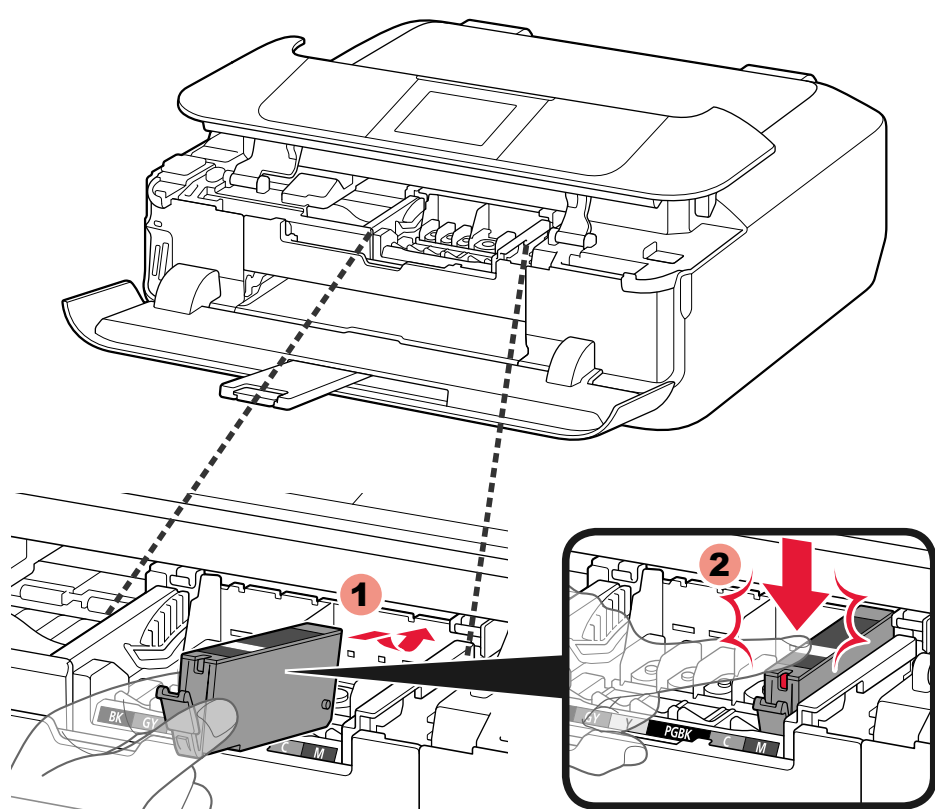 

5

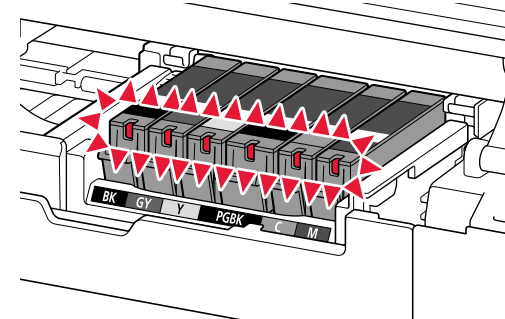 

6

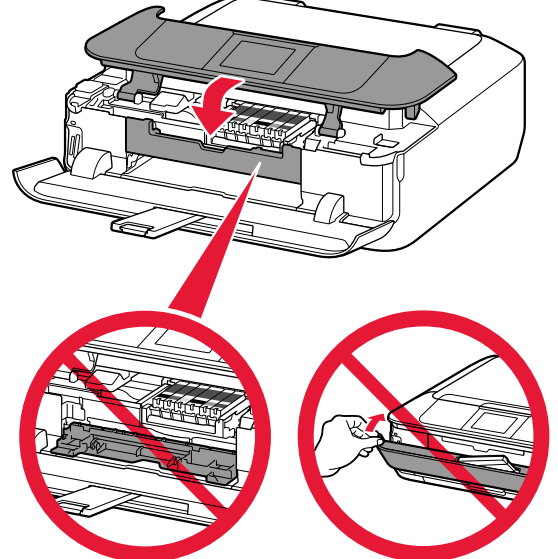 


7









Cleaning... Do not close the paper output tray.
About 3 minutes

Head alignment is required.
Load a sheet of A4 or Letter paper and tap [OK].

 OK

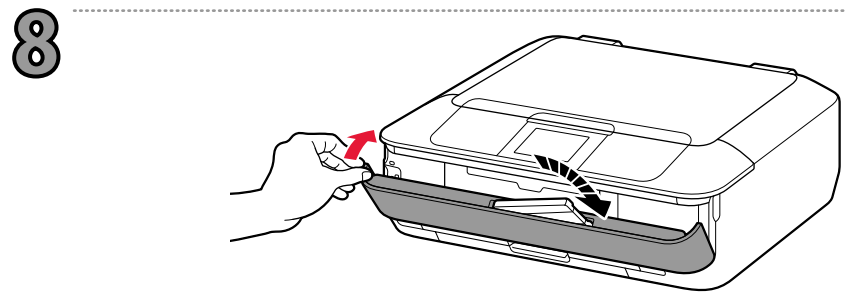


5

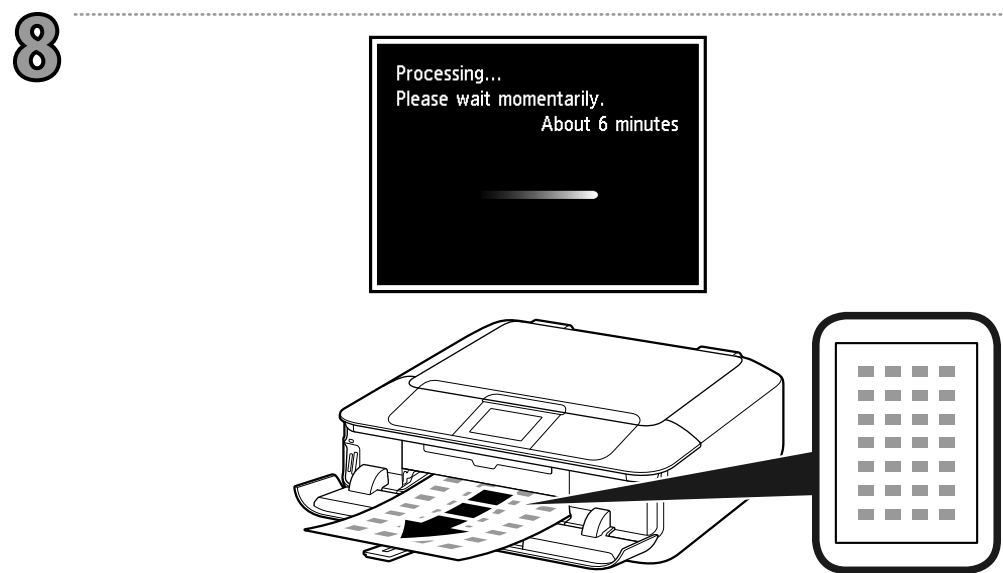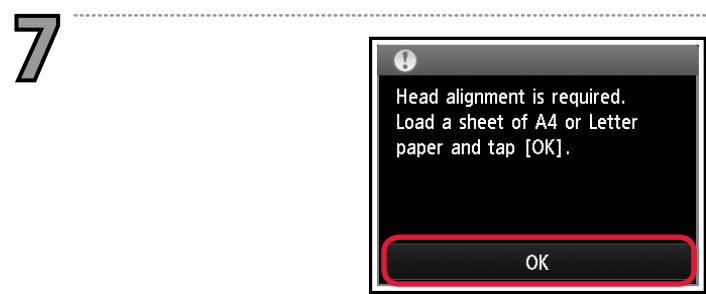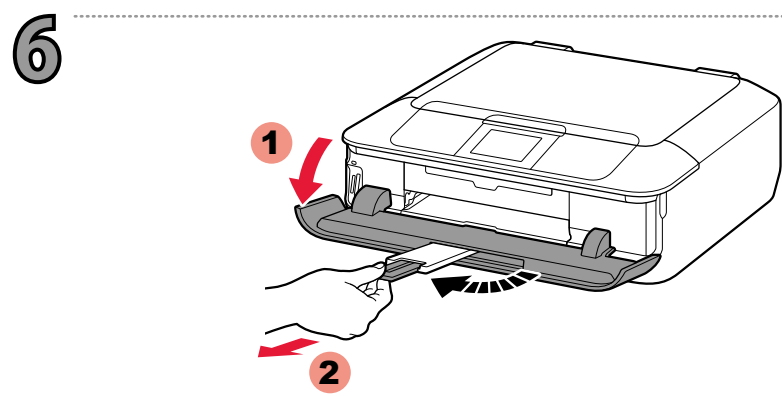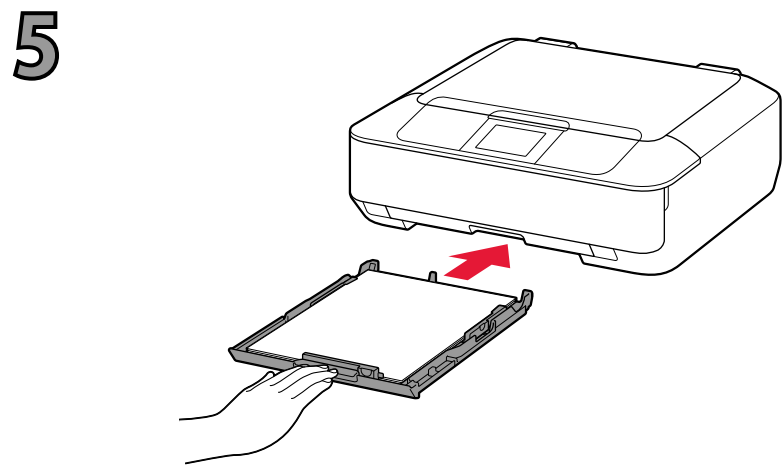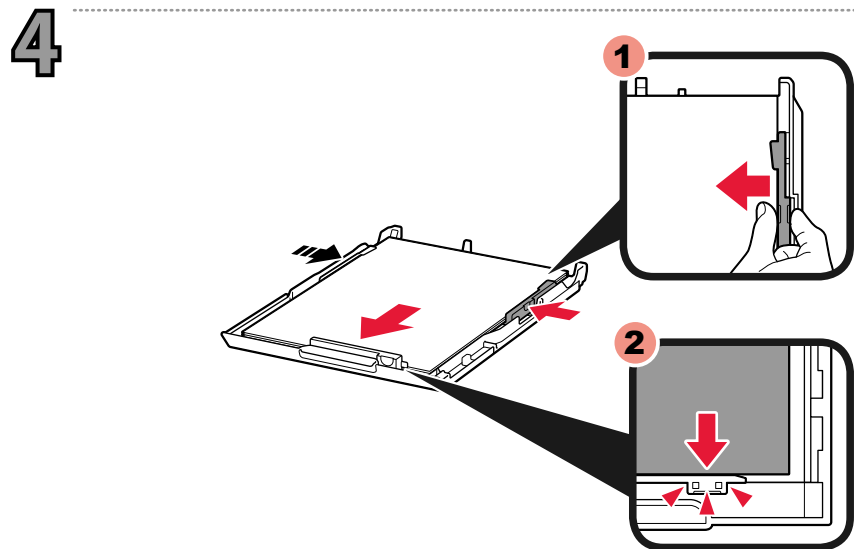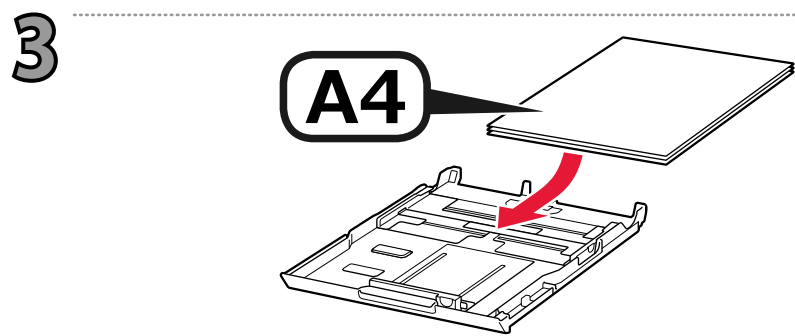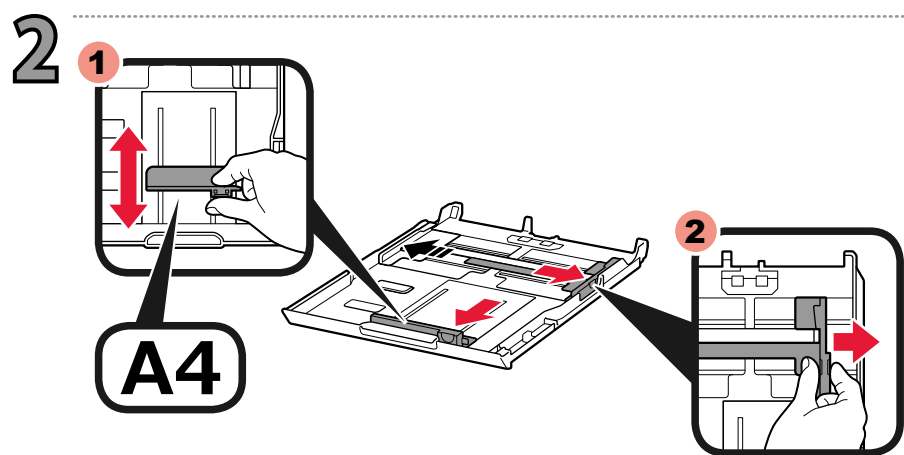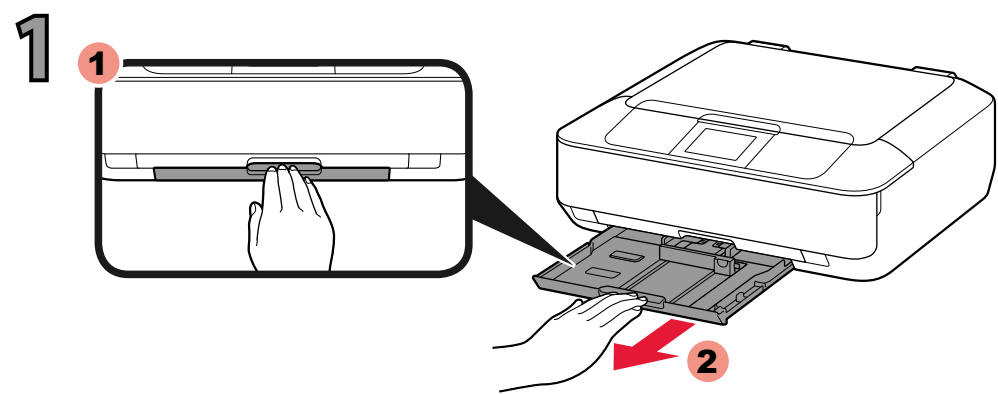        

Hereafter, follow the message displayed on the screen.

מכאן והלאה, מלא אחר ההוראה המוצגת על המסך.

 6

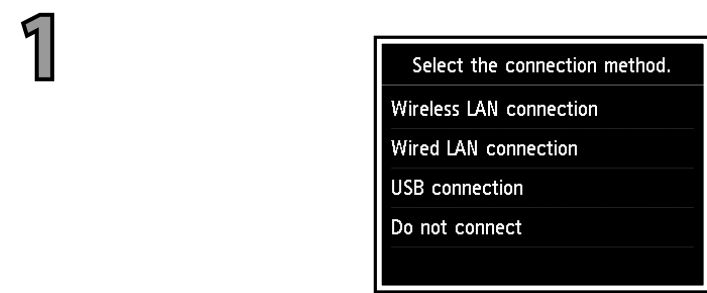

Refer to the following explanations of connection types and select the connection method for your devices to use.

 
 
 
Hereafter, follow the message displayed on the screen.

עיין בהסברים הבאים על סוגי חיבור ובחר את שיטת החיבור המתאימה לשימוש בהתקנים שלך.


מכאן והלאה, מלא אחר ההוראה המוצגת על המסך.




Wireless LAN
רשת תקשורת
מקומית אלחוטית

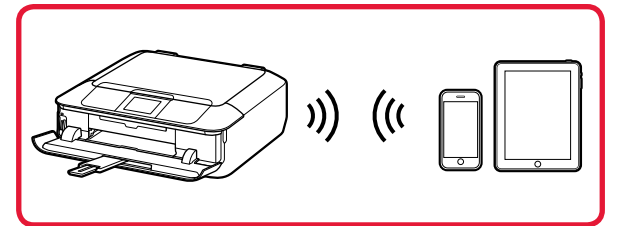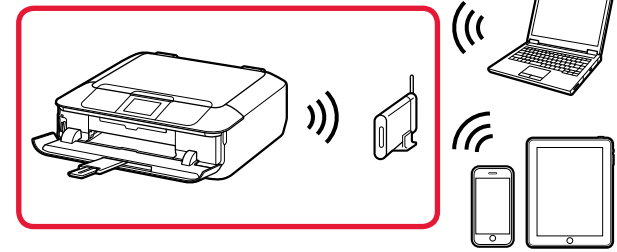


Wired LAN
רשת תקשורת מקומית חוטית

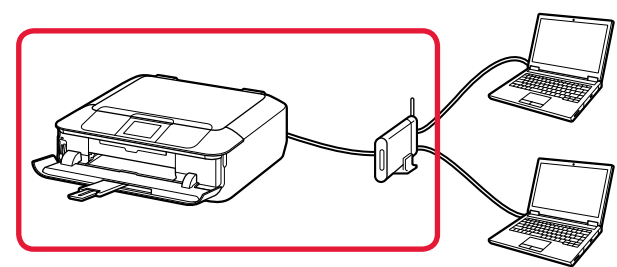 

USB

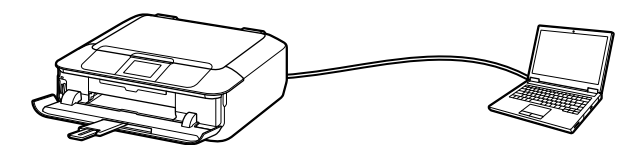 

2

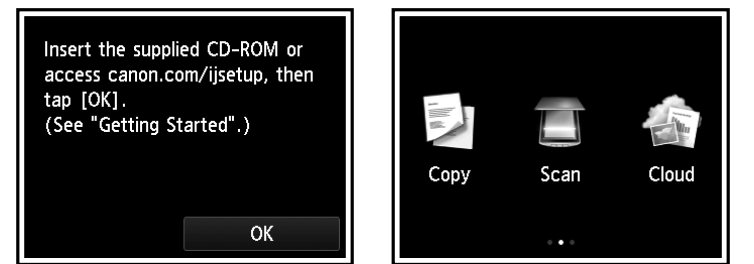 

Setup CD-ROM is also available for Windows PC.
[Setup CD-ROM/תקליטור התקנה] זמין גם עבור מחשב אישי Windows.

