

# Digital Photo Professional

Ver. 4.9

## Instruction Manual

- Introduction/Contents
- Downloading Images
- Viewing Images
- Sorting Images
- Editing Images
- Printing Images
- Processing Large Numbers of RAW Images
- Remote Shooting
- Playing Back Movies and Saving Still Photos
- Specifying Preferences
- Reference/Index

### ● Content of this Instruction Manual

- DPP stands for Digital Photo Professional.
- In this manual, the screens used in the basic operation instructions are from Windows 8.1.
- ▶ indicates the selection procedure of the menu.
- Square brackets are used to indicate items such as menu names, button names and window names that appear on the computer screen.
- Text inside < > indicates a key on the keyboard.
- p.\*\* indicates a reference page.  
Click to move to the relevant page.
- **Advanced** indicates the function for advanced users who are experienced in handling image processing software.
- **?** : Marks helpful information when a problem arises.

- : Marks tips for using the software skillfully.
- : Marks information that should be read before use.
- : Marks additional information you may find helpful.

### ● Switching Between Pages

- Click on arrows on the bottom right of the screen.
  - : next page
  - : previous page
  - : return to a page you had previously displayed
- Click on the chapter headings on the right side of the screen to switch to the contents page of that chapter. Also, click the item you want to read about on the table of contents to move to the relevant page.



## Main Features of DPP

Following are the main tasks you can perform with images you have downloaded to your computer.

\* **JPEG/TIFF** indicates processing that can be performed with JPEG or TIFF images as well as RAW images.

- **View and organize images** **JPEG/TIFF**
- **Play back movies and save still photos**
- **Adjust an image**
  - Various image adjustments while maintaining the original image **JPEG/TIFF**
  - Freely apply a Picture Style
  - View your image before and after adjustment in the same window **JPEG/TIFF**
- **Trim and adjust the angle of an image (trimming)** **JPEG/TIFF**
- **Resize an image** **JPEG/TIFF**
- **Correction of lens aberration**
- **Digital Lens Optimizer**
- **Automatic/manual dust erasure processing** **JPEG/TIFF**
- **Convert from a RAW image to a JPEG or TIFF image and save**
  - Process large numbers of RAW images in batches
  - Transfer the image to image editing software
- **Print an image** **JPEG/TIFF**
- **Link with EOS Utility for remote shooting** **JPEG/TIFF**

- **Color management compatibility**

- CMYK simulation for commercial printing



In DPP Ver. 4.8.20 or later, clicking [Check for updates] in the [Help] menu allows you to check for update files on the server and download any update files that are available.

To use this function, an environment with Internet access (subscription to a provider and an in-place line connection) is required. Internet Service Provider (ISP) connection fees or access point connection fees may apply.

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





## System Requirements

<b>OS (operating system)</b>	Windows 10, Windows 8.1, Windows 7*
<b>Model</b>	PC with one of the above OS preinstalled (Upgraded machines not supported)
<b>CPU</b>	Core 2 Duo 2.0 GHz or higher (recommended Core i series or later)
<b>RAM (memory)</b>	2.0 GB or more of RAM (4.0 GB or more recommended)
<b>Hard disk drive</b>	Installation: Min. 300 MB of available space Operation: Min. 600 MB of available space
<b>Display</b>	Resolution: XGA (1024 x 720) or more (1600 x 1200 or more recommended) Colors: 16-bit color (65536 colors) or more

- May also be installed on a 32-bit version PC, but with restrictions on operation. On 32-bit OSs, (32bit) is displayed on the [About Digital Photo Professional 4] in [Help]. For information on restrictions, see descriptions indicated with **32bit** in this manual.
- In DPP, to play back MOV or MP4 movies shot using a supported camera, and to save still photos from movies, a 64-bit version of Windows 8.1 or later is required.

\* With Microsoft .NET Framework 4.5 installed

## Supported Cameras

EOS-1D X Mark II, EOS-1D X, EOS-1D C, EOS-1D Mark IV, EOS-1Ds Mark III, EOS-1D Mark III, EOS-1D Mark II N, EOS-1Ds Mark II, EOS-1D Mark II, EOS-1D, EOS-1Ds, EOS 5DS/EOS 5DS R, EOS 5D Mark IV, EOS 5D Mark III, EOS 5D Mark II, EOS R, EOS 5D, EOS 6D Mark II, EOS 6D, EOS 7D Mark II, EOS 7D, EOS 80D, EOS 70D, EOS 60D/EOS 60Da, EOS 50D, EOS 40D, EOS 30D, EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D30, EOS D60, EOS 77D, EOS 760D, EOS 800D, EOS 750D, EOS 700D, EOS 200D, EOS 100D, EOS 2000D, EOS 1300D, EOS 1200D, EOS 650D, EOS 600D, EOS 550D, EOS 500D, EOS 450D, EOS 1000D, EOS 1100D, EOS 400D, EOS 350D, EOS 4000D, EOS 300D, EOS M6, EOS M5, EOS M3, EOS M2, EOS M, EOS M10, EOS M100, EOS M50, PowerShot G3 X<sup>\*1</sup>, PowerShot G1 X Mark II<sup>\*1</sup>, PowerShot G7 X<sup>\*1</sup>, PowerShot G9 X<sup>\*1</sup>, PowerShot SX60 HS<sup>\*1</sup>, PowerShot G5 X<sup>\*1</sup>, PowerShot G7 X Mark II<sup>\*1</sup>, PowerShot G16<sup>\*1</sup>, PowerShot S120<sup>\*1</sup>, PowerShot G1 X<sup>\*1</sup>, PowerShot G15<sup>\*1</sup>, PowerShot S110<sup>\*1</sup>, PowerShot S100<sup>\*1</sup>, PowerShot G9 X Mark II<sup>\*1</sup>, PowerShot G1 X Mark III<sup>\*1</sup>, PowerShot G9<sup>\*1\*2</sup>, PowerShot G10<sup>\*1\*2</sup>, PowerShot G11<sup>\*1\*2</sup>, PowerShot G12<sup>\*1\*2</sup>, PowerShot S90<sup>\*1\*2</sup>, PowerShot S95<sup>\*1\*2</sup>, PowerShot SX1 IS<sup>\*1\*2</sup>, and PowerShot SX50 HS<sup>\*1\*2</sup>

<sup>\*1</sup> For RAW images, functions that are not in the camera (such as the Auto Lighting Optimizer) and functions such as the Digital Lens Optimizer cannot be used. However, Picture Styles, even if not in the camera, can be used with the exception of some functionality.

<sup>\*2</sup> The following functions are unavailable.

- Basic Adjustment tool palette:
  - White balance [Fine-tune]
  - A portion of [Gamma adjustment]
  - Automatic gradation and luminance adjustment
  - Midpoint adjustment
  - Input white points range expansion
- Dust Delete/Copy Stamp tool palette
- Compositing tool
- HDR tool



# Supported Images

## Image data

Image type		Extension
Still photos	RAW images	Images in the Canon RAW format shot on supported cameras* .CR3 .CR2 .TIF .CRW
	JPEG images	Exif 2.2, 2.21 or 2.3-compatible JPEG images .JPG/.JPEG
	TIFF images	Exif-compatible TIFF images .TIF/.TIFF
Movies	Movies shot with supported cameras	.MOV .MP4

\* Compatible with RAW images shot with EOS D2000 that have been converted to RAW images using the CR2 Converter and have the ".CR2" extension.



# Contents

Introduction .....	2	Efficiently Checking/Sorting Images .....	30
Main Features of DPP .....	2	Sorting Images .....	32
System Requirements .....	3	Sorting Images in the Main Window .....	33
Supported Cameras.....	3	Arranging Images in the Main Window.....	34
Supported Images .....	4	Displaying a RAW Image and JPEG Image as a Single Image.....	35
1 Downloading Images .....	8	Checking Image Information.....	36
Starting up DPP .....	9	Organizing Images .....	38
Downloading Images to Your Computer.....	10	Deleting an Unwanted Image .....	38
Downloading Images Using the Software “EOS Utility” .....	10	Moving Images .....	38
Downloading Images Using Your Card Reader.....	10	Moving Images in Folders .....	39
2 Viewing Images .....	11	Registering Frequent-Use Folders (Bookmark Registration) .....	39
Viewing Images in the Main Window (Thumbnail Layout).....	12	4 Editing Images .....	40
Changing the Thumbnail Display .....	13	RAW Images .....	42
Enlarging and Viewing an Image in the Preview Window .....	17	RAW Images .....	42
Enlarging and Viewing a Specific Area.....	18	RAW Development.....	42
<b>Advanced</b> Checking the Image in Detail .....	19	When RAW Development is to be Done .....	42
Displaying the Main Window (Multi-layout).....	19	Advantages of a RAW Image .....	42
Checking an Image Using the Preview Control Panel.....	20	Editing JPEG and TIFF Images.....	43
Checking an Image in Multi-Function Preview.....	24	Tool Palettes.....	44
Checking an Image in Second Windows .....	25	<b>JPEG/TIFF</b> Editing with the Basic Adjustment Tool Palette .....	46
Opening and Closing Window Panels (Panels).....	26	Adjusting Brightness.....	46
Changing the Display Method and Order of Palettes.....	27	Changing the Picture Style .....	47
Changing the Display Method (Dock/Float) of Palettes.....	27	<b>Advanced</b> Using a Picture Style File.....	49
Rearranging Palettes .....	27	Adjusting Color Tone by Changing White Balance.....	49
Exiting DPP.....	28	Adjusting Color Tone Using Click White Balance.....	50
3 Organizing and Sorting Images .....	29	<b>Advanced</b> Adjusting White Balance with Color Temperature .....	51
		<b>Advanced</b> Tuning White Balance.....	51

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



Adjusting Contrast .....	52
<b>Advanced</b> Adjusting Brightness of Shadows/ Highlights .....	52
Changing Color Tone and Color Saturation.....	53
<b>Advanced</b> Adjusting Dynamic Range .....	54
Adjusting Gradation and Luminance Automatically .....	55
Using the Auto Lighting Optimizer .....	56
Adjusting Image Sharpness.....	57
<b>JPEG/TIFF</b> Editing with the Tone Adjustment Tool Palette.....	59
Adjusting Brightness and Contrast .....	59
Adjusting Color Tone Using Click White Balance.....	60
<b>Advanced</b> Adjusting Tone Curve.....	61
<b>Advanced</b> Adjusting Dynamic Range .....	63
Using the Auto Lighting Optimizer .....	63
<b>JPEG/TIFF</b> Editing with the Color Adjustment Tool Palette.....	64
<b>Advanced</b> Editing with the Color Adjustment Tool Palette.....	64
<b>JPEG/TIFF</b> Editing with the Detailed Adjustment Tool Palette.....	66
Reducing Noise .....	66
Adjusting Image Sharpness.....	67
Reducing Color Moiré in an Image .....	67
<b>JPEG/TIFF</b> Editing with the Trimming/Angle Adjustment Tool Palette.....	68
Editing with the Lens Correction Tool Palette.....	71
Correcting Lens Aberration .....	71
Making Corrections.....	72
Shooting Distance Information Slider .....	74
Correcting Multiple Images at a Time .....	75

Digital Lens Optimizer .....	75
Using the Digital Lens Optimizer .....	76
Adjusting Image Sharpness.....	78
<b>JPEG/TIFF</b> <b>Advanced</b> Editing with the Partial Adjustment Tool Palette .....	79
Making Partial Adjustments to Images ([Brightness], [Contrast], [Hue], [Saturation]).....	79
Making Partial Adjustments to Images ([Reduce color moiré]).....	81
Adjustment Groups.....	82
<b>JPEG/TIFF</b> Editing with the Dust Delete/Copy Stamp Tool Palette .....	83
Performing Automatic Dust Erasure Processing ....	83
Automatic Dust Erasure Processing in the Main Window.....	84
Manually Erasing Dust (Repair Function).....	85
Erasing Unwanted Parts of an Image (Copy Stamp Function) .....	87
Setting Work Color Space .....	88
Using the Soft-Proof Colors Function.....	89
Specifying the Size when Opening RAW Images.....	90
<b>JPEG/TIFF</b> Saving Editing Results.....	91
Saving Editing Contents to an Image .....	91
Saving as a separate image .....	91
<b>JPEG/TIFF</b> Re-Editing an Image.....	93
<b>JPEG/TIFF</b> Utilizing Adjustment Contents (Recipe).....	94
Copying a Recipe and Applying to Another Image.....	95
Saving a Recipe as a File.....	95
Loading and Applying Recipes .....	96
<b>JPEG/TIFF</b> Adjusting by Comparing Multiple Images ...	97
<b>JPEG/TIFF</b> Editing Efficiently .....	98
Editing in the Edit Image Window .....	98

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



Changing the Thumbnail Display Position to Horizontal.....	99	Batch Transfer Images to Image Editing Software .....	125
Gathering and Editing Images in the Collection Window .....	100	Batch Change the File Name of Images.....	126
<b>JPEG/TIFF</b> Compositing Images .....	102	Changing the File Name of Images in the Order in the Main Window .....	126
Compositing Methods .....	105	7 Remote Shooting .....	127
<b>JPEG/TIFF</b> Creating HDR (High Dynamic Range) Images .....	106	Remote Shooting.....	128
<b>Advanced</b> Using the Dual Pixel RAW Optimizer .....	109	Registering Click White Balance in the Camera... ..	131
Microadjustment of the Position of Maximum Sharpness and Resolution Using the Depth Information Contained within the Dual Pixel RAW File.....	109	8 Playing Back Movies and Saving Still Photos....	133
Reposition the Viewpoint or Foreground Bokeh for a More Pleasing Result .....	110	Playing Back Movies and Saving Still Photos .....	134
Reduces the Appearance of Ghosting in Images .....	111	9 Specifying Preferences .....	137
<b>Advanced</b> Transferring a RAW Image to Photoshop.....	113	Specifying Preferences.....	138
<b>Advanced</b> Customizing the Main Window Toolbar.....	114	General Settings.....	138
5 Printing Images.....	115	Image processing .....	139
Printing an Image.....	116	Color Management.....	141
Printing with Shooting Information .....	117	View Settings.....	142
Printing a Thumbnail List (Contact Sheet Printing) .....	118	Properties Display Settings .....	143
Plug-in printing.....	119	Reference .....	144
6 Processing Large Numbers of RAW Images.....	120	Troubleshooting.....	145
Batch Apply White Balance to Images (Personal White Balance) .....	121	Deleting the Software (Uninstalling) .....	146
Registering Personal White Balance .....	121	Image Frame Information in the Main Window and Edit Image Window.....	147
Applying Personal White Balance.....	122	Glossary .....	148
Batch Save as JPEG or TIFF Images (Batch Processing).....	123	Index.....	150
		About This Instruction Manual .....	154
		Trademarks .....	154

 
\* Sections with **JPEG/TIFF** and **JPEG/TIFF** in “4 Editing Images” support not only RAW image editing but also JPEG/TIFF image editing.

**JPEG/TIFF** : All the functions explained in the section support JPEG/TIFF image editing.

**JPEG/TIFF** : Certain functions explained in the section support JPEG/TIFF image editing.












# 1 Downloading Images



Starting up DPP .....	9
Downloading Images to Your Computer.....	10
Downloading Images Using the Software “EOS Utility” .....	10
Downloading Images Using Your Card Reader.....	10

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index





# Starting up DPP

Double-click the desktop icon.

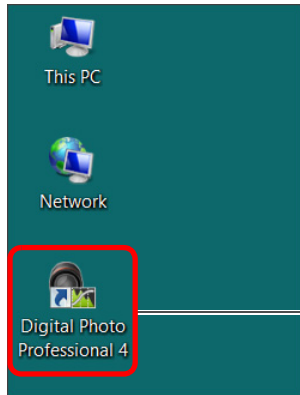


Double-click

→ DPP starts up and the main window (thumbnail layout) appears.



## Main window (thumbnail layout)

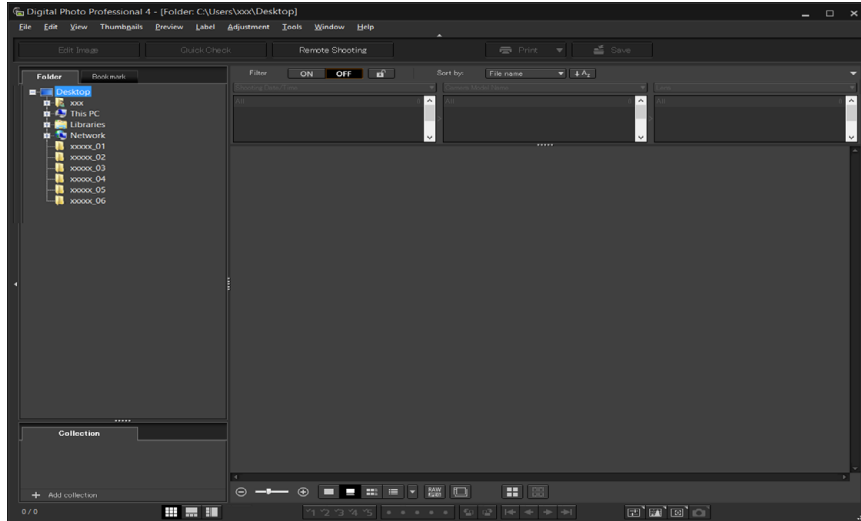

If you drop a DPP-supported image file onto the icon on the desktop, you can start up DPP and display the folder where the image file is saved.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Downloading Images to Your Computer

Download the images saved on the memory card inserted in the camera.

## Downloading Images Using the Software “EOS Utility”


You can download images with “EOS Utility”, communication software for the camera.

For detailed instructions on downloading images, refer to the “EOS Utility Instruction Manual” (PDF electronic manual).

## Downloading Images Using Your Card Reader

You can also download images to the computer using a third-party card reader.

- 1 **Load the memory card into the card reader.**
  - Start up DPP beforehand.
- 2 **Open [My Computer] ▶ [EOS\_DIGITAL] and drag the [DCIM] folder to the [Desktop].**

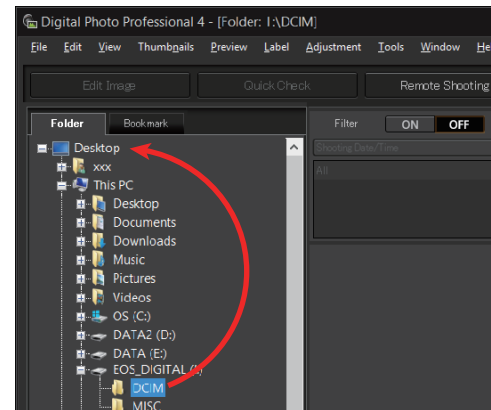

- The [DCIM] folder is copied to your computer.
- All images are saved in folder units inside the [DCIM] folder.
- Copying images to your computer will take some time when there is a large number of images saved on the memory card.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# 2 Viewing Images



Viewing Images in the Main Window (Thumbnail Layout) .....	12
Changing the Thumbnail Display.....	13
<b>Advanced</b> Using the Thumbnails Control Panel .....	14
<b>Advanced</b> Using the Thumbnail Display Filter/Sort Function.....	15
<b>Advanced</b> Displaying the Histogram Palette.....	16
Enlarging and Viewing an Image in the Preview Window .....	17
Enlarging and Viewing a Specific Area.....	18
<b>Advanced</b> Displaying the Navigator Palette .....	18
<b>Advanced</b> Checking the Image in Detail .....	19
Displaying the Main Window (Multi-layout).....	19
Checking an Image Using the Preview Control Panel.....	20
Changing the Magnification .....	20
Comparing with a Pinned (Fixed) Image .....	20
Displaying Multiple Images at the Same Time .....	21
Displaying Grid Lines.....	21
Displaying AF Points .....	21
Displaying Areas Beyond the Set Range with Warning Indicators (Highlight/Shadow Warning) .....	22
Comparing Pre- and Post-Editing Images (Single- Image Display).....	22
Comparing Pre- and Post-Editing Images (before/after comparison) Arrange vertically/horizontally (two- screen display) / Split vertically/horizontally (split- image display) .....	23
Displaying Image Properties.....	23
Checking an Image in Multi-Function Preview .....	24
Checking an Image in Second Windows .....	25
Opening and Closing Window Panels (Panels).....	26
Changing the Display Method and Order of Palettes .....	27
Changing the Display Method (Dock/Float) of Palettes.....	27
Rearranging Palettes.....	27
Exiting DPP .....	28

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index




# Viewing Images in the Main Window (Thumbnail Layout)

Images downloaded to your computer are displayed as a thumbnails list in the main window (thumbnail layout). You can double-click an image to open the preview window (p.17) and display the image at large size.

Main window

Toolbar

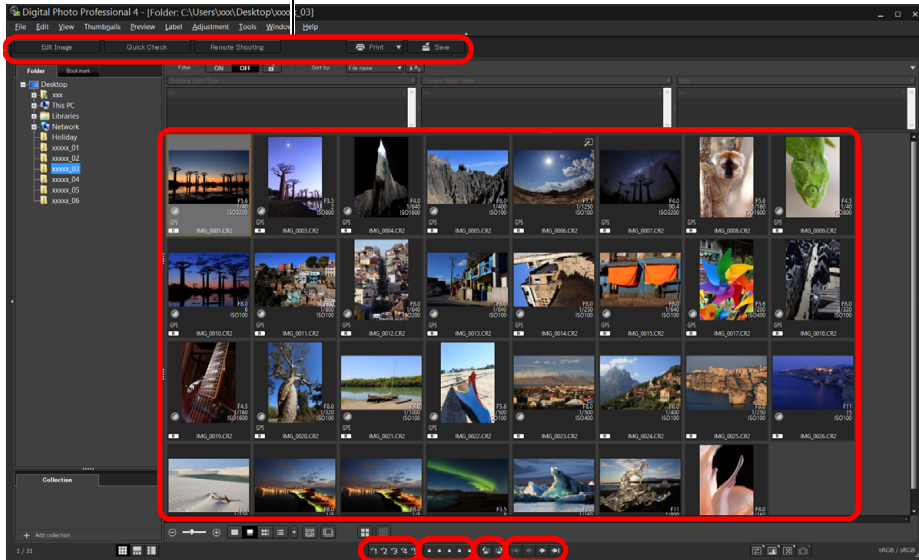

Check marks (p.32, p.33)  
Ratings (p.32, p.33)

Forward/Reverse  
Rotate image

- For information on icons displayed on the frame of a thumbnail, see “Image Frame Information in the Main Window and Edit Image Window” (p.147).



**32bit** On 32-bit OSs, up to only 1000 images can be displayed per folder. Starting with the 1001st image, images are handled in the same way as non-supported images. Try to maintain 1000 images or less per folder.



- For information on movie files, see “Playing Back Movies and Saving Still Photos” (p.134).
- When aspect ratio information is attached to an image shot with any supported camera other than the EOS 5D Mark II, the image is displayed as a cropped image (p.68).
- In the main window, in addition to this view (thumbnail layout), you can select multi-layout. Multi-layout allows you to check the image in detail (p.19).

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images


Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index

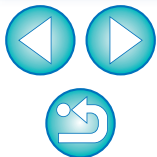

## Changing the Thumbnail Display

You can change the size of the thumbnail images displayed in the main window and select the information displayed for thumbnails.

Select the [Thumbnails] menu ▶ desired item.

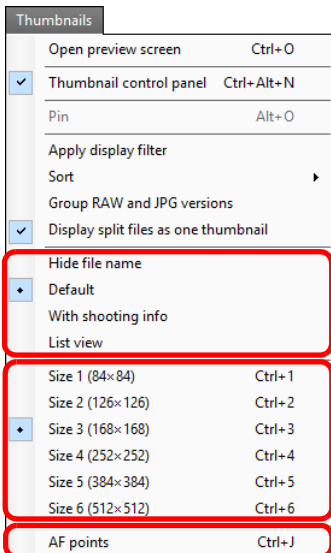

→ The display changes to the selected item.






## Advanced

## Using the Thumbnails Control Panel

The thumbnails control panel integrates various settings for viewing thumbnails.

By using this panel, you can view and specify the settings for thumbnails efficiently.

## Thumbnails control panel functions

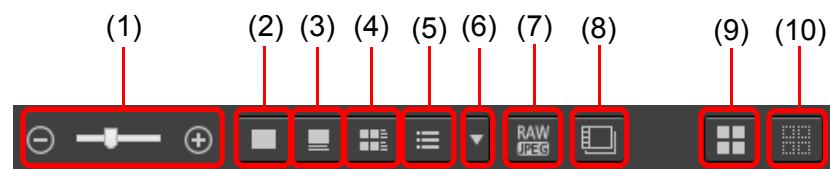

- (1) Change the size of thumbnails
- (2) Display thumbnails without file names
- (3) Display standard thumbnails
- (4) Display thumbnails with information
- (5) Display thumbnails in list
- (6) Specify properties display settings (p.143)
- (7) Display a RAW image and JPEG image as a single image  
Display a RAW image and JPEG image that were shot together as a single image. When this setting is specified, viewing and editing of images are as follows.
- Image displayed: Only the RAW image is displayed in all windows.
  - Edited image: The content which has been edited with any of DPP's functions (the tool palette etc.) will be applied to the RAW image only. However, if you have used the following functions, the adjustments will be applied to both the RAW image and the JPEG image.
    - Deleting an image (p.38)
    - Moving or copying an image (p.38)
    - Checkmarking (p.32 to p.33)
    - Rating (p.32 to p.33)
    - Rotating an image (p.12)
- (8) Display or play back split movie files as single movies  
When you play back split movie files in DPP, this setting plays back all the movie files in a continuous sequence from the beginning.
- This is set to ON by default.
  - Only the thumbnail for the first movie file is displayed.
  - This setting will be kept and applied the next time DPP is started up.
  - When the following functions are used, they apply to all the remaining split movie files, not just the first movie file: [Copy], [Cut], [Delete], [Add to collection], [Rename Tool]
  - When the Filter/Sort function (p.15) is used with thumbnails, the function is only applied to the first movie file.
- (9) Select all thumbnails
- (10) Cancel all thumbnail selections
- The thumbnails control panel is displayed in the main window by default. If it is not displayed, such as when screen settings have been changed, you can display it by selecting [Thumbnail control panel] in the [Thumbnails] menu.
  - In multi-layout (vertical thumbnails, p.19), only the thumbnail view setting (Default thumbnail display) is possible.






## Advanced


## Using the Thumbnail Display Filter/Sort Function

This function allows you to display only thumbnails that match the selected filtering option or to specify an option for sorting thumbnails.

## 1 Set the [Filter] button on the [Filter/Sort pane] in the main window to [ON].

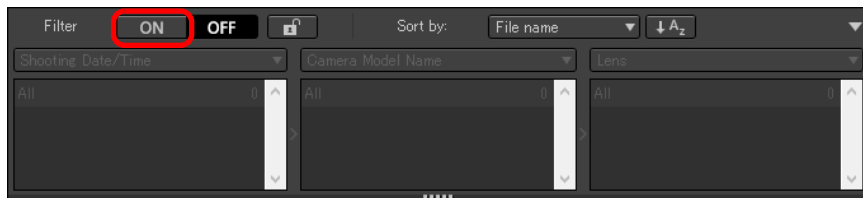

## 2 Specify settings.

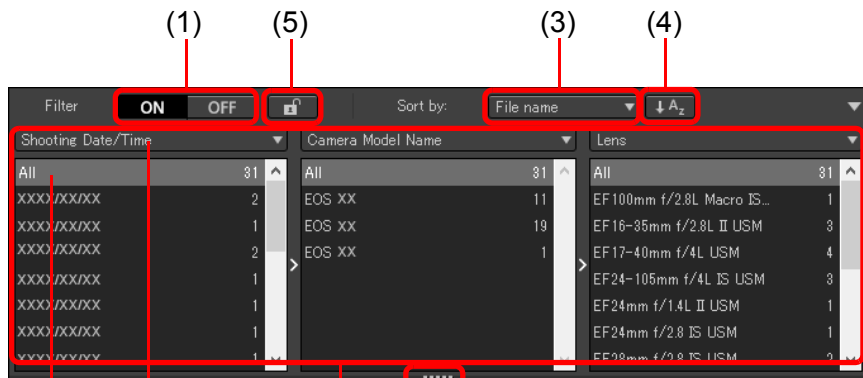

Filter menu  
Filter menu list  
(2) Drag to adjust display area of filter menu lists upward or downward

- You can drag the bottom edge of the [Filter/Sort pane] to adjust the display area of the filter menu lists upward or downward.

### (1) Thumbnail display filter ON/OFF

By setting to [ON], only thumbnails matching the filtering option set with (2) the filtering options menu are displayed.

### (2) Filtering options menu

Select a filtering option for the thumbnail display filter.

- After selecting a filtering item in the list box that appears by clicking [▼] at the right on the filter menu, options appear in the filter menu list. Select an option.
- You can select multiple options in the filter menu list. (Hold down the <Shift> key and left-click with the mouse for consecutive selection. Hold down the <Ctrl> key and left-click with the mouse to select individually.)
- The filter menus/filter menu lists are prioritized from left to right. You can specify filtering options from left to right to narrow down filtering.

### (3) Sorting options

Select an option for sorting thumbnails. If files were added, a "\*" is temporarily displayed after the option name. [Custom] is displayed if you sorted thumbnails in a chosen way.

### (4) Sort order selection


Select the order (ascending/descending) for sorting thumbnails.

### (5) Filter lock button

When the filter lock button is clicked, filter settings will be kept and applied when you switch to a different folder or the next time DPP is started up. When the filter lock button is not clicked, filter settings automatically change to [OFF] when you switch to a different folder or the next time DPP is started up.



- In addition to thumbnail display, this function can also be used in multi-layout.
- You can open/close the panel by clicking the [▼] button at the upper right of the [Filter/Sort pane].

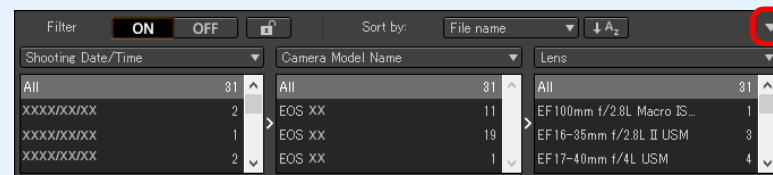


## Advanced


## Displaying the Histogram Palette

The histogram palette shows a histogram of the selected image. You can quickly check a histogram without opening a tool palette.


### Select the [View] menu ▶ [Histogram palette].

→ The histogram palette appears.

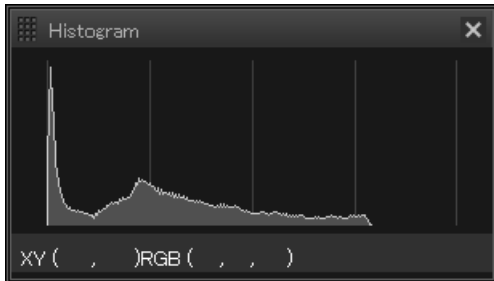

- You can select any of the following four histograms from the menu that appears when you right-click with the mouse. [Brightness only], [RGB separately], [YRGB separately], [RGB together]
- You can click the [  ] button at the bottom right of the main window to show/hide the [Histogram] palette.

# Enlarging and Viewing an Image in the Preview Window

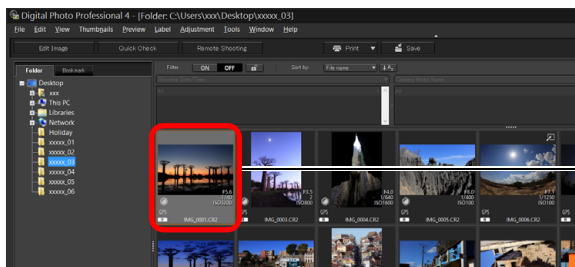

Double-click

→ The preview window appears.


- Up to 36 windows can be displayed at the same time for the preview window.  
(32bit On 32-bit OSs, up to 4 windows can be displayed at the same time.)



Preview window



Tool palette

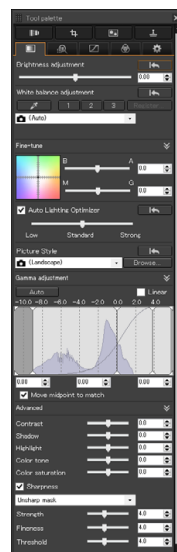

- Click the [X] in the upper right of the preview window to close the preview window.



By selecting the [Preview] menu ► [AF points] in the preview window, you can display the AF points selected in the camera at the time of shooting. However, AF points are not displayed for images whose image size has been changed and then been converted and saved (p.91), images for which you selected an effect other than [Shot settings] as correction of fisheye lens distortion aberration, or images which have had settings specified during RAW processing on the camera for distortion correction or chromatic aberration correction.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos


Specifying  
Preferences

Reference/  
Index




## Enlarging and Viewing a Specific Area


Click the area you want to enlarge.

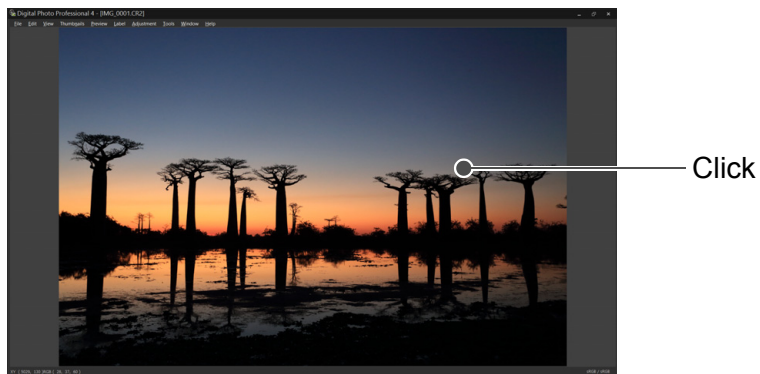

- The area you clicked is enlarged to 100% (actual pixel size).
- Click again to revert to the full view.
- To change the display area drag on the image.

 **To display an image in an enlargement ratio other than 100%**

Select any enlargement ratio from the [Preview] menu.

 While in the preview window, you can select the [Preview] menu ▶ [Preview control panel] to use various preview functions. For details, see “Checking an Image Using the Preview Control Panel” (p.20).


Advanced

## Displaying the Navigator Palette


The navigator palette shows the enlargement area of a selected image.

Select the [View] menu ▶ [Navigator palette].


→ The navigator palette appears.

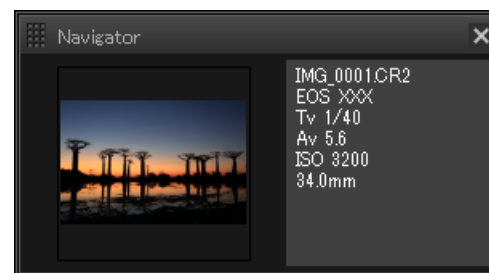

- When an image is enlarged in the preview or other window, the enlargement display area is indicated in the navigator palette. The area to be enlarged can be changed by dragging the enlargement display area on the image.

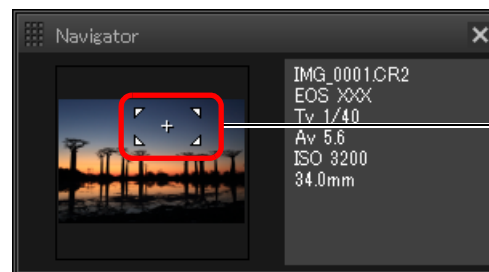

Change the enlargement display area by dragging

- You can click the  button at the bottom right of the main window to show/hide the [Navigator] palette.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Checking the Image in Detail

## Displaying the Main Window (Multi-layout)


By switching the main window to “multi-layout”, you can use the preview control panel to check the image in detail.

**Click a change layout button at the bottom of the main window (thumbnail layout).**


→ The main window (multi-layout) appears.

- In the main window (multi-layout), you can select from two layouts, with horizontal thumbnails or vertical thumbnails.
- Click the area you want to enlarge in the image displayed in the preview display area to display the image at actual pixel size (100%). Click the image again to revert to full display.

### Main Window (thumbnail layout)

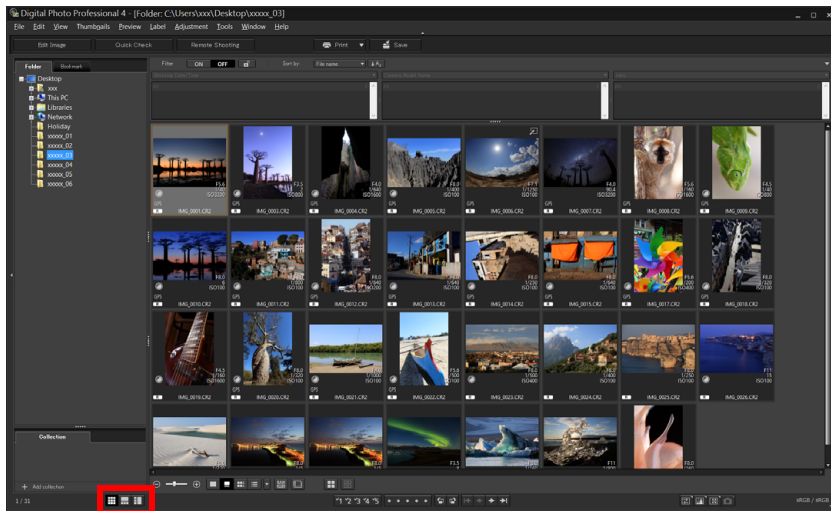

### Multi-layout (horizontal thumbnails)

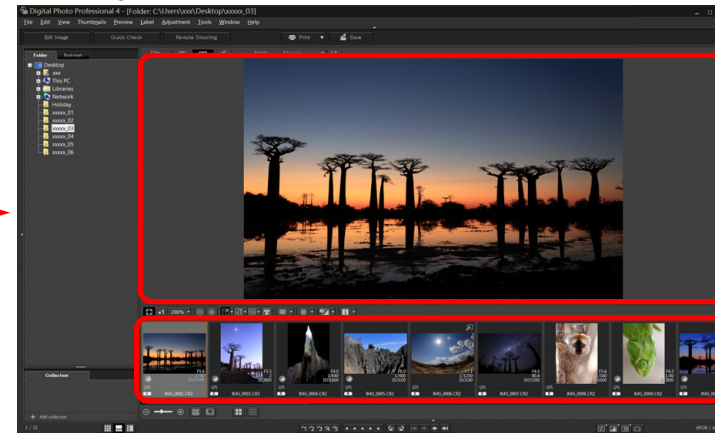


Preview display area

Thumbnail display area

### Multi-layout (vertical thumbnails)



Layout change button

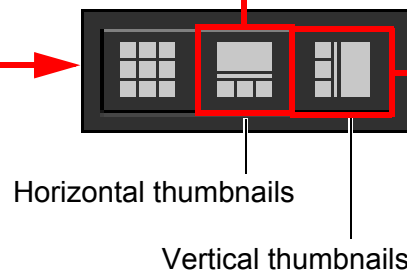

Horizontal thumbnails

Vertical thumbnails

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images


Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index

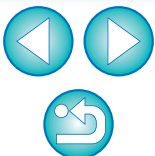




## Checking an Image Using the Preview Control Panel

With Preview control panel, you can check the image in detail. You can use this panel in the main window (multi-layout) and edit image window. If the preview control panel is not displayed, you can display it by selecting [Preview control panel] from the [Preview] menu. By default, the [Fit] button and [100%] button are selected. When you select a movie, the displayed content changes. For information on the display when movies are selected, see “Playing Back Movies and Saving Still Photos” (p.134)
 
## Changing the Magnification




Display the image at actual pixel size (100%).

200%

Click the [200%] button to display the image at the set magnification displayed. If the [Zoom In/Out] button is used to enlarge/reduce the image, the magnification set for this button also changes accordingly\*.

 \*Excluding actual pixel size (100%)



Enlarge/reduce the image.




Revert the zoomed image back to fit-to-window view.

## Comparing with a Pinned (Fixed) Image

You can split the window into two sections, and compare the images on the left and right by “pinning” an image in the left section then scrolling images in the right section. It improves efficiency of image selection.



Select an image and click the [Pin] button.

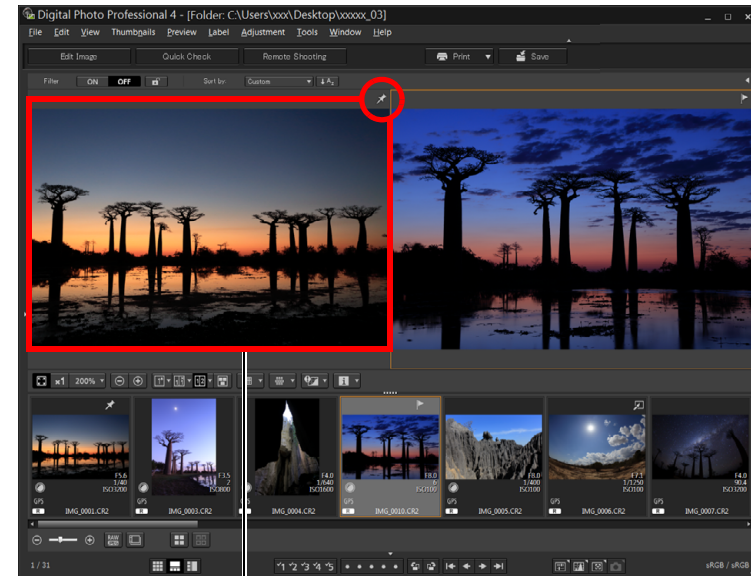

Pinned (fixed) image

- The window divides into left and right, and the selected image is pinned.
- When you pin an image and perform scrolling, the image on the left (pinned image) remains and only the image on the right is scrolled, which is convenient for image selection.
- To pin another image, select the image, then select [Pin] from the menu that appears when you right-click with the mouse.
- After pinning an image, you can click the [Pin] button to switch between top-bottom and left-right split screens.





## Displaying Multiple Images at the Same Time





Select multiple images, and click the [  ] button.

- The selected image is displayed.
- You can display up to 8 images.

 **32bit** On 32-bit OSs, this function is not available.  
(The [  ] button is not displayed.)

## Displaying Grid Lines



**1** Click the [  ] button beside the [  ] button, and set the spacing between grid lines on the menu that appears.



- To set the spacing, enter values (8 to 256, in pixels), or move the slider.
- After specifying settings, click the [Close] button and close the window.

**2** Select an image and click the [  ] button.

- The image with grid lines is displayed.

## Displaying AF Points




**1** Click the [  ] button beside the [  ] button, and select the item to display on the image on the menu that appears.

- Select [Show only AF points in focus] or [Show all AF points].

**2** Select an image and click the [  ] button.

- An image with the AF points selected in step 1 is displayed.

 
 AF points are not displayed for images whose image size has been changed and then been converted and saved (p.91), images for which you selected an effect other than [Shot settings] as correction of fisheye lens distortion aberration, or images which have had settings specified during RAW processing on the camera for distortion correction or chromatic aberration correction.

## Displaying Areas Beyond the Set Range with Warning Indicators (Highlight/Shadow Warning)

You can set up warning indicators for both highlighted and shadowed parts, which is effective for checking the clipped highlights and shadows and preventing excessive adjustment of an image. Where the area on the image has exceeded the set range, you can display the highlighted part in red and the shadowed part in blue.



- 1 Click the [ ] button beside the [ ] button, and specify settings on the menu that appears.

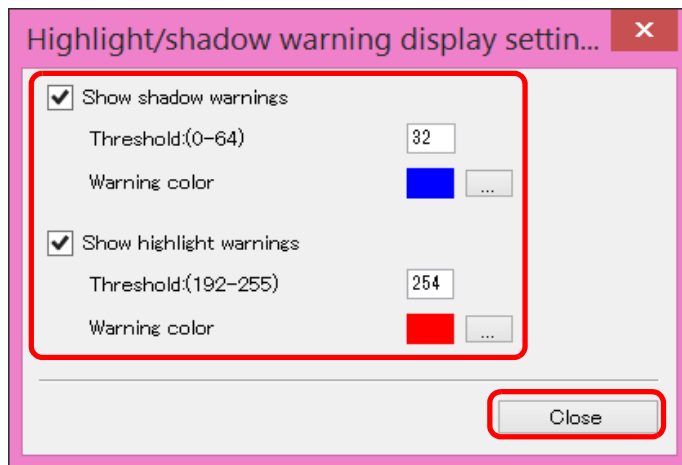

- Checkmark the [Show highlight warnings] and [Show shadow warnings] checkboxes and enter the warning values. You can also select different warning colors from the dialog that appears when you click the [ ] button.
- After specifying settings, click the [Close] button and close the window.

- 2 Select an image and click the [ ] button.

→ On the opened image, if there is an area that exceeds the value entered in step 1, the highlighted part of that area is displayed in red and the shadowed part is displayed in blue. If you selected different warning colors, the parts are displayed in the specified colors.

## Comparing Pre- and Post-Editing Images (Single-Image Display)



- 1 Select an image that is being edited and click the [ ] button.

- By clicking the button, the display switches between the image before editing and the current image (being edited).

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## Comparing Pre- and Post-Editing Images (before/after comparison) Arrange vertically/horizontally (two-screen display) / Split vertically/horizontally (split-image display)

You can display before and after versions of an adjusted image in the same window and check the adjustment results.

This function allows you to adjust an image while comparing the original image and image being edited.



- 1 Select an image that is being edited and click the [Compare] button.



- The image is displayed in two-screen display (Arrange vertically).
- The image before editing is on the left, and the currently edited is on the right.

- 2 Change the image display.


- The display switches in the following order by clicking the [Compare] button.  
Arrange vertically (two-screen: left/right) → Arrange horizontally (two-screen: top/bottom) → Split vertically (split-image: left/right) → Split horizontally (split-image: top/bottom)

## Displaying Image Properties

Display the shooting and recipe information for an image in the screen. You can select items to be displayed.



- 1 Click the [Compare] button beside the [Properties] button.  
→ The [Properties display settings] window appears.
- 2 Specify display settings.

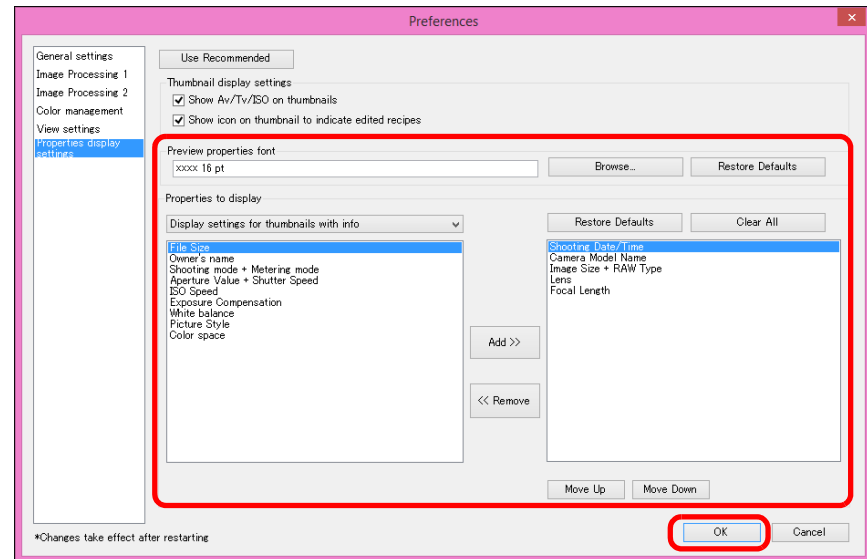

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



- 1 Select [Display settings for preview properties] from the [Properties to display] pulldown menu.
- 2 Specify display items with the [Add >>] button and [<< Remove] button. Items that can be selected appear in the list box at left, and actually displayed items appear in the list box at right. You can also change the display order with the [Move Up] button and [Move Down] button.

After specifying settings, click the [OK] button.

- With the [Preview properties font] option, you can specify the font used for information displayed in the preview window.

### 3 Select an image and click the [ ] button.

- The image and properties selected in step 2 are displayed in the screen.
- If the recipe contents of an image being edited are displayed in before/after comparison (two-screen display/split-image display), edited items are displayed in red.


## Checking an Image in Multi-Function Preview

The preview window shows the coordinates of the mouse cursor and the work color space. By switching to multi-function preview, you can also check image details in the same way as the main window (multi-layout).


- 1 Select the [Tools] menu ▶ [Preview screen display settings], and then [Multi-function preview] from the dialog that appears.

- 2 Open the preview window (p.17).

→ A multi-function preview with various functions at the bottom of the screen is displayed.

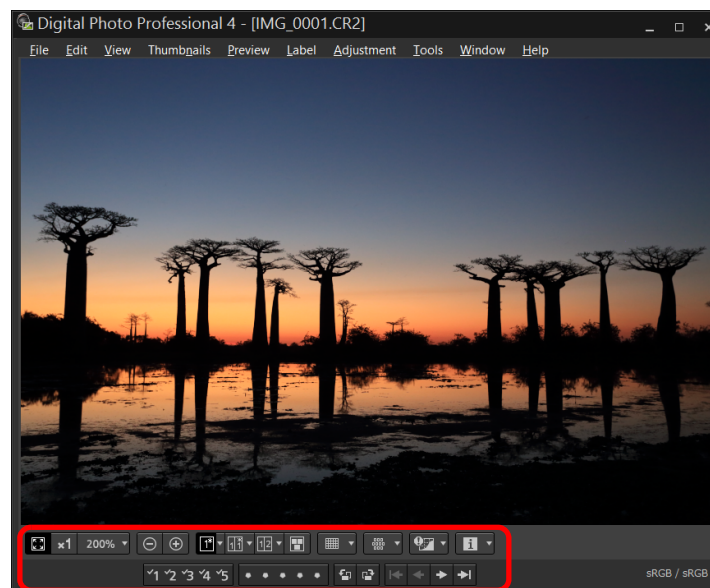

- For how to use the displayed functions, see “Viewing an Image in the Main Window (Thumbnail Layout)” (p.12) and “Checking an Image Using the Preview Control Panel” (p.20 to p.24).

 All the property items may not be displayed depending on the combination of window, preview window, or the size of thumbnails.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index






## Checking an Image in Second Windows

Second windows are preview windows that you can open additionally for thumbnails and image previews. You can display up to 4 second windows for a single image to check the focus in all parts of the image, etc.

**Select an image, and then select [Show second screen] from the menu that appears when you right-click with the mouse.**

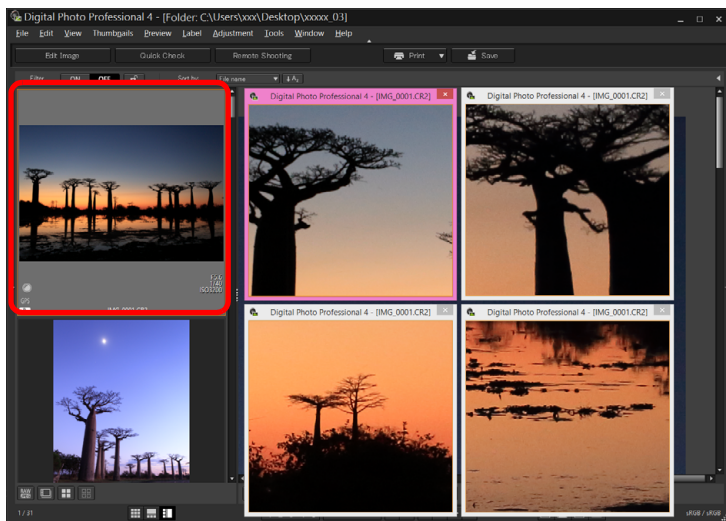

- A second window is displayed.
- To display an additional second window, repeat the operation.
- You can change the size of second windows as desired.
- Click the displayed image to switch between actual pixel size (100% view) and fit-to-window view.
- When you magnify an image in the second window, the right-clicked position on the image will be the center for the magnification.



**32bit** On 32-bit OSs, second windows cannot be displayed.



# Opening and Closing Window Panels (Panes)


Panels (panes) at the top, bottom, left, and right of each window can be closed to suit the tasks being performed.

You can use DPP in an optimal layout.

Click the [  ] for a panel to open or close.

Example: main window (thumbnail layout)



- When a panel is closed, you can point to [  ] with the mouse to temporarily open the panel.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





# Changing the Display Method and Order of Palettes

For any palette (tool palette, navigator palette, histogram palette, quick check palette, and camera control palette), you can change how the palette is displayed (docked/floating), or the display order of multiple docked palettes.

## Changing the Display Method (Dock/Float) of Palettes

**Right-click on the palette's title bar (where its name is shown) and click [Dock/float] in the dialog that appears.**

- A docked palette is then displayed floating, and a floating palette is then displayed docked.
- To revert to the original display method, repeat the same operation again.

## Rearranging Palettes

When multiple palettes are docked, you can rearrange their order from top to bottom.

**Right-click on the palette's title bar (where its name is shown) and click [Move one up] or [Move one down] in the dialog that appears.**

- The order of the palettes is changed.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos


Specifying  
Preferences

Reference/  
Index



# Exiting DPP

In the main window, select the [File] menu ▶ [Exit].

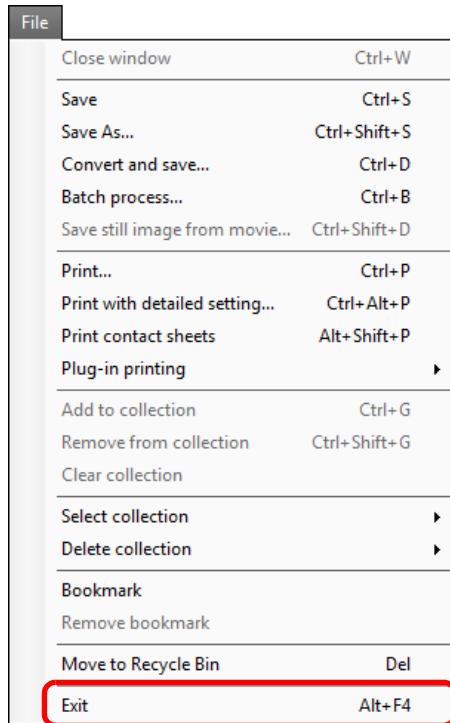

→ DPP exits.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos


Specifying  
Preferences

Reference/  
Index



A confirmation dialog box for saving the images appears when you try to exit DPP without saving the adjusted image. Click the [Yes to all] button to save the adjustment contents (recipe) to all the images adjusted.

# 3 Organizing and Sorting Images

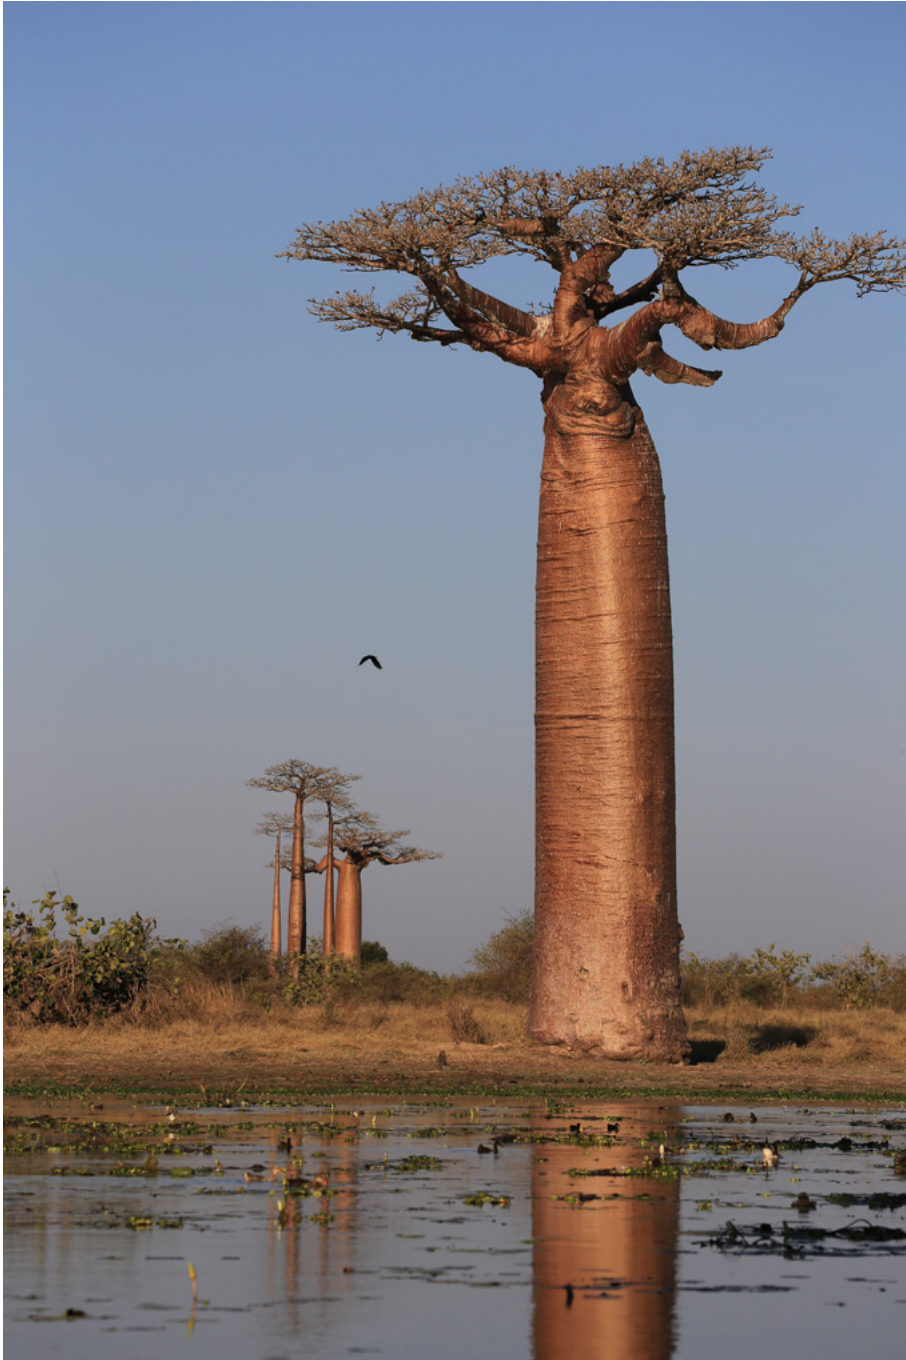

Efficiently Checking/Sorting Images .....	30
Sorting Images .....	32
Attaching Check Marks .....	32
Setting Ratings .....	32
Sorting Images in the Main Window .....	33
Attaching Check Marks in the Main Window .....	33
Setting Ratings in the Main Window .....	33
Arranging Images in the Main Window .....	34
Arranging by Type .....	34
Arranging Freely .....	35
Displaying a RAW Image and JPEG Image as a Single Image.....	35
Checking Image Information.....	36
Organizing Images .....	38
Deleting an Unwanted Image .....	38
Moving Images .....	38
Moving Images in Folders .....	39
Registering Frequent-Use Folders (Bookmark Registration) .....	39
Deleting Bookmarks .....	39

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index



# Efficiently Checking/Sorting Images

You can enlarge images displayed as thumbnails in the main window and efficiently check each image. You can sort images into groups. Note that this function does not apply to movie files.


- 1 Select multiple images to check in the main window.
- 2 Display the quick check window.
  - Click the [Quick check] button.

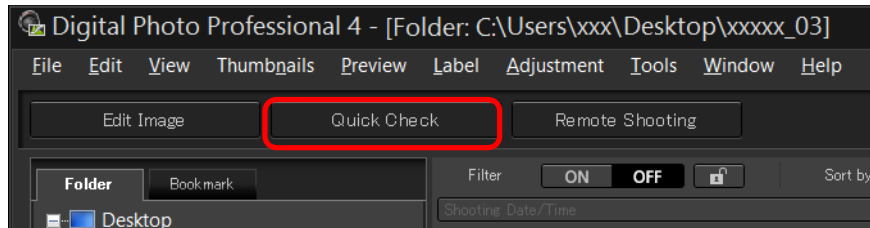

→ The quick check window appears.

- 3 Click the [←] or [→] button to switch between images to be checked.

## Quick check window

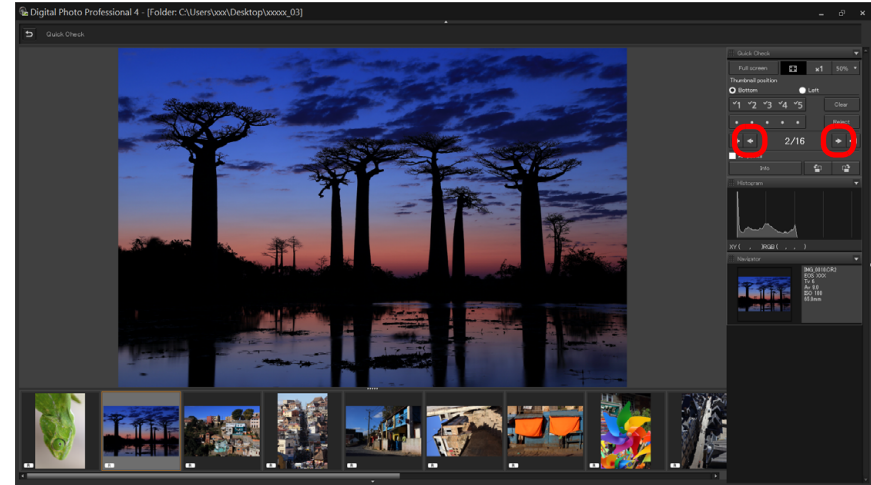

- All the images displayed in the main window can be checked in the quick check window.
- If you click the [←] button, the first image is displayed, and if you click the [→] button, the last image is displayed.
- Click the [↵] button to return to the main window.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting


Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## 4 Click the area you want to enlarge.

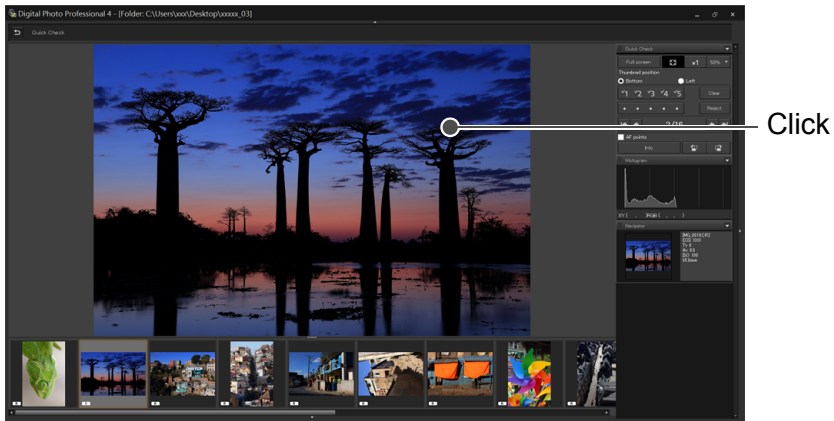

- The area you clicked is displayed at 100% (actual pixel size).
- To change the display position, drag on the image.
- If you click the [ 50% ] button, you can display the image at 50%.
- Click again to revert to the full view.
- To exit, click the [ ↵ ] button.



- In addition to 100% and 50%, you can display images at 12.5%, 25%, 200%, 300%, and 400%. Click the [ ▾ ] button beside the [ 50% ] button on the screen, and select a magnification from the menu that appears.
- If you click the [ 50% ] button (the selected magnification appears on the button), the image appears at the selected magnification. However, after the quick check window is closed, the image returns to its original 50% view.
- When [AF Point] is checkmarked, you can display the AF points selected in the camera at the time of shooting. However, AF points are not displayed for images which have had their image size changed and then been converted and saved (p.91), which have had settings specified during RAW processing on the camera for distortion correction and chromatic aberration correction, which are composited, or which are created as HDR (High Dynamic Range) images.



## Convenient functions of the quick check window

- **To check only selected images**  
You can use the quick check window to check only selected images by selecting the desired images from those displayed in the main window and then performing step 1.
- **Switching between images using the keyboard**  
You can also switch between images by pressing the <→> or <←> key.
- **Switching between screens using the keyboard**  
You can also switch between full screen display/normal screen display by pressing the <Alt> + <Enter> keys.
- **Operations using the menu**  
Each operation can also be performed with the menu which appears when you right-click with the mouse on an image.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index






## Sorting Images

You can sort images by attaching check marks or setting ratings (indicated with [★] marks) for each subject or theme.


### Attaching Check Marks

Display the image you want to attach a check mark to, and then click any one of [✓1] to [✓5].

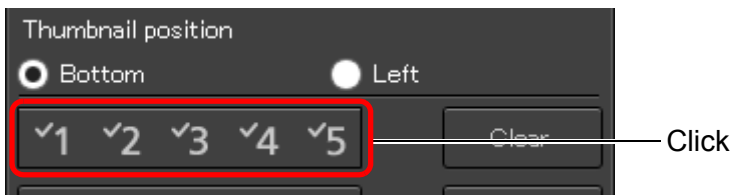

→ The selected check mark appears in the upper left of the window.


Check mark

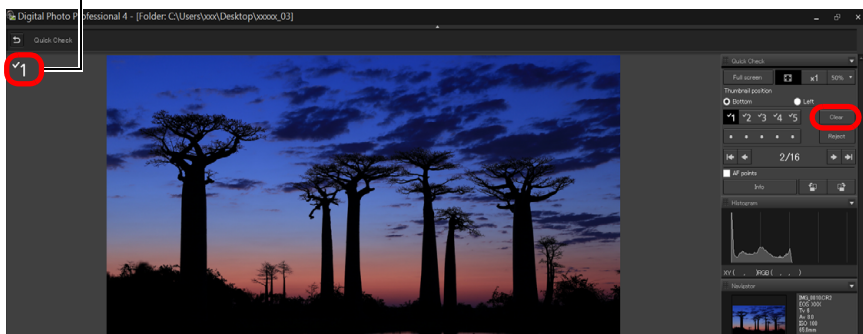

● Click the [Clear] button to remove the check mark.

### Setting Ratings


Display the image you want to rate, and then click any one of the [★].

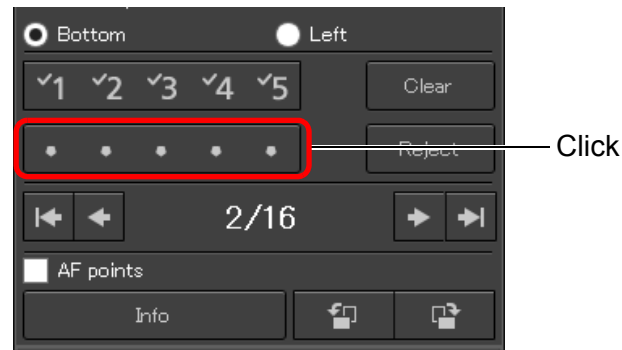

→ The rating is set and an icon corresponding to the selected [★] appears in the upper left of the window. (Window shown with a rating of three [★★★])

● To set [Reject], click the [Reject] button. Click the [Reject] button again to cancel.

Rating icon

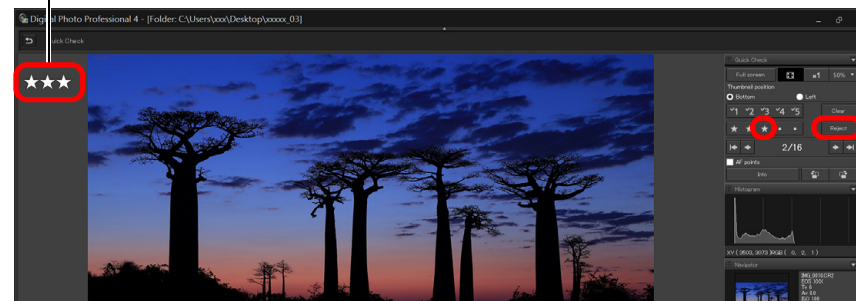

● To cancel the rating, click the same [★] as when the setting was made on the right of the window.

- The values of check marks attached to images in versions before DPP 4 are not maintained.
- You can also attach check marks from the menu that appears by right-clicking with the mouse on an image in the main window.


⚠ As the file structure of the image data is changed when a rating is set to an image, it may not be possible to check the image information in third-party software.

## Sorting Images in the Main Window

You can also sort images in the main window by attaching check marks or setting ratings (indicated with [★] marks) for each subject or theme.

### Attaching Check Marks in the Main Window


Select the images you want to attach a check mark to, and then click any of [✓1] to [✓5].

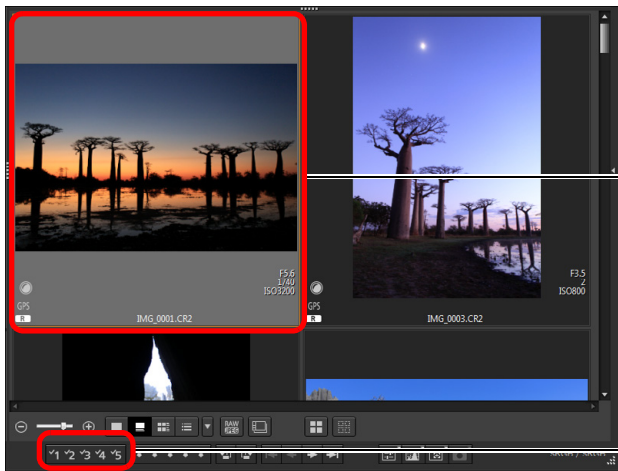

Select

Click

→ The selected check mark appears in the upper left of the image frame.

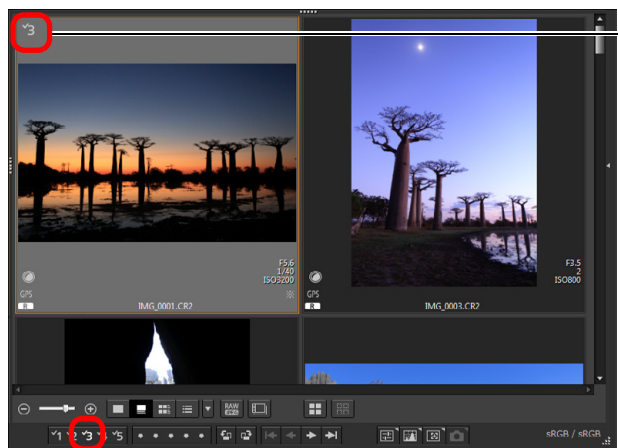


Check mark

● Click the check mark again to remove the check marks.

### Setting Ratings in the Main Window

Select the images you want to rate, and then click any of the [○].

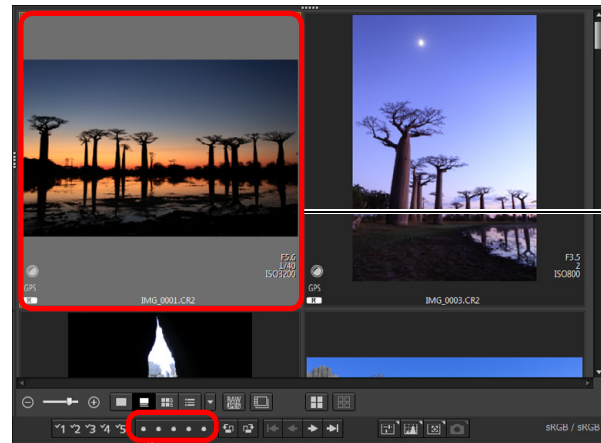


Select

Click (changes to [★] after clicking [○])

→ The rating is set and an icon corresponding to the selected [★] appears in the image frame.

(Sample window shown with a rating of three [★] as an example)

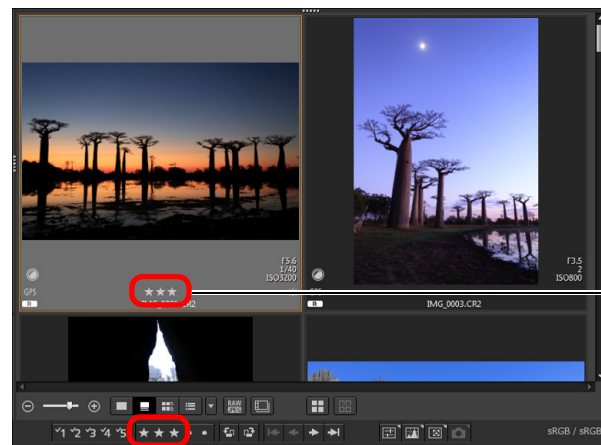

Rating icon

● To cancel the rating, click the same [★] as when the setting was made.

● Set [Reject] with the [Label] menu or the quick check window (p.30).



## To select multiple images in the main window

Click on desired images while holding down the <Ctrl> key. To select multiple consecutive images, click on the first image, and then click on the last image while holding down the <Shift> key.



- The [Label] menu can also be used to attach check marks and set ratings.
- You can display and change the rating settings set in DPP with other EOS software and with any supported EOS camera (for the EOS 7D, version 2.0.0 or later firmware) except the EOS-1D Mark IV, EOS-1Ds Mark III, EOS-1D Mark III, EOS-1D Mark II N, EOS-1Ds Mark II, EOS-1D Mark II, EOS-1D, EOS-1Ds, EOS 5D Mark II, EOS 5D, EOS 50D, EOS 40D, EOS 30D, EOS 20D/ EOS 20Da, EOS 10D, EOS D2000, EOS D30, EOS D60, EOS 550D, EOS 500D, EOS 450D, EOS 1000D, EOS 400D, EOS 350D, and EOS 300D.
  - EOS Utility version 2.9 or later: Ratings set in DPP are displayed. However, [Reject] is not displayed and you cannot change rating settings.
- With any supported camera (for the EOS 7D, version 2.0.0 or later firmware) except the EOS-1D Mark IV, EOS-1Ds Mark III, EOS-1D Mark III, EOS-1D Mark II N, EOS-1Ds Mark II, EOS-1D Mark II, EOS-1D, EOS-1Ds, EOS 5D Mark II, EOS 5D, EOS 50D, EOS 40D, EOS 30D, EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D30, EOS D60, EOS 550D, EOS 500D, EOS 450D, EOS 1000D, EOS 400D, EOS 350D, and EOS 300D: Ratings set in DPP are displayed in the playback screen. You can also change rating settings. However, you cannot display or change settings for [Reject].
- Reversely, you can also display and change in DPP the rating settings set for images on any supported EOS camera (for the EOS 7D, version 2.0.0 or later firmware) except the EOS-1D Mark IV, EOS-1Ds Mark III, EOS-1D Mark III, EOS-1D Mark II N, EOS-1Ds Mark II, EOS-1D Mark II, EOS-1D, EOS-1Ds, EOS 5D Mark II, EOS 5D, EOS 50D, EOS 40D, EOS 30D, EOS 20D/ EOS 20Da, EOS 10D, EOS D2000, EOS D30, EOS D60, EOS 550D, EOS 500D, EOS 450D, EOS 1000D, EOS 400D, EOS 350D, and EOS 300D.

## Arranging Images in the Main Window

You can arrange images in the order of the types of check marks you have attached to images, or in the order of date and time at which the images were shot. You can also freely arrange images by moving them individually.

### Arranging by Type

Select the [Thumbnails] menu ▶ [Sort] ▶ desired item.

→ The images are arranged in the order according to the selected item.

Main sort items	Description
File name: ascending order	Images are sorted by file name in alphanumeric order (0 to 9 → A to Z).
Extension: ascending order	Images are sorted in the following order: RAW images → JPEG images → TIFF images → MOV movies → MP4 movies.
Shooting Date/Time: ascending order	Images are sorted by shooting date and time from the earliest.
Check mark: ascending order	Images with check marks take priority and are sorted in number order.
Rating: ascending order	Sorted in order of fewest [★].
Camera Model Name: ascending order	Sorted in order of least digit used in the camera model name. (Ex.: EOS-1D X → EOS 6D)
Lens: ascending order	Sorted in order of shooting lens with shortest focal length.
ISO speed: ascending order	Sorted in order of lowest speed.
Shutter speed: ascending order	Sorted in order of fastest shutter speed.
Aperture value: ascending order	Sorted in order of lowest aperture value.
Focal length: ascending order	Sorted in order of shooting lens with shortest set focal length.

\* You can also arrange images by [Image Size], [RAW Type], and [Recipe editing status].

\* Descending order sorts all items in the reverse of ascending order.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index





## Arranging Freely

Drag and drop the image to the desired location.

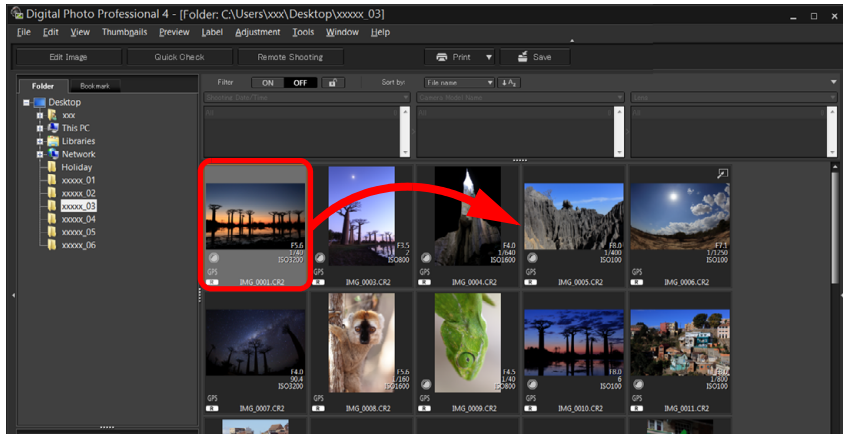

- The image moves to the desired location.
- You can also select multiple images (p.34) and move them.
- The order of rearranged images is temporarily registered as [Custom] in the [Filter/Sort pane] and maintained until you exit DPP or select another folder in the folder area.
- Select the [Thumbnails] menu ▶ [Sort] ▶ [File name] and [Ascending] to revert to the order before the images were rearranged.



### Maintaining the order of rearranged images

You can maintain the order of rearranged images even if you exit DPP or select another folder in the folder area.

- **Maintain order without changing image file names**  
You can use the [View Settings] tab sheet in [Preferences] to maintain the order of images without changing the image file names (p.142).
- **Maintain order and change image file names**  
You can use the rename function to maintain the order of images and change the image file names all at once in the order they were rearranged (p.126).

## Displaying a RAW Image and JPEG Image as a Single Image

You can display and handle a RAW image and JPEG image shot simultaneously as a single image. In particular, you can halve the number of images displayed in the main window and you can streamline the checking of a large number of images shot simultaneously.

### Select the [Thumbnails] menu ▶ [Group RAW and JPG versions].

→ The main window display updates and the simultaneously shot RAW image and JPEG image are displayed as a single image with the [R+J] mark (p.147).



### RAW images with the extension “.CR2” or “.CR3” can be displayed as a single image

Images that can be displayed as a single image are images shot with a camera that shoots RAW images with the extension “.CR2”, “.CR3”, and JPEG images simultaneously. Images that have been simultaneously shot with a camera that shoots RAW images with the extension “.CRW” or “.TIF” cannot be displayed as a single image.



### When a single image is displayed

- **Image displayed**  
The RAW image is displayed in all windows.
- **Edited image**  
The content which has been adjusted with any of DPP's functions (the tool palette etc.) will be applied to the RAW image only. However, if you have used the following functions, the adjustments will be applied to both the RAW image and the JPEG image.
  - Deleting an image (p.38)
  - Moving or copying an image (p.38)
  - Checkmarking (p.32, p.33)
  - Rating (p.32, p.33)
  - Rotating an image (p.12)

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





## ● Images added to the [Collection] window

When you add a RAW image and JPEG image displayed as a single image to the [Collection] window, the single image is marked with the [R+J] mark. However, because the RAW and JPEG images are actually added individually, the number of images shown on the [Collection] tab sheet increases by 2.

## Checking Image Information

- 1 Select the image for which you want to check the image information.
- 2 Select the [View] menu ▶ [Info].  
→ The image information window appears.
- 3 Select a tab sheet and check information.

### Image information window

[Exif Information]  
tab sheet

Item	Value
File Name	IMG_0001.CR2
File Size	24.5MB
Camera Model	Canon EOS XXX
Firmware	Firmware Version XXX
Shooting Date/Time	XXXX/XX/XX XXXXX
Owner's Name	
Shooting Mode	Aperture-Priority AE
Tv(Shutter Speed)	1/40
Av(Aperture Value)	5.6
Metering Mode	Evaluative Metering
Exposure Compensa...	0
ISO Speed	3200
Auto ISO Speed	ON
Lens	EF17-40mm f/4L USM
Focal Length	34.0mm
Image Size	XXXXX XXXXX
Aspect ratio	3:2
Image Quality	RAW
Flash	OFF
FE lock	OFF
White Balance Mode	Auto
AF Mode	Manual focusing
Picture Style	Landscape
Sharpness	4

[XMP/IPTC Information]  
tab sheet

Item	Value
Description	
[Document Title]	XXXXXXXXXX
[Creator]	XXXXXXXXXX
[Creator's job Title]	XXXXXXXXXX
[Description]	XXXXXXXXXX
[Description Writer]	XXXXXXXXXX
[Keywords]	XXXXXXXXXX
[Copyright Status]	XXXXXXXXXX
[Copyright Notice]	XXXXXXXXXX
[Copyright info URL]	XXXXXXXXXX

[Recipes]  
tab sheet

Item	Value
Brightness adjustment	0.00
White balance (Auto)	
Picture Style (Landscape)	
Contrast	0.0
Shadow	0.0
Highlight	0.0
Color tone	0.0
Color saturation	0.0
Linear	Off
Black point	0.00
Midpoint	0.00
White point	0.00
Sharpness	Strength : 4.0 Finer
Auto Lighting Optimizer	Standard
RGB tone curves	Original
Reduce luminance noise	9.0
Reduce chrominance noise	11.0
Color adjustment	Off
Hue	0.0
Saturation	+100.0
Red	Off
Orange	Off
Yellow	Off
Green	Off
Aqua	Off
Blue	Off
Purple	Off
Magenta	Off
Lens correction	On
Digital Lens Optimizer	Off
Peripheral illumination	40.0
Chromatic aberration	100.0 R 0.0 B 0.0



If you cancel selection of [Group RAW and JPG versions], the RAW image and JPEG image are displayed as separate images.



- Shooting information is displayed in the [Exif Information] tab sheet, while IPTC\* information appended to the image after shooting is displayed in the [XMP/IPTC Information] tab sheet. IPTC\* information provides additional comments on images, such as captions, credits and the shooting location. The information is sorted into 5 different categories and can be viewed by selecting [Description], [IPTC Contact], [IPTC Image], [IPTC Content] or [IPTC Status] from the list box in the [XMP/IPTC Information] tab sheet.

\* International Press Telecommunications Council (IPTC)

- The contents of the [Exif Information] tab sheet will vary depending on the camera model.
- Recipe contents applied to an image are displayed in the [Recipes] tab sheet.



#### Convenient uses in the main window

- **Switching displays**

If a different image is selected in the main window when the image information window is displayed, the image information for that image will be displayed.

- **Difference with the thumbnail with shooting information**

Detailed shooting information for each image is displayed in the image information window. However, if you want to only check the main shooting information, you can check it for each image in [Thumbnails] menu ▶ [With shooting info] (p.13).

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Organizing Images


This section explains how to delete unwanted images, move or copy images, etc., to organize your images.

## Deleting an Unwanted Image

Be aware that you cannot recover deleted images.

1 Select an unwanted image in the main window.

2 Select the [File] menu ▶ [Move to Recycle Bin].

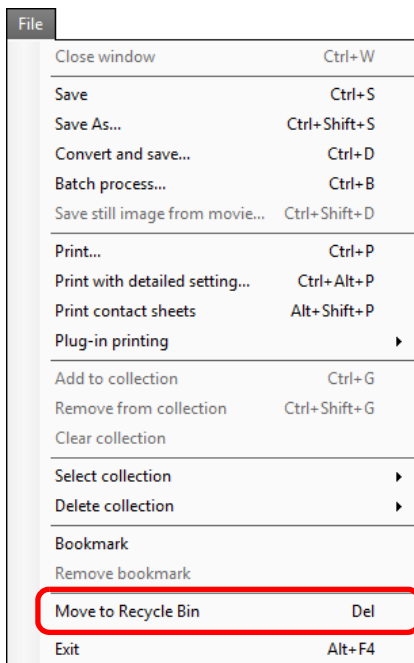

→ The image is moved to the [Recycle Bin] and is deleted from DPP.


- The images are deleted completely from your computer when the [Empty Recycle Bin] operation is performed on the [Recycle Bin] on the desktop.

## Moving Images

You can move or copy images to a separate folder and sort by shooting date or themes.

**Drag the image to be moved or copied.**

- **To move:** Drag the image and release when the image is in the destination folder.
- **To copy:** Drag the image while holding down the <Ctrl> key and release when the image is in the destination folder.

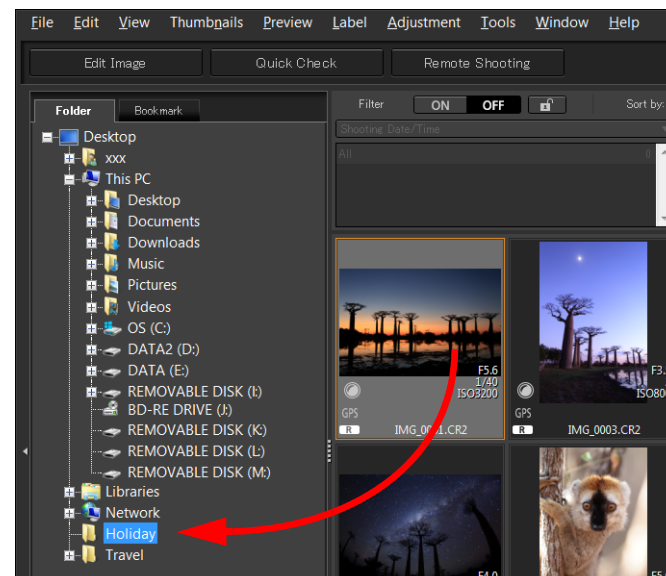

→ The images are moved or copied to the destination folder.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index




## Moving Images in Folders

You can move or copy folders that contain images, and sort the images by folders.

### Drag the folder to be moved or copied.

- **To move:** Drag the folder and release when the folder is in the destination folder.
- **To copy:** Drag the folder while holding down the <Ctrl> key and release when the folder is in the destination folder.

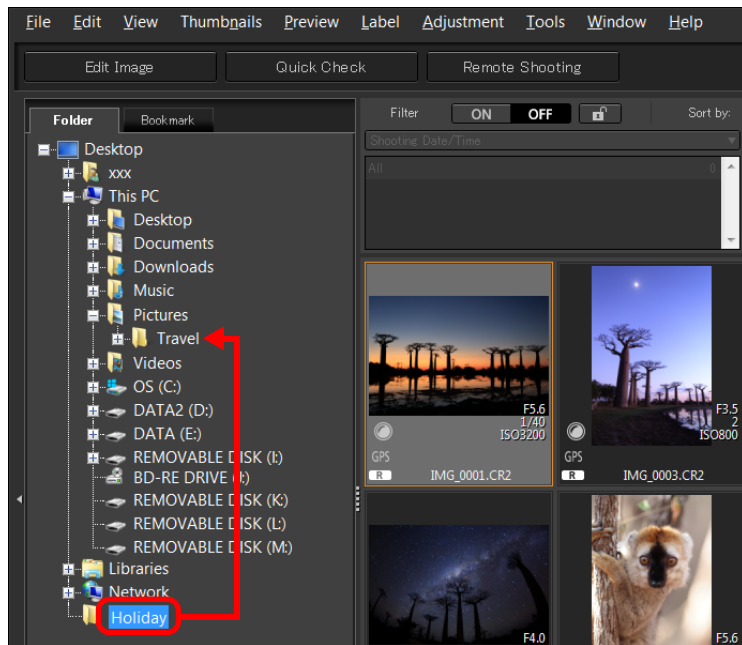


→ The folders are moved or copied to the destination folder.

## Registering Frequent-Use Folders (Bookmark Registration)

You can register frequently used folders in bookmarks. Registered folders are displayed in the [Bookmark] tab sheet in the main window.

### 1 Select the folder for which a bookmark is to be registered.

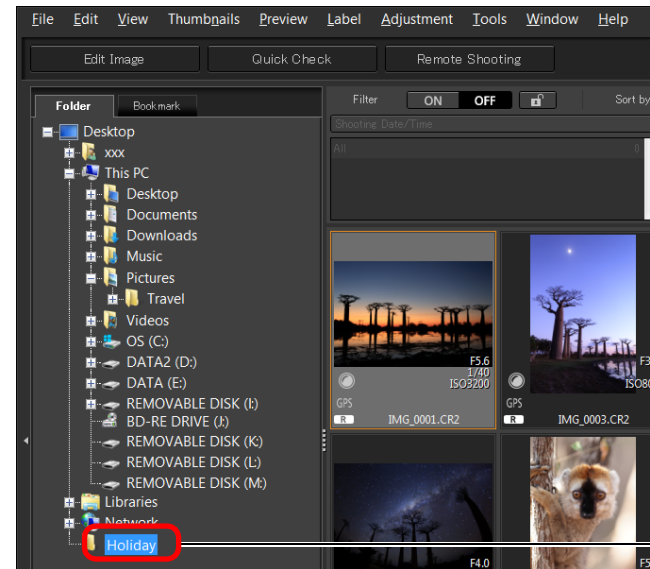

### 2 Select the [File] menu ▶ [Bookmark].

→ The folder selected in step 1 is registered in the [Bookmark] tab sheet in the main window.

## Deleting Bookmarks

You can delete a folder registered in [Bookmark].

### Select the [File] menu ▶ [Remove bookmark].

→ The selected folder is deleted from bookmarks.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# 4 Editing Images

RAW Images .....	42	Adjusting Brightness and Contrast .....	59
RAW Images.....	42	Adjusting Color Tone Using Click White Balance.....	60
RAW Development .....	42	<b>Advanced</b> Adjusting Tone Curve .....	61
When RAW Development is to be Done.....	42	Example of a Tone Curve Operation .....	62
Advantages of a RAW Image .....	42	<b>Advanced</b> Adjusting Dynamic Range.....	63
Editing JPEG and TIFF Images .....	43	Using the Auto Lighting Optimizer .....	63
Tool Palettes .....	44	<b>JPEG/TIFF</b> Editing with the Color Adjustment Tool Palette .....	64
<b>JPEG/TIFF</b> Editing with the Basic Adjustment Tool Palette .....	46	<b>Advanced</b> Editing with the Color Adjustment Tool Palette .....	64
Adjusting Brightness.....	46	Adjusting a Specific Color Gamut.....	64
Changing the Picture Style .....	47	Adjusting Hue and Saturation for an Entire Image .....	65
<b>Advanced</b> Using a Picture Style File .....	49	Adjusting in Monochrome .....	65
Adjusting Color Tone by Changing White Balance....	49	<b>JPEG/TIFF</b> Editing with the Detailed Adjustment Tool Palette .....	66
Adjusting Color Tone Using Click White Balance .....	50	Reducing Noise .....	66
<b>Advanced</b> Adjusting White Balance with Color Temperature .....	51	Adjusting Image Sharpness.....	67
<b>Advanced</b> Tuning White Balance .....	51	Reducing Color Moiré in an Image.....	67
Adjusting Contrast .....	52	<b>JPEG/TIFF</b> Editing with the Trimming/Angle Adjustment Tool Palette .....	68
<b>Advanced</b> Adjusting Brightness of Shadows/ Highlights .....	52	Editing with the Lens Correction Tool Palette.....	71
Changing Color Tone and Color Saturation.....	53	Correcting Lens Aberration.....	71
Adjusting Monochrome .....	53	Making Corrections.....	72
<b>Advanced</b> Adjusting Dynamic Range.....	54	Effects of Distortion Correction for Fisheye Lenses .....	73
Adjusting Gradation and Luminance Automatically ...	55	Shooting Distance Information Slider .....	74
Using the Auto Lighting Optimizer .....	56	Correcting Multiple Images at a Time.....	75
Adjusting Image Sharpness.....	57	Digital Lens Optimizer .....	75
Detailed Setting of Image Sharpness .....	58		
<b>JPEG/TIFF</b> Editing with the Tone Adjustment Tool Palette .....	59		

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

**4**  
Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



Using the Digital Lens Optimizer .....	76
Adjusting Image Sharpness.....	78
<b>JPEG/TIFF</b> <b>Advanced</b> Editing with the Partial Adjustment Tool Palette .....	79
Making Partial Adjustments to Images ([Brightness], [Contrast], [Hue], [Saturation]).....	79
Making Partial Adjustments to Images ([Reduce color moiré]).....	81
Adjustment Groups .....	82
<b>JPEG/TIFF</b> Editing with the Dust Delete/Copy Stamp Tool Palette .....	83
Performing Automatic Dust Erasure Processing .....	83
Automatic Dust Erasure Processing in the Main Window .....	84
Manually Erasing Dust (Repair Function).....	85
Erasing Unwanted Parts of an Image (Copy Stamp Function).....	87
Setting Work Color Space.....	88
Using the Soft-Proof Colors Function.....	89
Specifying the Size when Opening RAW Images ....	90
<b>JPEG/TIFF</b> Saving Editing Results.....	91
Saving Editing Contents to an Image .....	91
Saving as a separate image .....	91
<b>JPEG/TIFF</b> Re-Editing an Image.....	93
<b>JPEG/TIFF</b> Utilizing Adjustment Contents (Recipe)....	94
Copying a Recipe and Applying to Another Image ....	95
Saving a Recipe as a File .....	95
Loading and Applying Recipes .....	96
<b>JPEG/TIFF</b> Adjusting by Comparing Multiple	

Images.....	97
<b>JPEG/TIFF</b> Editing Efficiently .....	98
Editing in the Edit Image Window.....	98
Changing the Thumbnail Display Position to Horizontal .....	99
Gathering and Editing Images in the Collection Window.....	100
<b>JPEG/TIFF</b> Compositing Images .....	102
Compositing Methods.....	105
<b>JPEG/TIFF</b> Creating HDR (High Dynamic Range) Images.....	106
<b>Advanced</b> Using the Dual Pixel RAW Optimizer .....	109
Microadjustment of the Position of Maximum Sharpness and Resolution Using the Depth Information Contained within the Dual Pixel RAW File.....	109
Reposition the Viewpoint or Foreground Bokeh for a More Pleasing Result .....	110
Reduces the Appearance of Ghosting in Images .....	111
<b>Advanced</b> Transferring a RAW Image to Photoshop .....	113
<b>Advanced</b> Customizing the Main Window Toolbar ....	114

\* Sections with **JPEG/TIFF** and **JPEG/TIFF** in “4 Editing Images” support not only RAW image editing but also JPEG/TIFF image editing.

**JPEG/TIFF** : All the functions explained in the section support JPEG/TIFF image editing.

**JPEG/TIFF** : Certain functions explained in the section support JPEG/TIFF image editing.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

**4**  
Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





# RAW Images

## RAW Images

A RAW image is image data that has recorded output data of imaging sensor. As image processing is not performed inside the camera when a photo is taken and the photo has been recorded in the special form of “RAW image data + Image processing conditions information at the time of shooting”, special software is needed to view or edit the image.

\* “RAW” means “in a natural condition” or “not processed or refined”.

## RAW Development

If described in terms of film, the concept of a RAW image is a shot image not yet developed (latent image).

With film, the image appears for the first time when it is developed. In the same way, for RAW images too, you cannot view them as images on your computer unless you perform subsequent image signal processing. Therefore, even though it is digital, this processing is called “development”.

## When RAW Development is to be Done

DPP automatically carries out this “development” processing when RAW images are displayed in DPP. As a result, RAW images displayed in DPP are images whose development processing has been completed.

With DPP, you can view, edit and print RAW images without being particularly conscious of the development processing.

## Advantages of a RAW Image

RAW images are recorded in the format “RAW image data + Image processing conditions information at the time of shooting”. When you open a RAW image in DPP, the image is automatically developed and you can view the image as an image to which image processing conditions at the time of shooting have been applied.

Even if you perform various adjustments to the image you have opened (it undergoes automatic development processing each time), only the image processing conditions (development conditions) change and the “original image data itself” remains unaffected. Therefore, it is the perfect data for users who want to get creative with the images after shooting, as you do not have to worry about image deterioration. In DPP, the “Image processing conditions information” that can be adjusted is called a “Recipe” (p.94).



Image processing conditions information



Contents adjusted using the tool palettes can be handled individually as a recipe file (extension “.dr4”) (p.94, p.95).

In DPP, all the adjustments (image processing conditions information) made with the tool palettes can be saved in the image as data called a “recipe” (p.95), or can be saved, downloaded and applied to other images as a separate recipe file (extension “.dr4”, p.96). However, a recipe file with saved RAW image adjustments cannot be applied to JPEG or TIFF images.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Editing JPEG and TIFF Images

With DPP, you can adjust JPEG and TIFF images in the same way as RAW images using the tool palettes below.

- Tone Adjustment tool palette
- Color Adjustment tool palette
- Detailed Adjustment tool palette
- Trimming/Angle Adjustment tool palette
- Partial Adjustment tool palette
- Dust Delete/Copy Stamp tool palette
- Settings tool palette

Because adjustments made with these tool palettes (the recipe) only change the image processing conditions, the “original image data itself” remains unaffected. Consequently, there is none of the image deterioration that normally accompanies editing and you can readjust your image any number of times.



Image processing conditions information



Contents adjusted using the tool palettes can be handled individually as a recipe file (extension “.dr4”) (p.94, p.95).

In DPP, all the adjustments (image processing conditions information) made with the tool palettes can be saved in the image as data called a “recipe” (p.95), or can be saved, downloaded and applied to other images as a separate recipe file (extension “.dr4”, p.96). However, recipe data with saved JPEG or TIFF image adjustments cannot be applied to RAW images.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos


Specifying  
Preferences

Reference/  
Index



# Tool Palettes

With DPP, you can adjust images with the tool palettes by switching between various tool palette windows according to your editing requirements. Since adjustments made with the tool palettes only change the image processing conditions, the “original image data itself” remains unaffected. As there is no image deterioration that normally accompanies editing, you can readjust your image any number of times. The various functions of the tool palettes are explained in more detail under the respective topics.

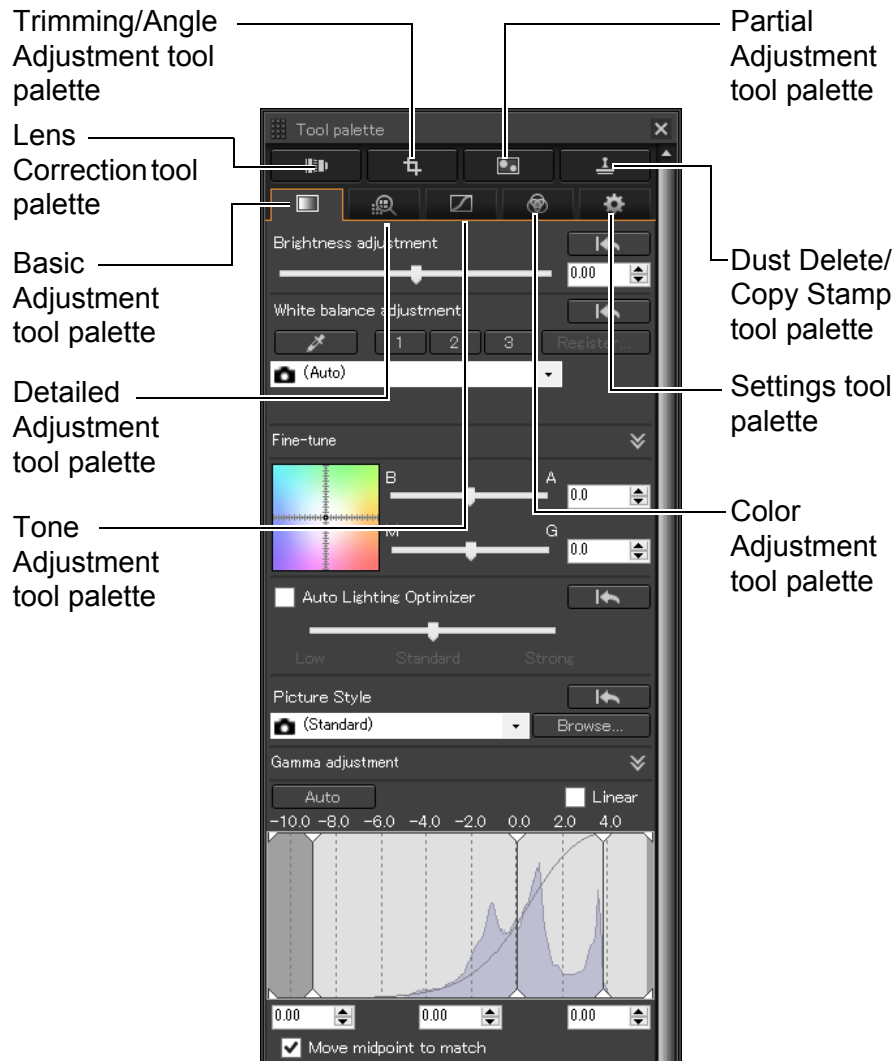

- **Basic Adjustment tool palette**  
Makes basic adjustments to a RAW image (p.46).
- **Tone Adjustment tool palette**  
Adjusts the tone curve and applies the Auto Lighting Optimizer (p.59).
- **Color Adjustment tool palette**  
Adjusts the hue, saturation and luminance of a specific color space. The hue and saturation for an entire image can also be adjusted (p.64).
- **Detailed Adjustment tool palette**  
Reduces noise and adjusts the image sharpness (p.66).
- **Trimming/Angle Adjustment tool palette**  
Crops an image and adjusts the image angle (p.68).
- **Lens Correction tool palette**  
Corrects lens aberration in the image (p.71) and applies the Digital Lens Optimizer (p.76).
- **Partial Adjustment tool palette**  
Adjusts the selected area of an image (p.79).
- **Dust Delete/Copy Stamp tool palette**  
Erases dust from an image and corrects image by copying sections of the image (p.83).
- **Settings tool palette**  
Configures the work color space (p.88).

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index






## Using the different tool palettes

We recommend that you use the Basic Adjustment tool palette to make adjustments to RAW images. However, if you find that the Basic Adjustment tool palette does not offer a sufficient range of adjustments, or if you want to use specific functions that are only available in the Tone Adjustment tool palette (p.59), completing initial adjustments with the Basic Adjustment tool palette and then using the Tone Adjustment tool palette to make just the minimum of adjustments needed is recommended.

For noise reduction (p.66) and lens aberration correction (p.72), you should first complete necessary adjustments in the Basic Adjustment and Tone Adjustment tool palettes, and then adjust with the Detailed Adjustment tool palette (p.66) and Lens Correction tool palette (p.71).

- You can click the  button at the bottom right of the main window to show/hide [Tool palette].

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Editing with the Basic Adjustment Tool Palette

The Basic Adjustment tool palette makes basic adjustments to RAW images. With this tool palette, you can adjust the image brightness, set Picture Style, adjust the white balance, adjust the contrast, adjust the color tone and saturation, adjust the dynamic range, apply the Auto Lighting Optimizer and adjust the image sharpness.

Note that the only adjustments you can make to JPEG/TIFF images are applying the Auto Lighting Optimizer and adjusting the image sharpness.


**1** Select an image in the main window, etc.

**2** Display the Basic Adjustment tool palette.



## Adjusting Brightness


The brightness of an image can be adjusted. Move the slider to the right to make the image brighter and to the left to make the image darker.

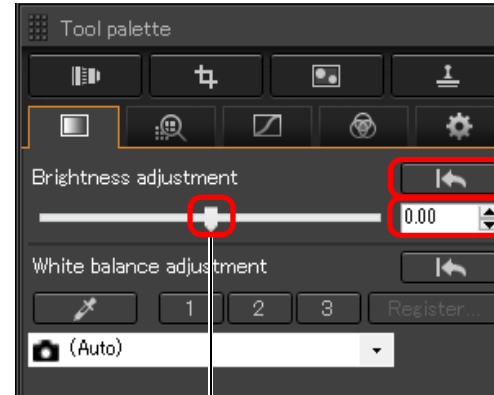

Drag the slider left or right

Reverts the image to the original settings

Enter a numerical value

 The adjustment range is  $-3.0$  to  $+3.0$  (in 0.01-stop increments when entering a value).

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

**Editing  
Images**

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index





## Changing the Picture Style

If the image looks different from what you visualized at the time of shooting, you can get it closer to what you expected by changing the Picture Style. Even if you have saved the image (p.91) with [Monochrome] (p.53) selected, you can still change to another Picture Style at any point by simply selecting a Picture Style other than [Monochrome].

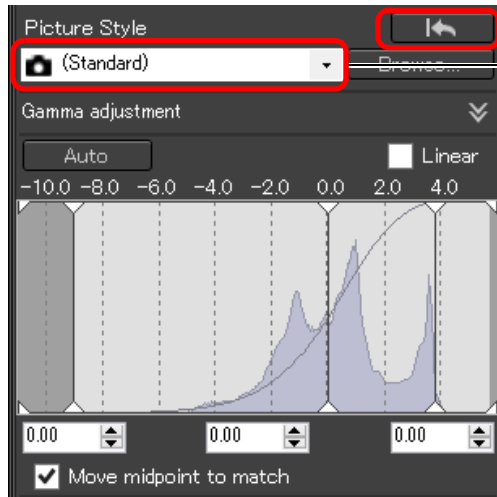

Reverts the image to the original settings

Select

Picture Style	Description
( )	The Picture Style set with the camera when the image was shot. When a mode in the Creative Zone is selected on the camera, the Picture Style set is displayed in ( ). When a mode in the Basic Zone is selected on the camera, [Shot settings] is displayed in ( ), and image characteristics that are according to the selected shooting mode are applied.
Standard	The image looks vivid. Generally, this setting is suitable for most images.
Auto	The color tone will be adjusted to suit the scene. The colors will look vivid. Especially the colors of blue skies, greenery, and sunsets will be vivid in a shot of nature, outdoor, or sunset scenes.
Portrait	For nice skin tones. Effective for close-ups of women and children. By changing the [Color tone], you can adjust the skin tone (p.53).
Landscape	For vivid blues and greens. Effective for making images of landscapes impressive.
Fine Detail	Suited for detailed outline and fine texture description of the subject. The colors will be slightly vivid.
Neutral	For natural colors and subdued images. Effective for base images which are to undergo adjustment.
Faithful	When the subject is photographed under a color temperature of 5200K, the color is adjusted colorimetrically to match the subject's color. Effective for base images which are to undergo adjustment.
Monochrome	For black and white images. You can also adjust with [Filter effect] or [Toning effect] (p.53).

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





Picture Style	Description
(Picture Style file registered in the camera)	Displayed when selecting an image shot with the Picture Style file registered in the camera. In the list, the name of the Picture Style file is displayed in ( ).
[Picture Style file applied in DPP]	The name of the Picture Style file applied in DPP is displayed in [ ].



- You can retain the [Color tone], [Color saturation], [Contrast], [Unsharp mask] and [Sharpness] settings, even if you change the Picture Style.
- [Auto] is not applied to images shot with the EOS-1D Mark IV, EOS-1Ds Mark III, EOS-1D Mark III, EOS-1D Mark II N, EOS-1Ds Mark II, EOS-1D Mark II, EOS-1D, EOS-1Ds, EOS 5D Mark II, EOS 5D, EOS 7D, EOS 60D/EOS 60Da, EOS 50D, EOS 40D, EOS 30D, EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D30, EOS D60, EOS 550D, EOS 500D, EOS 450D, EOS 1000D, EOS 1100D, EOS 400D, EOS 350D, EOS 300D, PowerShot G3 X, PowerShot G1 X Mark II, PowerShot G7 X, PowerShot G9 X, PowerShot SX60 HS, PowerShot G5 X, PowerShot G16, PowerShot S120, PowerShot G1 X, PowerShot G15, PowerShot S110, PowerShot S100, PowerShot G9, PowerShot G10, PowerShot G11, PowerShot G12, PowerShot S90, PowerShot S95, PowerShot SX1 IS, or PowerShot SX50 HS. When changing the Picture Style with several images selected, although you can select [Auto] if images shot with any supported camera other than the above are included, [Auto] will not be applied to the images shot with the above cameras.
- You can apply [Fine Detail] to all images shot with supported camera models except the PowerShot G3 X, PowerShot G1 X Mark II, PowerShot G7 X, PowerShot G9 X, PowerShot SX60 HS, PowerShot G5 X, PowerShot G16, PowerShot S120, PowerShot G1 X, PowerShot G15, PowerShot S110, PowerShot S100, PowerShot G9, PowerShot G10, PowerShot G11, PowerShot G12, PowerShot S90, PowerShot S95, PowerShot SX1 IS, and PowerShot SX50 HS.
- You cannot select [Auto] with multiple-exposure RAW images created with the camera.

## Advanced

## Using a Picture Style File

A Picture Style file is a Picture Style extension file. With DPP, you can apply to RAW images Picture Style files that you have downloaded from Canon website effective for various scenes or Picture Style files created with “Picture Style Editor”. When using a Picture Style file, save it to your computer beforehand.

## 1 Click the [Browse] button in the [Picture Style] panel.



→ The [Open] dialog box appears.


## 2 Select a Picture Style file saved on your computer, and click the [Open] button.

- The Picture Style file you selected is applied to an image.
- To apply a different Picture Style file, follow the procedure from step 2 again.

The Picture Style files that you can apply to the camera are files with the “.PF2” or “.PF3” extension only.

## Adjusting Color Tone by Changing White Balance

If the color tone of the photographed image does not appear natural, change the white balance to make it appear natural. You can make the color tone natural by setting the light source to match the scene at the time of shooting an image of, for example, pale-colored flowers.

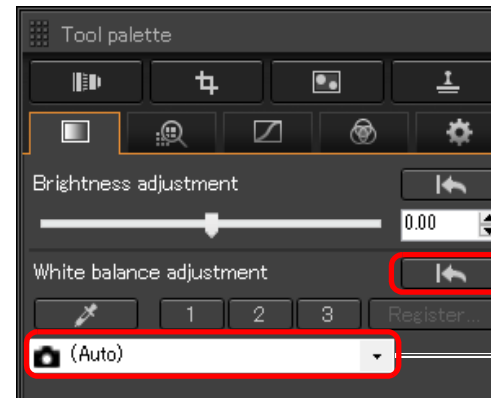

Reverts the image to the original settings

Select

- ( ) is the white balance set on the camera when the image was shot.
  - When a mode in the Creative Zone is selected on the camera, the white balance set is displayed in ( ).
  - When a mode in the Basic Zone is selected on the camera, [Shot settings] is displayed in ( ), and image characteristics that are according to the selected shooting mode are applied.

### ? The color tone does not become more natural even when the white balance is changed

If the color tone of the image does not appear natural after changing the white balance, adjust the white balance using click white balance (p.50).

### 💡 Tune with color tone

To make further fine adjustments to color tone after adjusting the white balance, you can use [Color tone] (p.53) for tuning towards your expectations.


- ! You cannot register the adjustment results as personal white balance (p.121) when you have selected [ ( )] from the list box.
- You cannot change or adjust white balance with multiple-exposure RAW images created on the camera.


Refer to your camera’s Instruction Manual for details on each white balance setting.




## Adjusting Color Tone Using Click White Balance

You can adjust white balance using a selected part of an image as the standard for white to make the image appear natural. Using click white balance is effective when using it in parts of an image where white color tone has changed under the influence of a light source.

- The color of the image is adjusted with the point you selected as the standard for white.
- If you click on another point in the image, the white balance is adjusted again.
- To finish click white balance, right-click with the mouse or click the  button again.

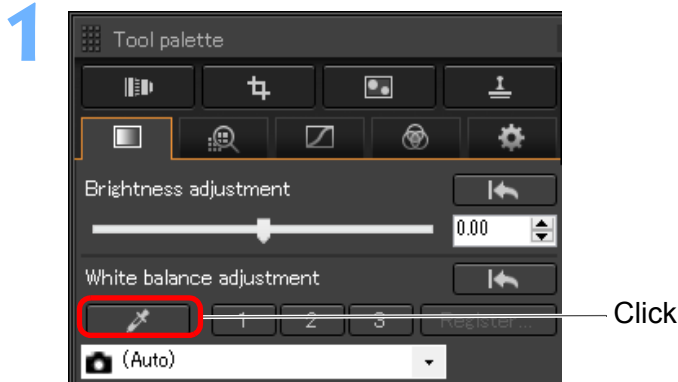

2 Click on a point that is to be the standard for white.

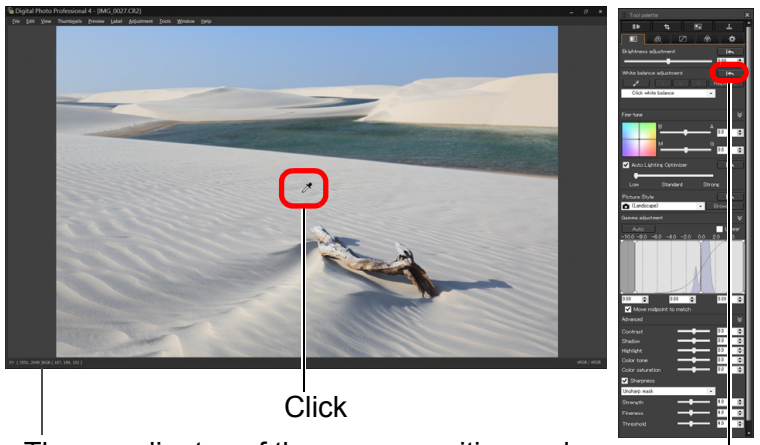


The coordinates of the cursor position and the RGB values (8-bit conversion)

Reverts the image to the original settings

### ? When there are no white areas in your image

When there are no white areas in your image, you can adjust the white balance by clicking on a grey point of the image in step 2. This has the same adjustment result as selecting a white area.

 You cannot change or adjust white balance with multiple-exposure RAW images created on the camera.




## Advanced

## Adjusting White Balance with Color Temperature

White balance can be adjusted by setting a numerical value for color temperature.

- 1 Select [Color temperature] from the [White balance adjustment] list box.
- 2 Set the color temperature.

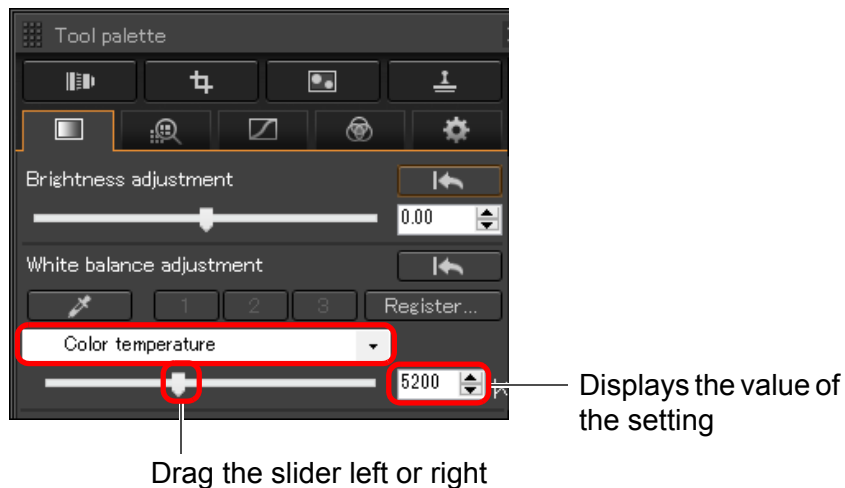


## Advanced

## Tuning White Balance

This is a function that makes fine adjustments to the white balance. Using this function, you can achieve the same effects as third-party color temperature conversion filters and color correction filters. The adjustable range is  $\pm 10$  steps. This function is aimed particularly at high-end users who are familiar with the roles and effects of color temperature conversion filters and color correction filters.

Tune the white balance by dragging the point in the adjustment screen in the [Fine-tune] panel.

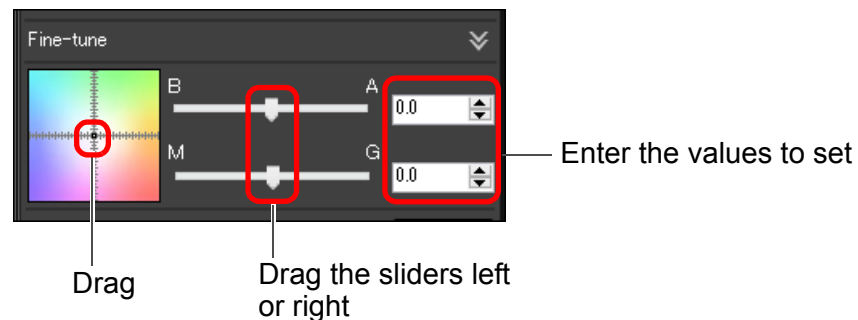

- B stands for blue, A for amber, M for magenta and G for green. The color is adjusted towards the color to which the point moves.
- You can also fine-tune your adjustment by using the sliders or entering the adjustment values.

- ! To register the adjustment outcomes as a personal white balance (p.121), select a setting other than [ ] from the [White balance adjustment] list box before tuning the white balance. If you selected [ ] from the list box and tuned the white balance, you cannot then register the outcomes as a personal white balance.
- You cannot change or adjust the white balance in multi-exposure RAW images generated on the camera.


The adjustable range is 0 to  $\pm 10$  (in 0.1-stop increments when entering a value).

The adjustment range is 2000 to 10000K (in 10K increments).



## Adjusting Contrast

Modulation and degree of contrast can be adjusted. Move the slider to the right to make contrast stronger and to the left to make contrast weaker.

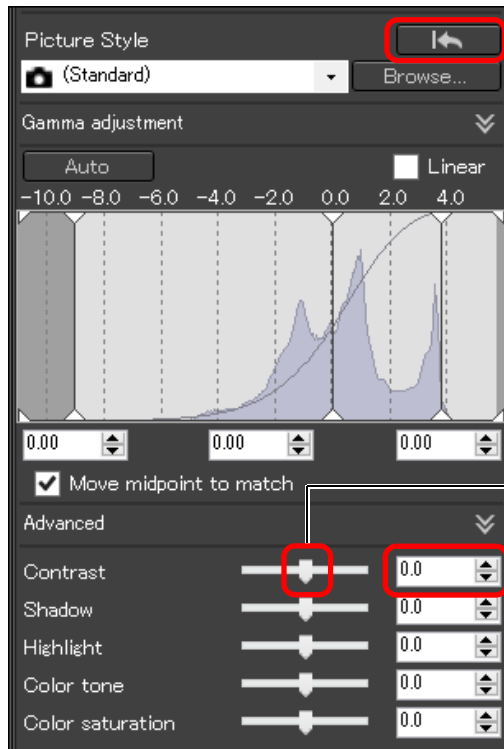

Reverts the image to the original settings


Drag the slider left or right (9 steps)

Enter a setting (in 0.1-stop increments)

## Advanced

## Adjusting Brightness of Shadows/Highlights

You can adjust the brightness of shadows and highlights in an image. By adjusting only shadows or highlights in an image, you can reduce the effects of clipping in shadows and highlights.

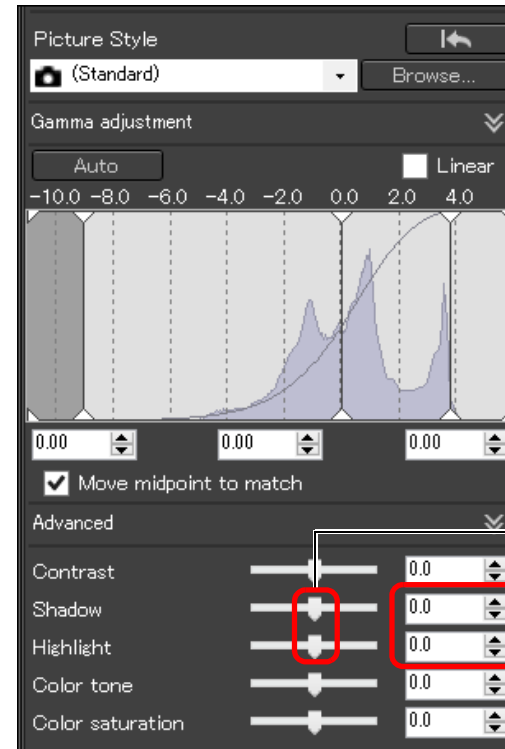

Drag the sliders left or right

Enter a setting (in 0.1-stop increments)



If you make a major adjustment to the highlights or shadows in an image, the image may look unnatural. In such a case, reduce the degree of adjustment.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index



## Changing Color Tone and Color Saturation

Tone and overall color saturation can be adjusted.

If Picture Style (p.47) is set to [Monochrome], [Color tone] and [Color saturation] switch to [Filter effect] and [Toning effect] (this page).

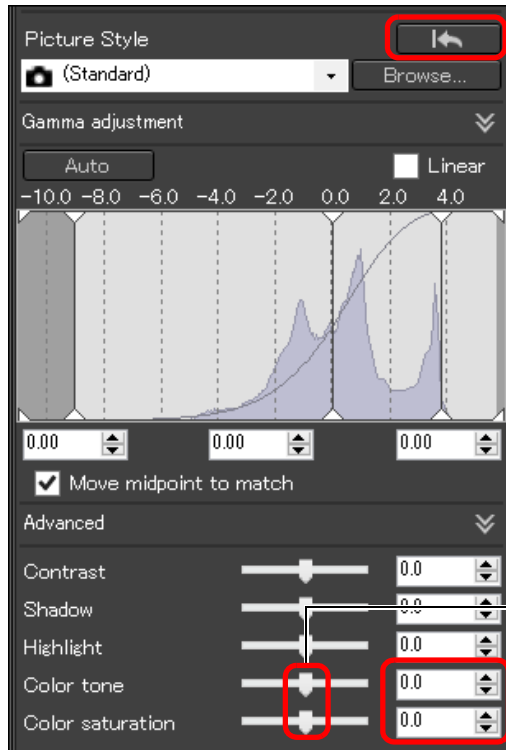

Reverts the image to the original settings

Drag the sliders left or right

Enter a setting (in 0.1-stop increments)

- **Color tone:** Move the slider to the right to make tones more yellowish, and to the left to make tones more reddish.
- **Color saturation:** Adjusts the overall color intensity for the image. Move the slider to the right for more intense colors, and to the left for less intense colors.


The adjustment range is -4 to +4.

## Adjusting Monochrome

When the Picture Style (p.47) is set to [Monochrome], you can create monochrome photographs with effects similar to filtering, or with a look of monotone color photograph.

1 Select [Monochrome] in the [Picture Style] list box.

2

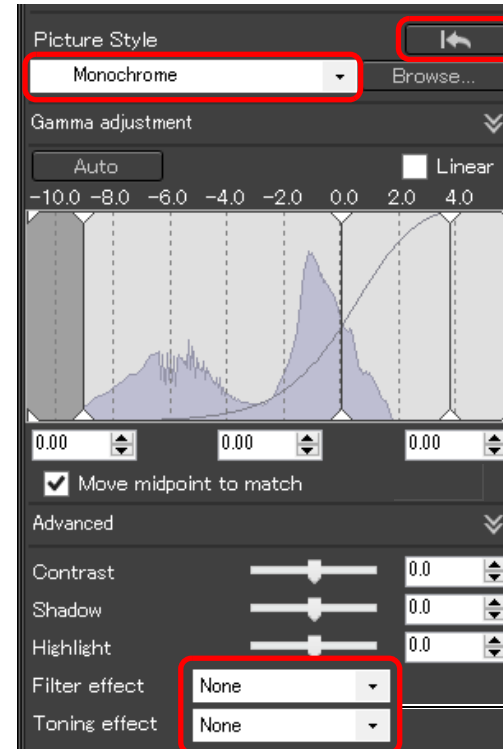

Reverts the image to the original settings

Displays the values of the settings

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index



- **Filter effect:** Creates a monochrome photograph where the white of clouds and the green of trees are emphasized.

Filter	Example of effect
None	General monochrome image without filter effect.
Yellow	Blue sky is reproduced more naturally and white clouds emerge clearly.
Orange	Blue sky becomes somewhat darker. The brightness of the setting sun increases further.
Red	Blue sky becomes quite dark. Autumn leaves become clear and bright.
Green	Human skin tones and lips become softer. The green leaves of trees become clear and bright.

- **Toning effect:** Creates a monochrome photograph to which a single color has been added. You can choose from [None], [Sepia], [Blue], [Purple] and [Green].


 **Increase the [Contrast] to emphasize the filter effect**

To emphasize the filter effect, set the [Contrast] slider to the right.

### Advanced

## Adjusting Dynamic Range

Dynamic range (width of gradation expression) from dark points to bright points in an image can be adjusted.

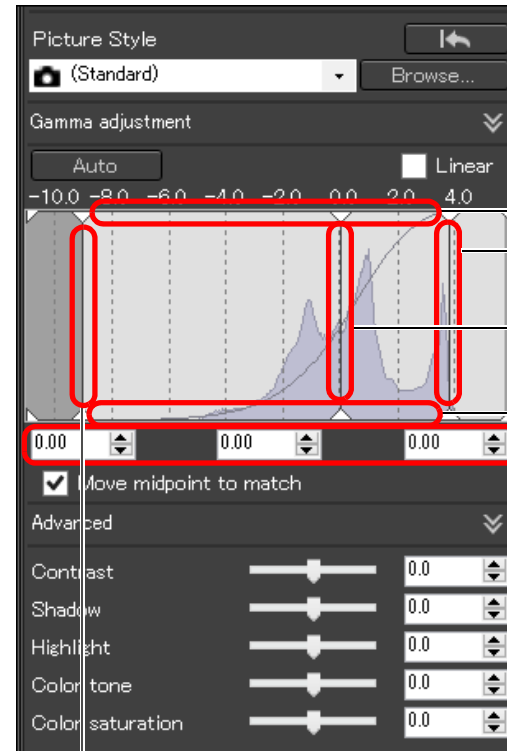


- Move downwards Output white points
- Move to the left or right Input white points
- Move to the left or right Mid (medium tone) point
- Move upwards Output black points
- You can also adjust the dynamic range by entering values

Move to the left or right Input black points

- The horizontal axis shows the input level and the vertical axis shows the output level.
- Checkmark the [Move midpoint to match] checkbox to link the mid-point to your adjustments to the input white points and input black points.

- Introduction/Contents
- Downloading Images
- Viewing Images
- Sorting Images
- Editing Images**
- Printing Images
- Processing Large Numbers of RAW Images
- Remote Shooting
- Playing Back Movies and Saving Still Photos
- Specifying Preferences
- Reference/Index

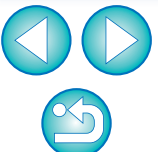



### [Linear] - A function for advanced adjustment

Use [Linear] when you adjust images using image editing software that has advanced editing functions. Note that when [Linear] is checkmarked, the image becomes dim.




[Contrast], [Highlight], [Shadow], and [Auto Lighting Optimizer] (p.56) will not function when [Linear] is checkmarked.

## Adjusting Gradation and Luminance Automatically

In order to give the image desirable gradations and luminance, automatic adjustments are applied for an appropriate dynamic range.

Click the [Auto] button.

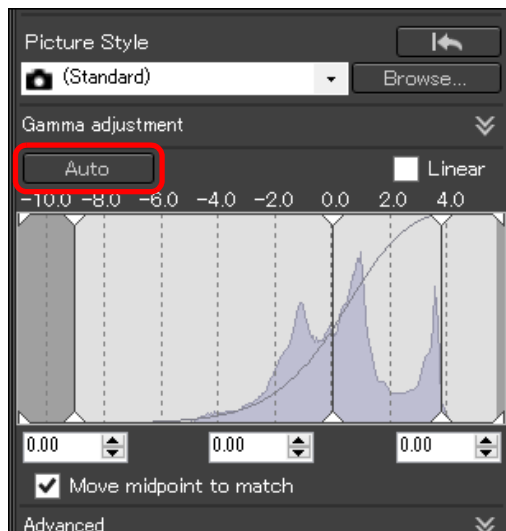

→ In order to give the image desirable gradations and luminance, the dynamic range is automatically adjusted.

- White points, midpoint, and black points in the [Gamma adjustment] panel as well as [Highlight] and [Shadow] in the [Advanced] panel are adjusted automatically.
  - Settings that are reset and those that are not with this adjustment are as follows.
    - Settings that are reset
      - Auto Lighting Optimizer
      - [Contrast] in the [Advanced] panel
    - Settings that are not reset
      - Brightness adjustment
      - White balance adjustment
      - Linear\*
- \* White points and black points are automatically adjusted.



An image may look unnatural after automatic adjustment. In such a case, reduce the degree of shadow and highlight adjustment.

## Using the Auto Lighting Optimizer


If the shooting result is dark or the contrast is low, you can use the Auto Lighting Optimizer function to auto-correct the brightness and contrast, and obtain a more favorable image.

You can also change the setting of the image shot with the camera's Auto Lighting Optimizer function.

This function also can be used for JPEG/TIFF images in addition to RAW images.

\* ALO stands for Auto Lighting Optimizer.

### 1 Checkmark the [Auto Lighting Optimizer] checkbox.

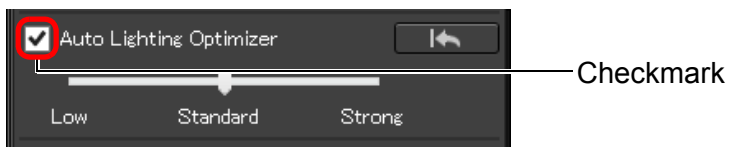

- For the image shot with the camera's Auto Lighting Optimizer function, the checkbox is already checked.

### 2 Change the setting according to your preferences.



- Auto correction is applied to the image to match the setting.
- For the image shot with the camera's Auto Lighting Optimizer function, the setting at the time of shooting is applied as the default value.
- To cancel the Auto Lighting Optimizer, remove the check mark from the checkbox.

- ⚠ • When [Highlight tone priority] is set to [Enable] on any supported EOS camera other than the EOS-1D Mark IV, or EOS 5D Mark II, the Auto Lighting Optimizer cannot be used for RAW images.
- You cannot use the Auto Lighting Optimizer with multiple-exposure RAW images created with the camera.
- When you apply Auto Lighting Optimizer to the RAW and JPEG images shot simultaneously, the correction results of the two images may differ.



## Adjusting Image Sharpness

You can make the overall atmosphere of an image sharper or softer. Adjustment can be made by selecting from two modes, [Sharpness] and [Unsharp mask].


**[Sharpness]:** Controls the sharpness of an image by adjusting the level of emphasis for the outline of the image. The further to the right the [Sharpness] slider is moved (the larger the setting value), the more the edges are emphasized for a sharper image.

**[Unsharp mask]:** Adjusts the image's sharpness more finely.  
**[Strength]:** Shows the level of emphasis for the outline of the image. The further to the right the slider is moved (the larger the setting value), the more the image's edges are emphasized for a sharper image.

**[Fineness]:** Shows the fineness of the emphasized outline. The further to the left the slider is moved (the smaller the setting), the easier it becomes to emphasize fine details.

**[Threshold]:** Sets "how much contrast difference there should be compared to surroundings before emphasizing edges".

Select [Sharpness] from the list box and adjust the setting.

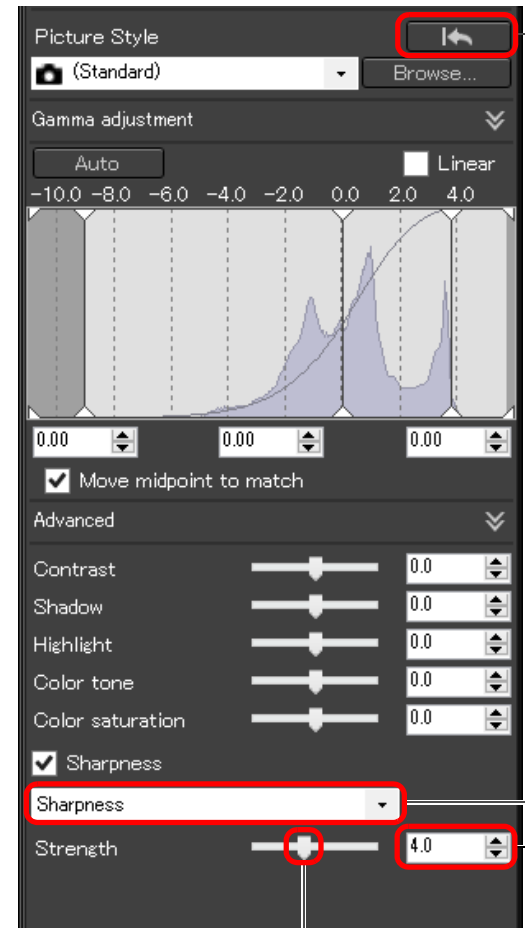

Reverts the image to the original settings

Select [Sharpness]

Enter a setting (in 0.1-stop increments)


Drag the slider left or right

[Unsharp mask] cannot be used with images other than RAW images.

The adjustment range is 0 to 10.

## Detailed Setting of Image Sharpness

Select [Unsharp mask] from the list box and adjust the setting.

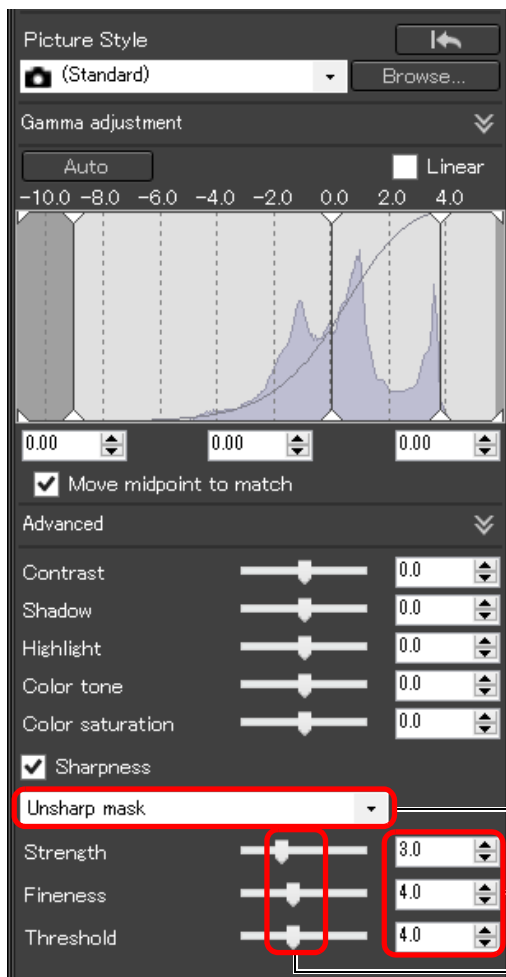

Select [Unsharp mask]

Enter a setting (in 0.1-stop increments)

Drag the slider left or right




Adjust image sharpness with the window view set to [400%], [200%] or [100%]. If the view is set to [Fit to window] (full view), you may not be able to correctly check the adjustment results.

# Editing with the Tone Adjustment Tool Palette

With the Tone Adjustment tool palette, you can adjust images with the same functions as general image editing software.

- 1 Select an image in the main window, etc.
- 2 Display the Tone Adjustment tool palette.

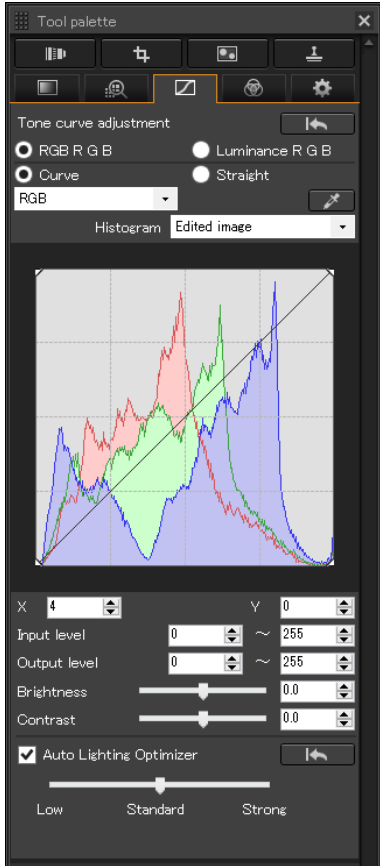

## Adjusting Brightness and Contrast

The brightness and contrast of an image can be adjusted. Since the adjustment range is broader than the same functions in the Basic Adjustment tool palette, the image color may be saturated, or the image quality may deteriorate if you adjust too much. Be especially careful when adjusting.




- Introduction/Contents
- Downloading Images
- Viewing Images
- Sorting Images
- Editing Images**
- Printing Images
- Processing Large Numbers of RAW Images
- Remote Shooting
- Playing Back Movies and Saving Still Photos
- Specifying Preferences
- Reference/Index


- **Brightness:** Move the slider to the right to make an image brighter and to the left to make an image darker.
- **Contrast:** Used to adjust modulation and degree of contrast of color. Move the slider to the right to make contrast of an image stronger and to the left to make contrast weaker.

## Adjusting Color Tone Using Click White Balance

You can adjust white balance using a selected part of an image as the standard for white to make the image appear natural. Using click white balance is effective when using it in parts of an image where white color tone has changed under the influence of a light source.

### 1 Click the [ ] button.

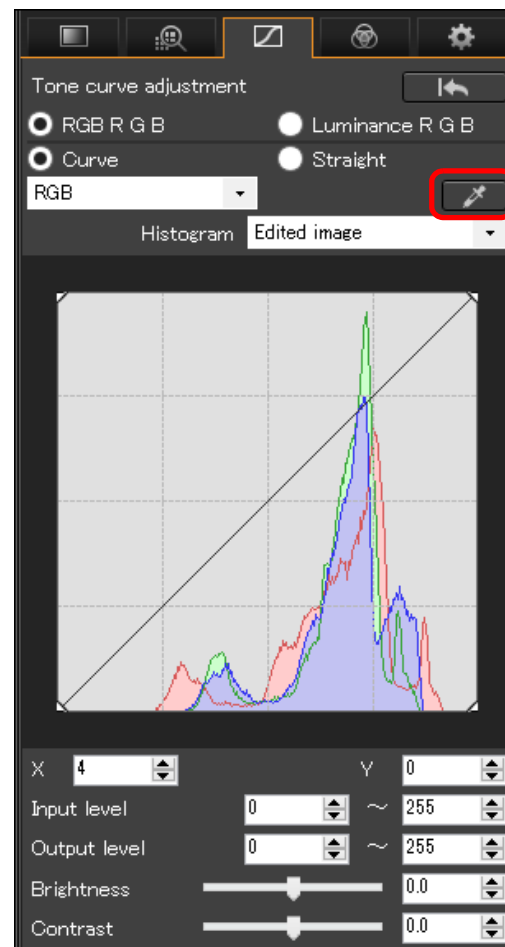

 The adjustment range is  $-100$  to  $+100$  (in 0.1-stop increments when entering a value).

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos


Specifying  
Preferences

Reference/  
Index






## 2 Click on a point that is to be the standard for white.

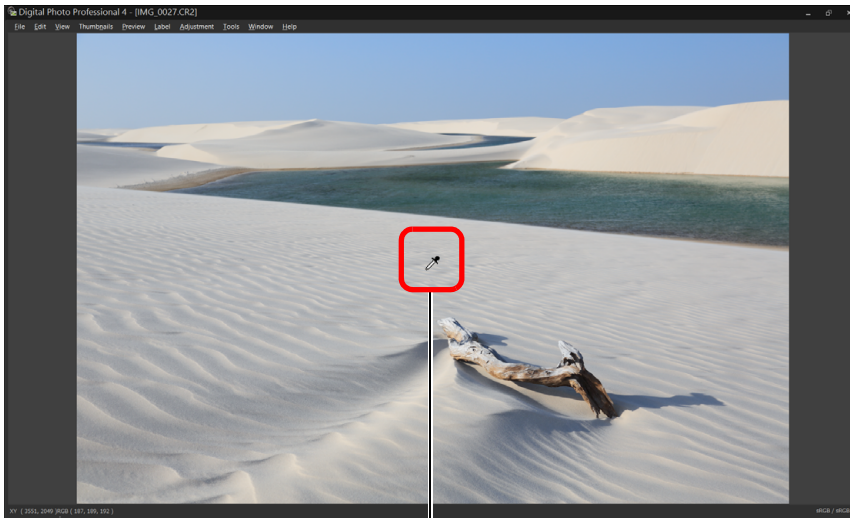

Click

The coordinates of the cursor position and the RGB values (8-bit conversion)

- The color of the image is adjusted with the point you selected as the standard for white.
- If you click on another point in the image, the white balance is adjusted again.
- To finish click white balance, right-click with the mouse or click the  button again.

### ? When there are no white areas in your image

When there are no white areas in your image, you can adjust the white balance by clicking on a grey point of the image in step 2. This has the same adjustment result as selecting a white area.




The histogram display changes according to adjustment. You can also display the histogram before making any adjustments.

### Advanced

## Adjusting Tone Curve

You can adjust the brightness, contrast and color of a specific area by changing the tone curve (p.148).

### 1 Select the tone curve mode and interpolation method.

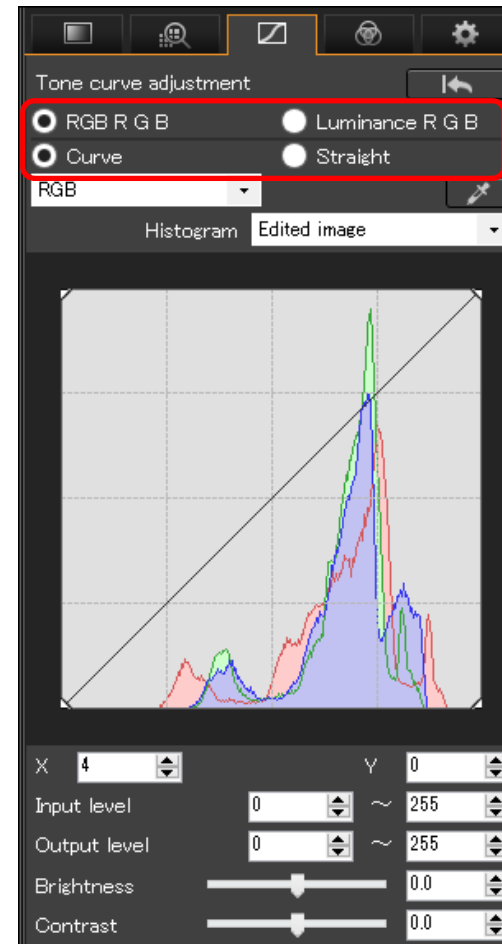



## 2 Make adjustments.



RGB: Adjusts RGB in a batch  
R, G, B: Adjusts each channel


You can display pre- and post-adjustment histograms

Coordinates of [□]  
(when several coordinates are set, coordinates of last-set [□])


- The horizontal axis shows the input level and the vertical axis shows the output level.
- The maximum number of [□] is 8.
- To delete a [□], either press the <Del> key or double-click on the [□].

## Example of a Tone Curve Operation


Makes medium tones brighter

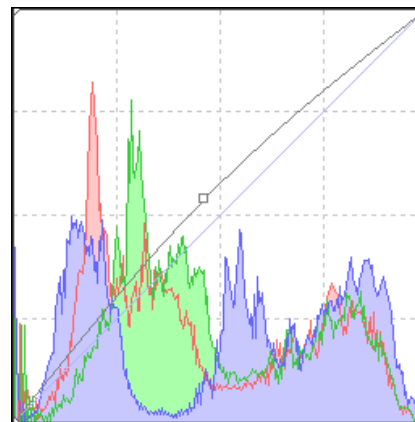


Makes medium tones darker

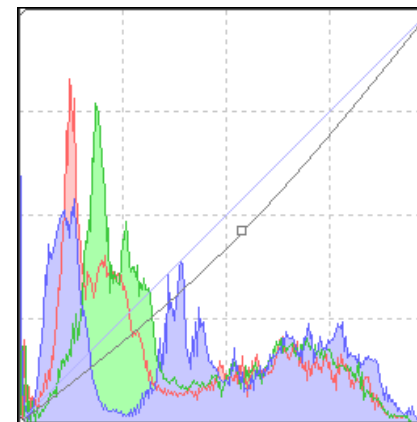

Makes tones sharper

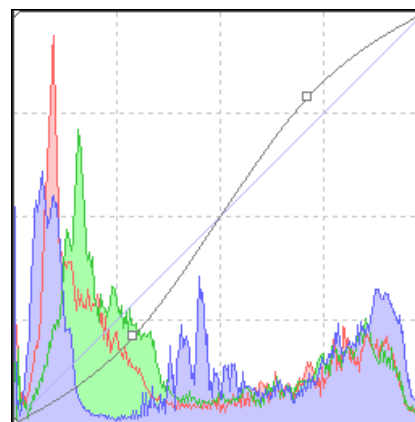

Makes tones softer

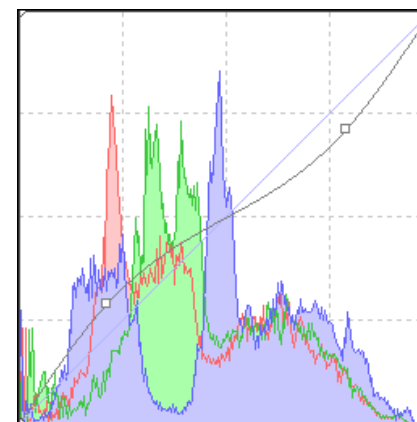

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





Advanced

# Adjusting Dynamic Range

Dynamic range (width of gradation expression) from dark points to bright points in an image can be adjusted.

Move downwards  
Output white points

Reverts the image to the original settings

Move to the right  
Input black points

Move to the left  
Input white points

Input black point numerical value

Output black point numerical value

Input white point numerical value

Output white point numerical value

Move upwards  
Output black points

Detailed description: The image shows the 'Tone curve adjustment' screen. At the top, there are icons for zoom, crop, and settings. Below these are radio buttons for 'RGB R G B' and 'Luminance R G B', and 'Curve' and 'Straight'. A dropdown menu is set to 'RGB'. A 'Histogram' tab is selected, showing a graph with a diagonal line and a histogram. Below the histogram are numerical input fields for 'Input level' and 'Output level' for both black and white points. The black point input level is set to 0, and the white point input level is set to 255. The output levels are also set to 0 and 255. There are also sliders for 'Brightness' and 'Contrast', both set to 0.0. A red box highlights the histogram area, and another red box highlights the input level fields. A red box also highlights the 'Reverts' button at the top right.



- The setting range of black points is 0 to 247 (in 1-stop increments when entering a value).
- The setting range of white points is 8 to 255 (in 1-stop increments when entering a value).
- You can display pre- and post-editing histograms (p.62).

## Using the Auto Lighting Optimizer

For information on using the Auto Lighting Optimizer, see “Using the Auto Lighting Optimizer” (p.56) in “Editing with the Basic Adjustment Tool Palette”.

- The horizontal axis shows the input level and the vertical axis shows the output level.

# Editing with the Color Adjustment Tool Palette

With the Color Adjustment tool palette, you can adjust the hue, saturation and luminance in a specific color gamut for 8 color gamuts (red, orange, yellow, green, aqua, blue, purple and magenta). You can also adjust the hue and saturation for the entire image and tune monochrome images.

- 1 Select an image in the main window, etc.
- 2 Display the Color Adjustment tool palette.




### Advanced

## Editing with the Color Adjustment Tool Palette

### Adjusting a Specific Color Gamut

Use the sliders to make adjustments. You can also make adjustments by directly entering a numeric value.


- H: Adjusts the hue.
- S: Adjusts the saturation.
- L: Adjusts the luminosity.

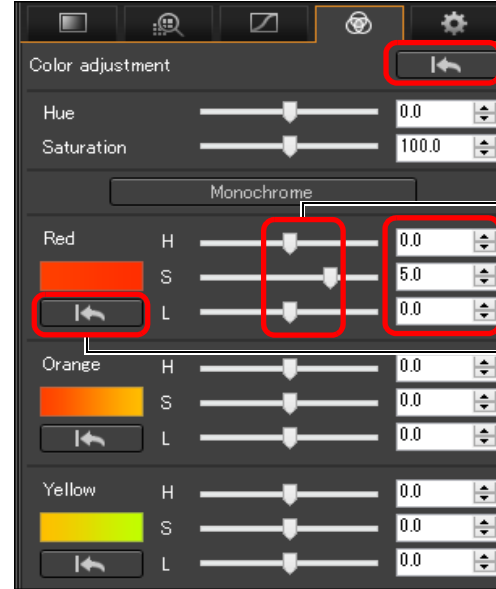

- Revert all adjustments to the original settings
- Drag the sliders left or right
- Enter the values to set
- Revert color gamut adjustments to the original settings

The adjustment ranges are as follows:  
 H: -20 to +20  
 S: -10 to +10  
 L: -10 to +10


- Introduction/Contents
- Downloading Images
- Viewing Images
- Sorting Images
- Editing Images**
- Printing Images
- Processing Large Numbers of RAW Images
- Remote Shooting
- Playing Back Movies and Saving Still Photos
- Specifying Preferences
- Reference/Index

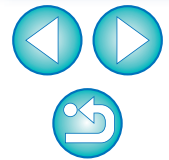

## Adjusting Hue and Saturation for an Entire Image


Use the sliders to make adjustments. You can also make adjustments by directly entering a numeric value.

- **Hue:** Move the slider to the right to make color tones more yellowish, and to the left to make color tones more reddish.
- **Saturation:** Adjusts the overall color intensity for the image. Move the slider to the right for more intense colors, and to the left for less intense colors.

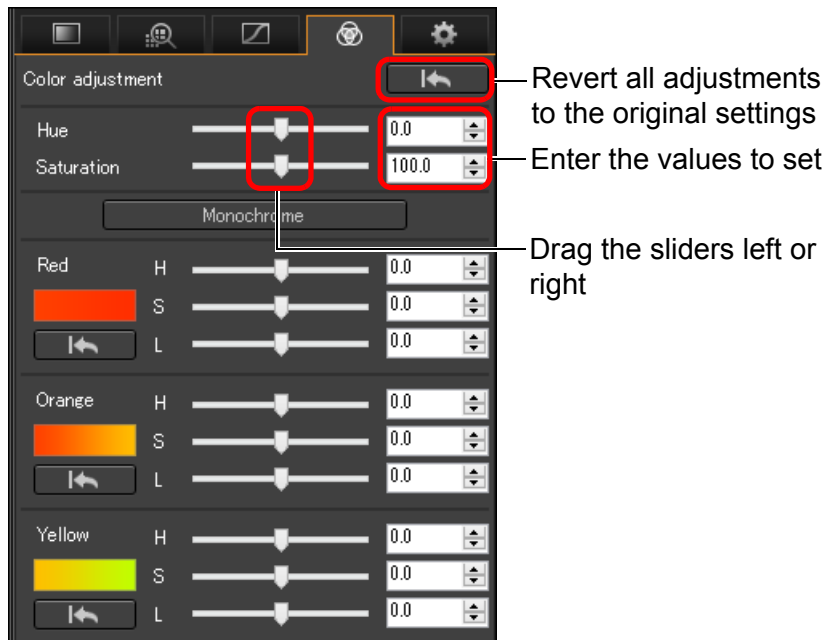

## Adjusting in Monochrome

Press the [Monochrome] button to set the 8 color gamuts to their least saturation (-10) and create a monochrome image. After creating it, you can tune the monochrome image with the H and L sliders for each color gamut, adjusting the hue and brightness.

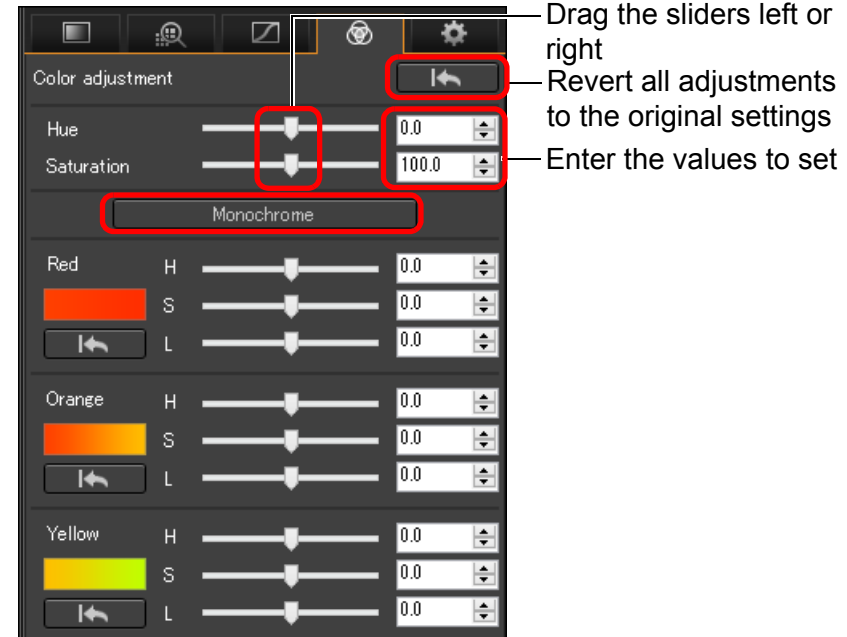

The adjustment range for hue is -30 to +30; and for saturation is 0 to 200.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index




# Editing with the Detailed Adjustment Tool Palette

You can use the Detailed Adjustment tool palette to reduce the noise that occurs in images shot at night or at high ISO settings. This tool palette can also be used in conjunction with the sharpness adjustment functions. Note that you can use the functions in this tool palette with JPEG and TIFF images as well as RAW images.

**1** Select an image in the main window, etc.

**2** Display the Detailed Adjustment tool palette.

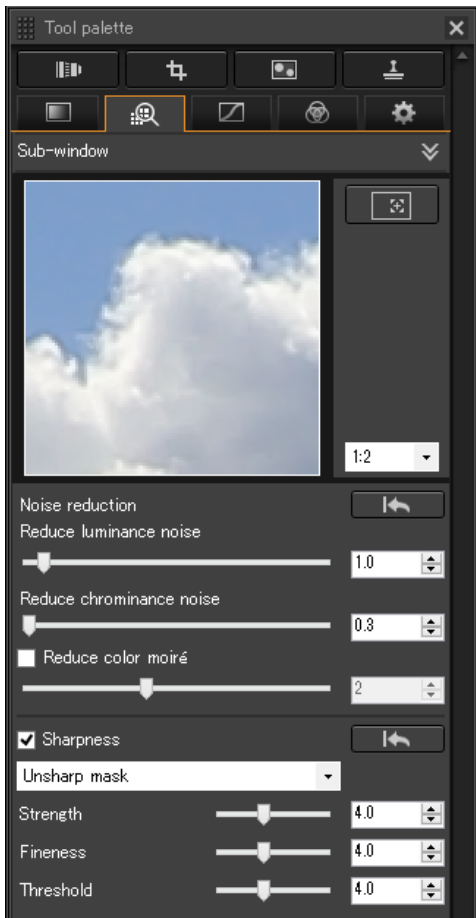


## Reducing Noise

You can reduce noise that arises in images shot at night or with a high ISO speed.

\* NR stands for Noise Reduction.

Adjust an image.

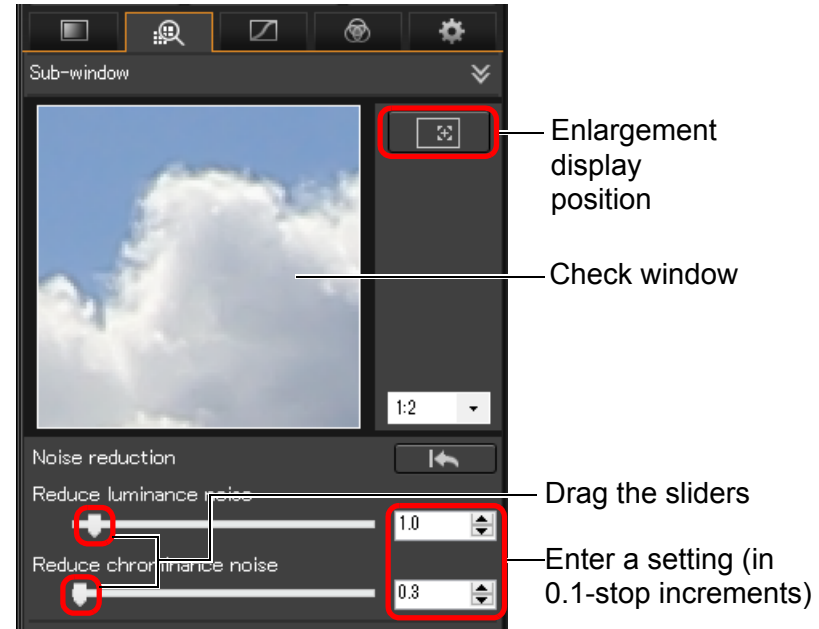

- You can set a noise reduction level from within a range of 0 to 20. The larger the setting, the larger the noise reduction effect.
- The noise reduction effect can also be checked in the check window.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index







## Setting the same noise reduction level for several images

You can set the same noise reduction level for several images by first selecting multiple images in the main window, and then adjusting the noise reduction level using the [Reduce luminance noise] and [Reduce chrominance noise] sliders.

- If [Reduce luminance noise] is set, resolution may be reduced along with reduction of noise.
- If [Reduce chrominance noise] is set, color bleeding may occur along with reduction of noise.

## Adjusting Image Sharpness


You can also use this palette to adjust the image sharpness. For information on making adjustments, see “Adjusting Image Sharpness” in “Editing with the Basic Adjustment Tool Palette” (p.57).

## Reducing Color Moiré in an Image

You can reduce color moiré\* occurring in an image.

\*Color moiré: Occurrence of a color appearing that is not originally in an image. In particular, tends to occur when taking photos of latticed or similar patterns.

**Checkmark the [Reduce color moiré] checkbox and adjust using the slider.**

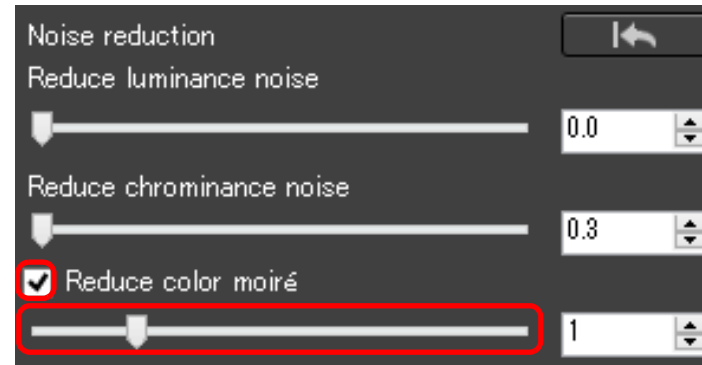


- Depending on the subject, you may not be able to correct color moiré completely.
- Using this function may cause hue to change depending on the subject. If there is a noticeable change in hue, lower the level of adjustment.

# Editing with the Trimming/Angle Adjustment Tool Palette

You can crop only the part of an image you need, or change the composition of an image where an image shot horizontally becomes vertical. You can also adjust the angle of an image before cropping.

- 1 Select the image to be cropped.
- 2 Display the Trimming/Angle Adjustment tool palette.
  - You cannot make adjustments with the Trimming/Angle Adjustment tool palette in a window that only shows thumbnails.
- 3 Adjust the angle of the image as needed.

## Trimming/angle adjustment window

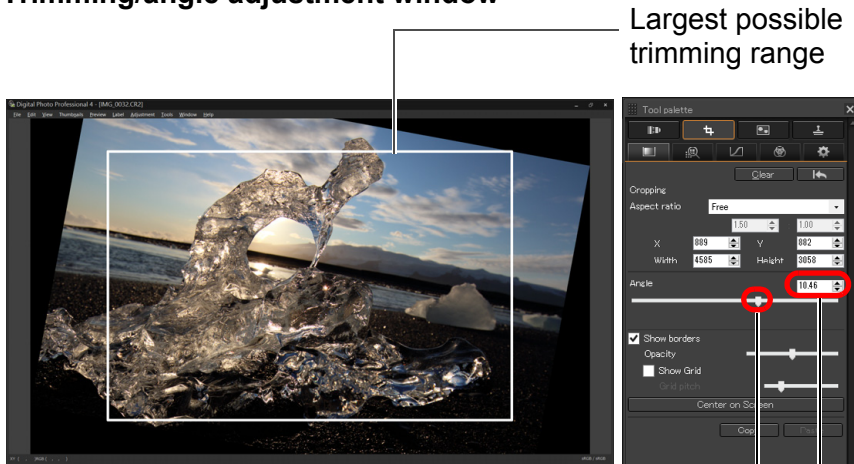


Drag (0.01-degree increments; adjustment range: -45 to +45 degrees)

Use the mouse (click ▲/▼) to adjust the angle or directly enter the adjustment angle (0.01-degree increments; adjustable range: -45 to +45 degrees)

- If you click [Center on Screen], you can display the trimming range in the center of the window.
- When correcting lens aberrations, it is recommended to perform lens aberration correction before adjusting the angle of the image.
- If you have only adjusted the angle of the image, the image will be cropped at the largest possible trimming range.

## 4 Select a ratio and drag the trimming range.

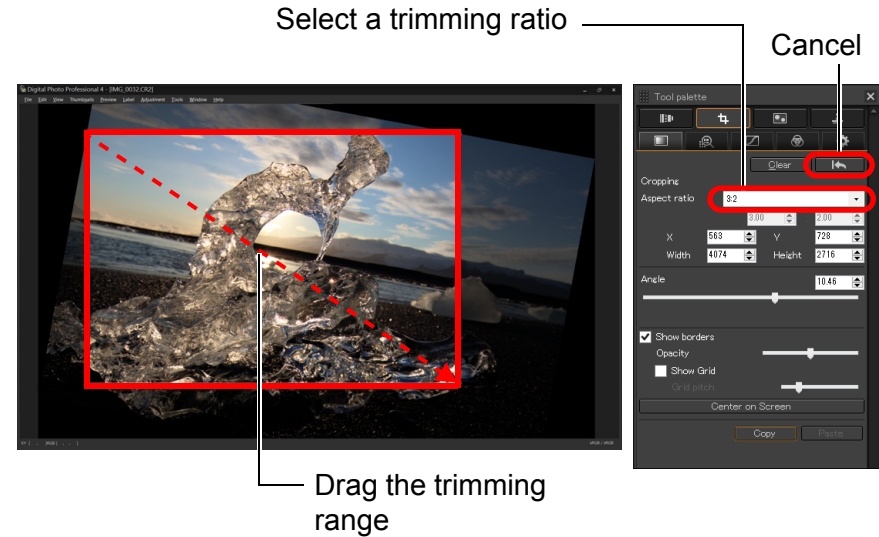


- The trimming range can be moved by dragging.
- You can enlarge or reduce the size of the trimming range by dragging the four corners of the trimming range.

When aspect ratio information is attached to an image shot with any supported camera other than the EOS 5D Mark II, the displayed trimming range is based on the aspect ratio information.

- Introduction/Contents
- Downloading Images
- Viewing Images
- Sorting Images
- Editing Images
- Printing Images
- Processing Large Numbers of RAW Images
- Remote Shooting
- Playing Back Movies and Saving Still Photos
- Specifying Preferences
- Reference/Index

- List of aspect ratios (width : height)

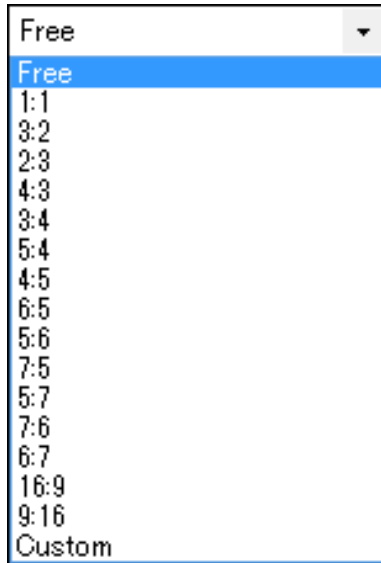

**[Free]:** You can crop an image to any size, regardless of the selectable ratio.

**[Custom]:** You can crop an image at the specified ratio.

## 5 Return to the main window.

- The trimming range frame is displayed in the cropped image (p.147).
- When the cropped image is displayed in a preview window or the edit image window, it is displayed in its cropped form.

## ? Cropped images

- The trimmed range can be reverted to its original condition at any time**

A cropped image is displayed or printed as a cropped image. However, since the image is not actually cropped, you can always revert to the original image by clicking the [↶] button in the trimming/angle adjustment window or performing the “Re-Editing an Image” procedure (p.93).

- Display of the cropped image in each window**

- Main window: The frame showing the trimming range is displayed on the image (p.147).
- Preview window: The image is displayed in its cropped condition.
- Edit image window: The thumbnail image is the same as the main window display, and the enlarged image is the same as the preview window display.

- Printing a cropped image**

You can print as a cropped image by printing it in DPP.

- The image becomes a cropped image when converted and saved**

The cropped RAW image actually becomes a cropped image when converted to a JPEG or TIFF image and saved (p.91).

- Images that have aspect ratio set will be displayed as cropped images**

When aspect ratio or cropping information is attached to a RAW image shot with any supported camera other than the EOS 5D Mark II, the image will be displayed with the set trimming range based on the information. Since the image is not actually cropped, you can change the trimming range or revert to its condition before cropping. However, when a JPEG image is shot either with an aspect ratio set with a camera that supports aspect ratio information or with the EOS 5DS/EOS 5DS R set to crop shooting, its trimming range cannot be changed or the image cannot be reverted to its condition before cropping since the image is actually cropped and saved.\*

When reverting to the trimming range that is based on the aspect ratio information at the time of shooting, click the [↶] button. Also, if you want to cancel all the trimming range, click the [Clear] button.

\* When shooting with EOS 5DS/EOS 5DS R, EOS 5D Mark IV, EOS 5D Mark III, EOS R (with any setting other than [1.6x (crop)]), or EOS 7D Mark II and [Add cropping information] is set in Custom Functions, aspect ratio information is only set and the image is not actually cropped, even for JPEG images.

### ● Operate using the menu


Each operation can also be performed with the menu which appears when you right-click with the mouse on the image.

### ● Apply the trimmed range to another image

You can apply the trimmed range to another image by clicking the [Copy] button to copy the trimmed range, displaying another image and then clicking the [Paste] button.

To batch apply a copied trimming range to multiple images, select the cropped image in the main window together with the images to which you want to apply the trimming range and then display the Trimming/Angle Adjustment tool palette. With the cropped image displayed, click the [Copy] button and then click the [Paste] button. This will apply the trimming range to all the images selected when the trimming/angle adjustment window is displayed.

To select multiple images in the main window, click the images while holding down the <Ctrl> key. To select multiple consecutive images, click on the first image, and then click on the last image while holding down the <Shift> key.

 For images shot with ISO speed range expansion set, noticeable noise may make it difficult to view the image in detail in the trimming/angle adjustment window.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index




# Editing with the Lens Correction Tool Palette

With the Lens Correction tool palette, you can use the lens aberration correction functions and the Digital Lens Optimizer to correct lens aberration in your images and to improve their resolution. This tool palette can also be used in conjunction with the sharpness adjustment functions. Note that the lens aberration correction functions and the Digital Lens Optimizer can only be used with RAW images.

1 Select an image in the main window, etc.


2 Display the Lens Correction tool palette.

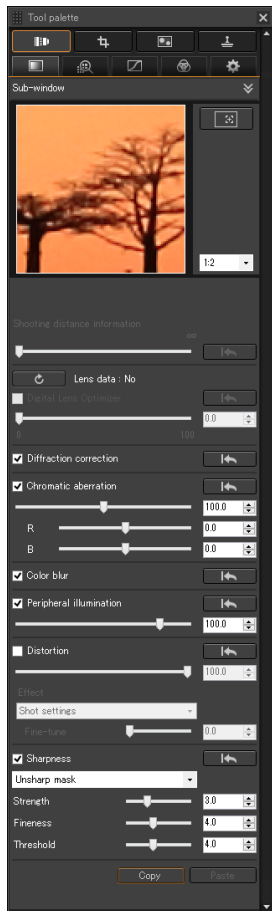


## Correcting Lens Aberration

You can easily make corrections to drops in peripheral illumination, distortions in the subject, and color blur which occur by the physical characteristics of the lens or slightly remaining aberration.

You can only correct aberration in RAW images which have been shot with compatible lenses. JPEG or TIFF images cannot be corrected. Note that even though the EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D30, EOS D60, EOS 350D, and EOS 300D are EOS cameras supporting the Digital Photo Professional, they are not compatible with the lens aberration correction function. Also, note that the lens aberration correction function is compatible with the EOS 5D with the firmware version 1.1.1 and the EOS 30D with the firmware version 1.0.6.

 To use this function, the EOS Lens Registration Tool (version 1.4.20 or later) must be installed.

-  Lenses compatible with this function are those displayed in the [Add or Remove lens data] window (p.77).
- You can also correct RAW images taken with the compatible lens even when the extender is attached.
- You can also correct RAW images shot with EF50mm f/2.5 Compact Macro fitted with Life Size Converter EF.
- The aberration correction function is not available for images shot with a lens other than those given under “Compatible Lenses”. They are therefore not displayed and cannot be used.
- The lens aberration correction function is not available for multiple-exposure RAW images created on the camera.
- EF cinema lenses (CN-E lenses) are not compatible.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index







## Making Corrections


You can make corrections to any of the five aberrations as below, either one at a time or simultaneously.

- Peripheral illumination
- Chromatic aberration (color fringing which occurs in the periphery of an image)
- Color blur (blue or red color blur which sometimes occurs at the edge of the highlighted area of an image)
- Distortions
- Diffraction

1 Select an image in the main window.

2 Display the Lens Correction tool palette and checkmark the items to be corrected.

Enlargement display section

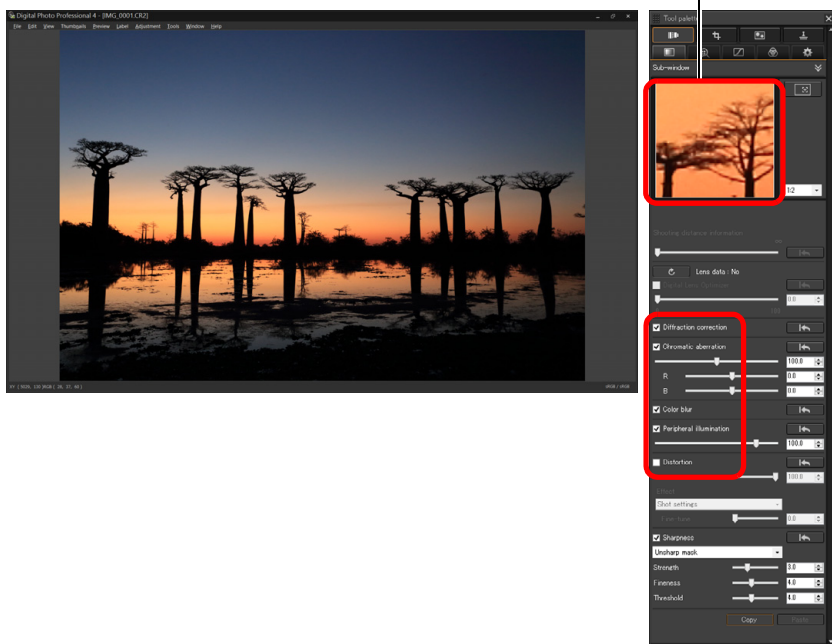

→ The image is corrected and redisplayed.

→ In the main window, the [●] mark is displayed on the image to indicate that the lens aberration correction is applied (p.147).

- Check the results of corrections to peripheral illumination or distortions in the full view.
- Check the results of corrections to chromatic aberration and color blur by clicking the area on the image you want to check and then checking the enlargement display section in the top of the window. You can choose from 4 display scales between 1:1 and 1:4 for the enlargement display.
- You can lessen the degree of correction by moving the slider to the left.
- You can respectively correct red chromatic aberration with the [R] slider of the [Chromatic aberration] or blue chromatic aberration with the [B] slider.
- To correct distortion aberration of images shot with a fisheye lens (EF8–15mm f/4L USM Fisheye or EF15mm f/2.8 Fisheye), four effects can be selected from the [Effect] list box in addition to [Shot settings] normally used for distortion correction. The level of an effect can be adjusted with the adjustment slider located below [Distortion]. For detailed information on each effect, see “Effects of Distortion Correction for Fisheye Lenses” (p.73).
- For images shot with EF8–15mm f/4L USM Fisheye, a fine-tune slider is also displayed when you select [Emphasize Linearity] from the [Effect] list box. Adjust the amount of correction for distortion aberration with the adjustment slider, and then adjust with the fine-tune slider if more adjustment is required.
- When the list box for selecting an extender is displayed, select the extender attached at the time of shooting from the list box.
- [Diffraction correction] corrects only those images shot with a camera with a diffraction correction function. By checkmarking this option, images are corrected according to the camera's diffraction correction function. Note that this function cannot be used at the same time as the Digital Lens Optimizer.
- The adjustment range of distortion correction is either [0 to +100] or [–20 to +120], depending on the camera model that was used for shooting. The adjustment range for images shot with a fisheye lens mounted is [0 to +100] regardless of the camera model that was used.

# Effects of Distortion Correction for Fisheye Lenses

## ● Shot settings

By selecting this option, only the aberration corrections will be performed to correct the optical distortions.



## ● Emphasize Linearity

This converts the image to a “central projection” style image. This projection method is employed for general lenses. Since central projection displays straight lines as straight lines, a wide-view panoramic image can be obtained by selecting this option. However, the periphery is stretched, resulting in decreased resolution.



## ● Emphasize Distance

This converts the image to an “equidistant projection” style image. This projection method preserves distance relationships. Equidistant projection displays a distance in the same distance anywhere from the center to the periphery. In particular, when shooting a celestial body such as the celestial sphere, same heights above the horizon(declination) are captured at the same heights. This method is therefore used in such photography as celestial photography (star maps, solar path diagrams, etc.).



## ● Emphasize Periphery

This converts the image to a “stereographic projection” style image. This projection method emphasizes the periphery. Stereographic projection allows position relationships on a spherical surface, such as N, S, E, W on a map, to be displayed correctly. It is therefore used for world maps and monitoring cameras. By selecting this option, the periphery is stretched and may result in decreased resolution.



Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## ● Emphasize Center

This converts the image to an “orthographic projection” style image. With this projection method, the center is more emphasized. Since an orthogonal projection allows a subject of the same brightness to be displayed as occupying the same area in the image, this method has typical uses in photography for celestial luminance distributions and center-emphasized animal photography. By selecting this option, the center is stretched and may result in decreased resolution.



**!** When selecting any of the options, [Emphasize Linearity], [Emphasize Distance], [Emphasize Periphery], or [Emphasize Center], it will yield results similar to that of the selected projection method. However, the conversion does not really apply a change of projection method in a strict sense. Accordingly, be aware that they are not suited for scientific or other such purposes.

## Shooting Distance Information Slider

- When correcting RAW images and if shooting distance information has been saved to the image, the slider is set automatically according to this shooting distance information. However, if no shooting distance information is saved to the image, the slider is set automatically to the right end at infinity position and a [∞] appears above the slider. If the image’s shooting distance is not infinite, you can minutely adjust the distance by operating the slider while looking at the screen.
- When correcting RAW images shot with the cameras in the table below, it is set automatically to the right end at infinity position. You can then minutely adjust the distance by operating the slider while looking at the screen if the shooting distance is not infinite.

EOS-1D Mark II N	EOS-1Ds Mark II	EOS-1D Mark II
EOS-1D	EOS-1Ds	EOS 5D
EOS 30D	EOS 400D	–

- For RAW images shot with MP-E65mm f/2.8 1-5x Macro Photo or EF50mm f/2.5 Compact Macro with Life Size Converter EF, the slider indicator changes to [Magnification factor].
- The [Shooting distance information] slider is applied to all the correction items with check marks.
- If the lens requires no adjustment with the [Shooting distance information] slider, the slider cannot be used.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## Correcting Multiple Images at a Time

You can apply the same corrections to several images by first selecting multiple images in the main window, and then performing correction procedures (p.72).

Also, you can apply same corrections by copying the recipe of the corrected image and pasting it onto the multiple images (p.95).

### ? Additional information

- **Some noise appeared in the periphery of an image after correcting [Peripheral illumination]**

You can reduce the noise by using luminance and/or chromatic noise reduction of the noise reduction function (p.66). However, if you had applied high amount of [Peripheral illumination] correction to the images that have been shot at night or with a high ISO speed, the noise might not be reduced.

- **The image appears with less resolution after correcting [Distortion]**


You can make the image similar to the one before correction by applying more sharpness with the sharpness adjusting function (p.67).

- **The colors of the image became weaker after correcting [Color blur]**

You can make the image similar to the one before correction by adjusting the color tone (p.53) and/or the color saturation (p.65) to make the color deeper.


- **The result of [Color blur] correction cannot be detected**

[Color blur] correction is effective for correcting blue or red color blur which occurs at the edge of the highlighted area of an image. If conditions do not match, correction cannot be made.

 The periphery of the image may be truncated when [Distortion] correction is made.

## Digital Lens Optimizer

This function enables the resolution of images to be increased by removing any remaining aberration related to image-forming capability or any deterioration of resolution resulting from diffraction phenomena. These optical phenomena cannot be corrected under Lens aberration correction (p.71). Correction is achieved using the designed value of each lens. You can correct these optical phenomena in RAW images which have been shot with compatible lenses. JPEG, TIFF, S-RAW, and M-RAW images cannot be corrected. To use this function, [Lens data] for the lens used to shoot images first needs to be downloaded to your computer. Before using the Digital Lens Optimizer, it is recommended that you set [Sharpness] or [Strength] for [Unsharp mask] for images to 0. Note that even though the EOS 20D/EOS 20Da, EOS 10D, EOS D2000, EOS D30, EOS D60, EOS 350D, and EOS 300D are EOS cameras supporting the Digital Photo Professional, they are not compatible with the Digital Lens Optimizer. Also, note that the Digital Lens Optimizer is compatible with the EOS 5D with the firmware version 1.1.1 and the EOS 30D with the firmware version 1.0.6.

-  ● To use this function, the EOS Lens Registration Tool (version 1.4.20 or later) must be installed.
- The Digital Lens Optimizer is also available for images shot with an extender attached to a compatible lens.
- You cannot use the Digital Lens Optimizer with multiple-exposure RAW images created on the camera.
- EF cinema lenses (CN-E lenses) are not compatible.
- [Diffraction correction] cannot be used at the same time as the Digital Lens Optimizer.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index






## Using the Digital Lens Optimizer

- 1 Check the status of [Lens data] for [Digital Lens Optimizer].

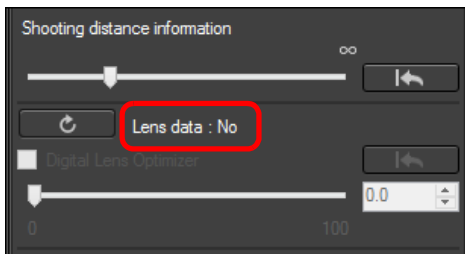




- [Not Available] is displayed for an image shot with a non-compatible camera or lens, or for a non-compatible image such as a JPEG, TIFF, S-RAW, or M-RAW image. The function cannot be used for these images.
- If [No] is displayed, proceed to step 2. To use the function, you need to download the lens data for the lens used when shooting the image. It is recommended that you check the lens used when shooting the image beforehand. The lens used can be checked using the image information and shooting information displays. You can also check it with the menu that appears when you right-click with the mouse on an image.
- If [Yes] is displayed, proceed to step 4.

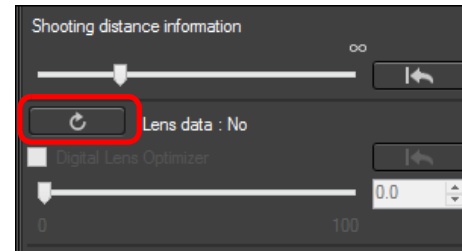- 2 Click the [  ] button.



→ The [Add or Remove lens data] window appears.

 To use this function, an environment with Internet access (subscription to a provider, and an in-place line connection) is required. Internet Service Provider (ISP) connection fees or access point connection fees may apply.

 Before you click the [  ] button in step 2, Lens data [No] may be displayed instead of [Not Available] for non-compatible images.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos


Specifying  
Preferences

Reference/  
Index






### 3 Checkmark the checkbox for the lens used to shoot the image, and click the [Start] button.

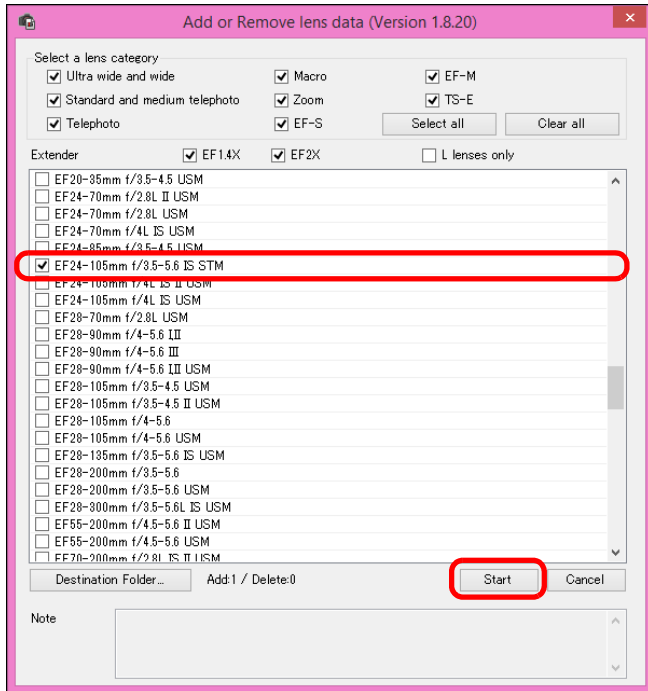

- The lens data is downloaded to your computer.
- When the downloading of the lens data ends, the indication for the lens data changes to [Yes].
- Lenses compatible with this function are those displayed in the [Add or Remove lens data] window.
- If you remove the check mark from the checkbox for already-downloaded lens names and click the [Start] button, the lens data will be deleted from your computer.

- ! Depending on the type, current state, etc. of software running on your computer, the download of the lens data may fail. If it occurs, wait for a while then try downloading the data again.
- If you want to change the destination where lens data is saved when there is already downloaded lens data, move the previously downloaded lens data from the old folder to the new destination folder manually.

### 4 Checkmark the [Digital Lens Optimizer] checkbox and adjust the image.

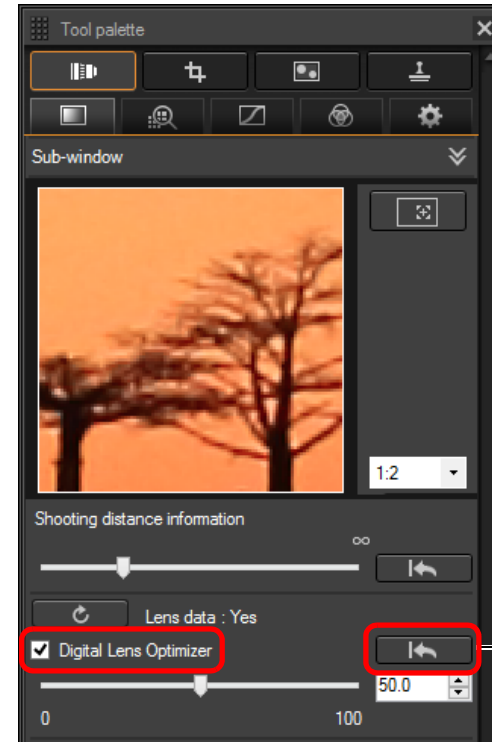

Reverts to its condition before adjustment

! Since the lens data downloaded with DPP version 3.x is not compatible with DPP version 4.x, the lens data must be downloaded again.

📄 When applying the Digital Lens Optimizer, the effect of [Sharpness] or [Unsharp mask] may become excessive. It is recommended that you set [Sharpness] or [Strength] for [Unsharp mask] for images to 0 before using the Digital Lens Optimizer. Adjust [Sharpness] or [Unsharp mask] again after applying the Digital Lens Optimizer to images.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images


Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



- Use the slider to adjust the Digital Lens Optimizer effect.
  - If no shooting distance information is saved to the image, the shooting distance slider is set automatically to the right end at infinity position and a [∞] appears above the shooting distance slider.
  - If the lens requires no adjustment with the [Shooting distance information] slider, the slider cannot be used.
  - Images cannot be corrected for [Chromatic aberration] in the lens aberration correction tool pallet if the Digital Lens Optimizer has been applied.
- In the main window, the  mark is displayed on the image to indicate that the Digital Lens Optimizer is applied (p.147).

## Adjusting Image Sharpness

You can also use this palette to adjust the image sharpness. For information on making adjustments, see “Adjusting Image Sharpness” in “Editing with the Basic Adjustment Tool Palette” (p.57).

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Editing with the Partial Adjustment Tool Palette

The Partial Adjustment tool palette adjusts the selected area of an image.


With this tool palette, you can adjust brightness, contrast, hue, and saturation, and reduce color moiré.

Supported image formats are CR2, CR3, TIFF, and JPG.


**!** **32bit** On 32-bit OSs, this function is not available.

## Making Partial Adjustments to Images ([Brightness], [Contrast], [Hue], [Saturation])

- 1 Select an image in the main window, etc.
- 2 Display the Partial Adjustment tool palette.

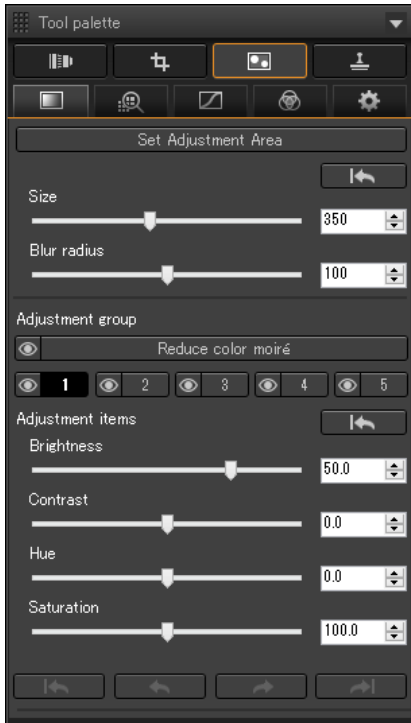

- 3 Select [Adjustment group].

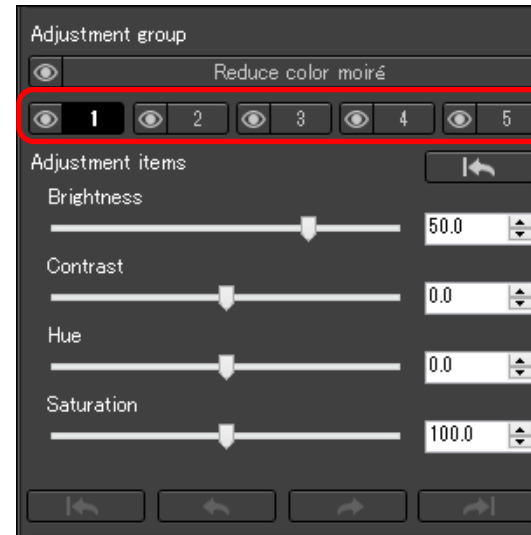


- Select [Adjustment group] from [ 1 ], [ 2 ], [ 3 ], [ 4 ], and [ 5 ].  
(By default, [ 1 ] is selected.)  
For information on adjustment groups, see “Adjustment Groups” (p.82).

- 4 Click the [Set Adjustment Area] button.




→ A circular cursor appears in the window.

- Introduction/Contents
- Downloading Images
- Viewing Images
- Sorting Images
- 4 Editing Images**
- Printing Images
- Processing Large Numbers of RAW Images
- Remote Shooting
- Playing Back Movies and Saving Still Photos
- Specifying Preferences
- Reference/Index

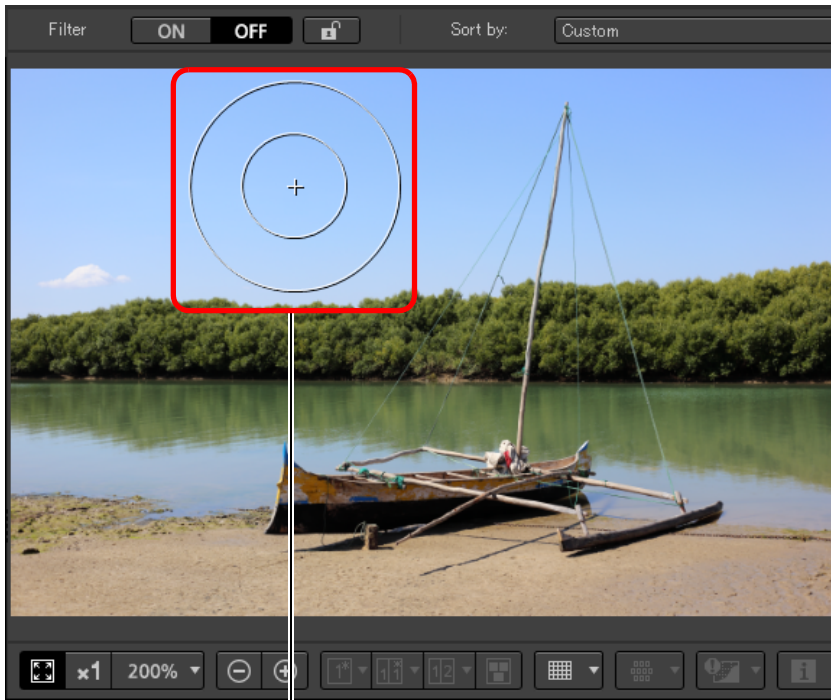

Circular cursor


**5 Drag the sliders to adjust [Size] and [Blur radius] for the circular cursor.**

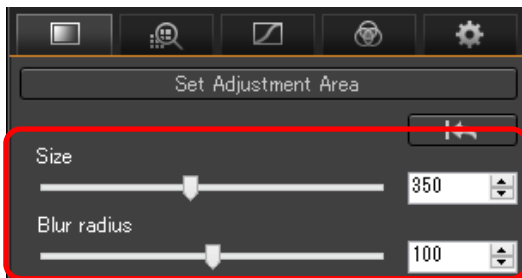

● [Blur radius] adjusts blurring at the border of the selected area.

**6 Click or drag the circular cursor on the image to select the area of adjustment in the image.**

**7 Use the sliders to adjust [Adjustment items] as necessary.**

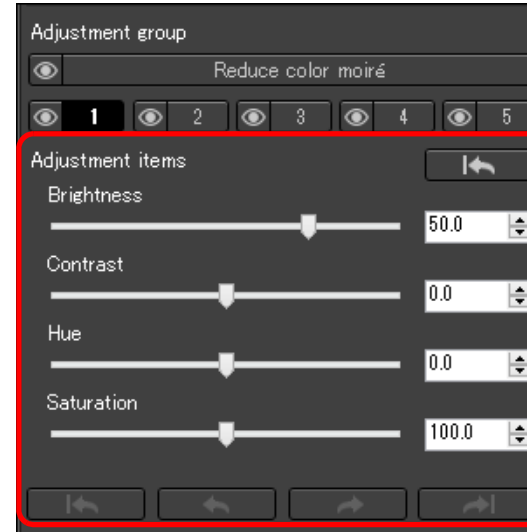

→ Adjustments are applied to the area selected in step 6.

● You can use the [Undo All], [Undo], [Redo], and [Redo All] buttons below [Adjustment items] to return and check positions selected with the circular cursor. Available buttons, from the left, are [Undo All], [Undo], [Redo], and [Redo All].

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

**4**  
Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index






## Making Partial Adjustments to Images ([Reduce color moiré])

This function partially reduces color moiré in images.  
Before making adjustments, see “Reducing Color Moiré in an Image”  
(p.67) for information on reducing color moiré.


- 1 Select an image in the main window, etc.
- 2 Display the Partial Adjustment tool palette.
- 3 Click the [Reduce color moiré] button in [Adjustment group].  
→ A dialog box for [Reduce color moiré] appears.
- 4 Click the [Set Adjustment Area] button, and use the [Size] and [Blur radius] sliders for the circular cursor to make adjustments.
- 5 Click or drag the circular cursor on the image to select the area of adjustment in the image.
- 6 Use the [Reduce color moiré] slider in [Adjustment items] to specify the setting.  
→ Adjustments are applied to the area selected in step 5.
  - You can use the [↩], [←], [→], and [↪] buttons below [Adjustment items] to return and check positions selected with the circular cursor. Available buttons, from the left, are [Undo All], [Undo], [Redo], and [Redo All].

-  Changes edited with this function are not displayed in the following images.
- Thumbnail images
  - Navigator images
  - Images in the HDR [Select images] window (see p.106, step 3)
  - Images in the [Contact sheet] window for printing a thumbnail list (see p.118, step 3)  
However, edited changes are applied when four images or fewer (JPEG/TIFF images) are selected.
  - Changes edited with this function are not applied in the DPP histogram display.





## Adjustment Groups

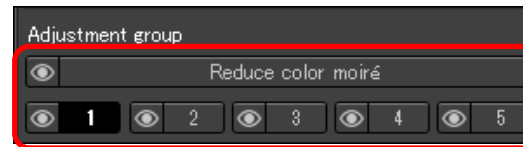

- The Partial Adjustment tool palette comprises 5 adjustment groups that allow adjustments to be made with [Brightness], [Contrast], [Hue], and [Saturation] options, and 1 adjustment group that allows adjustments to be made with the [Reduce color moiré] option.
  - A different adjustment area can be selected for each adjustment group.
  - Adjustment groups [1], [2], [3], [4], and [5] allow different values to be specified even for a same adjustment option.
- By default, adjustments from all adjustment groups are applied to an image. However, you can click the [ ] button and select to apply or not apply adjustments from each adjustment group.
- Positions selected with the circular cursor, that can be checked using the [ ], [ ], [ ], and [ ] buttons below [Adjustment items], can be checked per each group.
- The order of adjustment groups in which adjustments are applied to images is (1) [Reduce color moiré], (2) [1], (3) [2], (4) [3], (5) [4], and (6) [5].


- ! • Changes edited with this function are not displayed in the following images.
  - Thumbnail images
  - Navigator images
  - Images in the HDR [Select images] window (see [p.106, step 3](#))
  - Images in the [Contact sheet] window for printing a thumbnail list (see [p.118, step 3](#))
 However, edited changes are applied when four images or fewer (JPEG/TIFF images) are selected.
- Changes edited with this function are not applied in the DPP histogram display.

# Editing with the Dust Delete/Copy Stamp Tool Palette

You can use this tool palette to erase dust and other marks in a shot image and to correct an image by copying part of the image and pasting it onto an unnecessary part of the image.

Note that you can use the functions in this tool palette with JPEG and TIFF images as well as RAW images.

## Dust Delete/Copy Stamp Tool Palette

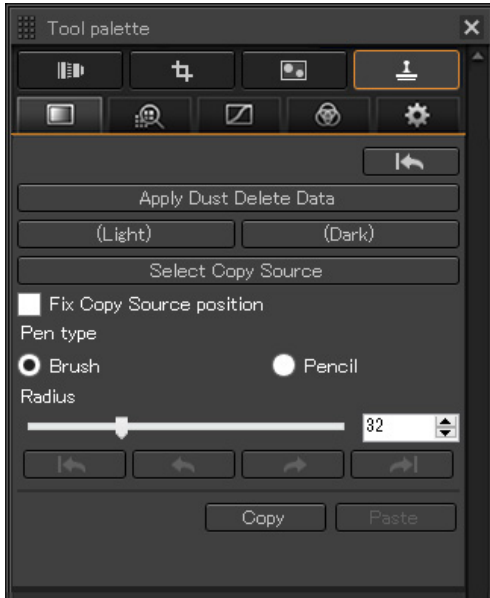

## Performing Automatic Dust Erasure Processing

The Dust Delete Data that is appended to images can be used to automatically erase dust spots.

- 1 Select an image with dust delete data attached in the main window, etc.
- 2 Display the Dust Delete/Copy Stamp tool palette.
  - You cannot make adjustments with the Dust Delete/Copy Stamp tool palette in a window that only shows thumbnails.
- 3 When the image has redrawn itself, click the [Apply Dust Delete Data] button.



→ Dust spots are erased in a single operation.

- 4 Return to the main window.

**!** **32bit** On 32-bit OSs, the results of erasing dust manually (repair function) (p.85) and erasing unwanted parts of an image (copy stamp function) (p.87) can only be checked in the window in which erasure was performed, in the print results, or in the image after being converted and saved.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos


Specifying  
Preferences

Reference/  
Index



## ? Additional information

- **The dust-erased image can be reverted to its original condition at any time**

A dust-erased image is displayed or printed as a dust-erased image. However, since the dust on the image is not actually erased, you can always revert to the original image by clicking the [] button in the Dust Delete/Copy Stamp tool palette or performing the “Re-Editing an Image” procedure (p.93).

- **Printing dust-erased images**

You can print as a dust-erased image by printing it in DPP.

- **To erase dust spots that cannot be erased with the automatic dust erasure processing**

In automatic dust erasure processing, dust spots are erased based on information relating to dust saved in the Dust Delete Data. However, there may be cases where you will not be able to erase dust spots depending on the type of dust. If this occurs, erase those dust spots using the repair function (p.85) or the copy stamp function (p.87).

- **The image becomes a dust-erased image when converted and saved**

The dust-erased RAW image actually becomes a dust-erased image when converted to a JPEG or TIFF image and saved (p.91).

- **Applying the dust erasure result to another image**

You can apply dust erasure to the same place in another image by clicking the [Copy] button to copy the dust erasure results and then displaying the other image to which you want to apply the results and clicking the [Paste] button.

## Automatic Dust Erasure Processing in the Main Window

In the main window, you can also automatically erase dust spots in multiple images appended with Dust Delete Data.

### Select multiple images appended with Dust Delete Data, and then select the [Adjustment] menu ▶ [Apply Dust Delete Data].

→ Dust spots in all the selected images are erased in a single operation.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

**4**  
Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## Manually Erasing Dust (Repair Function)

You can erase dust spots in an image by selecting them one by one.

- 1 In the main window, select the image from which you want to erase dust spots.
- 2 Display the Dust Delete/Copy Stamp tool palette.
- 3 Click the point from where dust is to be erased.




Click

- The display changes to 100% view.
- The display position can be changed by dragging.

## 4 Click the button that matches the dust spot to be erased.

- If the dust spot is dark in color, click the [ (Dark) ] button, and if the dust spot is light in color, click the [ (Light) ] button.
- When you move the cursor over the image, the dust erasure range is indicated with [○].

## 5 Place the dust spot to be erased within the [○] and click.

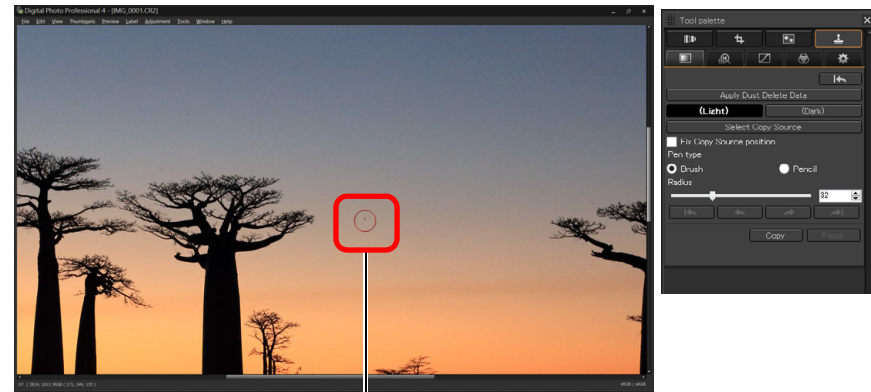

Click

- The dust spot within the [○] is erased.
- Click on another part of the image to continue erasing dust spots within the displayed image.
- To erase dust in another part of the image, either right-click with the mouse, or click the button clicked in step 4 again to cancel dust erasure processing and perform the operation again from step 3.
- When the dust spot cannot be erased, [⊗] is displayed.

## 6 Return to the main window.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting


Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## ? Additional information

- **Click several times when dust spots are not erased completely**  
Where unwanted dust spots are not erased even after performing step 5 once, they may be erased completely when you click several times.
- **Mainly spots of dust can be erased with the repair function**  
Spots of dust can be erased with the repair function. You may be unable to erase lines of dust. In this case, use the copy stamp function (p.87).
- **The dust-erased image can be reverted to its original condition at any time**  
A dust-erased image is displayed or printed as a dust-erased image. However, since the dust on the image is not actually erased, you can always revert to the original image by clicking the [  ] button in the Dust Delete/Copy Stamp tool palette or performing the “Re-Editing an Image” procedure (p.93).
- **Printing dust-erased images**  
You can print as a dust-erased image by printing it in DPP.
- **The image becomes a dust-erased image when converted and saved**  
The dust-erased RAW image actually becomes a dust-erased image when converted to a JPEG or TIFF image and saved (p.91).

## 💡 Useful functions of the copy stamp window

- **Switch between full screen display/normal screen display using shortcut keys**  
You can also switch between full screen display/normal screen display by pressing the <Alt> + <Enter> keys.

⚠ For images shot with ISO speed range expansion set, noticeable noise may make it difficult to view dust spots in the copy stamp window, so using this function is not recommended.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





## Erasing Unwanted Parts of an Image (Copy Stamp Function)

You can correct an image by pasting a section copied from another part of the image to an unwanted part of the image.

**1** Follow steps 1 to 3 in “Manually Erasing Dust (Repair Function)” (p.85).

**2** Specify the section to be copied.

- Click on the section that is to be the copy source after clicking the [Select Copy Source] button.
- To change the section that is to be the copy source, perform the operation above again.
- To fix the position of the copy source, checkmark [Fix Copy Source position].

**3** Correct the image.

- Click or drag on the part of the image you want to modify. [+] in the window indicates the copy source and [O] indicates the copy destination.
- The copied image is pasted in the position to which it was dragged.
- For [Pen type], you can select from [Brush] (the pasted image's borders simulate a brush) and [Pencil] (the pasted image's borders are sharp).

**4** Return to the main window.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

**4**  
Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index




# Setting Work Color Space

A different work color space (p.149) from the default settings (p.141) can be set for each image.

**Display the Settings tool palette ▶ select the color space to be set.**

Settings tool palette

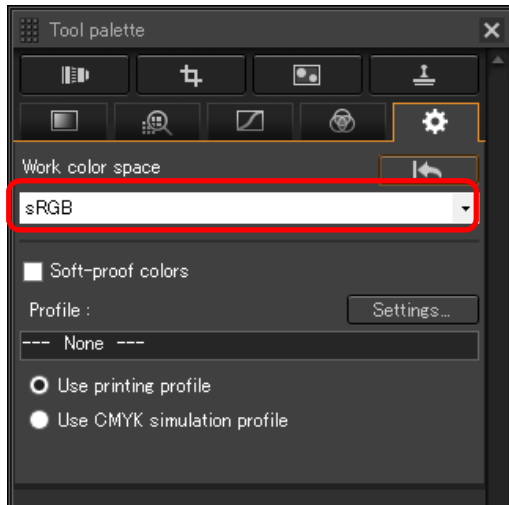

**? A color space set individually does not change even when the default setting is changed**

If you set an image with a color space different to the default setting and then subsequently change the default color space setting (p.141), this default setting will not be applied and the individually set color space will remain.

**💡 The color space of a RAW image can be changed freely as many times as required**

Since only the image processing conditions information changes, the color space of a RAW image can be changed at any time.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index



# Using the Soft-Proof Colors Function


By using the soft-proof colors function, you can apply a selected printing profile or CMYK simulation profile to the displayed image. The reliability of the soft-proof colors function depends on the monitor quality, the monitor and printer profiles, and surrounding lighting conditions where you are working.

## 1 Click the [Settings] button.

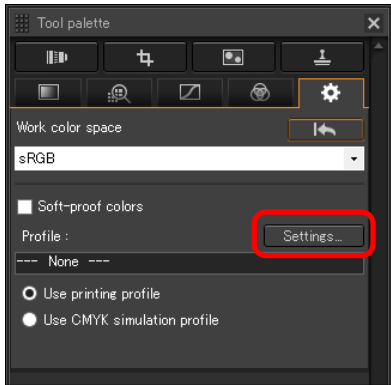


→ The [Color management] tab sheet in [Preferences] appears.

## 2 Select the profile to apply from the [Printing profile] or [CMYK simulation profile] list box, and click the [OK] button.

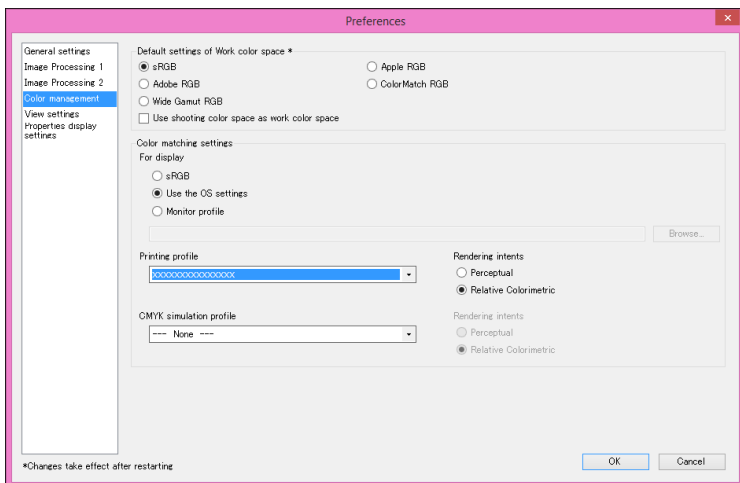

→ The [Color management] tab sheet in [Preferences] closes.

## 3 According to the profile selected in step 2, select either [Use printing profile] or [Use CMYK simulation profile], and checkmark the [Soft-proof colors] checkbox.

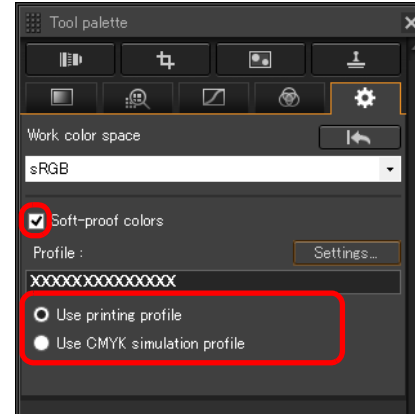

→ The profile selected in step 2 is applied to the displayed image including its thumbnail. The profile is not applied to images displayed in the quick check window.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Specifying the Size when Opening RAW Images


This applies only to RAW images with the extension “.CR3” that were shot with [ cRAW ] selected on the camera.

This function specifies the image size when a RAW image is selected and opened in DPP. When the selected RAW image is converted and saved as a JPEG or TIFF image, it is also saved at the same size.

This function is not available for images shot with the Dual Pixel RAW function set on the camera.

**Select the RAW image ▶ display the Settings tool palette ▶ select the size when opening RAW images in DPP.**

## Settings tool palette

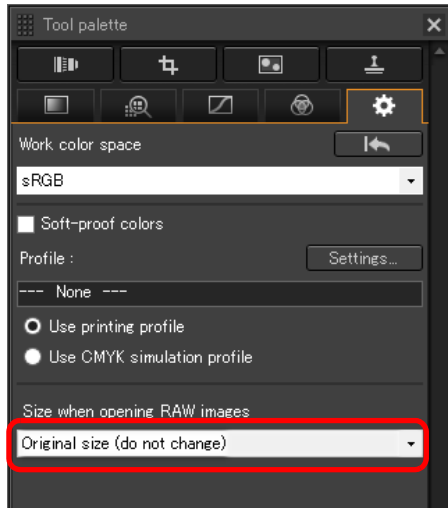

- The image size when opening RAW images in DPP is set.
- The default setting shows the size set in [Default size when opening RAW images] in the [Image Processing 2] tab sheet in [Preferences].
- The settings are saved as recipes for each image.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index




# Saving Editing Results

## Saving Editing Contents to an Image

All the contents adjusted with the tool palette (recipe) can be saved to the image or saved as a separate image.

Select the **[File] menu ▶ desired item.**

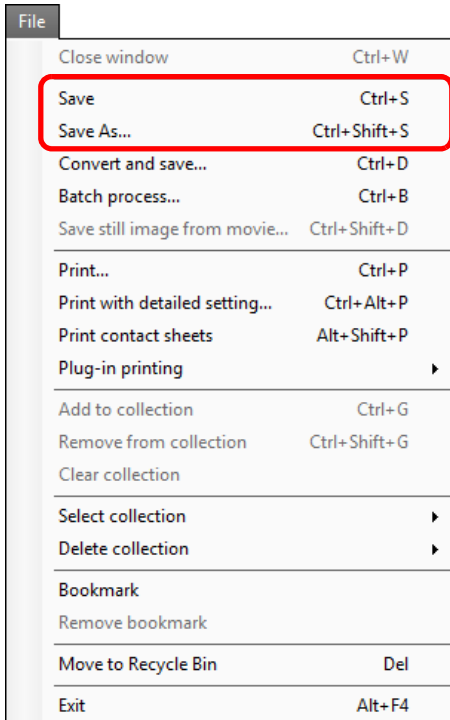


→ Your adjustments are saved to the image.

## Saving as a separate image

To view, edit and print a RAW image with software other than DPP, convert to a more versatile JPEG or TIFF image and save.

If a JPEG or TIFF image is saved as described below, the image can be saved as a separate image with the adjustments (recipe) applied to it. The image is saved as a separate image, so the original image remains unaffected.

- 1 Select the image to be converted.
- 2 Select the **[File] menu ▶ [Convert and save].**

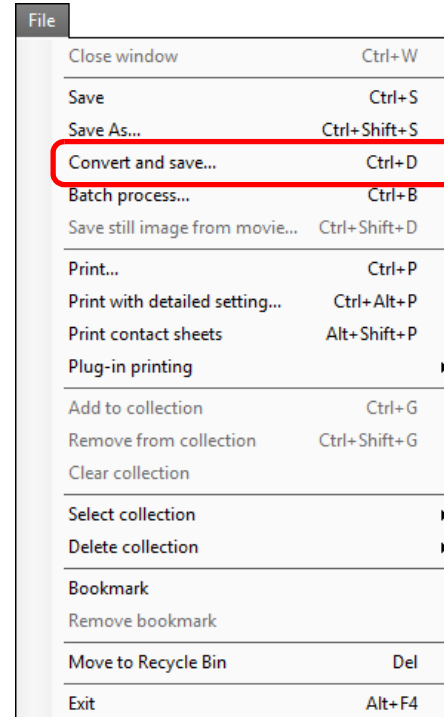

→ The **[Convert and save]** window appears.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index








### 3 Specify the necessary settings, and then click the [Save] button.

- By default, the image is converted and saved to a JPEG image with the highest image quality, without changing the image size. Change the settings according to your requirements.

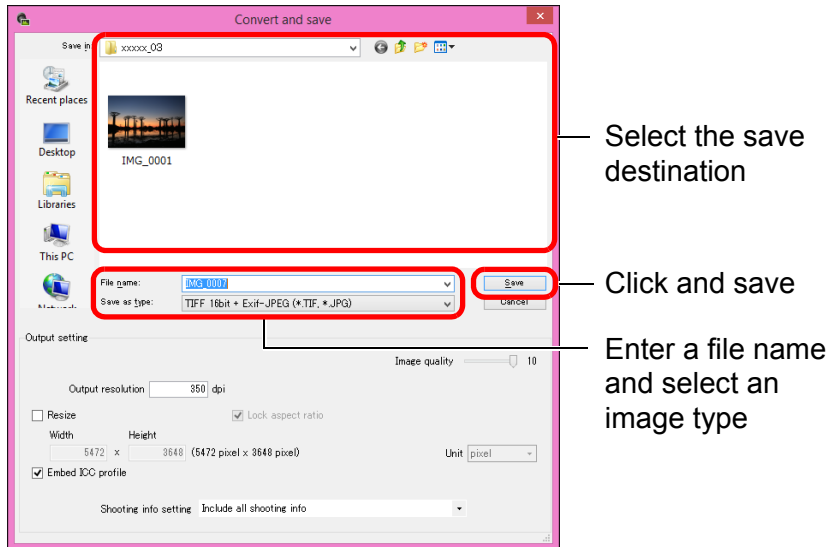

Select the save destination

Click and save

Enter a file name and select an image type

- The RAW image is converted to a JPEG or TIFF image which is then saved as a new image in the specified save destination.



#### To save the developing/editing results for the version you are currently using

DPP's RAW image development processing technology is continually being improved upon so that you can perform the latest image processing more appropriately.

Meaning that, between two different versions of DPP, processing results may differ very slightly even if with the same RAW image data, or the results of significant editing of RAW image data with an attached recipe may be different.

When you want to save the developing or editing results of the version you are currently using as it is, saving the image as a separate file (p.91) is recommended.



- By saving as a separate JPEG or TIFF image as explained above, some image deterioration that accompanies editing/saving occurs as when editing with general image editing software.
- By saving as explained above, a trimmed image (p.68) or dust-erased image (p.83 to p.87) actually becomes a trimmed image or dust-erased image.
- You can batch convert and save multiple images (p.123).


# Re-Editing an Image

Only the image processing conditions are changed in images adjusted with the tool palette (p.43 to p.88), so the “original image data itself” remains unaffected. (The trimming range or dust-erasure information of a cropped image (p.68) or dust-erased image (p.83 to p.87) is simply saved to the image.)

For this reason, you can undo any adjustments saved (p.91) to the image, trimming range and dust-erasure information, and revert to the condition when last saved, or when the image was shot.

**1** Select the image that is to be re-edited.

**2** Select the [Adjustment] menu ▶ desired item.

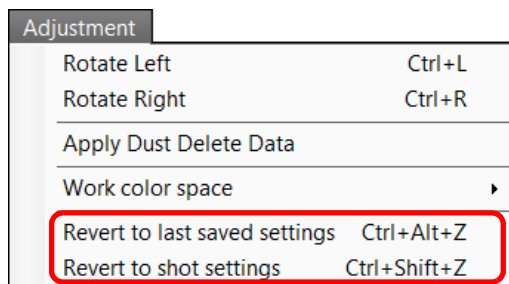

→ The image reverts to the conditions of the selected item.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

**4**  
Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index



# Utilizing Adjustment Contents (Recipe)

All the adjustment contents (recipe) made using the tool palette can be saved as an individual recipe file (extension “.dr4”) and loaded and applied to another image.

You can edit images efficiently by selecting and adjusting one image from images shot with the same shooting environment and batch applying the adjustment results to a large number of images.

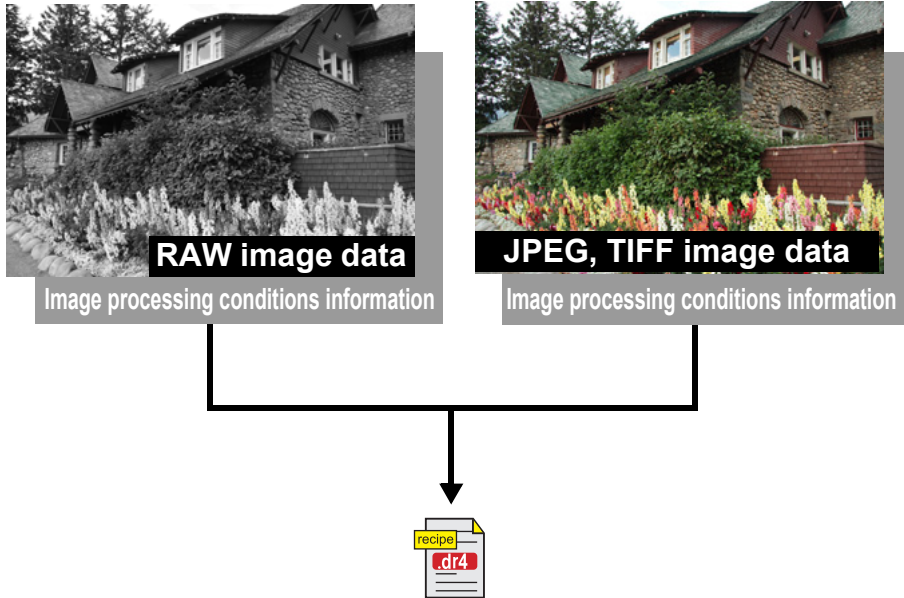

Contents adjusted using the tool palette can be handled individually as a recipe file (extension “.dr4”).



- A recipe file with contents that can only be adjusted in RAW images are not reflected even if it is applied to a JPEG or TIFF image.
- Recipes are not compatible between DPP version 4.x and DPP version 1.x to 3.x. Images with DPP version 1.x to 3.x recipe files attached are displayed with the shot settings in DPP version 4.x. Conversely, images with DPP version 4.x recipe files attached are displayed with the shot settings in DPP version 1.x to 3.x.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## Copying a Recipe and Applying to Another Image

You can copy a recipe of an edited image and then apply it to another image.

- 1 Select the image with the recipe you want to copy.**
- 2 To copy all items of a recipe, select the [Edit] menu ▶ [Copy recipe]. To copy only selected items of a recipe, select the [Edit] menu ▶ [Copy selected recipe].**
  - The recipe is copied.
  - To select recipe items, select the [Edit] menu ▶ [Select and copy recipe settings] and select items in the window that appears. After specifying settings, click the [OK] button and close the window.
- 3 Select the image to which the recipe is to be applied and then select the [Edit] menu ▶ [Paste recipe].**
  - The recipe is applied to the image.



When a recipe for an image is copied and applied to an image in a different orientation, the image orientation also changes. To prevent the orientation of the image from changing, select the [Edit] menu ▶ [Select and copy recipe settings] and remove the check mark from the [Rotate left / Rotate right: 0°] checkbox in the window that appears.

## Saving a Recipe as a File

- 1 Select an edited image, and then select the [Edit] menu ▶ [Save recipe in file].**
  - The [Save recipe in file] dialog box appears.
  - To save all of a recipe, select the [Save all recipes] option in the window displayed.
  - To select and save recipe settings, select the [Save selected recipes] option in the window displayed and then click the [Specify Recipe Details] button. In the window displayed, checkmark the recipe settings to be saved and then click the [OK] button.
- 2 Select the destination folder, enter a file name, and then click the [Save] button.**

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

**4**  
Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## Loading and Applying Recipes

**1** Select the image to which a recipe is to be applied, and then select the [Edit] menu ▶ [Read and paste recipe from file].

→ The [Open] dialog box appears.

**2** Select a recipe and click the [Open] button.

→ The recipe is applied to the image.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

**Editing  
Images**

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





# Adjusting by Comparing Multiple Images

You can synchronize the areas in different images to be displayed among multiple preview windows, and adjust images while comparing them.

- 1 In the preview window, display the multiple images to be compared.
- 2 Align the images.
  - Select the [Window] menu ▶ [Arrange horizontally] or [Arrange vertically].
  - The preview windows are aligned.
- 3 Select the [Preview] menu ▶ [Sync preview position] and [Sync preview display size].
- 4 Enlarge the image.
  - Enlarge and display any of the preview windows.



→ Other preview windows will also be displayed in the same position/enlargement ratio.

## 5 Move the area to be displayed.

- If you move the enlargement display area in one of the preview windows, the enlargement display area will also change in all other preview windows.
- To cancel synchronization, select the [Preview] menu ▶ [Sync preview position] and [Sync preview display size] again.



Synchronization only applies to the enlargement display position and the enlargement ratio. Adjustments to the images are not synchronized.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

4  
Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index




# Editing Efficiently

## Editing in the Edit Image Window

The thumbnail display and the preview window are combined, and images can be edited efficiently while quickly switching between images to be edited. Select the images to be edited beforehand in the main window.

- 1 In the main window, select the images you want to edit.
- 2 Switch to the edit image window.

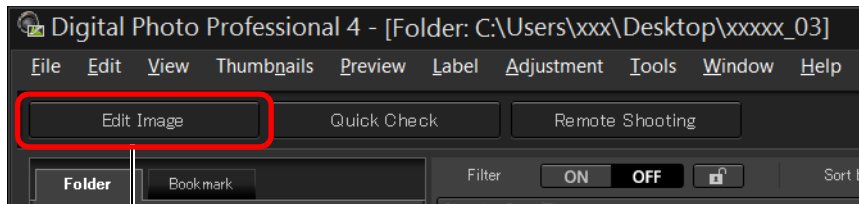


Click

→ The main window switches to the edit image window.

### Edit image window



## 3 Edit the image.

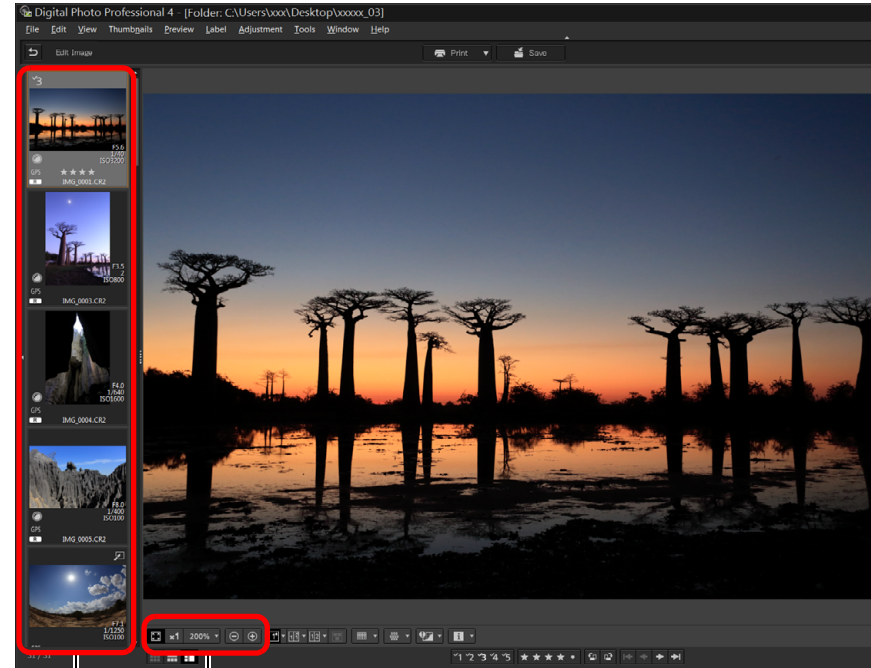

Change the display magnification

Select the image to be edited  
The selected image is displayed as an enlargement in the middle of the window

- For information on icons displayed on the frame of a thumbnail, see “Image Frame Information in the Main Window and Edit Image Window” (p.147).
- The tool palettes, navigator palette, and histogram palette are displayed and you can edit the image.
- To revert to the condition before the last operation performed on the tool palette, select [Undo] in the [Edit] menu or press <Ctrl> + <Z> keys.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## 4 Click the area you want to enlarge.



- The area you clicked is enlarged to 100% (actual pixel size).
- To change the display area, drag on the image or drag the enlargement display area (p.18) of the navigator palette.
- Click again to revert to the full view ([Fit to window]).
- To return to the main window, click the [↩] button on the toolbar.

## Changing the Thumbnail Display Position to Horizontal

Select the [View] menu ▶ [Horizontal Thumbnails].



- If you select [Vertical Thumbnails], the thumbnail display reverts to the vertical position.



With the edit image window, you can only select images from a folder. To gather images from several folders for editing, see “Gathering and Editing Images in the Collection Window” (p.100).






## Gathering and Editing Images in the Collection Window

You can gather selected images together in Collection folders for viewing, comparison and editing.

You can gather images from several folders as well as from a single folder, allowing you to work with them efficiently.

- 1 Click [+ Add collection] in the [Collection] area in the main window.

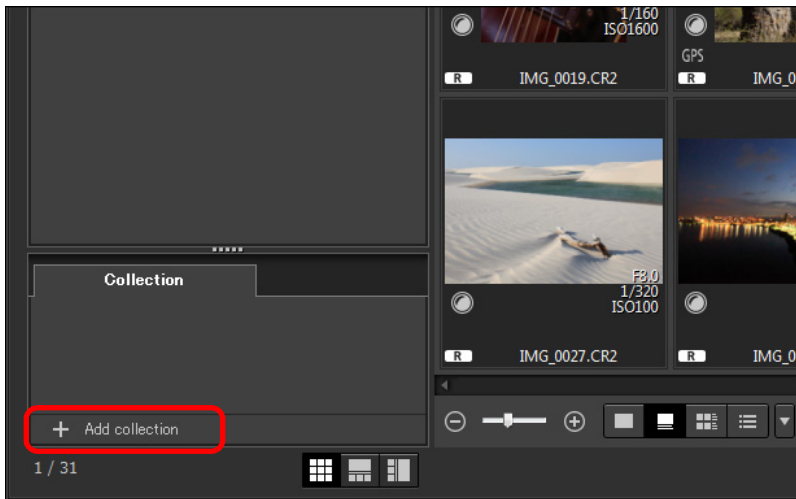


- A new collection folder is created in the [Collection] area.
- Enter a name for the collection folder.
- To create additional collection folders, repeat the operation. Up to 20 folders can be created.

- 2 Select the [File] Menu ▶ [Select collection], and select a collection folder to gather images from the collection folder names displayed.

- 3 Select images or image folders in the main window. Select the [File] menu ▶ [Add to collection].

- The images are added to the selected collection folder, and the number of selected images in the collection folder is displayed. When an image set to single-image display (p.22) is added, the number of images is indicated as two images.
- You can also add images to a collection folder by selecting images and folders and then selecting [Add to collection] from the menu that appears when you right-click the mouse.

- 4 Select a collection folder in the [Collection] area.

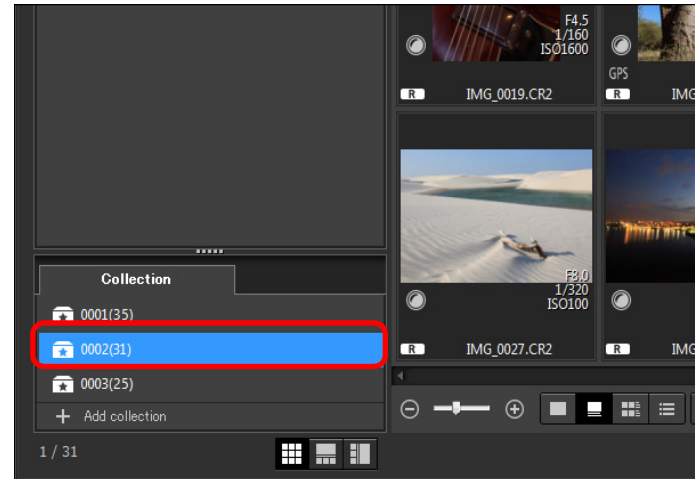

- Images in the selected folder are displayed.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

4  
Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting


Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## 5 Check the displayed images.

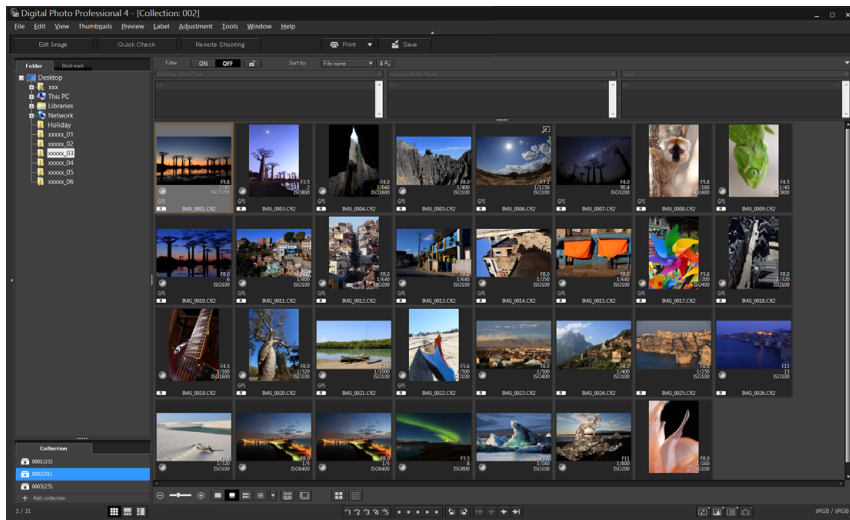

## 6 Edit the images.

- Edit the displayed images.
- Displayed images are retained in the collection folders even after exiting DPP.

**!** **32bit** On 32-bit OSs, only up to 1000 images can be displayed per collection folder. Starting with the 1001st image, images are handled in the same way as non-supported images. Try to maintain 1000 images or less per folder.

## **!** To remove images from collection folders

- **Removing selected images**  
Select images in a collection folder, select images, and select [Remove from collection] in the [File] menu. (You can also remove images from a collection folder by selecting the images, right-clicking with the mouse, and selecting [Remove from collection] from the menu that appears.) Note that even if you remove an image from a collection folder, the original image remains unaffected.
- **Removing all images**  
Select [Clear collection] in the [File] menu. Note that even if you remove all images from a collection folder, the original images remain unaffected.
- **Deleting a collection folder**  
Select a collection folder in the collection area, then select [Delete collection] from the menu that appears when you right-click with the mouse. Note that if you delete a collection folder, the original images remain unaffected.

**!** **Modifications to the image are applied to the original image**  
Modifications made to images in a collection folder are all applied to the original image.






# Compositing Images

You can combine two images into a single image. You can further combine images by adding another image to the composited image. Since the composited image is saved as a separate image, the original images remain as they are.

**!** **32bit** On 32-bit OSs, this function is not available.

- This function can be used with all image types (p.4) supported by DPP.
- The color space of a composited image will be the color space of the background image.
- Image information is not appended to a composited image.


## 1 Select a background image in the main window.

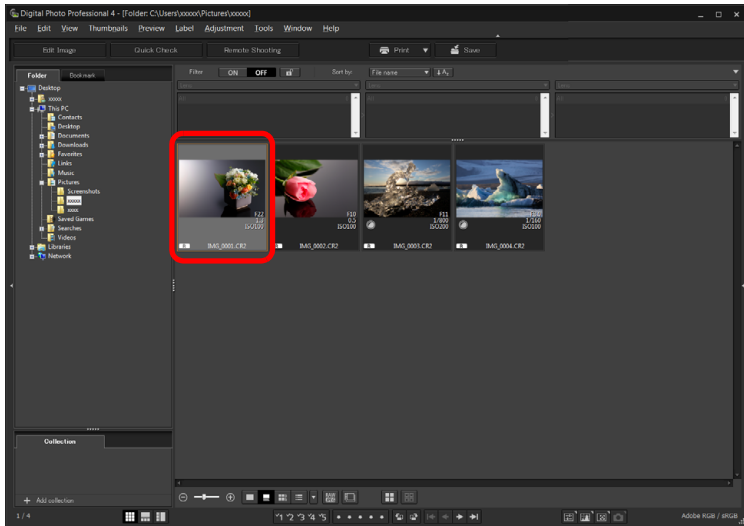

- You can also select a background image from the edit image window or [Collection] window.

## 2 Select the [Tools] menu ▶ [Start Compositing tool].

→ The compositing tool window appears.

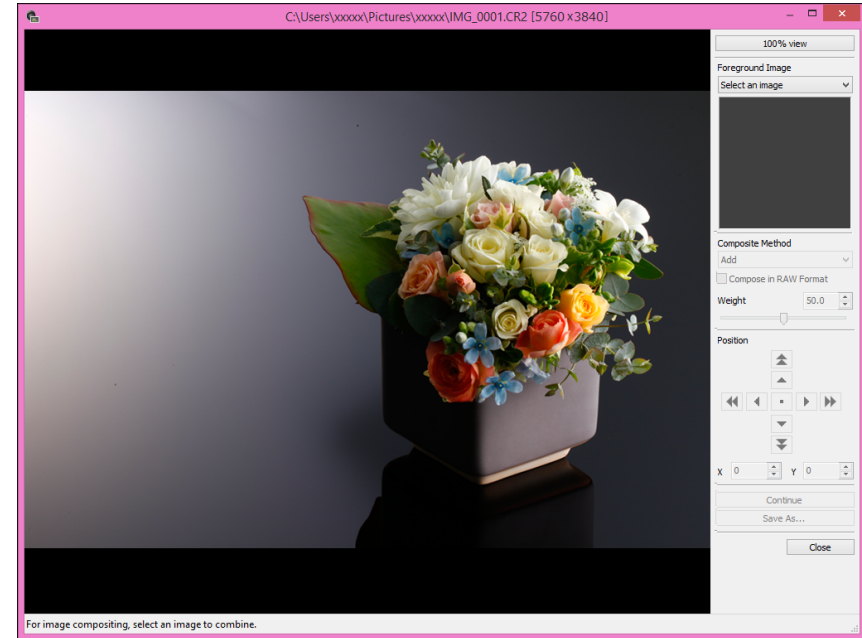


- Introduction/Contents
- Downloading Images
- Viewing Images
- Sorting Images
- Editing Images**
- Printing Images
- Processing Large Numbers of RAW Images
- Remote Shooting
- Playing Back Movies and Saving Still Photos
- Specifying Preferences
- Reference/Index



### 3 Select the image to combine.


- Select the image to combine from the [Foreground Image] list box.

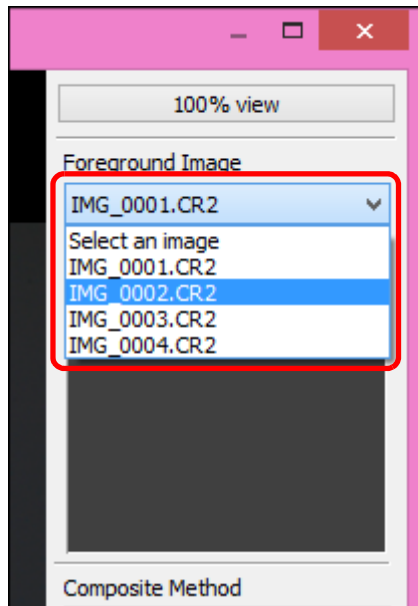

- The selected image is displayed in the [Foreground Image] thumbnail display.
- A preview of the combined background image and [Foreground Image] is displayed in the composite preview.
- The following images can be combined.
  - When a background image is selected in the main window: images in same folder as background image
  - When a background image is selected in the [Collection] window: images in the [Collection] window
  - When a background image is selected in the edit image window: images displayed in the thumbnail display area
- You can also combine images of different sizes.


### 4 Select a compositing method.

- Select a compositing method from the [Composite Method] list box.

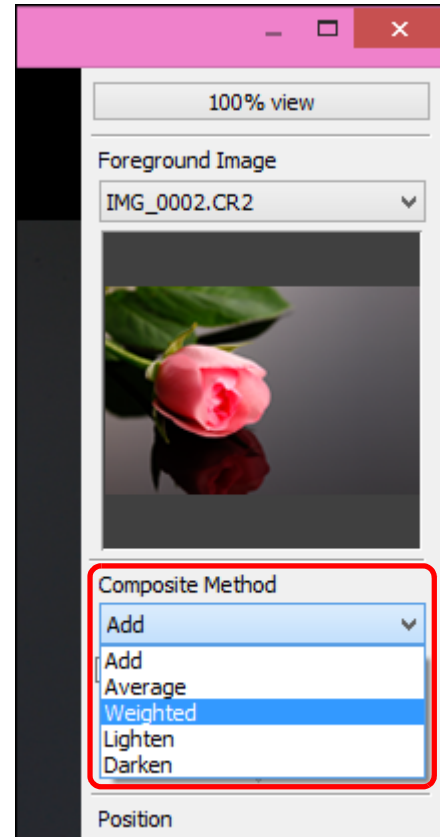

- The compositing method selected in the composite preview is applied.
- The compositing method can be selected from five types: Add, Average, Weighted, Lighten, and Darken. For details on each compositing method, see “Compositing Methods” (p.105).
- If you select [Weighted], you can set the proportion of the image to be combined. Use the [Weight] slider at the bottom of the [Composite Method] list box or directly enter a value to set the proportion.
- By clicking the [100% view] button, the image is displayed at 100% magnification (actual pixel size).

## 5 Position the images.

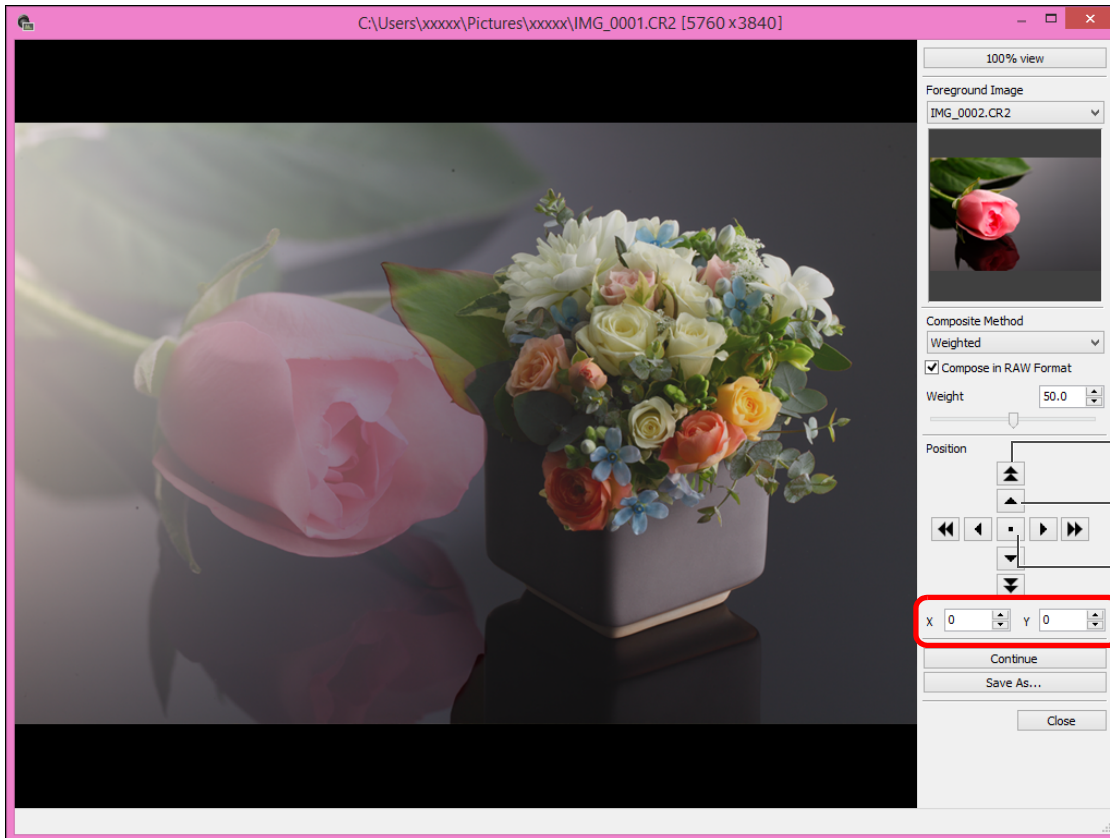

Shift large amount (50 pixels)

Shift small amount (1 pixel)

Align image centers

You can also directly enter the position coordinates of the [Foreground Image] to align it.

- By default, the background image and the [Foreground Image] are displayed with their centers aligned.
- [Compose in RAW Format]  
Checkmark the [Compose in RAW Format] checkbox as necessary.



- You can set [Compose in RAW Format] under the following conditions.  
Both the background image and [Foreground Image] are RAW images, and all the following conditions are met.
  - The cameras used to shoot were of the same model
  - The ISO speed setting at the time of shooting was the same
  - The highlight tone priority setting at the time of shooting was the same
  - The image sizes (original size) are the same




- The following functions are not available for images composited with [Compose in RAW Format].
  - Auto Lighting Optimizer (p.56)
  - Picture Style Auto (automatically set to Standard) (p.47)






## 6 Click the [Save As] button.

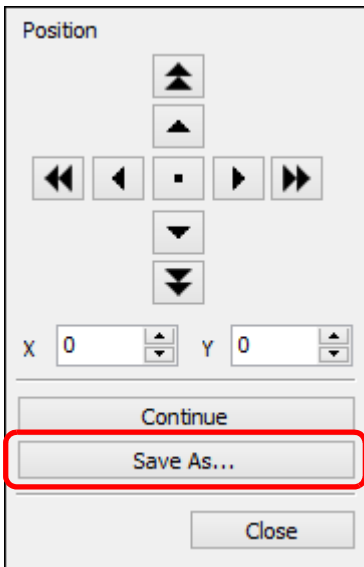

- Specify the required settings in the window that appears and then click the [Save] button.
- By clicking the [Continue] button, images are combined to create a new background image, and you can continue by combining another image.
- To finish, click the [Close] button.

## Compositing Methods

- **Add**  
The background image and [Foreground Image] are added and images are combined.
- **Average**  
The background image and the [Foreground Image] are combined in proportions of 50% each.  
If you want to change the proportion of the [Foreground Image], select [Weighted].
- **Weighted**  
Set the proportion of the [Foreground Image] and then combine the background image and [Foreground Image].
- **Lighten**  
The background image and the [Foreground Image] are compared, with only brighter portions of the [Foreground Image] being combined.
- **Darken**  
The background image and the [Foreground Image] are compared, with only darker portions of the [Foreground Image] being combined.

 You can display this function as a function button in the main window's toolbar ([p.114](#)).

# Creating HDR (High Dynamic Range) Images

You can create images with a wide dynamic range where clipping in highlights and shadows has been reduced, and images that appear like paintings. This is suited for scenes such as still-lives and landscapes. This function is most effective when using three images with different exposures for the same scene (negative exposure, standard exposure, positive exposure) to create an HDR image. However, you can also create an HDR image from two images, or even only one.


Since an HDR image is saved as a separate image, the original images remain as they are.

\* HDR stands for High Dynamic Range.

**!** **32bit** On 32-bit OSs, this function is not available.

- This function can be used with all image types (p.4) supported by DPP.
- Image information is not appended to an HDR image.

## 1 Select an image in the main window.

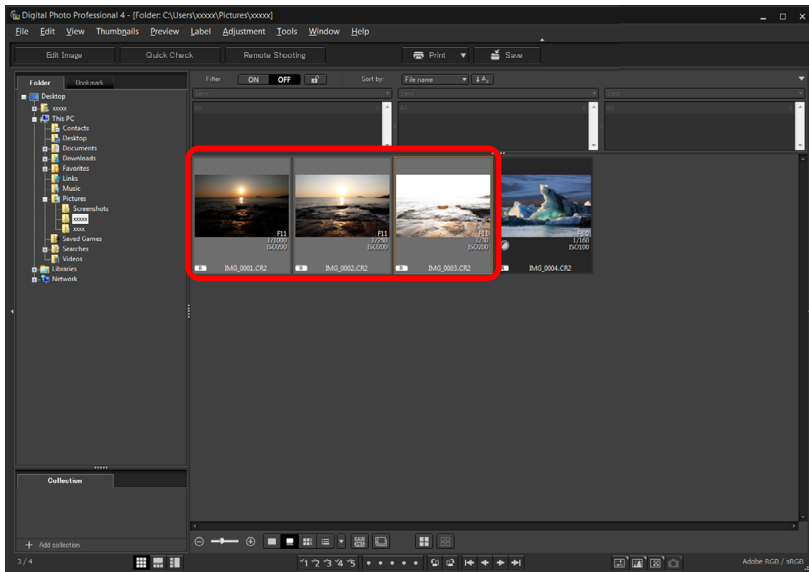


## 2 Select the [Tools] menu ▶ [Start HDR tool].

→ The [Select Images] window appears.

- You can also display the [Select Images] window from the edit window and edit image window.

## 3 Specify the required settings, then click the [Start HDR] button.

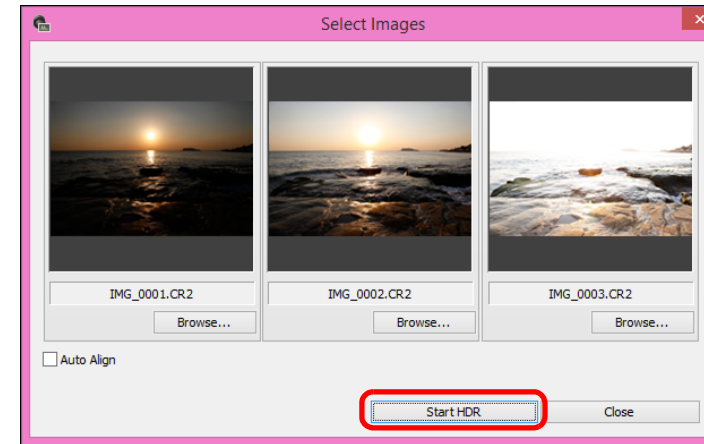

- To change the selected image or add another image, click the [Browse] button, and in the [Open] dialog box that appears, select the image file and click the [Open] button.
- If you select two images of the same size, you can checkmark the [Auto Align] checkbox for auto image alignment. However, auto image alignment may not work properly with repetitive patterns (lattice, stripes, etc.) or flat, single-tone images.
- By clicking the [Start HDR] button, the [Adjust Image] window appears.

**!** After using auto image alignment, the periphery of the images is partially deleted.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos


Specifying  
Preferences

Reference/  
Index





## 4 Make required selections to adjust the image.

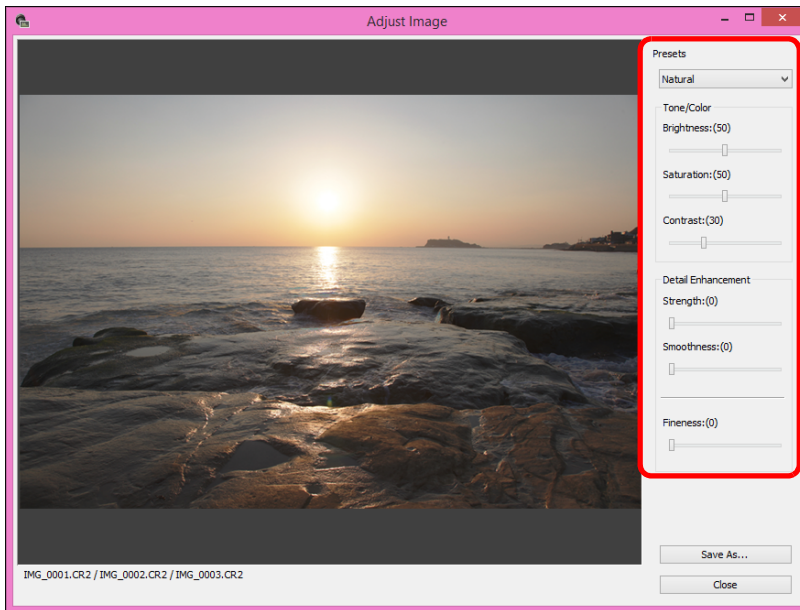

- Sliders in [Adjust Image] window

### [Tone/Color]

[Brightness]: Adjusts the overall brightness of the image. Move the slider to the right to brighten the image, and to the left to darken the image.

[Saturation]: Adjusts the overall color saturation of the image. Move the slider to the right to make the color deeper, and to the left to make the color weaker.

[Contrast]: Adjusts the overall contrast of the image. Move the slider to the right to make contrast stronger and to the left to make contrast weaker.

### [Detail Enhancement]

[Strength]: Adjusts the overall contrast and contrast of details together. Move the slider to the right for a stronger effect.

[Smoothness]: Adjusts the overall smoothness of the image. Move the slider to the right for a smooth and natural impression.

[Fineness]: Adjusts the clearness of details. Move the slider to the right for a sharper outline.

- [Presets] and finishing effects

With [Presets], you can select from the five preset finishing effects below from a pulldown menu ([Natural] is selected by default), instead of operating the sliders individually. By selecting a finishing effect, each slider moves according to the setting. You can also operate and adjust the sliders after selecting an effect.

[Natural]: In high-contrast scenes, rendering in areas where highlights or shadows are usually clipped is corrected, for a finish with reduced highlight and shadow clipping.

[Art standard]: Gives a finish with painting-like tonality for an impressive image.


[Art vivid]: For a more vivid look than with [Art standard].

[Art bold]: For a more vivid look than with [Art standard], that makes the subject pop out.


[Art embossed]: Tones down vividness more than [Art standard], for an old-fashioned feel.



**5** Click the [Save As] button.

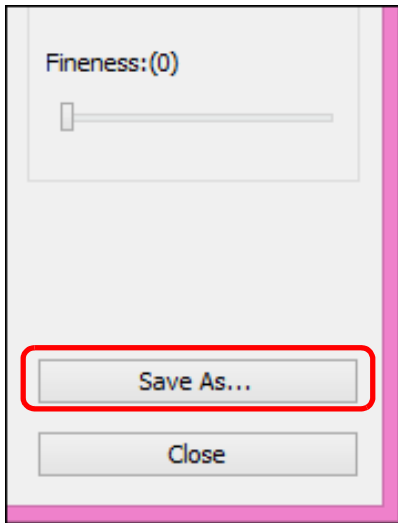

→ Specify the required settings in the window that appears by clicking the [Save As] button and click the [Save] button.

 You can display this function as a function button in the main window's toolbar (p.114).

# Using the Dual Pixel RAW Optimizer

By setting the Dual Pixel RAW function on the camera compatible with the function before shooting RAW images, images are recorded as “special RAW images (Dual Pixel RAW images)” with dual pixel information appended from the imaging sensor. This is called Dual Pixel RAW shooting. Using this function, the [Dual Pixel RAW Optimizer], with Dual Pixel RAW images, you can make use of the Dual Pixel data recorded with the Dual Pixel RAW image for microadjustment of the position of maximum sharpness and resolution using the depth information contained within the file, repositioning the viewpoint or foreground bokeh for a more pleasing result, and reducing the appearance of ghosting in images.



## Cautions for Dual Pixel RAW shooting

Note the following when shooting in Dual Pixel RAW.

- Common to all functions
  - Effects are most easily gained when the lens aperture value is f/5.6 or lower.
  - Effects may be different between shooting in vertical orientation and horizontal orientation.
  - It is recommended that the ISO speed be ISO 1600 or lower.
- Only for “Microadjustment of the position of maximum sharpness and resolution using the depth information contained within the Dual Pixel RAW file”
  - It is recommended that the lens focal length be at least 50 mm.
  - It is recommended that this function be used when the camera is at a distance from the subject.\*
    - \* Use the following as a guide to subject distances according to focal length.
    - When the lens focal length is 50 mm, the subject distance should be approx. 1 m - 10 m / 3.3 ft. - 32.8 ft.
    - When the lens focal length is 100 mm, the subject distance should be approx. 2 m - 20 m / 6.6 ft. - 65.6 ft.
    - When the lens focal length is 200 mm, the subject distance should be approx. 4 m - 40 m / 13.1 ft. - 131.2 ft.




You can display this function as a function button in the main window's toolbar (p.114).

## Microadjustment of the Position of Maximum Sharpness and Resolution Using the Depth Information Contained within the Dual Pixel RAW File

Microadjust the position of maximum sharpness and resolution, using the depth information contained within the Dual Pixel RAW images.

- 1 In the main window or edit image window, select the Dual Pixel RAW image you want to adjust, and then select [Start Dual Pixel RAW Optimizer] from the [Tools] menu.

→ The Dual Pixel RAW Optimizer window appears.

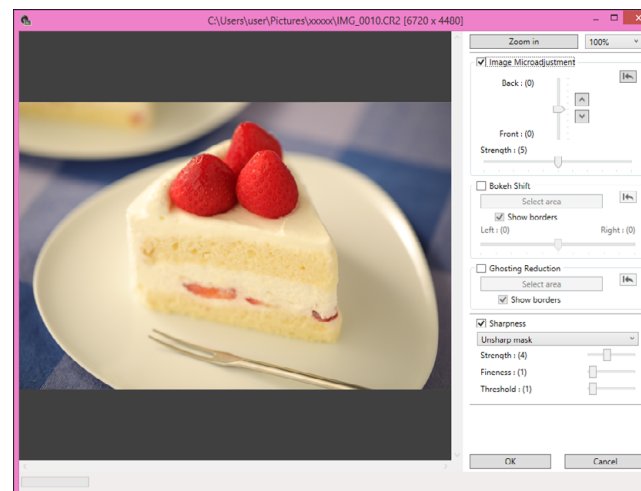

- 2 Checkmark the [Image Microadjustment] checkbox.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting


Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



### 3 Adjust the image.

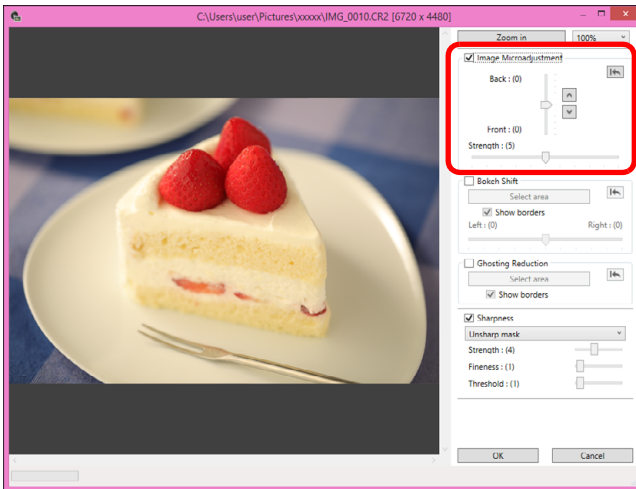

- Use the slider to adjust the resolution based on depth information and the level of resolution.

### 4 Click the [OK] button.

→ Adjustment results are applied to the image.

For information on saving adjustment results to images, see “Saving Editing Results” (p.91).

- ⚠ ● If the subject’s outline or any bokeh look unnatural, or there is an increase in noise or noticeable changes in hue or brightness, lower the level of adjustment.
- This function cannot be used at the same time as “Reposition the viewpoint or foreground bokeh for a more pleasing result” or “Reduces the appearance of ghosting in images”.

## Reposition the Viewpoint or Foreground Bokeh for a More Pleasing Result


Reposition the viewpoint or foreground bokeh for a more pleasing result, using the dual pixel information recorded in Dual Pixel RAW images.

- 1 In the main window or edit image window, select the Dual Pixel RAW image you want to adjust, and then select [Start Dual Pixel RAW Optimizer] from the [Tools] menu.

→ The Dual Pixel RAW Optimizer window appears.

- 2 Checkmark the [Bokeh Shift] checkbox.

- 3 Specify the area to adjust.

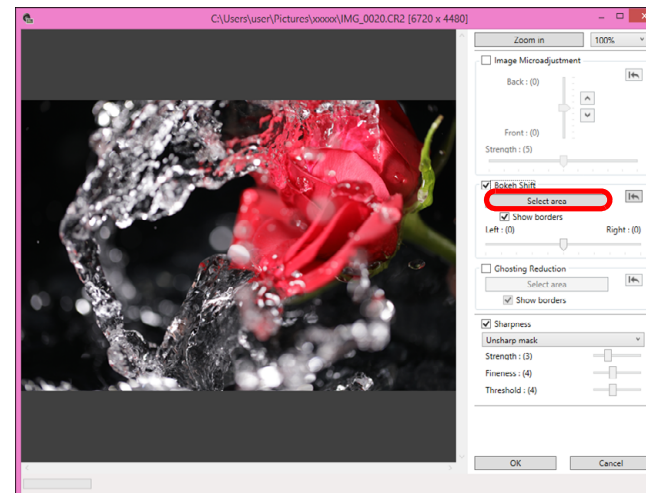


- Click the [Select area] button and drag on the image to specify the area to be adjusted, and right-click with the mouse to fix the area.

You can also remove the check mark from the [Show borders] checkbox to hide the border.



## 4 Adjust the image.

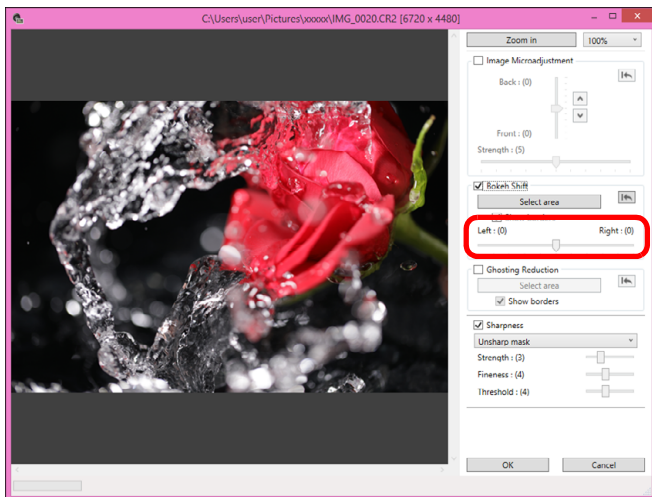

- Use the slider to adjust the viewpoint.

## 5 Click the [OK] button.

- Adjustment results are applied to the image.  
For information on saving adjustment results to images, see “Saving Editing Results” (p.91).

- If the subject’s outline or any bokeh look unnatural, or there is an increase in noise or noticeable changes in hue or brightness, lower the level of adjustment.
- Resolution may expand in the depth direction according to the level of adjustment.
- If the border of the selected area in the image appears unnatural, lower the level of adjustment.
- This function cannot be used at the same time as “Microadjustment of the position of maximum sharpness and resolution using the depth information contained within the Dual Pixel RAW file” or “Reduces the appearance of ghosting in images”.


## Reduces the Appearance of Ghosting in Images

Reduce the appearance of ghosting in images, using the dual pixel information in Dual Pixel RAW images.

- 1 In the main window or edit image window, select the Dual Pixel RAW image you want to adjust, and then select [Start Dual Pixel RAW Optimizer] from the [Tools] menu.

→ The Dual Pixel RAW Optimizer window appears.

- 2 Checkmark the [Ghosting Reduction] checkbox, and specify the area.

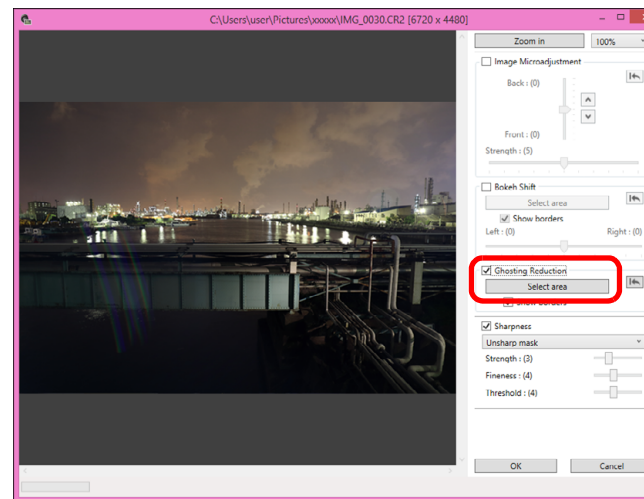

- Click the [Select area] button and drag on the image to specify the area to be adjusted, and right-click with the mouse to fix the area.  
You can also remove the check mark from the [Show borders] checkbox to hide the border.
- Any ghosting and flare in the specified area is reduced.





### 3 Click the [OK] button.

→ Adjustment results are applied to the image.

For information on saving adjustment results to images, see “Saving Editing Results” (p.91).

- ! There may be cases where the subject's outline and any bokeh look unnatural, or where an increase in noise or noticeable changes in hue or brightness occur.
- There may be cases where the border of the selected area in the image looks unnatural.
- This function cannot be used at the same time as “Microadjustment of the position of maximum sharpness and resolution using the depth information contained within the Dual Pixel RAW file” or “Reposition the viewpoint or foreground bokeh for a more pleasing result”.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

4  
Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Transferring a RAW Image to Photoshop

A RAW image can be converted to a TIFF image (16bit) and transferred to Adobe Photoshop.

Select the [Tools] menu ▶ [Transfer to Photoshop].

→ Photoshop starts up and the transferred image is displayed.

## ? A single image can be transferred at a time

Only one image can be transferred at a time. To send multiple images at a time, see [p.125](#).



- Compatible versions of Photoshop are 7.0 or later.
- Transferred images are automatically converted to TIFF images (16bit) to which an ICC profile ([p.148](#)) is added. The ICC profile contains information about [Preferences] ([p.141](#)) or work color space ([p.88](#)) set for each image as described and the appropriate color information is relayed to Photoshop.
- When you exit Photoshop, only the original RAW image remains, and the transferred image will disappear. Saving the transferred image as a separate image in Photoshop is recommended.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Customizing the Main Window Toolbar


You can display buttons for frequently-used functions in the main window's toolbar.

You can also change how the buttons are laid out.

## 1 Select the [Tools] menu ▶ [Customize toolbar].

→ The [Configure Toolbar] window appears.

## 2 Select functions to display in the toolbar.

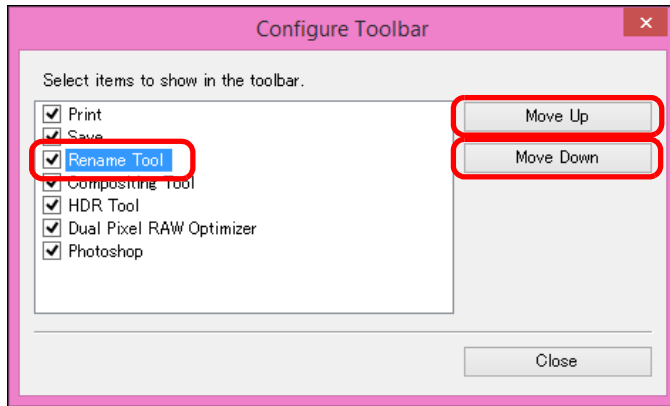

- To rearrange buttons, select the function you want to change, and then click the [Move Up] or [Move Down] button.
  - After specifying settings, click the [Close] button and close the window.
- The settings are applied to the main window's toolbar.

[Introduction/  
Contents](#)[Downloading  
Images](#)[Viewing  
Images](#)[Sorting  
Images](#)[Editing  
Images](#)[Printing  
Images](#)[Processing  
Large Numbers  
of RAW Images](#)[Remote  
Shooting](#)[Playing Back  
Movies and Saving  
Still Photos](#)[Specifying  
Preferences](#)[Reference/  
Index](#)

# 5 Printing Images



Printing an Image .....	116
Printing with Shooting Information .....	117
Printing a Thumbnail List (Contact Sheet Printing) .....	118
Plug-in printing .....	119

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

**Printing  
Images**

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index




# Printing an Image

You can print images with a printer. As an example, the procedure to print one image on one sheet of paper is described here.

**1** Select the image to be printed.

**2** Select the [File] menu ▶ [Print].

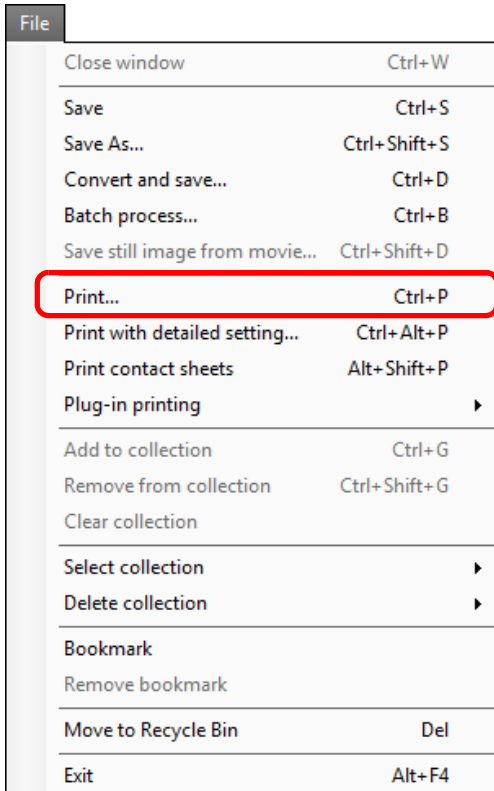

→ The printer's print settings dialog box appears.

**3** Print.

- Specify the optimum settings for printing photographs in the printer's print settings dialog box and click the [OK] button.

→ Printing begins.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index






# Printing with Shooting Information

You can freely layout one image on one sheet of paper and print together with titles and shooting information, etc.

- 1 Select one image to be printed.
- 2 Select the [File] menu ▶ [Print with detailed setting].
- 3 Specify the required settings for printing, and then click the [Print] button.

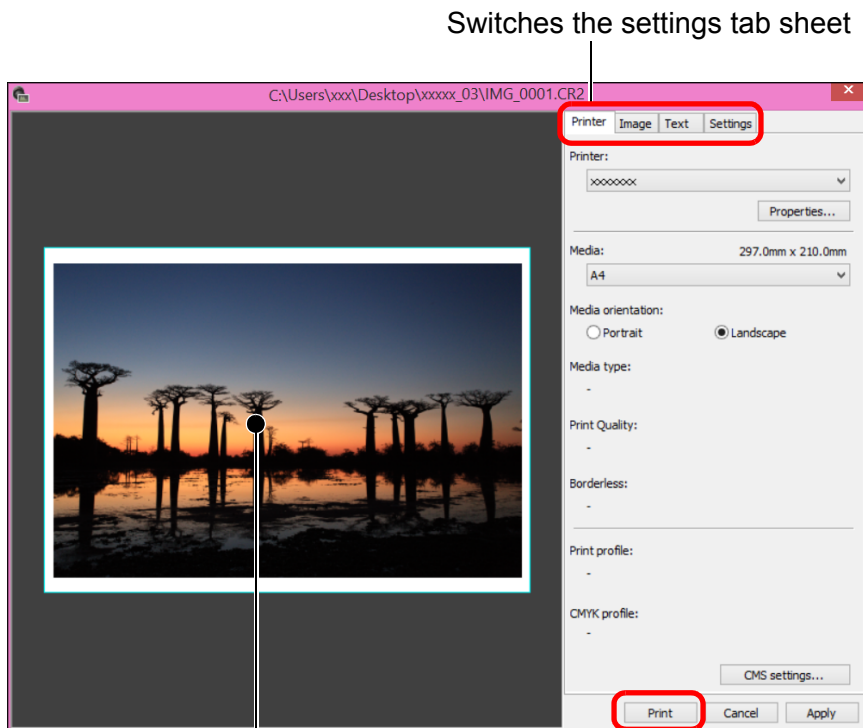

Switches the settings tab sheet

Print preview

- The image can be moved by dragging.
- Drag the four corners of the image to change the size.
- For the shooting information, click [i] on the [Text] tab sheet and select the necessary items in the window that appears.



## To maintain the settings

The settings of each tab sheet in step 3 are memorized when printing or the [Apply] button is clicked. The settings can be applied to another image when printing.

Memorized settings are options in [Printer], [Media], [Media orientation], [Registration marks], [Header], [Footer], and [Image Information], and settings in the [Settings] tab sheet.



- You can set printer profiles (p.142).
- If CMYK simulation is set, the image is printed in the set colors.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index




# Printing a Thumbnail List (Contact Sheet Printing)

You can print rows of multiple images on one sheet of paper.

- 1 Select images to be printed in a thumbnail list.
- 2 Select the [File] menu ▶ [Print contact sheets].
- 3 Specify the required settings for printing, and then click the [Print] button.

Switches the settings tab sheet

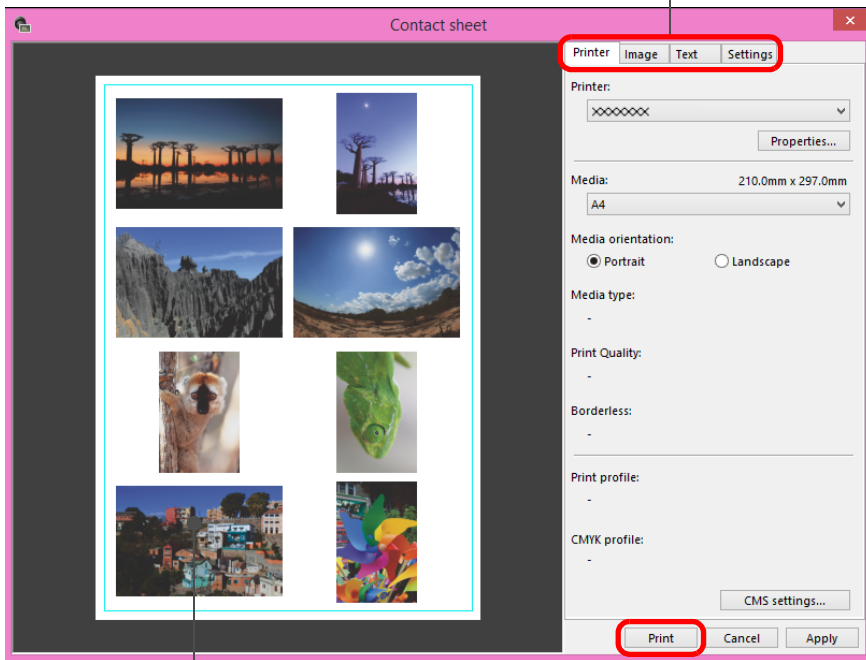

Print preview

## 💡 To maintain the settings

The settings of each tab sheet in step 3 are memorized when printing or the [Apply] button is clicked. The settings can also be applied to another image when printing.

Memorized settings are [Printer], [Media], and [Media orientation], and settings in the [Image] and [Settings] tab sheets.

- You can set printer profiles (p.142).
- If CMYK simulation has been set, the image is printed in the set colors (p.141).
- By using this function in the edit image window, all images in the window (not only the selected ones) are printed in a thumbnail list.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Plug-in printing

---

- 1** Select the [File] menu ▶ [Plug-in printing] ▶ Plug-In for the printer you use.  
→ The Plug-In starts up.
- 2** Specify the required settings for printing photographs and then print.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# 6 Processing Large Numbers of RAW Images



Batch Apply White Balance to Images (Personal White Balance).....	121
Registering Personal White Balance .....	121
Applying Personal White Balance .....	122
Batch Save as JPEG or TIFF Images (Batch Processing).....	123
Batch Transfer Images to Image Editing Software .....	125
Batch Change the File Name of Images.....	126
Changing the File Name of Images in the Order in the Main Window .....	126

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index






# Batch Apply White Balance to Images (Personal White Balance)

The white balance adjustments made to a RAW image shot in a specific shooting environment can be registered as personal white balance. You can then perform efficient white balance adjustment by applying this personal white balance to a large number of RAW images shot in the same shooting environment.

Personal white balance data for versions before DPP 4 cannot be applied.


## Registering Personal White Balance

- 1 Adjust the white balance (p.50, p.51).**
  - To adjust white balance, select a setting other than [  ( ) ] from the [White balance adjustment] list box (p.49). Registering the adjustments is not possible if [  ( ) ] is selected.
- 2 In the Basic adjustment tool palette, click the [Register] button.**
  - The [Register personal white balance] dialog box appears.
- 3 Select the button number to be registered from the list and click the [OK] button.**

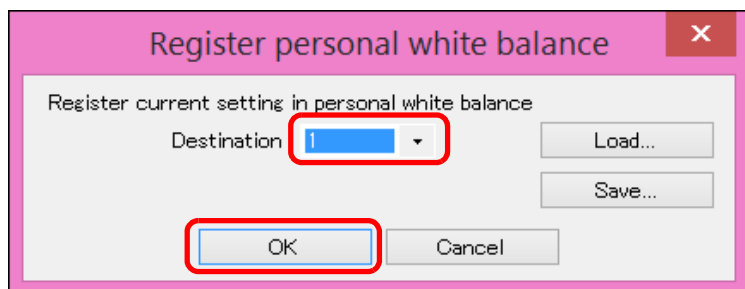

### ? To use the registered personal white balance on another computer

- 1 In step 3, click the [Save] button to write as a file.
- 2 Copy the file to another computer.
- 3 In DPP on another computer, display the window of step 3.
- 4 Click the [Load] button and in the window that appears, select the copied file.

 You cannot change or adjust white balance with multiple-exposure RAW images created on the camera.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index





## Applying Personal White Balance

- 1 In the main window, select the image to which a personal white balance is to be applied.
- 2 Select the [View] menu ▶ [Tool palette].  
→ The tool palette appears.
- 3 Click the personal white balance number button that is to be applied.

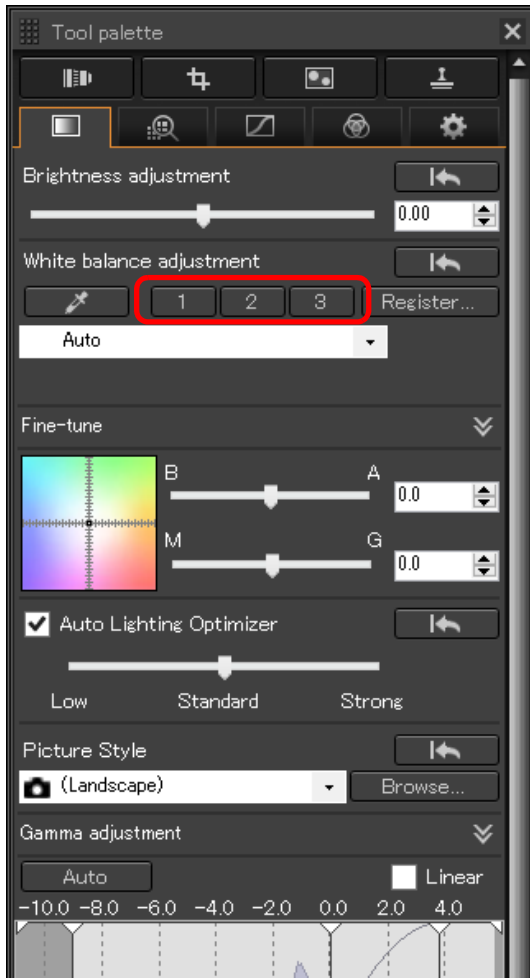

→ Personal white balance is applied to all the selected images.

# Batch Save as JPEG or TIFF Images (Batch Processing)

You can batch convert and save edited RAW images to highly versatile JPEG or TIFF images.


The images are saved as separate images, so the RAW images remain unaffected.

**1** In the main window, select multiple images to be converted.

**2** Select the [File] menu ▶ [Batch process].

→ The [Batch settings] window appears.

**3** Specify the required settings, and then click the [Execute] button.

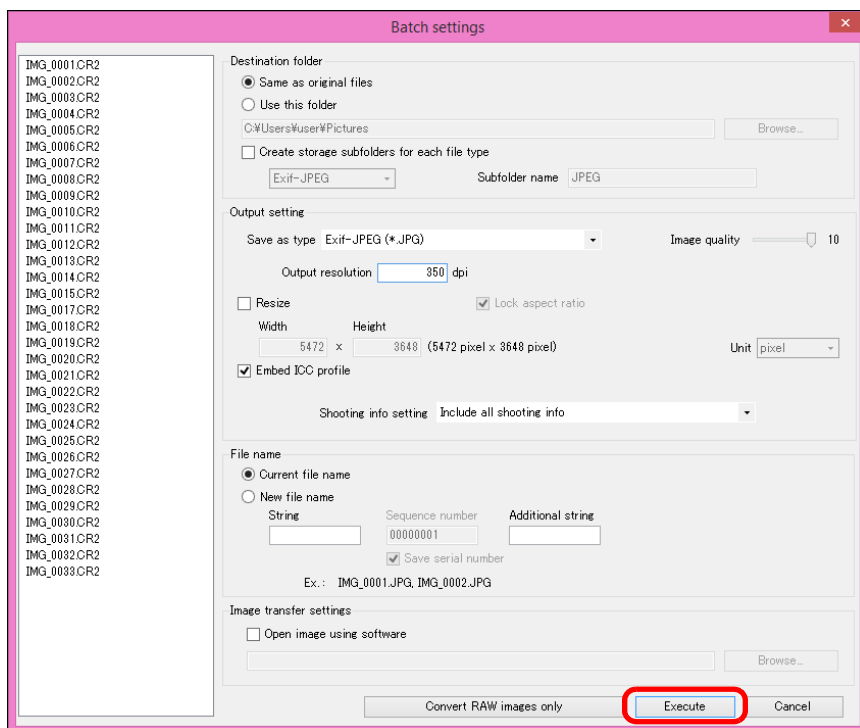

→ The batch processing dialog box appears and saving begins.

→ When all the images are saved, the [Exit] button appears in the batch processing dialog box.

**4** In the processing dialog box, click the [Exit] button.



- If you have selected [New file name] in [File name], [Sequence number] has to be set.
- By saving as explained above, a trimmed image (p.68) or dust-erased image (p.83 to p.87) actually becomes a trimmed image or dust-erased image.
- You can also use this function in the edit image window. However, all images in the window (not only the selected ones) are converted and saved.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## ? Saving images with recipe is not possible

In the [Batch settings] window, you cannot perform [Save] or [Save As] (p.91) to edited RAW images.

## 💡 To save the developing/editing results for the version you are currently using

DPP's RAW image development processing technology is continually being improved upon so that you can perform the latest image processing more appropriately.

Meaning that, between two different versions of DPP, processing results may differ very slightly even if with the same RAW image data, or the results of significant editing of RAW image data with an attached recipe may be different.

When you want to save the developing or editing results of the version you are currently using as it is, converting and saving images as JPEG or TIFF images is recommended.

## 💡 Skillful batch saving

### ● While saving is being performed, you can continue working in another window

Since the saving function operates independently in the background, you can continue with an operation in another window such as the main window or the preview window during the saving process.

### ● To convert all images and save, do not select an image in the main window

If you do not perform step 1 and perform step 2 with no image selected in the main window, all the images displayed in the main window will be converted and saved.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences


Reference/  
Index



# Batch Transfer Images to Image Editing Software

You can transfer multiple images to image editing software. Unlike “Transferring a RAW Image to Photoshop” (p.113), you transfer images that have first been converted and saved as a separate image, so the transferred image will not be deleted after exiting the destination software. The software used here as an example is Adobe Photoshop.

- 1 In the main window, select multiple images to be transferred.
- 2 Select the [File] menu ▶ [Batch process].  
→ The [Batch settings] window appears.
- 3 Perform settings required for transferring (e.g. file format).
- 4 Checkmark [Open image using software].

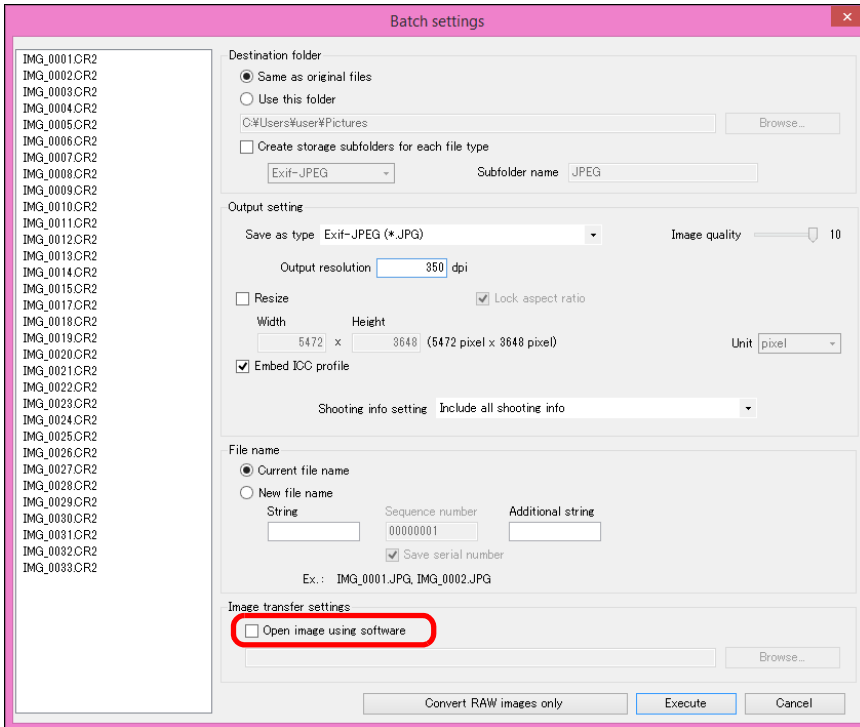

→ The [Open] dialog box appears.

## 5 Select Photoshop.

- In the [Open] dialog box, select a Photoshop file or a shortcut and click the [Open] button.
- The [Open] dialog box closes and [Image transfer settings] in the [Batch settings] window is set to Photoshop.

## 6 Click the [Execute] button.

- The processing dialog box appears and batch transfer begins.
- When the first image has been transferred, Photoshop starts up and transferred images are displayed in transferred order.

- To reset the transfer destination to another software, click the [Browse] button in [Image transfer settings], and in the [Open] dialog that appears, select the software and click the [Open] button.
- You can also use this function in the edit image window. However, all images in the window (not only the selected ones) are transferred.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos


Specifying  
Preferences

Reference/  
Index



# Batch Change the File Name of Images

- 1 In the main window, select multiple images of which the file names are to be changed.
- 2 Select the [Tools] menu ▶ [Start Rename tool].  
→ The rename window appears.
- 3 Specify the required settings and click the [Execute] button.

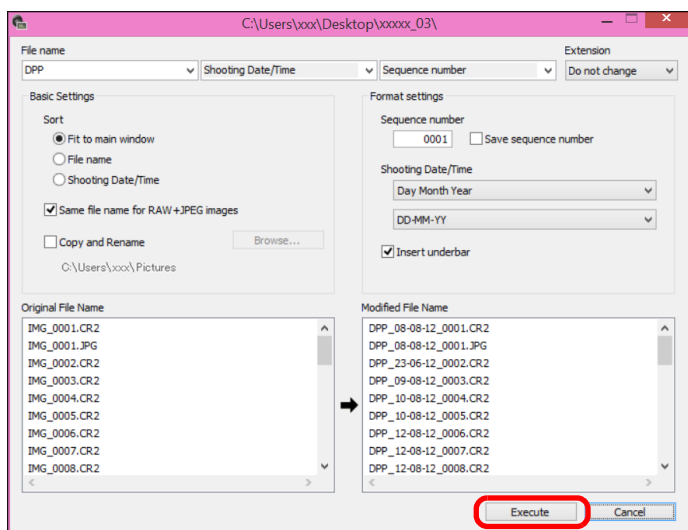

→ Processing begins and the file names are changed.

## ? Changes cannot be made when the file name is duplicated


If a file name in red text appears in [Modified File Name], the file name is duplicated. Changes cannot be made if even one file name is duplicated. Change the settings so that duplication does not occur.

- You can change the file name of only one image in the main window by selecting the thumbnail, right-clicking with the mouse, and selecting [Rename] from the menu that appears.
- You cannot start up the rename tool from the [Collection] window (p.100). You also cannot change the file name of one image.

## Changing the File Name of Images in the Order in the Main Window

When you change the order of the images in the main window, you can change in one operation the names of the files for the images, in the order they were rearranged.

- 1 Change the order of the images in the main window (p.35).
- 2 In the main window, select multiple images of which the file names are to be changed.
- 3 Select the [Tools] menu ▶ [Start Rename tool].
- 4 Select [Fit to main window].

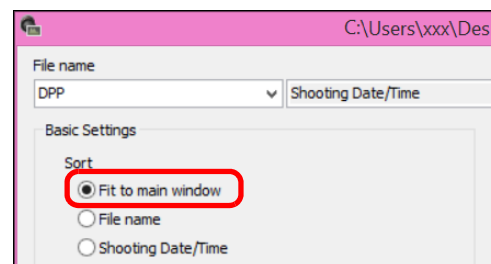

- 5 Specify the required settings.
  - To copy an image, checkmark [Copy and Rename].
- 6 Click the [Execute] button.  
→ The file names are changed and the order in the main window is maintained.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





# 7 Remote Shooting



Remote Shooting.....	128
Registering Click White Balance in the Camera.....	131

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

**Remote  
Shooting**

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index




# Remote Shooting

You can perform remote shooting by using “EOS Utility” which enables communication with a camera in combination.

For remote shooting, “EOS Utility Ver. 3.x” must be installed on your computer. For information on cameras compatible with “EOS Utility Ver. 3.x”, refer to “EOS Utility Ver. 3.x Instruction Manual” (electronic manual in PDF format). This function is not available on EOS M series cameras other than the EOS M50, or PowerShot cameras.


- To save to the currently selected folder, select [Current Folder].
- To create a new folder for saving images, select [Use this folder], click the [Select] button, then select the destination and enter a name for [Destination folder].
- After specifying settings, click the [OK] button.
- The remote shooting window appears.

## 1 Click the [Remote Shooting] button on the toolbar in the main window.

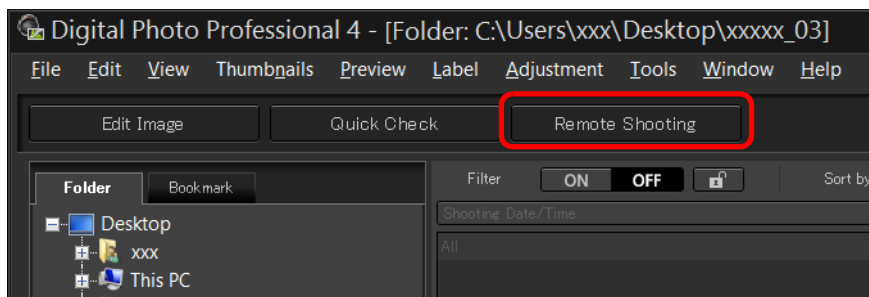

→ Remote shooting setting window appears.

## 2 Set the [Destination] in the Specify Remote Shooting Folder window.

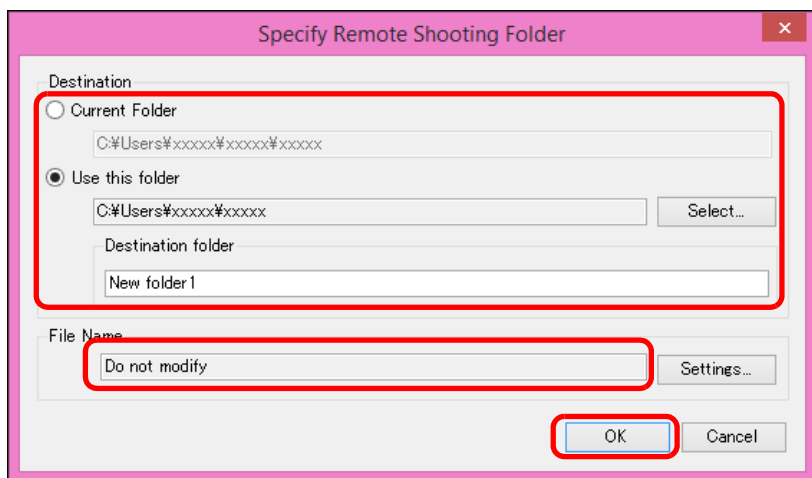

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index






You can change the [File Name] for Specify Remote Shooting Folder window.

(If [Do not modify] is selected, images are saved with the file names set on the camera.)

1 Click the [Settings] button to display the Set file name for captured image window.

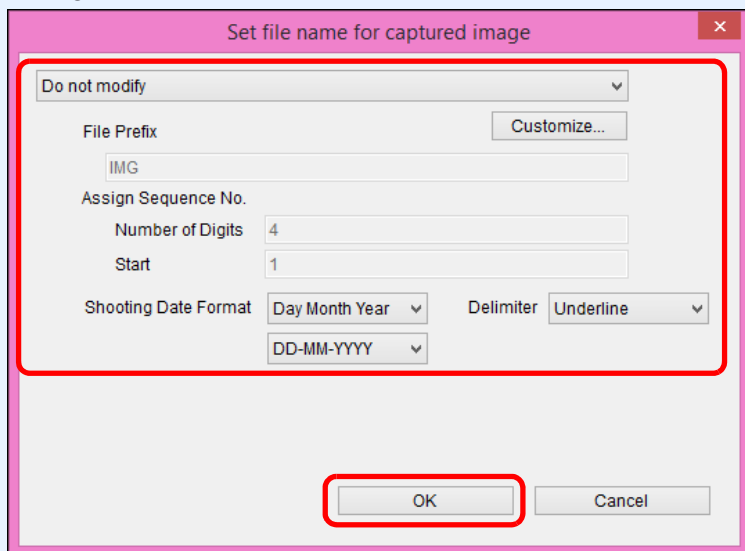


2 Select a naming rule for image file names from the list box. You can click the [Customize] button and customize naming rules for file names.

- You can individually set prefix characters, number of digits for serial numbers, and the start number for file names.
- If you are using the shooting date in file names, you can specify the date format (order and style for year-month-date) and dividing characters on the Set file name for captured image window.

3 After specifying settings, click the [OK] button.

→ The Set file name for captured image window closes.


- After clicking the [Remote Shooting] button, you can click the [📷] button at the bottom right of the main window to show/hide the [Camera Control] palette.

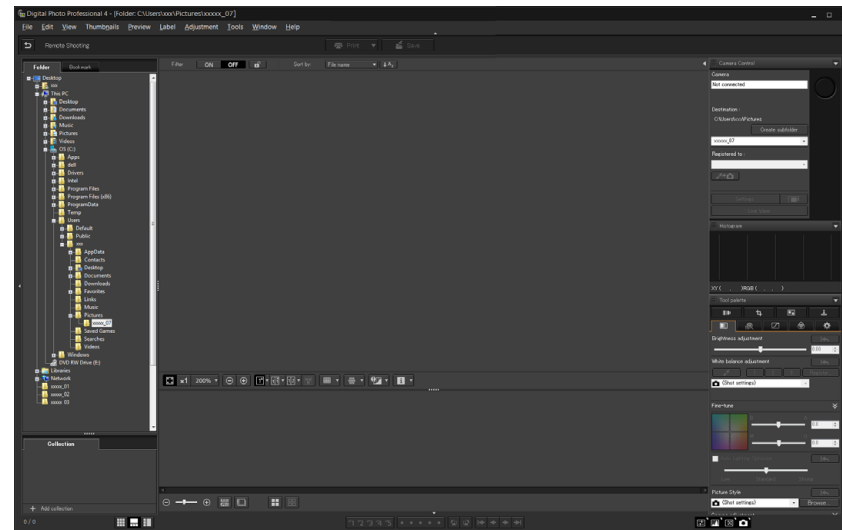

- You can perform shooting while checking the image by switching the window to multi-layout.

3 Connect a camera and a computer, and turn on the camera's power.


4 Click the [Live View] button.

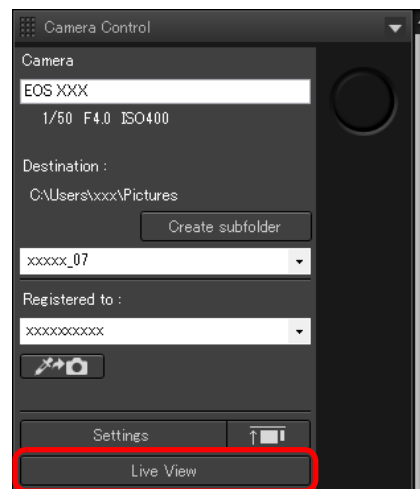

- Live View window of "EOS Utility" appears.




## 5 Specify the required settings.

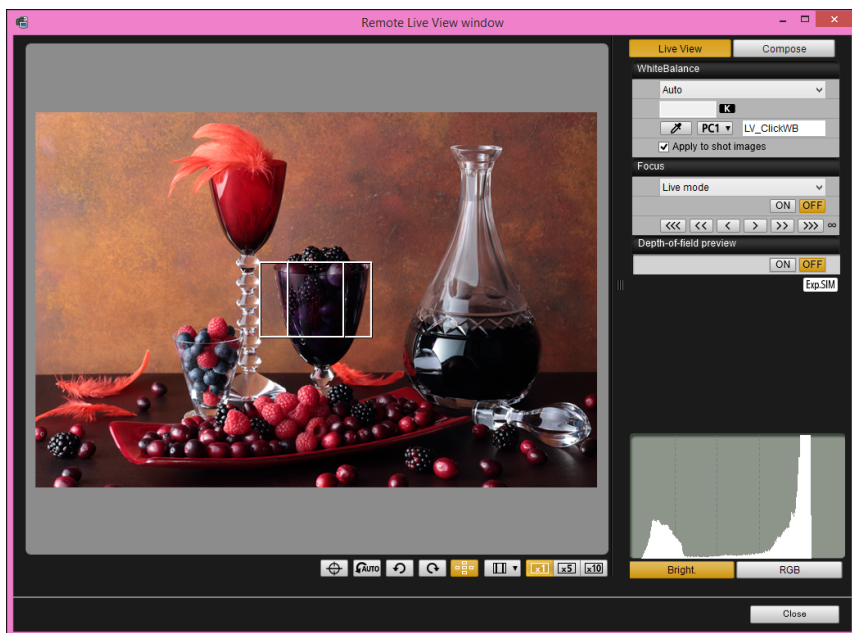


- For detailed instructions on setting procedures, refer to “EOS Utility Instruction Manual” (PDF electronic manual).

## 6 Click the [Settings] button.

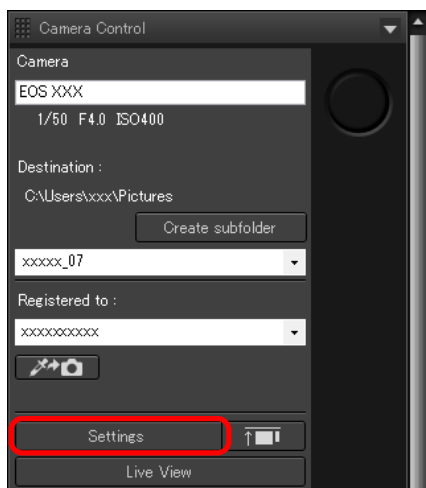


- The capture window of “EOS Utility” appears.

## 7 Specify the required settings.

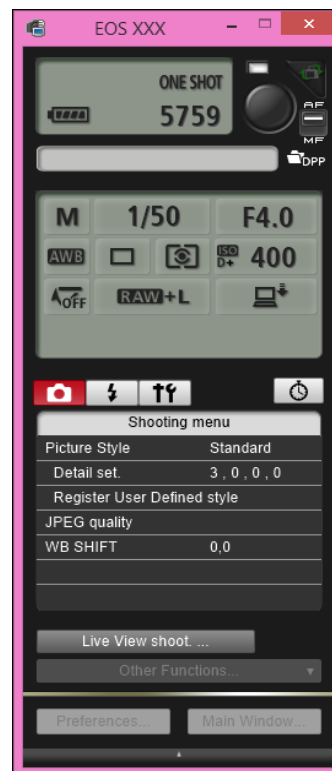

- For detailed instructions on setting procedures, refer to “EOS Utility Instruction Manual” (PDF electronic manual).

## 8 Take the picture.

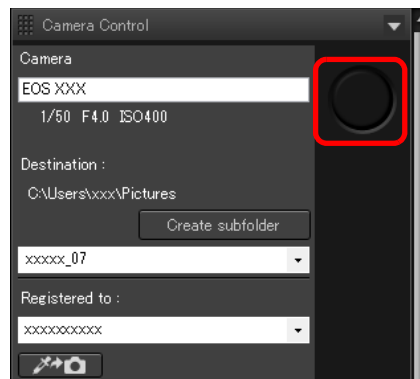

- The capture window of “EOS Utility” appears.






## Registering Click White Balance in the Camera

During remote shooting, you can register click white balance to the connected camera. To use this function, EOS Utility version 3.4.20 or later must be installed on your computer.


This function is not available on EOS M series cameras other than the EOS M50, or PowerShot cameras.

### 1 Display the shot image to be used as the standard for white balance.

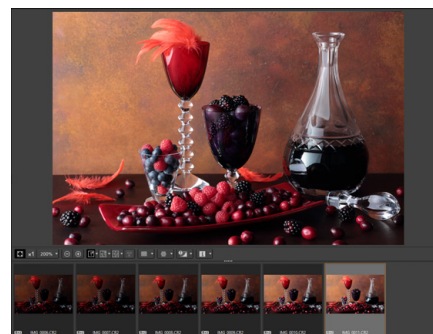


- This function supports only RAW images with a “.CR2” or “.CR3” extension.

### 2 Select the destination where to register click white balance.

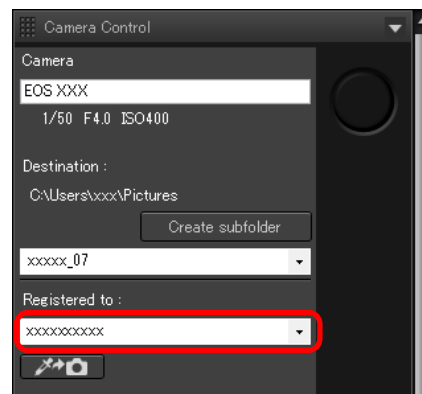

- Select the destination where to register white balance from the [Registered to] list box. Options in the list box depend on the camera model.

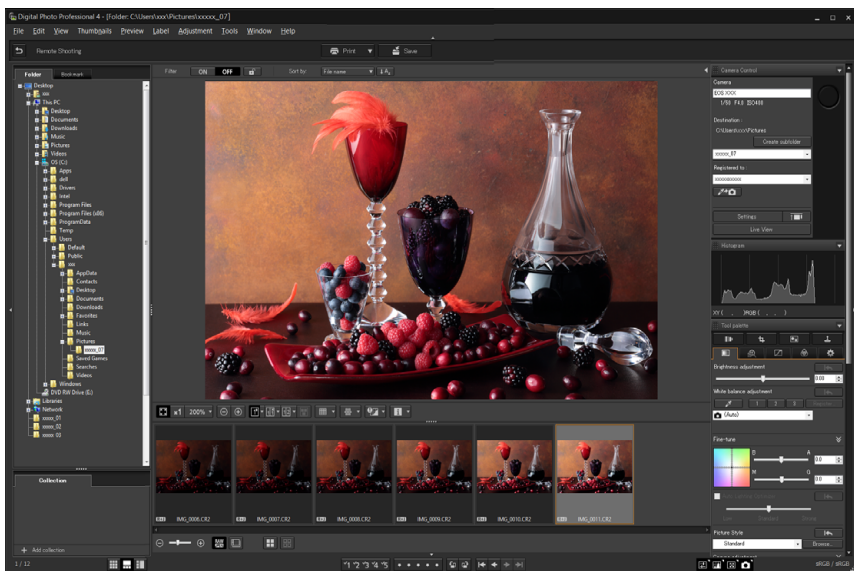


- The shot image is displayed.
  - The shot image will be saved in the folder created in step 2.
  - The images in the folder mentioned above will be displayed in the thumbnail display area.
- You can also create a sub-folder in the folder mentioned above to save images. To create a sub-folder, click the [Create subfolder] button on the remote shooting window, enter [Folder name] on the screen appeared, then click the [OK] button.
- Press the [ ] button to display DPP and EOS Utility windows uniformly in line.
    - Supported with EOS Utility version 3.8 and later.
    - If you are using multiple monitors, DPP's main window and EOS Utility's remote window can only be lined up uniformly when on the same monitor.



**!** Do not exit “EOS Utility” when remote shooting is being set or performed.

- In the cases below, perform shooting with EOS Utility.
  - You want to autofocus with EOS Utility's shoot button
  - You want to perform continuous shooting
- You can perform shooting while comparing the shot image with a pinned image by pinning an image (p.20). This is convenient for image selection.

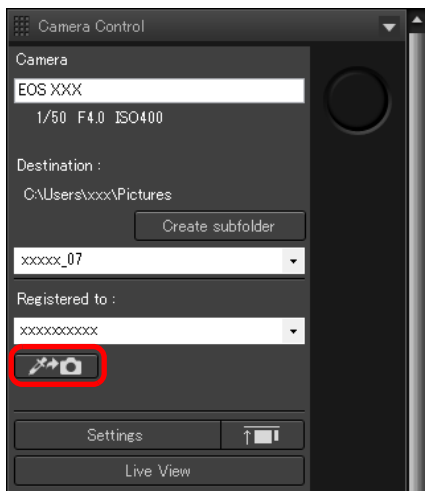

### 3 Select a point that is to be the standard for white balance in the shot image, and register the white balance in the camera.



- Click the [  ] button, and in the displayed image in step 1, click on a point that is to be the standard for white balance with the mouse.
- The white balance is registered to the destination selected in step 2, and applied to displayed images.
- Click [  ] again to exit the function.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# 8 Playing Back Movies and Saving Still Photos

Playing Back Movies and Saving Still Photos ..... 134



Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Playing Back Movies and Saving Still Photos

In systems running 64-bit versions of Windows 8.1 or later, you can use DPP to play back MOV or MP4 movies shot using a supported camera and save still photos from the movies as JPEG or TIFF images. To use this function, [Play with Digital Photo Professional 4] must be selected in [Movie file playback] in the [General Settings] tab sheet in [Preferences].

Note that you cannot edit movies in DPP.

**1** Double-click the movie thumbnail in the main window (thumbnail layout).



→ The preview window appears.

● If the preview control panel does not appear, select the [Preview] menu ▶ [Preview control panel].

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting


Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## 2 Use the preview control panel for each operation.

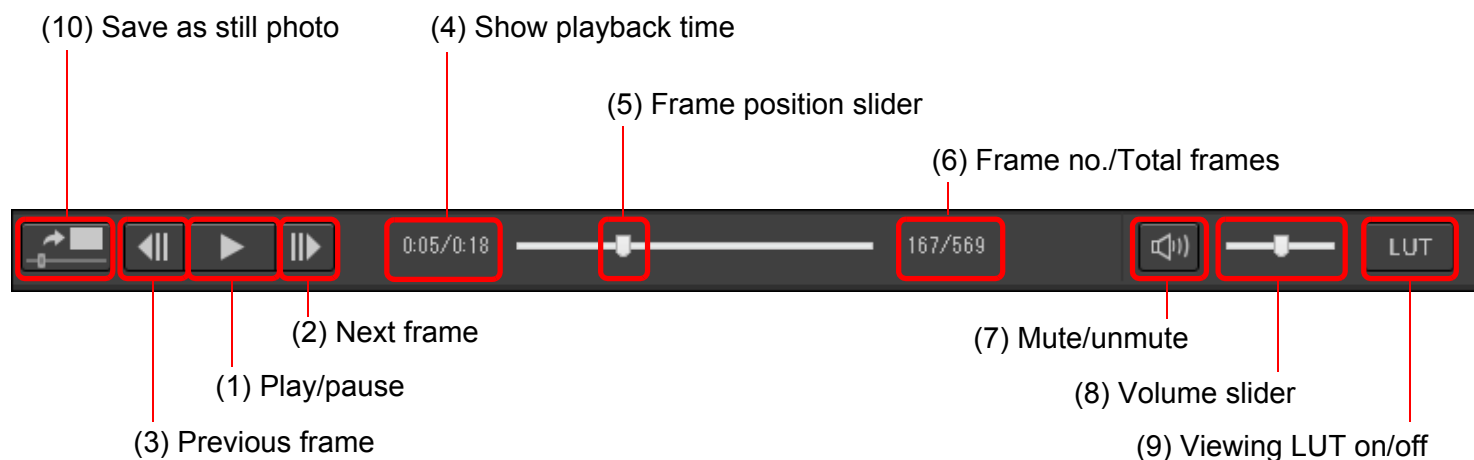

- (1) Play/pause**  
Play and pause the selected movie.
- (2) Next frame**  
Move forward one frame. When movie playback is paused, this allows you to advance the movie one frame at a time.
- (3) Previous frame**  
Move back one frame. When movie playback is paused, this allows you to rewind the movie one frame at a time.
- (4) Show playback time**  
Shows the playback time.
- (5) Frame position slider**  
By dragging the slider left or right, you can move the playback position while a movie is playing or paused.
- (6) Frame no./Total frames**  
Shows the current frame number in the movie being played back or shown and the total number of frames.
- (7) Mute/unmute**  
Turns audio output on or off.
- (8) Volume slider**  
Drag the slider left or right to adjust the volume for the movie being played back.
- (9) Viewing LUT on/off**  
Enables or disables Viewing LUT for movies shot with Canon LOG specified. This setting can also be changed during movie playback.
- (10) Save as still photo**  
Allows you to capture a still photo of the movie frame currently being displayed. When you click the button, the [Convert and save] window (p.92) appears. Specify the necessary settings, and then click the [Save] button to save the image. Note that you cannot save a still photo while the movie is playing back. Pause the movie and then save the still photo.

● If the preview control panel does not appear, select the [Preview] menu ► [Preview control panel].

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting


Playing Back  
Movies and Saving  
Still Photos


Specifying  
Preferences

Reference/  
Index





 On some supported cameras, shooting a movie generates a “.THM” file that is saved together with the movie file. The “.THM” file has the same image number as the movie file and records the shooting information. In DPP, the movie file and “.THM” file must be stored in the same folder when the movie is played back.

-  ● You can also play back movies in the following windows:
- Main window (multi-layout)
  - Edit image window
  - Remote shooting window (multi-layout)
  - Multi-function preview window
- In Preferences, you can change the movie playback application to that used by your computer’s OS or to EOS MOVIE Utility. [\(p.138\)](#)  
For information on EOS MOVIE Utility, refer to the EOS MOVIE Utility Instruction Manual.



# 9 Specifying Preferences



Specifying Preferences.....	138
General Settings.....	138
Image processing .....	139
Color Management.....	141
View Settings.....	142
Properties Display Settings .....	143

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Specifying Preferences


You can change the various functions of DPP in the [Preferences] window. Check the contents of each window and set.

Refer to the detailed explanations if available, as well as to each window.

## 1 Select the [Tools] menu ▶ [Preferences].


→ The [Preferences] window appears.

## 2 Select a tab sheet, specify the settings, and then click the [OK] button.

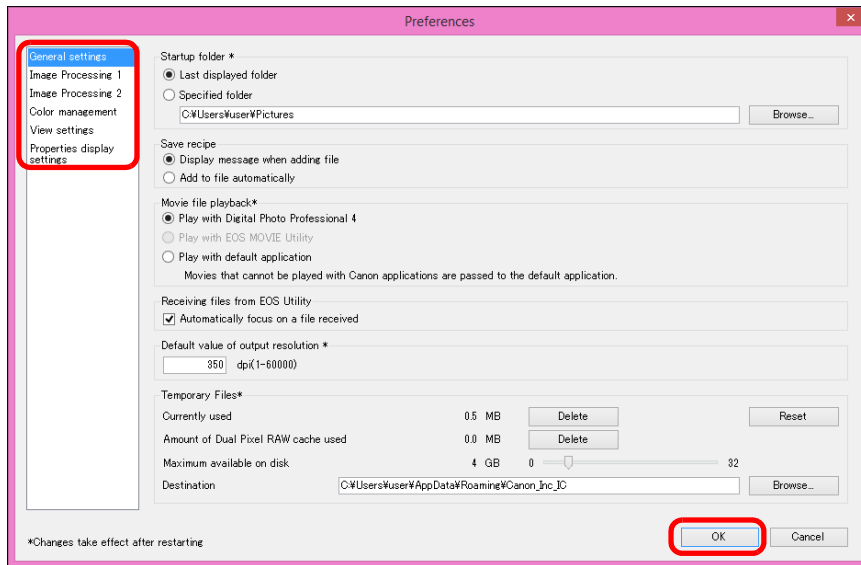

## General Settings

You can specify the folder that opens when DPP is started up, saving of recipes, etc.

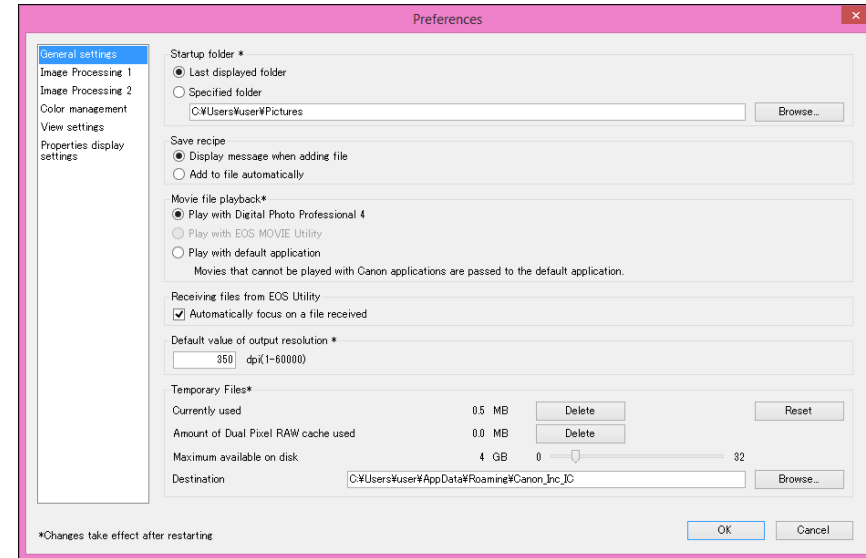

### ● Movie file playback

Choose the application used for playing back movie files. Movies that cannot be played back in DPP or EOS MOVIE Utility are played back with the movie playback application specified with the computer's OS settings. For information on EOS MOVIE Utility, refer to the EOS MOVIE Utility Instruction Manual.

- If you have changed the movie playback application to EOS MOVIE Utility, and playback does not start after starting up EOS MOVIE Utility, check compatible models with the EOS MOVIE Utility Instruction Manual.
- If the movie playback application specified with the computer's OS settings is set to EOS MOVIE Utility, MOV and MP4 files shot with the models that are not compatible with EOS MOVIE Utility will not be played back. Check the OS settings and change the movie playback application.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



## ● Default value of output resolution

When saving JPEG or TIFF images created by converting RAW images (p.91, p.123), the resolution of the JPEG or TIFF images can be set.

## ● Temporarily saved files


You can delete temporarily saved files that were created and improve operation speed, change file save destinations, or set a limit on disk usage. Any changes you made will be applied when you start up DPP again.

- [Delete] button: Click the [Delete] button to delete temporarily saved files.
- [Maximum available on disk]: Set with the slider (setting range: 0 to 32 GB). Once usage reaches the limit, files are erased starting with the oldest.
- [Destination]: Click the [Browse] button to change the save destination in the dialog that appears.
- [Reset] button: Click the [Reset] button to revert all changes to the original settings.

# Image processing

You can specify settings for processing images in DPP.

## Image Processing 1

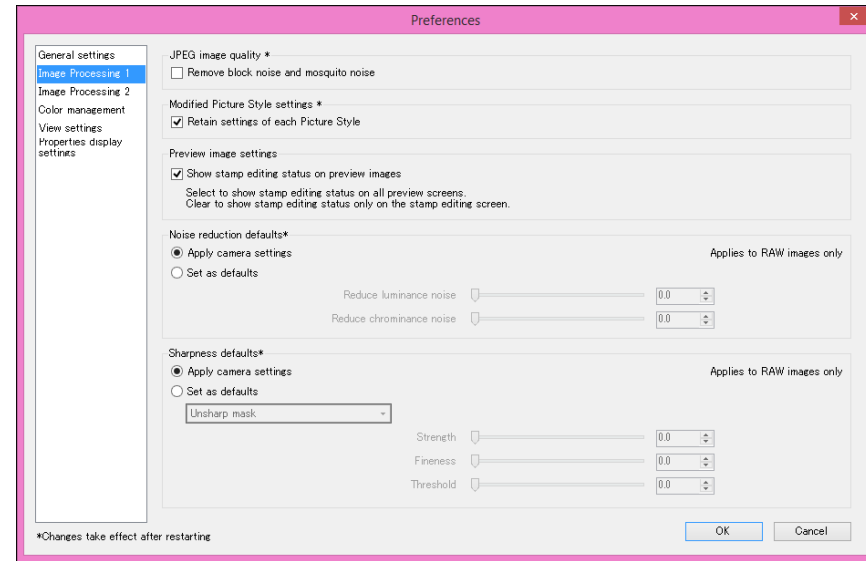

## ● JPEG image quality

[Remove block noise and mosquito noise]

- You can improve the quality of a JPEG image by reducing the noise particular to JPEG images.

This setting is also effective when RAW images are converted to JPEG images and saved (p.91, p.123) and for JPEG images that to be saved with a different name. The higher the JPEG image's compression rate, the better the effect. And when the compression rate is low, the effect of noise reduction may not be noticeable.

## ● Modified Picture Style settings

If you checkmark the checkbox, setting values for [Color tone], [Color saturation], [Contrast], [Unsharp mask], [Sharpness], and other options will be retained for each Picture Style.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





## ● Noise reduction defaults

You can set a default beforehand for the noise reduction level. Only RAW images are supported.

- When [Apply camera settings] is selected, you can pre-set a noise reduction level that suits the camera settings beforehand as the default.
- When [Set as defaults] is selected, you can pre-set a preferred default setting for the noise reduction level beforehand.

For images not having a recipe attached, the default noise reduction level set here is applied. If you changed settings, they will be applied to images as the default noise reduction level when you start up DPP again.

For images with a recipe attached, the noise level recorded in the recipe remains as it is and the default for noise reduction level set here is not applied.

## ● Sharpness defaults


You can set a default beforehand for the sharpness. Only RAW images are supported.

- When [Apply camera settings] is selected, you can pre-set a sharpness that suits the camera settings beforehand as the default.
- When [Set as defaults] is selected, you can pre-set preferred default settings for the sharpness and unsharp mask beforehand.

For images not having a recipe attached, the defaults for sharpness and unsharp mask set here are applied. If you changed settings, they will be applied to images as the default sharpness level when you start up DPP again.

For images with a recipe attached, the sharpness level recorded in the recipe remains as it is and the defaults for sharpness and unsharp mask set here are not applied.

## Image Processing 2

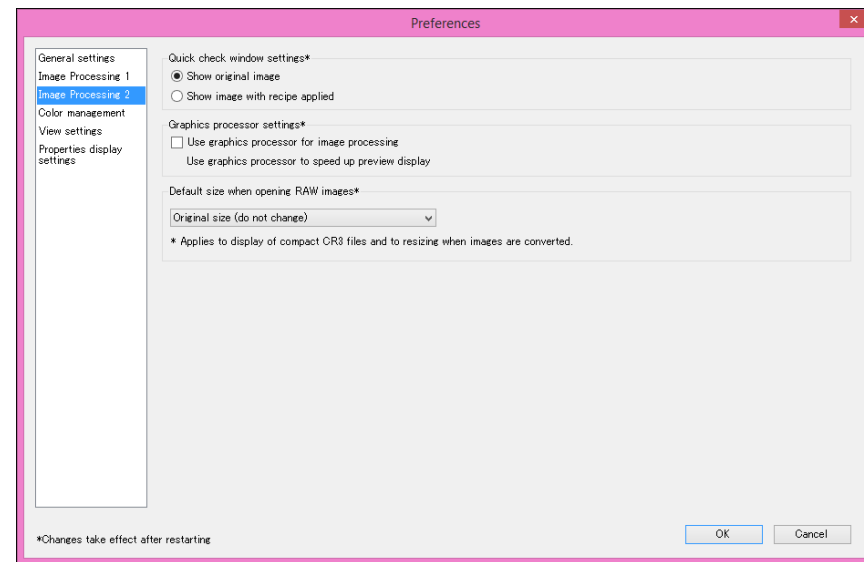


### ● Quick check window settings

You can specify image display settings for the quick check window. By selecting [Show image with recipe applied], images with a recipe attached are displayed with the recipe applied. Any changes you made will be applied when you start up DPP again.

### ● Graphic processor settings

If you checkmark [Use graphics processor for image processing], the graphics processor is used to allow a faster preview display. The CPU handles convert and save tasks as well as print tasks as usual. Settings will be applied the next time DPP is started up.

 **32bit** On 32-bit OSs, the [Preview image settings] menu is not displayed.





- To use this function, a NVIDIA CUDA (Compute Capability 2.0 or higher) GPU\* with at least 1.0 GB of video memory is necessary. Additionally, the latest NVIDIA GPU driver must be installed.

\* GPU is an abbreviation of “Graphics Processing Unit”.

The [Use graphics processor for image processing] checkbox is available only when a supporting GPU is installed.

- If the OS or other application software is using the GPU, processing by the GPU may not be possible in some circumstances. In such a case, the CPU handles processing as usual.

### ● Default size when opening RAW images

This applies only to RAW images with the extension “.CR3” that were shot with [cRAW] selected on the camera.


This specifies the size defaults when RAW images are opened in DPP.

This default size is also set when RAW images are converted and saved as JPEG or TIFF images.

The settings are applied the next time DPP is started up.

## Color Management

You can specify settings relating to color management, such as settings for work color space, conditions for color matching, etc.

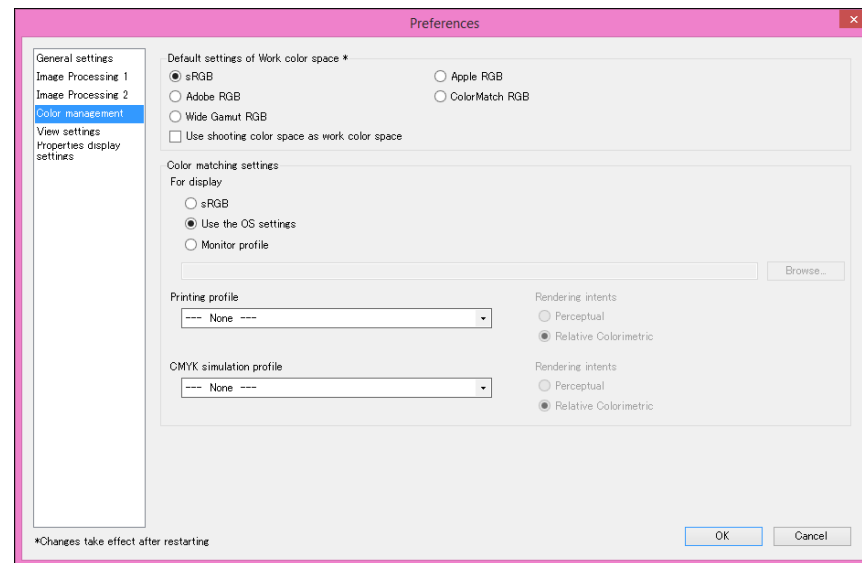

### ● Default settings of Work color space

You can select the color space (p.149) to be applied as a default setting of RAW images from five types. The color space set will be applied as the color space when a RAW image is converted and saved (p.91, p.123) or printed (p.116 to p.119).

- If you change the color space, and you restart DPP, the set color space is applied as the default color space.
- You can check the color space that is set in an image in all windows except the quick check window.
- If you checkmark [Use shooting color space as work color space], the color space specified with the camera when the image was shot will be set as work color space.





### Changes are not applied to the edited image

Even if the default setting is changed, the new default setting is not applied to edited (i.e., adjusted using the tool palette, cropped, dust-erased) images. Change the settings individually.



You can set a color space that is different from the default settings for each image (p.88).

### Color matching settings (color setting of the monitor)

Where a profile (p.148) is attached to the monitor you are using, you can display an image in more faithful colors by setting the profile.

- If you select [Use the OS settings], the color profile set in Windows will also be applied in DPP. If you are using multiple monitors, the profile set for each monitor is applied to DPP.
- Select the [Monitor profile], click the [Browse] button. You can select a profile for your monitor in the dialog box that appears.



### Precise coloring with a third-party monitor color reader

If you use a profile created using a third-party monitor color reader, images can be displayed in even more precise colors.

### Printing profile (color setting of the printer)


Where a profile is not attached to the printer you are using to print images, you can print an image, simulating the colors displayed on screen by setting the profile in DPP.



When you set a profile for printing in DPP, set the color adjustment function of the printer driver to off. If it is left on, the image may not be printed in colors close to those displayed on screen.

## View Settings

You can set layout for screen display.

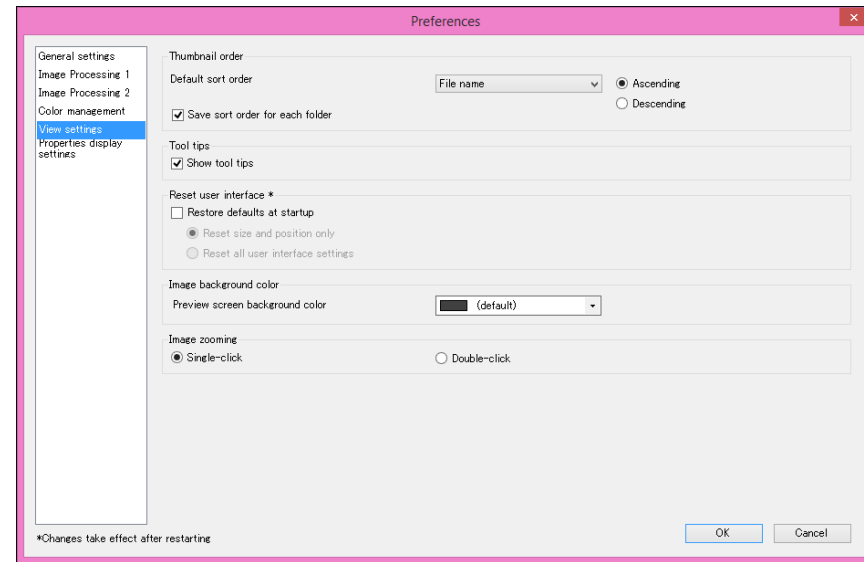

### Thumbnail order

Specify the default order of images in the main window, and that the order of rearranged images be maintained. If you checkmark the checkbox, the order of rearranged images is maintained starting the next time you select a folder (p.35).

### Reset user interface

You can reset user interface settings.


Choose from either of 2 reset states.

By checkmarking the [Restore defaults at startup] checkbox, settings revert to their original settings for next time you start up DPP. The checkmark is also removed from the checkbox for the next startup.



# Properties Display Settings

You can specify settings for shooting and recipe information that appears with thumbnails and in the preview window.

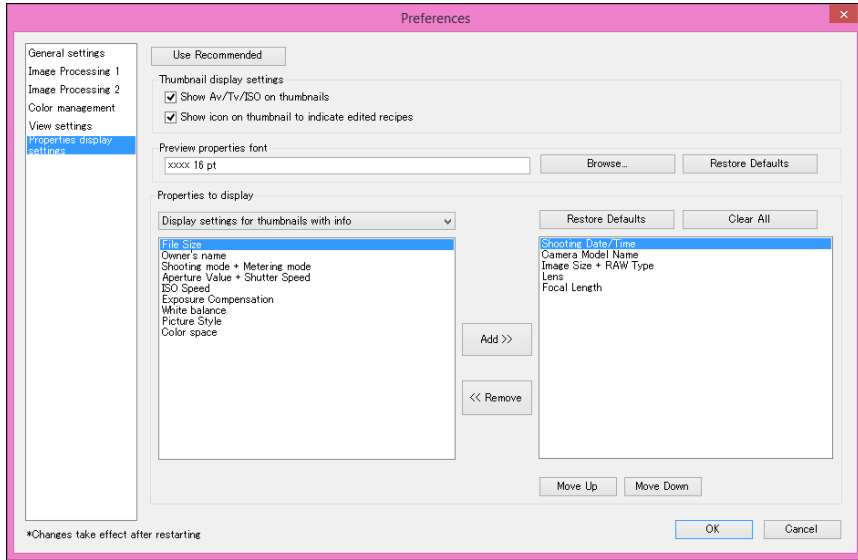

## Thumbnail display settings

You can specify information that appears on thumbnails.

If the [Show Av/Tv/ISO on thumbnails] checkbox is checked, Av/Tv/ISO information is displayed on thumbnails if thumbnails are set at Size 3 or larger.

## Preview properties font

You can specify the font used for information displayed in the preview window.

## Properties to display

You can specify detailed settings for [Display settings for thumbnails with info], [Display settings for thumbnail list], and [Display settings for preview properties].

Items that can be selected appear in the list box at left, and actually displayed items appear in the list box at right. Specify items with the [Add >>] button and [<< Remove] button. You can also change the display order with the [Move Up] button and [Move Down] button.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



All the property items may not be displayed depending on the combination of window, preview window, or the size of thumbnails.



Troubleshooting .....	145
Deleting the Software (Uninstalling) .....	146
Image Frame Information in the Main Window and Edit Image Window.....	147
Glossary .....	148
Index.....	150
About This Instruction Manual.....	154
Trademarks .....	154

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Troubleshooting

If DPP is not operating correctly, refer to the subjects below.

## Installation can not be completed correctly

- Select an administrator-level privilege ([Computer administrator], [Administrator], etc.) when setting the user. You cannot install the software if the user setting other than an administrator-level privilege is selected. For detailed information on selecting an administrator-level privilege, refer to your computer User's Manual.

## DPP does not work

- DPP does not operate correctly on a computer if its system requirements are not met. Use DPP on a computer with compatible system requirements (p.3).
- Even if your computer has the RAM capacity (memory) described in the system requirements (p.3), if other applications are running at the same time as DPP, you may not have sufficient RAM (memory). Exit any applications other than DPP.

## The card reader does not detect the SD card

- Depending on the card reader and computer OS used, SDXC cards may not be correctly detected. In such a case, connect your camera and computer with the provided interface cable, and transfer the images to your computer using EOS Utility.

## Images are not displayed properly

- Images that are not supported by DPP are not displayed. (Thumbnail images are displayed as [?].) On a 32-bit version PC, when more images than the maximum displayable amount are detected, images beyond the maximum are not displayed. (Thumbnail images are displayed as [?].) There are various types of JPEG and TIFF images, so JPEG images other than Exif 2.2, 2.21 or 2.3 compatible images and TIFF images other than Exif compatible images may not be displayed properly (p.4).

## A recipe could not be pasted (applied) to another image

- Contents that can only be adjusted for RAW images cannot be applied as a recipe to JPEG images or TIFF images.

## Colors are subdued in the image when viewed with other software

- If a RAW image which has a color space other than sRGB is converted and saved as a JPEG or TIFF image (p.88, p.141), the colors will be subdued when viewed in software that is only compatible with sRGB color space. In such a case, set the RAW image's color space to sRGB, convert and save again as a JPEG or TIFF image, and then view the image.
- The Auto Lighting Optimizer (p.56) is a function compatible with cameras equipped with the Auto Lighting Optimizer. Adjustments made with the Auto Lighting Optimizer cannot be applied to RAW images shot with the cameras not compatible with this function.

## The colors of the image displayed on screen and the colors of the printed image do not match

- If the color of the monitor that displays an image is not adjusted correctly, or if the profile for a printer that is to print image is not set up, the color of the image displayed on screen and the color of the printed photograph may differ greatly. If the color of the monitor that displays images is corrected and the profile for a printer is set up correctly (p.142), the color of a printed photograph and the color of an image on screen can be more closely matched. Using a Canon printer automatically sets up the profiles for the printer, so you only need to set the color of the monitor to bring the colors closer to each other.

## Printing a large number of images in batches cannot be performed

- If a large number of images are printed in batches, printing may stop in the middle or the images may not be printed. Reduce the number of images to print or increase the memory on your computer.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





# Deleting the Software (Uninstalling)

---

- Exit any applications before uninstalling the software.
- Log in under an administrator-level privilege when uninstalling the software.
- Uninstall the software according to the OS software uninstalling method.
- To prevent computer malfunctions, always restart your computer after you have uninstalled the software. Re-installing the software without first restarting your computer is particularly likely to result in computer malfunctions.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos


Specifying  
Preferences

Reference/  
Index





# Image Frame Information in the Main Window and Edit Image Window (p.12, p.98)

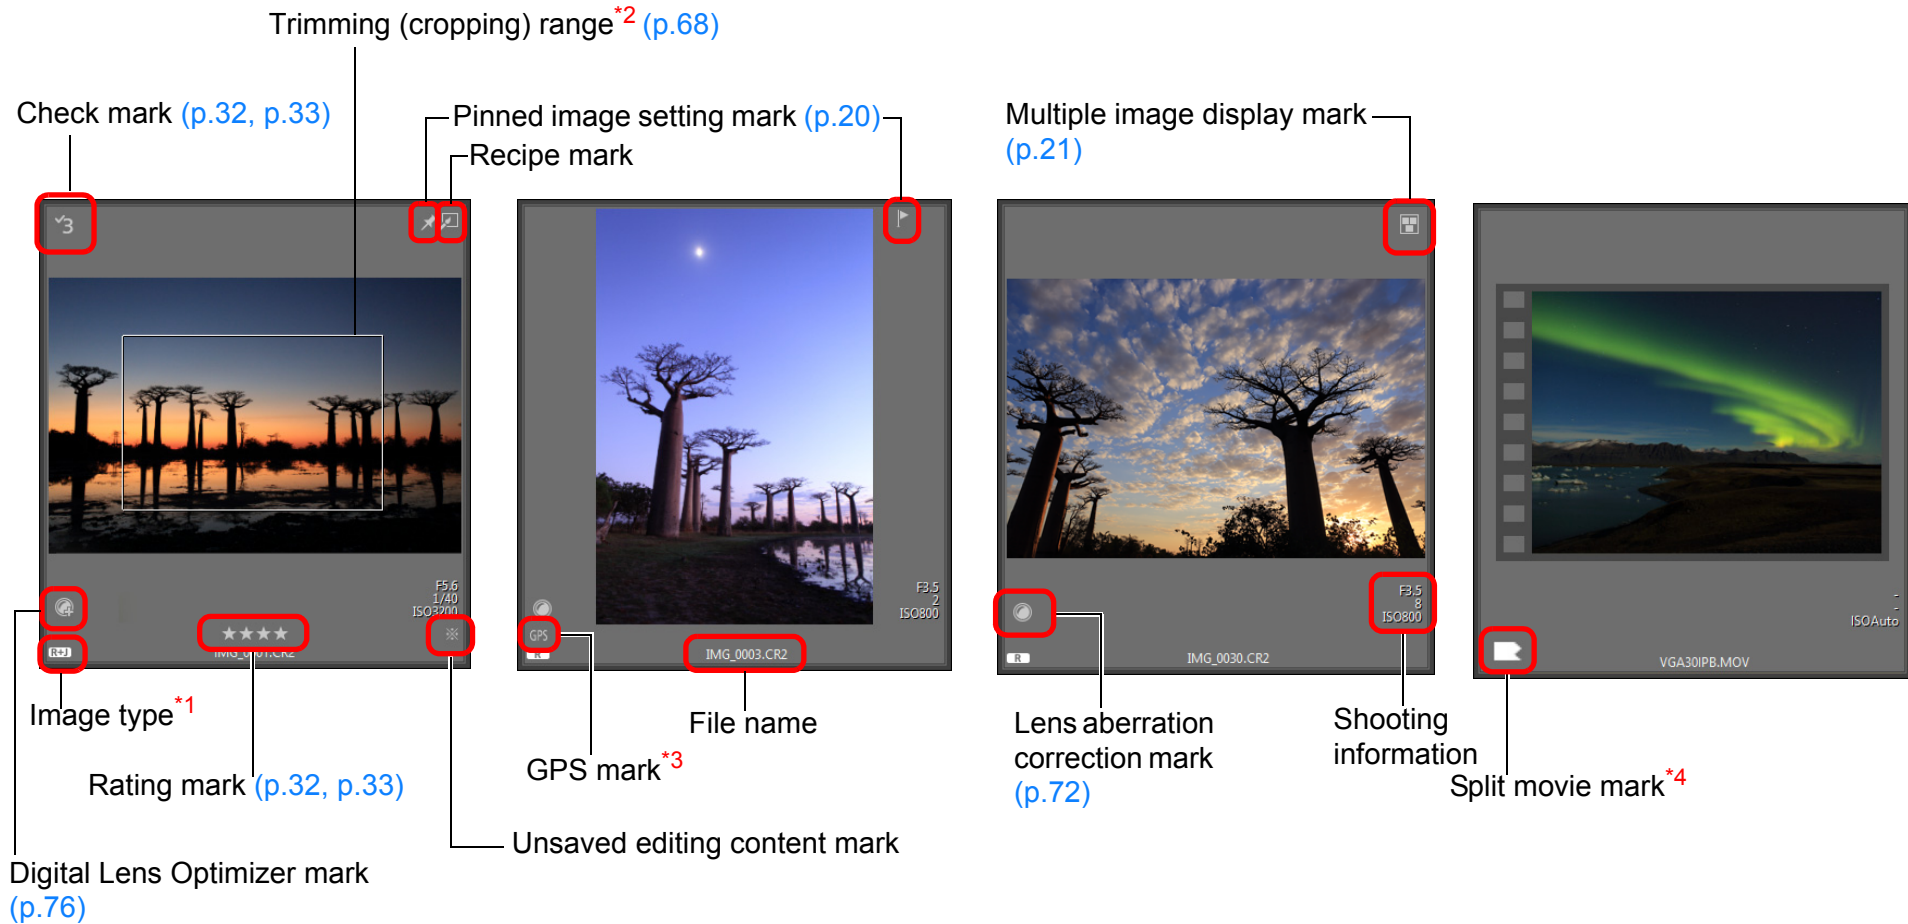





<sup>\*1</sup> Displayed on RAW+JPEG images displayed as a single image (p.14).  
 [ R ] is displayed in RAW images.  
 [ DPR ] is displayed in Dual Pixel RAW images.


<sup>\*2</sup> When aspect ratio information is attached to an image shot with any supported camera other than the EOS 5D Mark II, the image is displayed as a cropped image.

<sup>\*3</sup> Displayed on images shot on a GPS function-compatible Canon camera.

<sup>\*4</sup> Shows that the movie is split and includes movies other than that shown in the thumbnail. The following icons may be displayed:

-  : No final movie
-  : No initial or final movie
-  : No initial movie
-  : All split movies present

[ ? ] is displayed in an image frame when editing is not possible.

Movies played back using software other than DPP are displayed with a [  ] icon in the thumbnail image.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



# Glossary

## RAW image

EOS camera RAW images are recorded in an uncompressed 14bit or 12bit format.

Because RAW images are special images in an undeveloped status, you need software with development processing functions such as DPP in order to view them. The advantage of the undeveloped RAW images is that you can make a variety of adjustments to RAW images with almost no deterioration of the image.

\* “RAW” meaning “in a natural condition” or “not processed or refined”.

## JPEG image

The most ordinary image in non-reversible compressed 8bit format. The advantage of this is that by saving at a high compression rate, the file size can be small, even for image data that has a high pixel count. Because during saving and compression part of the data is thinned out to make the file size small, every time you edit or save, the image deteriorates.

With DPP, even if you repeat editing/saving, only the recipe data is modified, and no overwriting or compression occurs so the original image data does not deteriorate.

\* JPEG is an abbreviation of “Joint Photographic Experts Group”.

## TIFF image

Bitmap-format image recorded in a 8bit/16bit uncompressed format. Because TIFF images are in uncompressed format, they are suitable for saving an image while maintaining the original high image quality.

\* TIFF is an abbreviation of “Tagged Image File Format”.

## Recipe

The “Image processing conditions information” for RAW images that can be edited in DPP is called a “recipe”.

Further, in DPP, you can perform image editing on JPEG and TIFF images that use “recipes” as with RAW images.

## bit number

Binary unit of information volume in the color of an image. The number shows the number of bits per pixel.

The larger the number of bits, the more the color numbers and the gradation becomes smoother. A one-bit image is a black-and-white image.

## Color Management System (Color Matching)

Digital cameras that shoot images, monitors that display images, and printers that print images each have a different way of creating color. For this reason, there may be a difference between the color of an image when viewed on a monitor and when printed.

A color management system is a system for managing color in order to bring these colors closer together. With DPP, you can more closely match color between different devices using ICC profiles between different devices.

## ICC profiles

ICC profiles are files containing color information such as color characteristics and color space for various devices, set by the ICC (International Color Consortium). Most devices such as the monitor we use to view images or the printer we use to print images can be managed (color management) using these ICC profiles and the color between different devices can be more closely matched.

DPP has color management that uses these ICC profiles.

## Tone Curve

A tone curve shows values before adjustment (input) as the horizontal axis on a graph, and the values after adjustment (output) as the vertical axis. Since the values of before adjustment and after adjustment are the same before any adjustment is made, the tone curve displays as a straight line from bottom left to top right, and by changing this tone curve, you can adjust in detail the image’s brightness, contrast and color. The more you go right on the horizontal axis, the more the plus value it becomes, and the higher you go on the vertical axis, the more the plus value it becomes.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





## Color space

A color space is the reproducible color range (color gamut characteristics). DPP supports the following five kinds of color space.

**sRGB** : Standard color space for Windows. Widely used for the standard color space of monitors, digital cameras, and scanners.

**Adobe RGB** : A wider color space than sRGB. Mainly used for printing for business purposes.


**Apple RGB** : Standard color space for Macintosh. A slightly wider color space than sRGB.

**ColorMatch RGB** : A slightly wider color space than sRGB. Mainly used for printing for business purposes.

**Wide Gamut RGB** : A wider color space than Adobe RGB.

Refer to the color chart below for the color area of each color space.

### Color chart of color spaces compatible with DPP

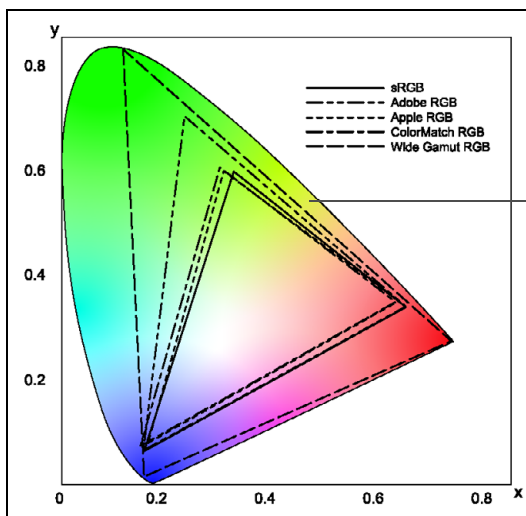

Color range that can be seen by the human eye

	Gamma value	White point (color temp.)
————— sRGB	2.2	6500K(D65)
----- Adobe RGB	2.2	6500K(D65)
..... Apple RGB	1.8	6500K(D65)
----- ColorMatch RGB	1.8	5000K(D50)
----- Wide Gamut RGB	2.2	5000K(D50)

## CMYK simulation profiles

A profile that simulates colors when printing in a CMYK environment (printing machine, etc.). With DPP, you can simulate color with four types of profile.

**Euro Standard** : Profile normally used for book printing in Europe, suitable for simulation of standard European printing.

**JMPA** : Profile normally used for book printing, etc. in Japan, suitable for simulation of magazine advertising standard color printing.

**U.S.Web Coated** : Profile normally used for book printing in North America, suitable for simulation of North American standard printing.

**JapanColor2001 type3** : Profile becoming a standard in the Japanese printing industry, suitable for simulation of JapanColor standard printing.

## Rendering intent

Rendering intents are color conversion methods when printing an image. The conversion method of each rendering intent is shown below.

**Perceptual** : Before and after conversion, all colors are converted to maintain the relationship between colors. Even where colors slightly change, you can print a natural-looking image which has maintained color harmony. However, depending on the image, the saturation may change overall.

**Relative Colorimetric** : There will not be much conversion to colors which are similar before and after conversion, but colors which are not similar are converted appropriately. Because there are little changes to similar colors which comprise most of an image, you can print a natural-looking image in which the saturation has not changed greatly. However, depending on the image, there are cases where the overall tone of an image changes somewhat as colors which are not similar and highlights change.

# Index

## A

Adjust JPEG Images.....	43
Adjust TIFF Images.....	43
Adjusting	
Adjustment Contents (Recipe) .....	96
Apply Adjustments.....	95
Automatic Adjustment (Gradation, Luminance).....	55
Brightness .....	46, 59
Brightness of Highlights.....	52
Brightness of Shadows.....	52
Click White Balance .....	50, 60
Color Saturation .....	53
Color Temperature .....	51
Color Tone.....	53
Contrast.....	52, 59
Copy Adjustments .....	95
Dynamic Range.....	54, 63
Filter Effect .....	54
Hue.....	64, 65
Monochrome .....	53, 65
Personal White Balance .....	121
Picture Style File .....	49
Saturation .....	64, 65
Save Adjustments .....	95
Sharpness .....	57
Tone Curve Adjustment.....	61
Toning Effect .....	53, 54
White Balance .....	49
Adjusting Brightness .....	46
Adjusting Tone Curve .....	61
Adjustment Contents (Recipe).....	94, 148
Adobe RGB.....	149
AF Points .....	21
Apple RGB.....	149
Arrange Images .....	34, 35
Auto Lighting Optimizer.....	56
Automatic Adjustment (Gradation, Luminance) .....	55
Automatic Dust Erasure Processing .....	84

## B

Basic Adjustment Tool Palette.....	46
Batch Apply White Balance to Images (Personal White Balance).....	121
Batch Change the File Name of Images.....	126
Batch Convert/Save Images (Batch Process) .....	123
Batch Process (Batch Save JPEG and TIFF Images).....	123
Batch Process of Multiple Images	
Change File Name .....	126
Convert/Save (Batch Process).....	123
Personal White Balance.....	121
Recipe Data .....	94
Transfer.....	125
Batch Settings Window.....	123, 125
Batch Transfer Images .....	125
Batch Transfer Images to Image Editing Software .....	125
Before/After Comparison Display .....	23
bit Number .....	148
Bookmark .....	39
Brightness.....	59
<b>C</b>	
Change File Name.....	126
Change the Display .....	13
Changing the File Name of Images in the Order in the Main Window.....	126
Check Mark .....	32, 33, 147
Chromatic Aberration Correction .....	72
Chrominance Noise Reduction.....	66
Click White Balance.....	50, 60, 131
CMYK Simulation .....	149
Collection Window .....	100
Color Blur Correction .....	72
Color Chart .....	149
Color Management (Color Matching) .....	148
Color Space .....	149
ICC Profiles.....	148
Color Management (Preferences) .....	141

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





Color saturation.....	53
Color Setting of the Monitor (Profiles).....	141
Color Setting of the Printer (Profiles).....	142
Color Space.....	149
Adobe RGB.....	149
Apple RGB.....	149
Color Space Setting for Each Image.....	88
ColorMatch RGB.....	149
sRGB.....	149
Wide Gamut RGB.....	149
Color Space Setting for Each Image.....	88
Color Temperature.....	51
Color Tone.....	53
ColorMatch RGB.....	149
Compositing Images.....	102
Contrast.....	52, 59
Convert One Image.....	91
Convert to JPEG or TIFF Image and Save.....	91, 123
Copy Stamp (Image Correction).....	87
Copying and Pasting (Applying) Recipes.....	95
Correct Images (Copy Stamp Function).....	87
Cropping.....	68
Customize toolbar.....	114
<b>D</b>	
Default Color Space Setting.....	141
Delete Images.....	38
Deleting	
Delete Images.....	38
Delete the Software.....	146
Deleting DPP (Uninstalling).....	146
Detailed Setting Printing (Printing with Shooting Information).....	117
Digital Lens Optimizer.....	75
Digital Lens Optimizer mark.....	147
Display	
Before/After Comparison Display.....	23
Enlarged Display (Preview Window).....	17

Enlarged Display (Quick Check Window).....	30
Multi-Function Preview.....	24
Single Image Display.....	35
Synchronize Preview Window.....	97
Thumbnail Display (Main Window).....	12
Thumbnail Display and Enlarged Display (Edit Image Window).....	98
Displaying Image Properties.....	23
Displaying Shooting Information.....	23
Distortion Correction.....	72
Downloading an Image to Your Computer.....	10
Downloading Images from a Camera.....	10
Downloading Images from a Card Reader.....	10
Downloading Images.....	10
Downloading Images from a Camera.....	10
Dual Pixel RAW Optimizer.....	109
Dust Delete Data.....	83, 84
Dust Delete/Copy Stamp Tool Palette.....	83
Dust Erasure Processing	
Automatic Dust Erasure Processing.....	83
Dust Delete/Copy Stamp Tool Palette.....	83
Image Correction (Copy Stamp Function).....	87
Manual Dust Erasure (Repair Function).....	85
Dynamic Range.....	54, 63
<b>E</b>	
Edit Image Window.....	98
Editing.....	Adjusting
Enlarged Display (Preview Window).....	17
EOS Utility.....	10
Exiting DPP.....	28
<b>F</b>	
Filter Effect.....	54
<b>G</b>	
General Settings (Preferences).....	138
GPS mark.....	147
Grid Lines.....	21

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index





<b>H</b>	
HDR (High Dynamic Range) Images .....	106
Highlight Area Warning Indicator .....	22
Histogram Palette .....	16
Hue .....	44, 64, 65
<b>I</b>	
ICC Profiles .....	148
Image Information .....	36
Image Marks (Image Frame Information) .....	147
Image processing (Preferences) .....	139
Image Quality	
Noise Reduction .....	66
<b>J</b>	
JPEG Image .....	43, 148
<b>L</b>	
Lens Aberration Correction .....	71
Lens aberration correction mark .....	147
Linear .....	55
Loading and Pasting (Applying) Recipes .....	96
Luminance Noise Reduction .....	66
<b>M</b>	
Main Window .....	12
Main Window (Multi-layout) .....	19
Main Window (Thumbnail Layout) .....	12
Manual Dust Erasure (Repair Function) .....	85
Monochrome .....	53
Filter Effect .....	54
Toning effect .....	54
Move or Copy Folders .....	39
Move or Copy Images .....	38
Movies	
Play Back .....	134
Save Still Photos .....	134
Split movie mark .....	147

Multi-Function Preview .....	24
Multi-layout .....	19
Multiple image display mark .....	147
<b>N</b>	
Navigator Palette .....	18
Noise Reduction .....	66
<b>O</b>	
Organize Images .....	38
Organizing Images .....	38
Delete Images .....	38
Move or Copy Folders .....	39
Move or Copy Images .....	38
Register Folders as Bookmarks .....	39
<b>P</b>	
Palettes	
Display Method of Palettes .....	27
Rearranging Palettes .....	27
Perceptual .....	149
Peripheral Illumination Correction .....	72
Personal White Balance .....	121
Picture Style .....	47
Picture Style File .....	49
Pin .....	20
Pinned image setting mark .....	147
Preferences .....	138
Color Management .....	141
General Settings .....	138
Image processing .....	139
Properties Display Settings .....	143
View Settings .....	142
Preview Control Panel .....	20
Preview Display Area .....	19
Preview Window .....	17
Printing	
Printing a Thumbnail List (Contact Sheet Printing) .....	118
Printing One Sheet of Paper .....	116

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



Printing with Shooting Information (Detailed Setting Printing)....	117
Printing One Sheet of Paper .....	116
Printing with Shooting Information (Detailed Setting Printing) .....	117
Properties Display Settings (Preferences) .....	143
<b>Q</b>	
Quick Check Window .....	30
<b>R</b>	
Rating.....	32, 33
Rating mark.....	147
RAW Image.....	42, 148
Re-Adjusting an Image .....	93
Recipe.....	94, 148
Recipe File .....	94
Re-Editing an Image .....	93
Registering Folders as Bookmarks .....	39
Remote Shooting .....	128
Rename Window.....	126
Rendering Intent (Matching Method) .....	149
Repair (Manual Dust Erasure) .....	85
Rotate Images.....	12
<b>S</b>	
Saturation.....	44, 64, 65
Save	
Batch Convert/Save Images (Batch Process) .....	123
Save .....	91
Save As .....	91
Save As.....	91
Saving Recipes .....	95
Second Windows .....	25
Select Images .....	12, 30, 98
Shadow Area Warning Indicator .....	22
Sharpness.....	57, 78
Shooting Information Display .....	23, 36
Single Image Display .....	35
Single Image Display of RAW and JPEG Image .....	35

Soft-Proof Colors Function .....	89
Sorting Images	
Check marks .....	32, 33
Ratings.....	32, 33
sRGB .....	149
Starting up DPP .....	9
Supported Images .....	4
Synchronization (Preview Window) .....	97
Synchronize Images .....	97
Synchronize Preview Window .....	97
System Requirements .....	3
<b>T</b>	
Thumbnail Display (Filter/Sort Function) .....	15
Thumbnail Display (Main Window) .....	12
Change the Display.....	13
Thumbnail Display (Multi-layout) .....	19
Thumbnail Display and Enlarged Display (Edit Image Window) .....	98
Thumbnail Display Area .....	19
Thumbnail Layout.....	12
Thumbnails Control Panel .....	14
TIFF Image .....	43, 148
Tone Curve.....	148
Toning effect.....	54
Tool Palette .....	44
Basic Adjustment Tool Palette .....	46
Color Adjustment Tool Palette .....	64
Detailed Adjustment Tool Palette.....	66
Dust Delete/Copy Stamp Tool Palette .....	83
Lens Correction Tool Palette .....	71
Partial Adjustment Tool Palette.....	79
Settings Tool Palette.....	88
Tone Adjustment Tool Palette.....	59
Trimming/Angle Adjustment Tool Palette.....	68
Toolbar .....	12
Transfer	
Batch Transfer Images to Image Editing Software .....	125
Transfer an Image to Photoshop .....	113

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index



Transfer an Image to Photoshop .....	113
Trimming (cropping) range.....	147
Trimming/Angle Adjustment Tool Palette.....	68
Trimming/Angle Adjustment Window .....	68
<b>U</b>	
Unsaved editing content mark .....	147
Unsharp Mask.....	58
<b>V</b>	
View Settings (Preferences) .....	142
Viewing Images in the Main Window (Thumbnail Layout) .....	12
<b>W</b>	
White Balance.....	49
Click White Balance .....	50, 60
Color Temperature .....	51
Personal White Balance .....	121
Wide Gamut RGB .....	149
Work Color Space.....	88
Color Management.....	141

## About This Instruction Manual

- It is prohibited to reproduce, in whole or part, the contents of this Instruction Manual without permission.
- Canon may change without notice the software specifications and contents of this Instruction Manual.
- The software screens and displays printed in this Instruction Manual may differ slightly from the actual software.
- Please note that irrespective of the above-mentioned, Canon does not take responsibility for the outcome of the operation of the software.

## Trademarks

- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe and Photoshop are registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- All other trademarks are the property of their respective owners.

Introduction/  
Contents

Downloading  
Images

Viewing  
Images

Sorting  
Images

Editing  
Images

Printing  
Images

Processing  
Large Numbers  
of RAW Images

Remote  
Shooting

Playing Back  
Movies and Saving  
Still Photos

Specifying  
Preferences

Reference/  
Index

