

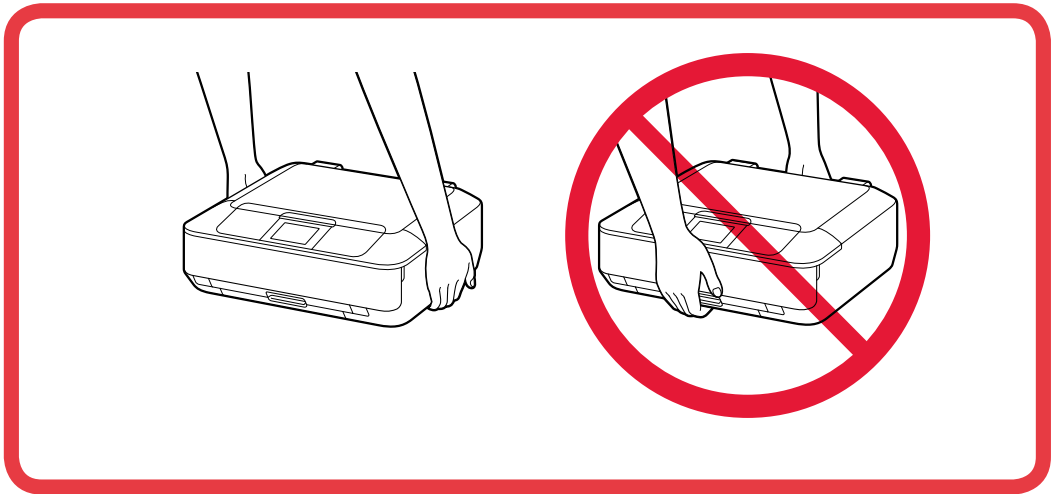
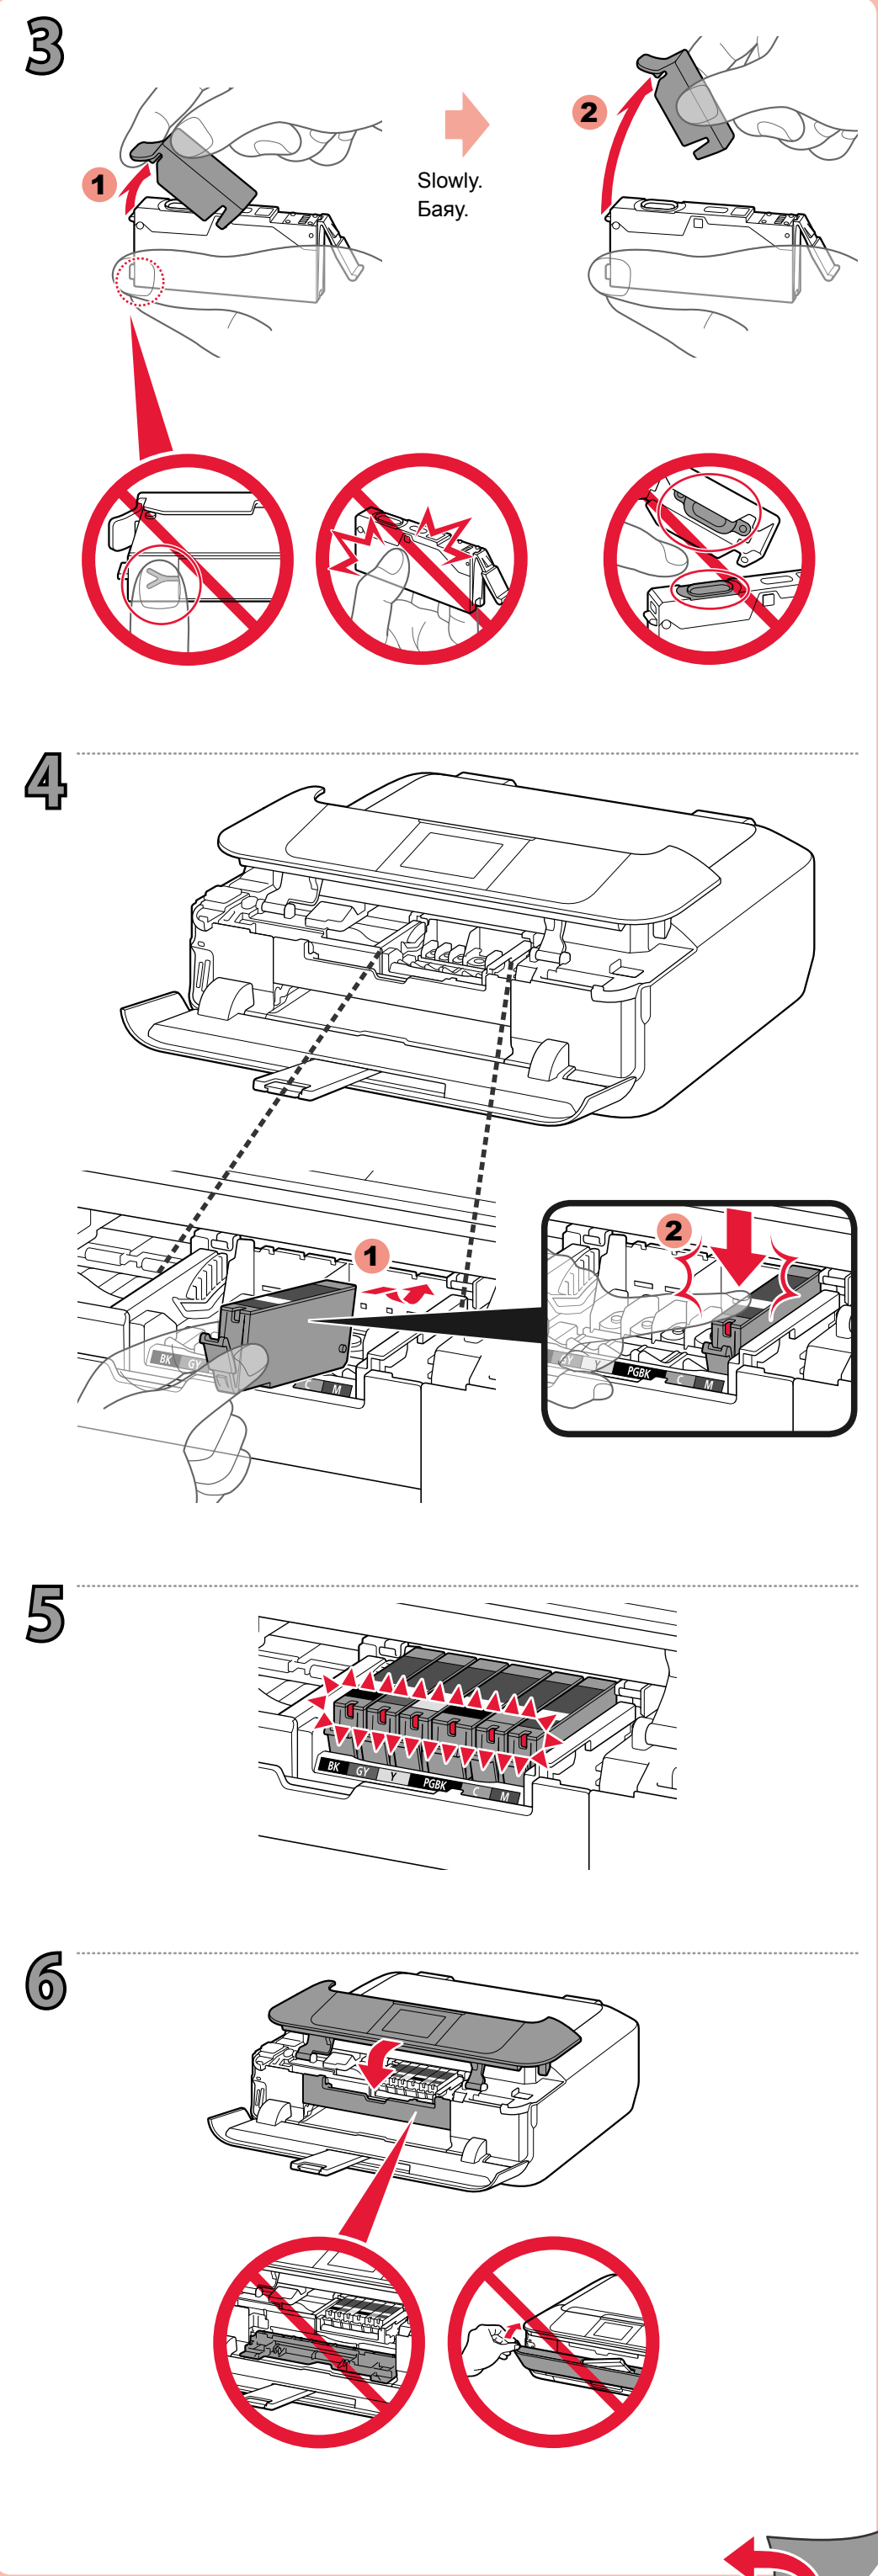
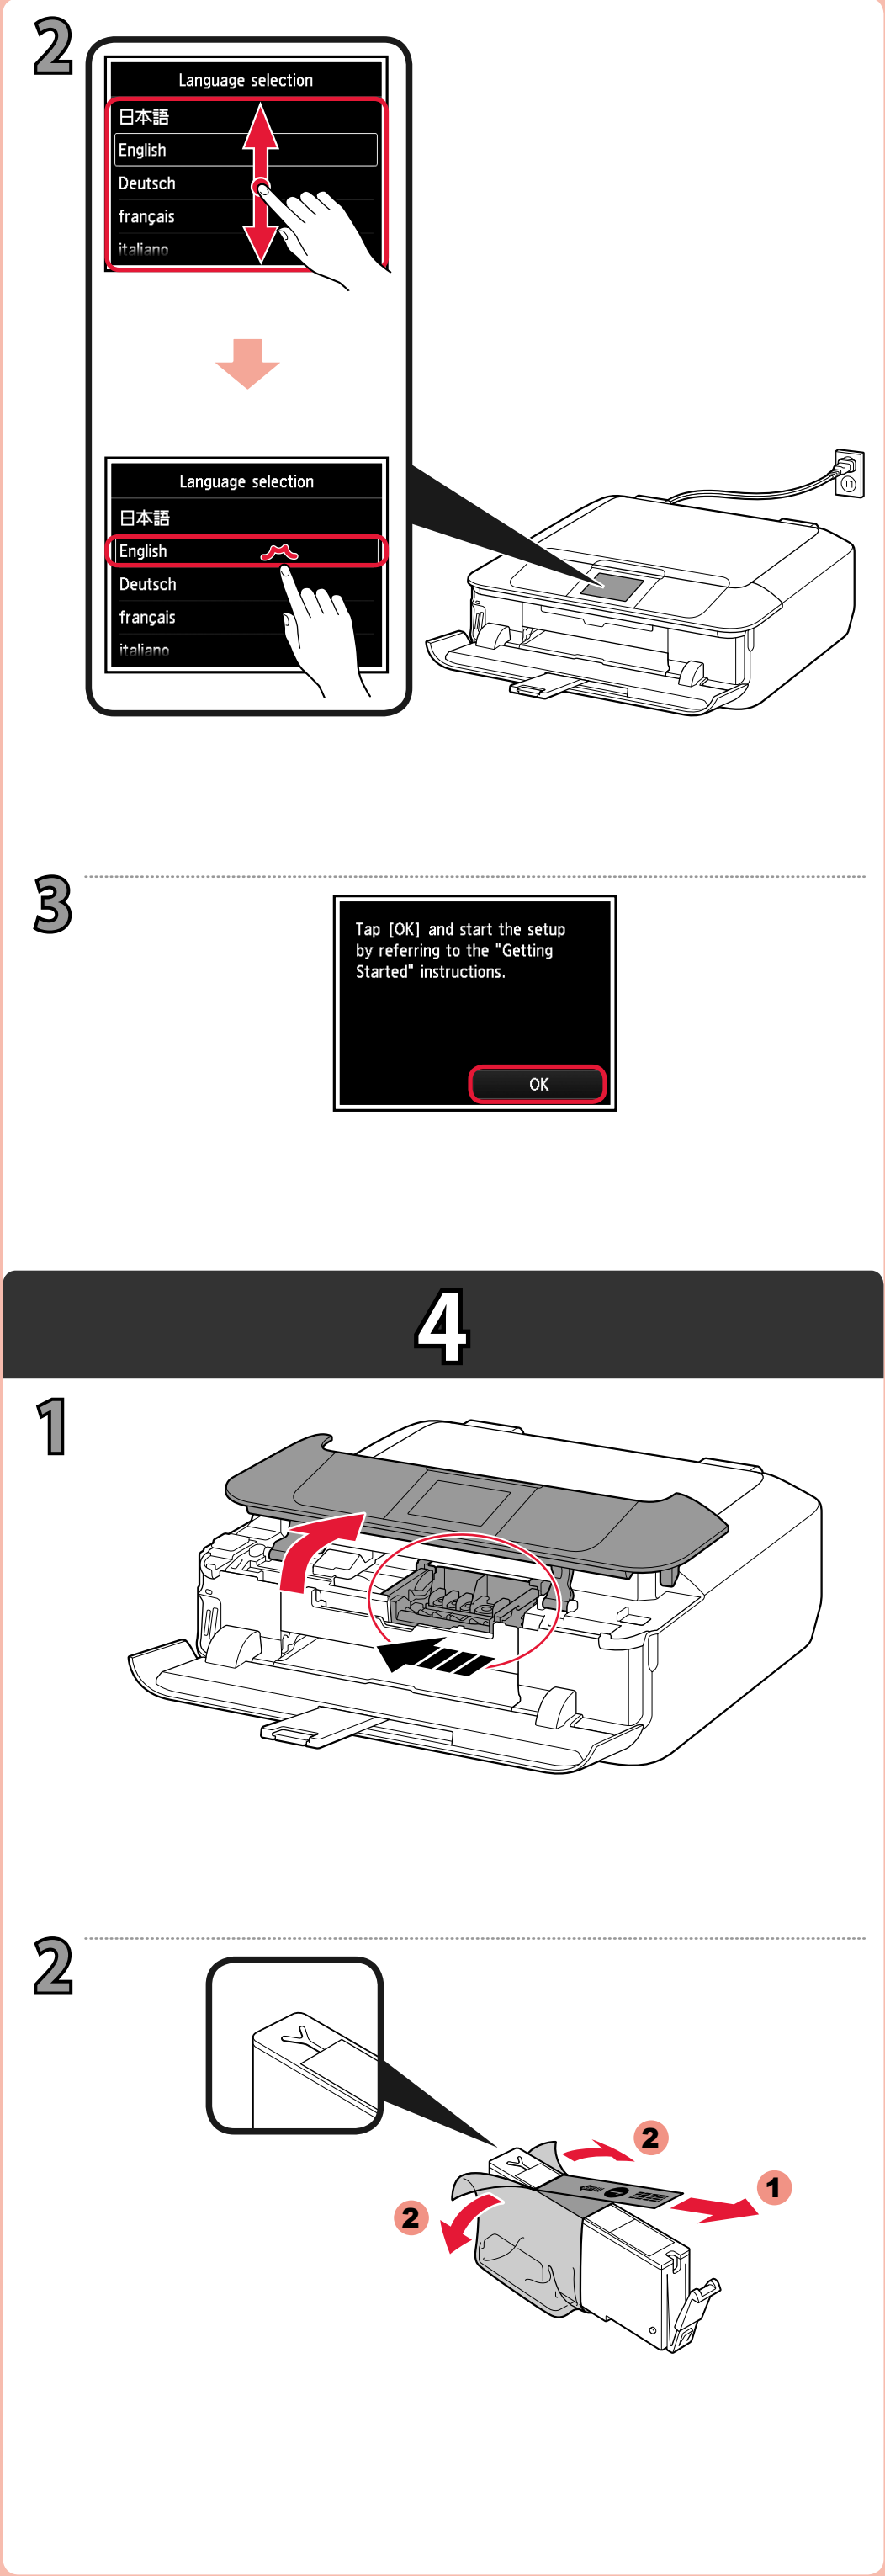


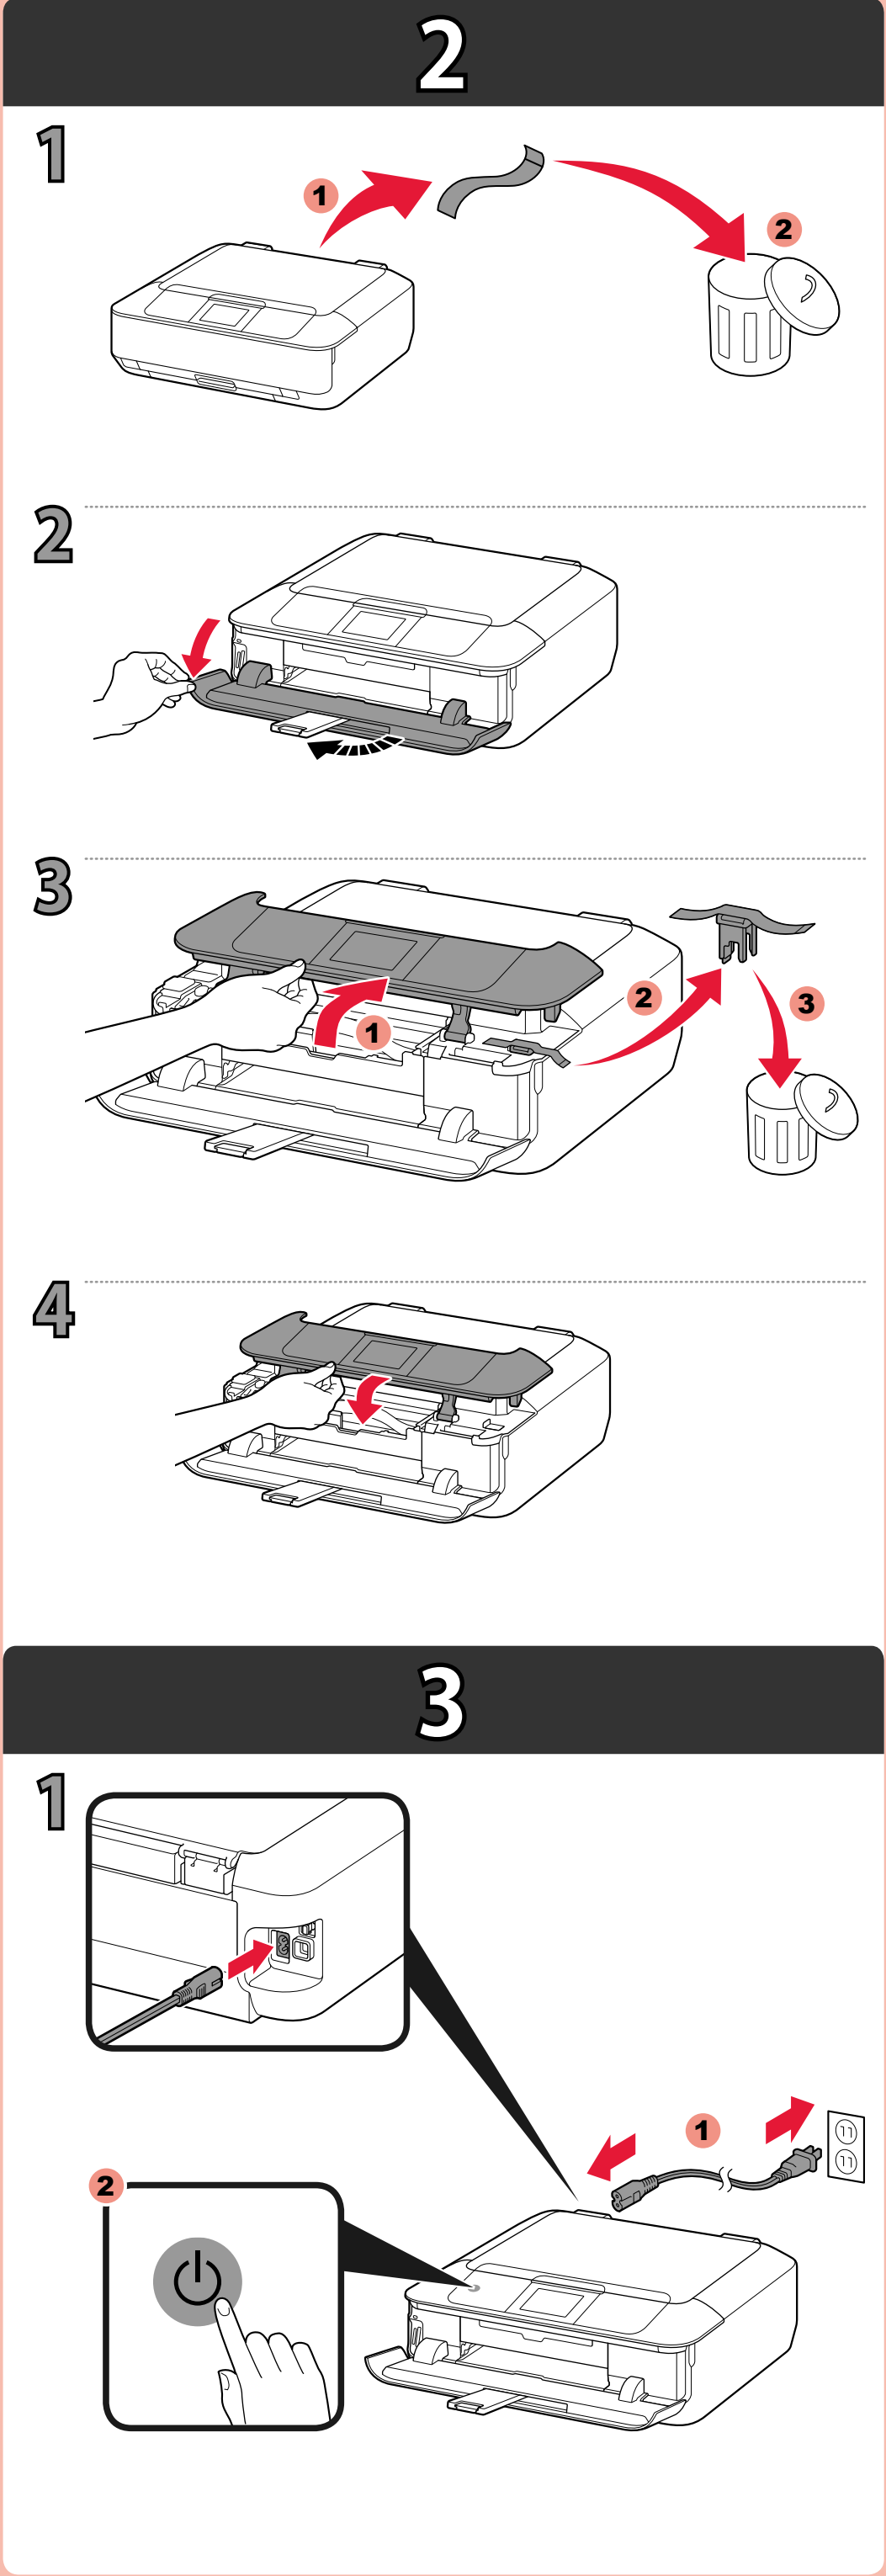

RMC: K10406

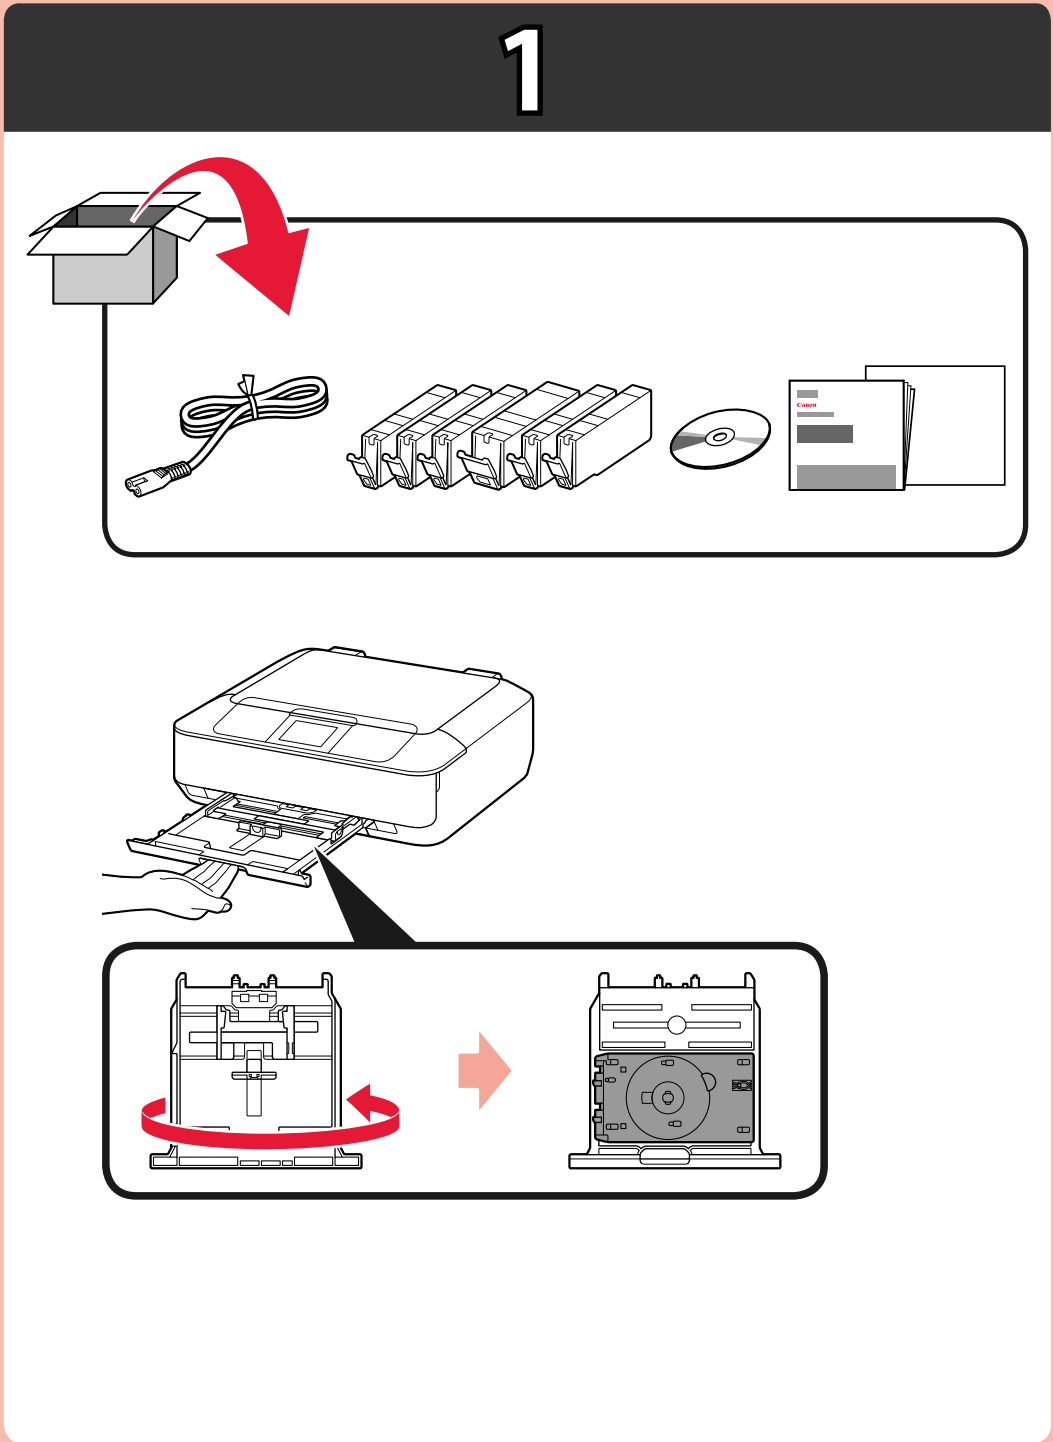


7









Cleaning... Do not close the paper output tray.
About 3 minutes

Head alignment is required.
Load a sheet of A4 or Letter paper and tap [OK].

OK

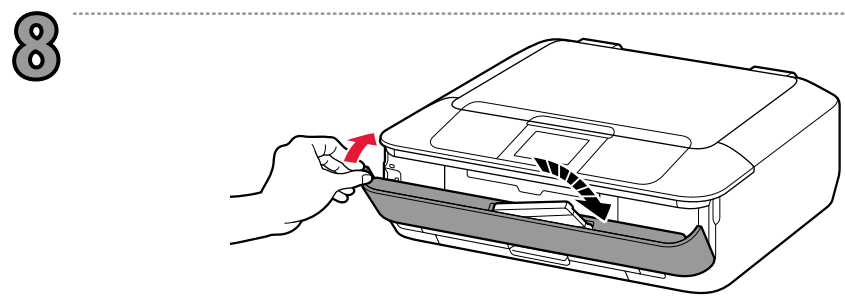

5

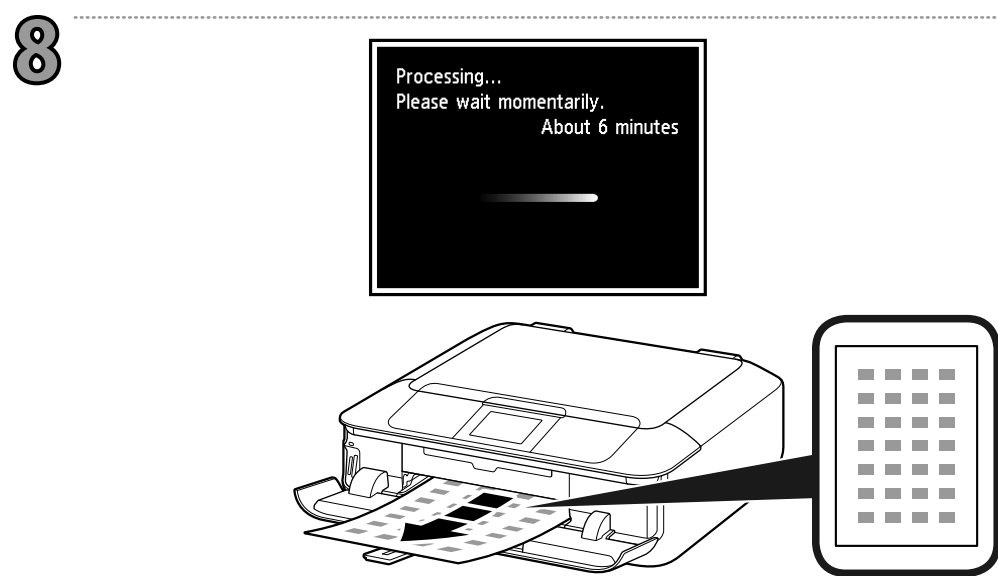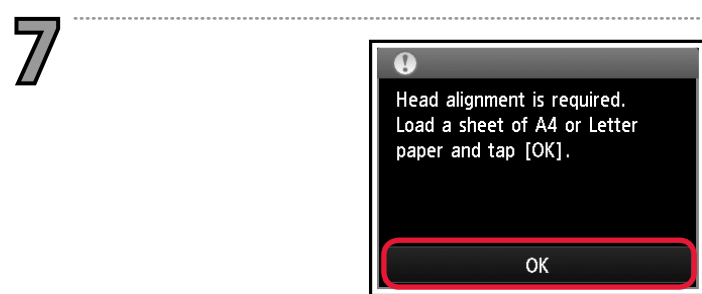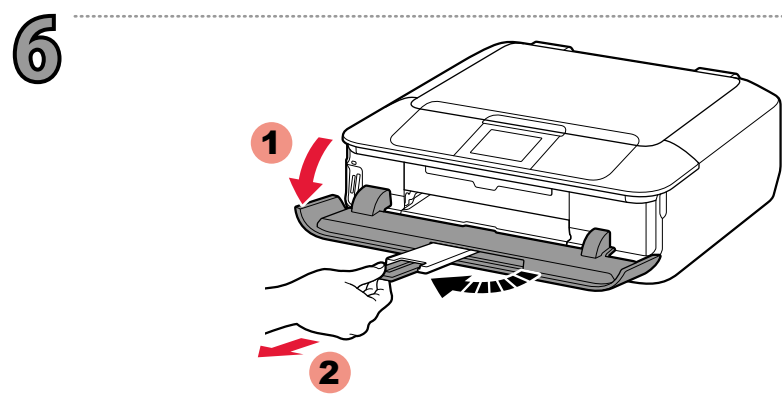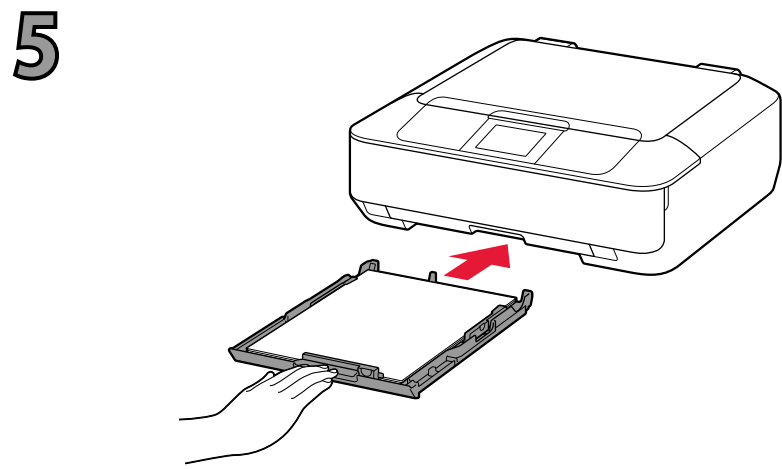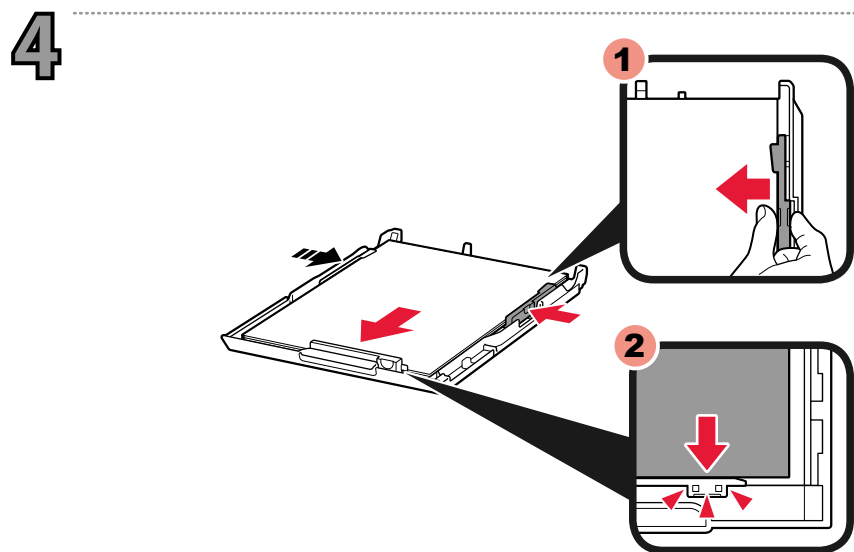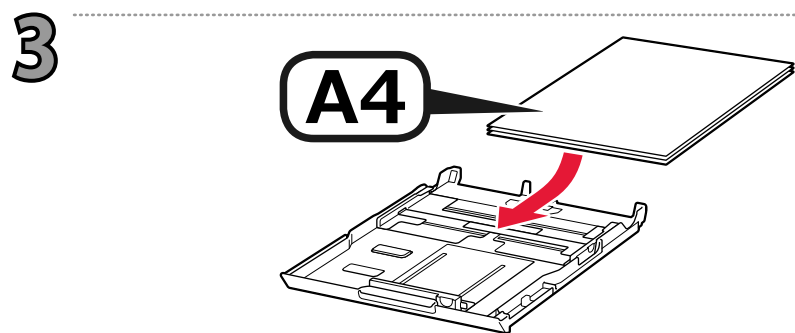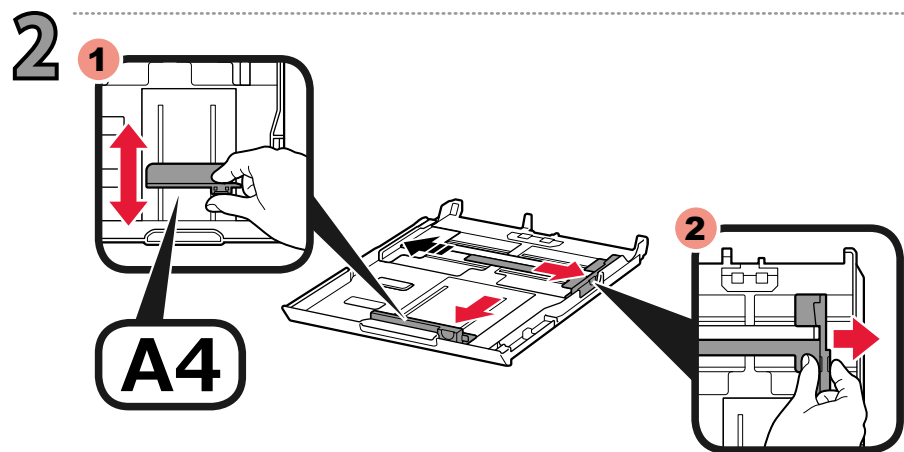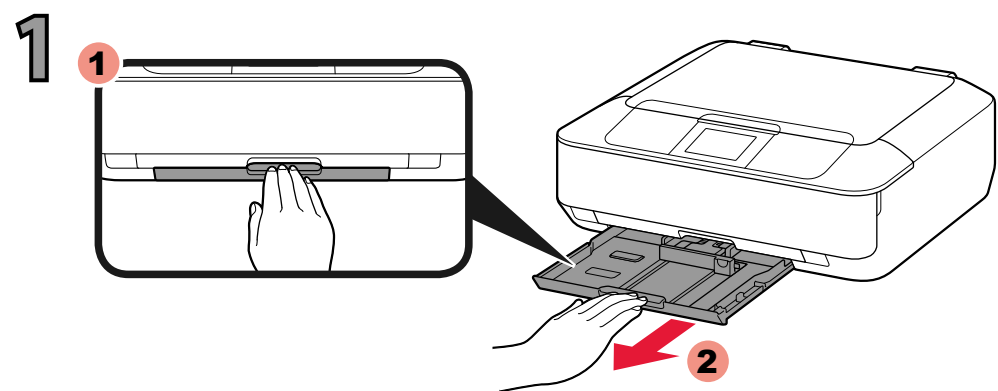

Hereafter, follow the message displayed on the screen.

Бұдан кейін экранда көрсетілетін хабарды орындаңыз.

6

1

Select the connection method.

- Wireless LAN connection
- Wired LAN connection
- USB connection
- Do not connect

Refer to the following explanations of connection types and select the connection method for your devices to use.




Hereafter, follow the message displayed on the screen.

Байланыс түрлерінің келесі түсіндірмелерін қарап, құрылғыларыңызда пайдаланылатын байланыс әдісін таңдаңыз.


Бұдан кейін экранда көрсетілетін хабарды орындаңыз.




Wireless LAN
Сымсыз LAN

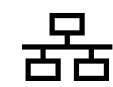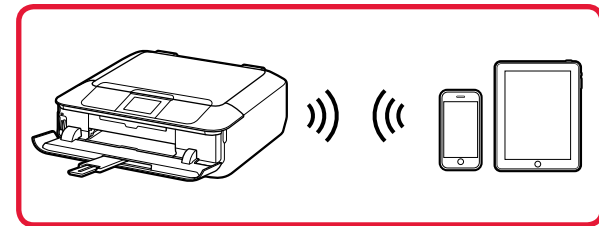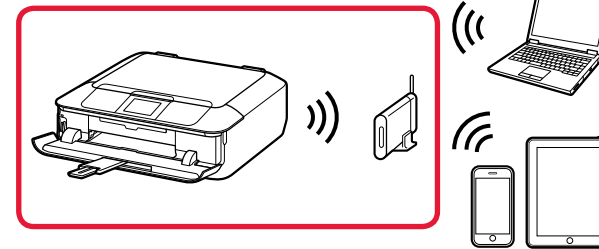

Wired LAN
Сымды LAN

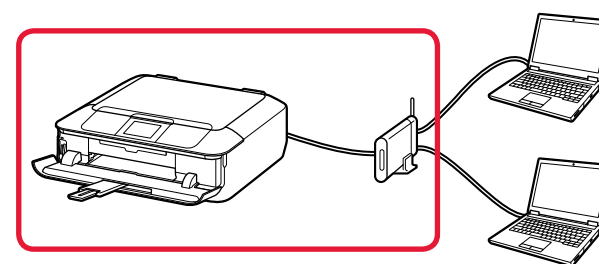

USB

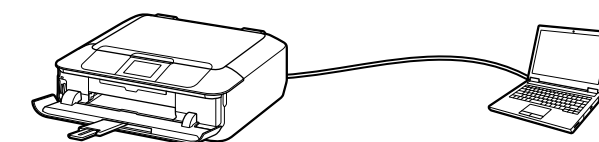

2

Insert the supplied CD-ROM or access canon.com/ijsetup, then tap [OK].
(See "Getting Started".)

canon.com/ijsetup



Setup CD-ROM is also available for Windows PC.
[Setup CD-ROM/Параметрлерді орнату ықшам дискісі] сондай-ақ, Windows амалдық жүйесі орнатылған компьютерлер үшін де қолжетімді.

