


Quick Setup Guide

SPA Guía de instalación rápida KOR 간편 설치 안내서

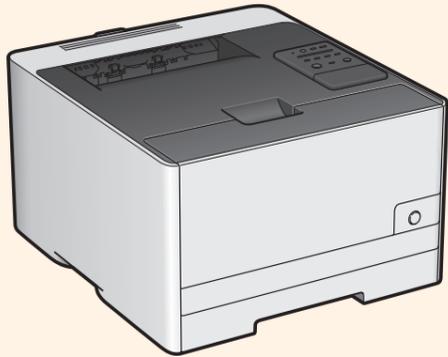

Read this guide first.

Please read this guide before operating this product. After you finish reading this guide, store it in a safe place for future reference.

SPA **Lea esta guía primero.**
Por favor, lea esta guía antes de usar este producto. Después de leer esta guía, guárdela en un lugar seguro para posteriores consultas.

KOR **먼저 본 설명서를 읽어 주십시오.**
본 제품을 사용하기 전에 설명서를 읽어 주십시오. 본 설명서를 다 읽은 후 나중에 참고할 수 있도록 안전한 곳에 보관하십시오.

Before installing the printer, read the cautions carefully which are described on the right side.

SPA Antes de instalar la impresora, lea detenidamente las precauciones indicadas a la derecha.

KOR 프린터 설치 전에 오른쪽에 명시된 주의사항을 잘 읽어 주십시오.

English

WARNING
To avoid the risk of personal injury or damage to the printer, and for legal information, make sure to read the "Legal Notices" and "Important Safety Instructions" in the e-Manual included on the accompanying CD-ROM carefully before using the printer.

Español

ADVERTENCIA
Para evitar el riesgo de lesiones personales o daños al equipo, y a efectos de información legal, recuerde leer detenidamente los "Avisos legales" y las "Instrucciones de seguridad importantes" del e-Manual incluido en el CD-ROM antes de utilizar la impresora.

한국어

경고
인적 부상 또는 프린터의 손상을 피하기 위해서, 그리고 법적 정보에 관해서는 프린터 사용 전에 부속된 CD-ROM에 포함된 전자설명서의 "법적 고지 사항" 및 "주요 안전 지침" 을 잘 읽어 주십시오.




Important Safety Instructions

This manual describes only warnings and cautions for the installation and the power supply. Be sure to read "Important Safety Instructions" described in the e-Manual (HTML manual) included in the supplied CD-ROM also.



Installation

- WARNING**
- Do not install the printer in a location near alcohol, paint thinner, or other flammable substances. If flammable substances come into contact with electrical parts inside the printer, this may result in a fire or electrical shock.
 - Do not place the following items on the printer.
 - Necklaces and other metal objects
 - Cups, vases, flowerpots, and other containers filled with water or liquids
 If these items come into contact with a high-voltage area inside the printer, this may result in a fire or electrical shock. If these items are dropped or spilled inside the printer, immediately turn OFF the power switch (1) and disconnect the interface cables if they are connected (2). Then, unplug the power plug from the AC power outlet (3) and contact your local authorized Canon dealer.

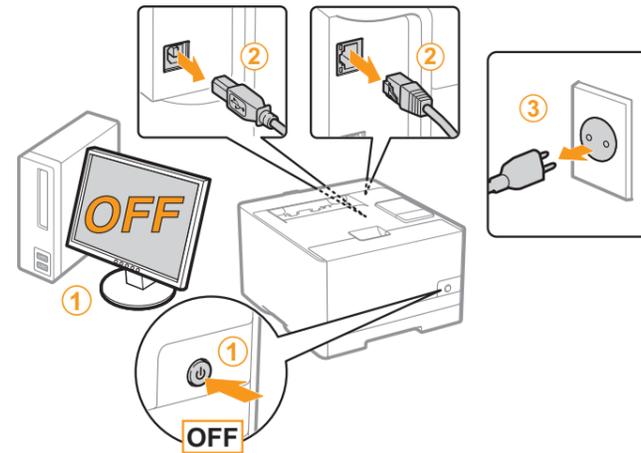

- CAUTION**
- Do not install the printer in unstable locations, such as on unsteady platforms or inclined floors, or in locations subject to excessive vibrations, as this may cause the printer to fall or tip over, resulting in personal injury.
 - The ventilation slots are provided for proper ventilation of working parts inside the printer. Never place the printer on a soft surface, such as a bed, sofa, or rug. Blocking the slots can cause the printer to overheat, resulting in a fire.
 - Do not install the printer in the following locations, as this may result in a fire or electrical shock.
 - A damp or dusty location
 - A location exposed to smoke and steam, such as near a cookery or humidifier
 - A location exposed to rain or snow
 - A location near a water faucet or water
 - A location exposed to direct sunlight
 - A location subject to high temperatures
 - A location near open flames
 - When installing the printer, gently lower the printer to the installation site so as not to catch your hands between the printer and the floor or between the printer and other equipment, as this may result in personal injury.
 - When connecting the interface cable, connect it properly by following the instructions in the e-Manual. If not connected properly, this may result in malfunction or electrical shock.
 - When moving the printer, follow the instructions in the e-Manual to hold it correctly. Failure to do so may cause you to drop the printer, resulting in personal injury.

Symbols

- WARNING** Indicates a warning concerning operations that may lead to death or injury to persons if not performed correctly. To use the machine safely, always pay attention to these warnings.
- CAUTION** Indicates a caution concerning operations that may lead to injury to persons if not performed correctly. To use the machine safely, always pay attention to these cautions.

Power Supply

- WARNING**
- Do not damage or modify the power cord. Also, do not place heavy objects on the power cord or pull on or excessively bend it, as this can cause electrical damage, resulting in fire or electrical shock.
 - Keep the power cord away from all heat sources. Failure to do so can cause the power cord insulation to melt, resulting in a fire or electrical shock.
 - The power cord should not be taut, as this may lead to a loose connection and cause overheating, which could result in a fire.
 - The power cord may become damaged if it is stepped on, fixed with staples, or if heavy objects are placed on it. Continued use of a damaged power cord can lead to an accident, such as a fire or electrical shock.
 - Do not plug or unplug the power plug with wet hands, as this can result in electrical shock.
 - Do not plug the power cord into a multi-plug power strip, as this can result in a fire or electrical shock.
 - Do not bundle up or tie up the power cord in a knot, as this can result in a fire or electrical shock.
 - Insert the power plug completely into the AC power outlet. Failure to do so can result in a fire or electrical shock.
 - If excessive stress is applied to the connection part of the power cord, it may damage the power cord or the wires inside the machine may disconnect. This could result in a fire. Avoid the following situations:
 - Connecting and disconnecting the power cord frequently.
 - Tripping over the power cord.
 - The power cord is bent near the connection part, and continuous stress is being applied to the power outlet or the connection part.
 - Applying a shock to the power connector.
 - Do not use power cords other than the one provided, as this can result in a fire or electrical shock.
 - As a general rule, do not use extension cords. Using an extension cord may result in a fire or electrical shock.
- CAUTION**
- Do not use a power supply voltage other than that listed herein, as this may result in a fire or electrical shock.
 - Always grasp the power plug when unplugging the power plug. Do not pull on the power cord, as this may expose the core wire of the power cord or damage the cord insulation, causing electricity to leak, resulting in a fire or electrical shock.
 - Leave sufficient space around the power plug so that it can be unplugged easily. If objects are placed around the power plug, you may be unable to unplug it in an emergency.

1 Confirm the supplied accessories.

SPA Verifique los accesorios suministrados.
KOR 부속된 액세서리를 확인해 주십시오.



Remove all the tape.

SPA Retire la totalidad de la cinta.
KOR 모든 테이프를 제거합니다.



Remove all the orange tape attached to the printer when performing the following procedure.


The packing materials may be changed in form or placement, or may be added or removed without notice.

SPA Retire la totalidad de la cinta naranja acoplada a la impresora cuando lleve a cabo el siguiente procedimiento. Los materiales de embalaje pueden diferir en su forma o posición y pueden añadirse o eliminarse sin previo aviso.

KOR 다음 절차를 실행할 때에는 프린터에 부착된 모든 오렌지색 테이프를 제거해 주십시오. 포장재는 형태가 변경되거나 교체되거나, 또는 사전 공지없이 추가 또는 제거될 수 있습니다.

2 Remove the packing materials.

SPA Retire los materiales de embalaje. **KOR** 포장재를 제거해 주십시오.

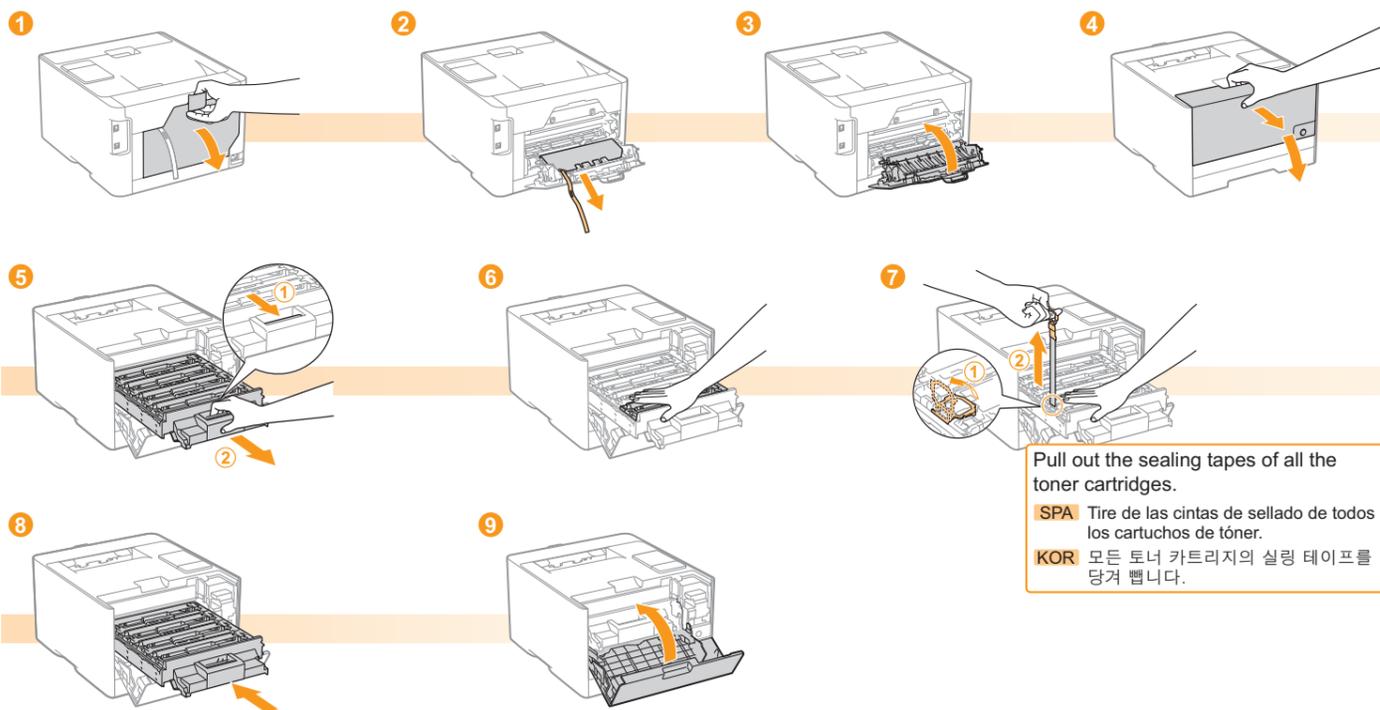

Pull out the sealing tapes of all the toner cartridges.

SPA Tire de las cintas de sellado de todos los cartuchos de tóner.
KOR 모든 토너 카트리지의 실링 테이프를 당겨 뽑니다.


Check!

Did you remove all the packing materials?

SPA ¿Ha retirado todos los materiales de embalaje?
KOR 모든 포장재를 제거했습니까?

Make sure that all the orange tape is completely removed.

SPA Asegúrese de retirar completamente la totalidad de la cinta naranja.
KOR 모든 오렌지색 테이프는 반드시 완전히 제거해 주십시오.

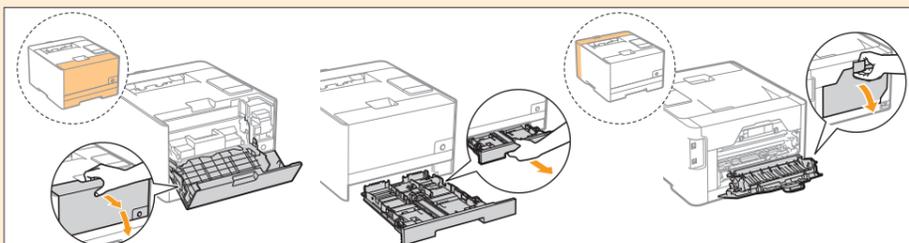


Close the covers and insert the paper drawer after you finish checking.

SPA Cierre las tapas e inserte la bandeja de papel una vez finalizada la comprobación.
KOR 확인이 끝나면 커버를 닫고 용지함을 넣습니다.


3 Connect the power cord.

SPA Conecte el cable de alimentación.
KOR 전원 코드를 연결합니다.

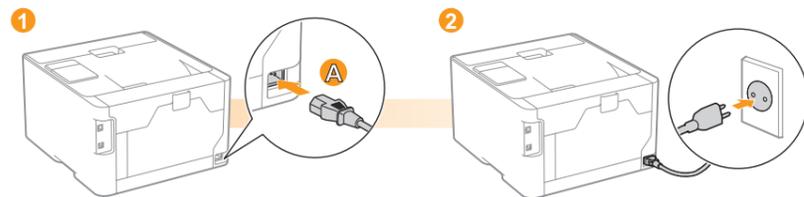


4 Load paper.

SPA Cargue papel. **KOR** 용지를 넣습니다.

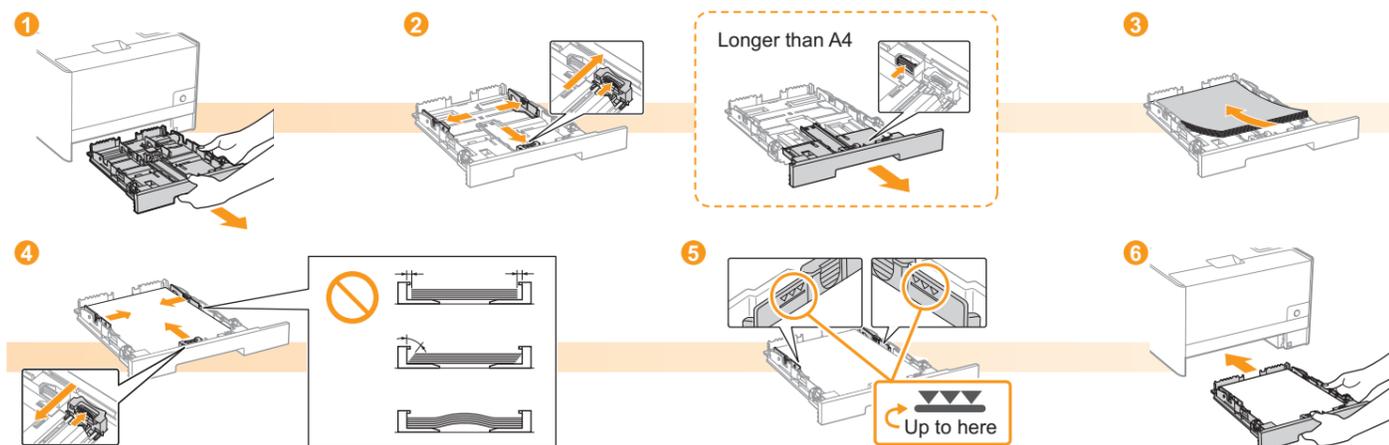

5 Specify the connection settings and install the driver.

SPA Especifique la configuración de la conexión e instale el controlador. **KOR** 연결 설정을 지정하고 드라이버를 설치합니다.

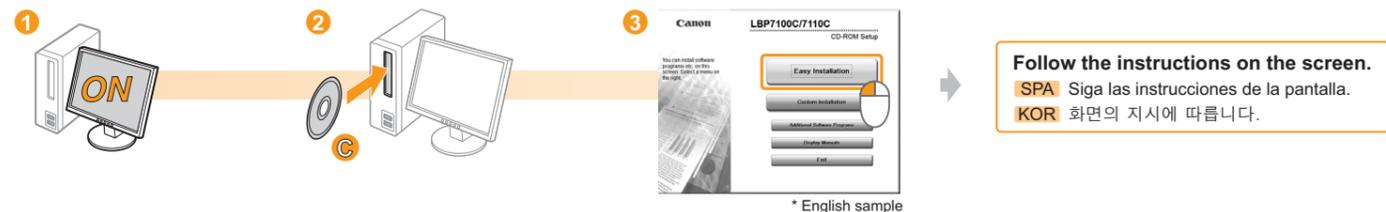


Follow the instructions on the screen.

SPA Siga las instrucciones de la pantalla.
KOR 화면의 지시에 따릅니다.

If you have a problem during the connection settings, see the Useful Tips.

SPA Si tiene un problema durante la configuración de la conexión, consulte los Consejos útiles.
KOR 연결 설정 중 문제가 있을 경우, 유용한 팁을 참조하십시오.

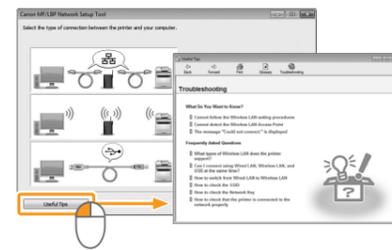


Restart your computer.

SPA Reinicie el ordenador. **KOR** 컴퓨터를 다시 시작합니다.



6 Specify the paper settings and check the operation.

SPA Especifique la configuración del papel y compruebe el funcionamiento. **KOR** 용지 설정을 지정하고 작동을 확인합니다.

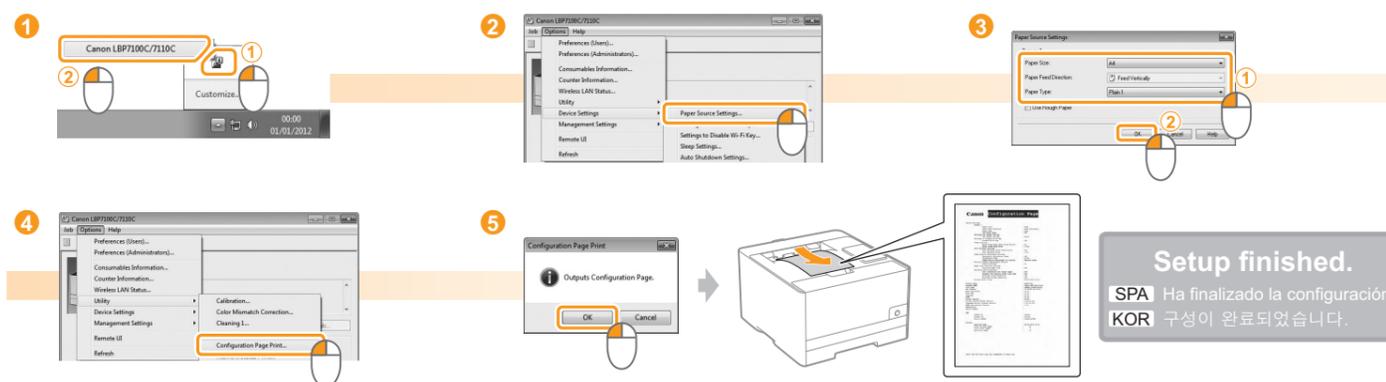


Setup finished.

SPA Ha finalizado la configuración.
KOR 구성이 완료되었습니다.

3 Connect the power cord.

SPA Conecte el cable de alimentación.
KOR 전원 코드를 연결합니다.

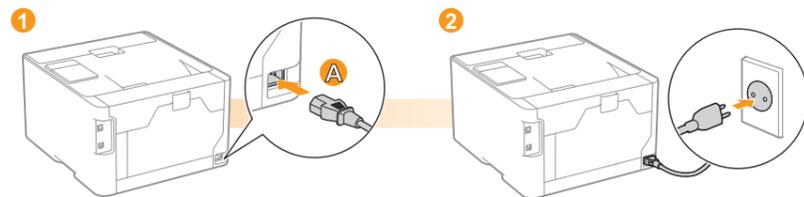

7 Next, see the e-Manual.

SPA A continuación, consulte el e-Manual.
KOR 그 다음, 전자설명서를 참조하십시오.

