



BUBBLE JET PRINTER

S330

User's Guide



Table of Contents



Introduction	5
How to Use This Manual	6
Safety Precautions	8
Printer Parts and Their Functions	14
Front View	15
Rear View	16
Inside the Printer	17
Operation Panel	18
Printer Driver Functions (Windows)	19
Opening the Printer Properties Dialog Box	20
Printer Properties Dialog Box Description	22
BJ Status Monitor Functions	37
Cancelling a Print Job	40
Uninstalling Printer Drivers	41
Printer Driver Functions (Macintosh)	42
Description of Print Settings	43
BJ Print Monitor	59
Cancelling a Print Job	61

Using the Printer with a Network	62
Uninstalling Printer Drivers	66
Routine Maintenance	67
When to Replace Ink Tank and Maintain Print Head	68
Replacing an Ink Tank	69
Resetting the Ink Counter	74
How Low Ink Warning Setting Works	77
Printing the Nozzle Check Pattern	82
Print Head Cleaning	86
Print Head Deep Cleaning	89
Transporting the Printer	91
Printing Media	95
Compatible Media Types	96
Envelopes	99
High Resolution Paper HR-101N	103
Glossy Photo Paper GP-301N/GP-301	105
High Gloss Photo Film HG-201	107
Glossy Photo Cards FM-101	109
Photo Paper Pro PR-101	111
Photo Paper Pro PC-101S	114
Photo Paper Plus Glossy PP-101	116
Matte Photo Paper MP-101	119
Transparencies CF-102	121
T-Shirt Transfers TR-201	123
Banner Paper	125

Troubleshooting	128
Cannot Install the Printer Driver	129
Print Quality is Poor or Contains Errors	131
Printer Does Not Start or Stops During Print Jobs	149
Paper Does Not Feed Properly or Paper Jams	155
The POWER Lamp Flashes Orange	159
An Error Message is Displayed on the Screen	162
Have you replaced an ink tank with a new one? is Displayed	171
Low Ink Warning Displays Ink Tank with '?'	172
Problems Unique to Windows	175
Problems Unique to the Macintosh	178
Specifications	181
Index	194

Introduction

Thank you for purchasing the Canon S330 Bubble Jet Printer. This User's Guide provides complete explanations of the features and functions of the printer.

This guide uses the following symbols to indicate important information. Always observe these instructions.

Warning ➤ Instructions that, if ignored, could result in death or serious personal injury caused by incorrect operation of the equipment.
Must be observed for safe operation.

Caution ➤ Instructions that, if ignored, could result in personal injury or material damage caused by incorrect operation of the equipment.
Must be observed for safe operation.

Important ➤ Prohibited actions that, inadvertently performed, could result in equipment damage, faults or impaired product quality.
Must be avoided for correct operation.

Windows

Information for Windows users only.

Macintosh

Information for Macintosh users only.

How to Use This Manual

To view this User's Guide, we recommend that you use Acrobat Reader 4.0 or Acrobat Reader 3.0. Please note that screens displayed by Acrobat Reader 3.0 are slightly different.




Use this button to enlarge the viewing screen. Select this button in the tool bar and click within the screen.



Displays the previous page.




Displays the next page.

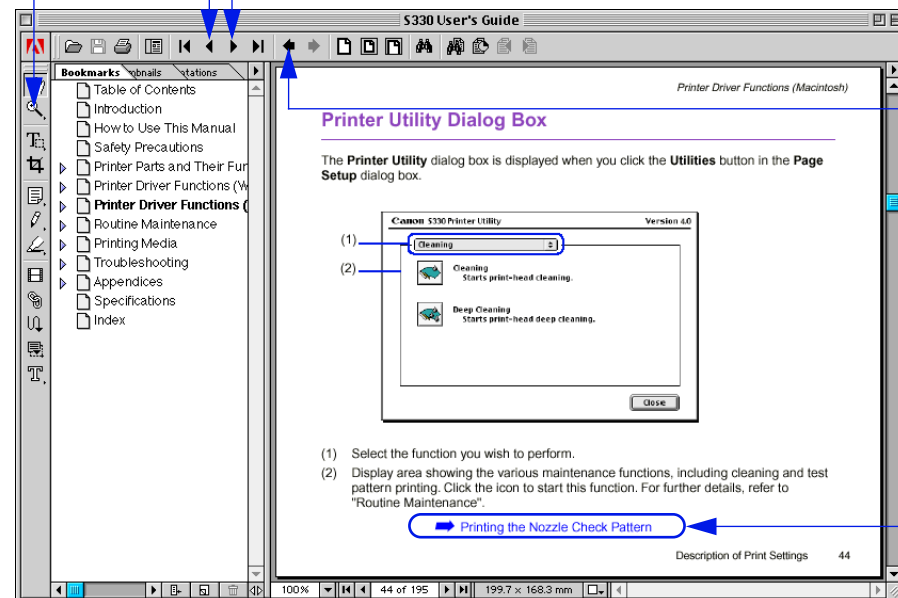

Returns to the page you were previously viewing.

Click to jump straight to this page.

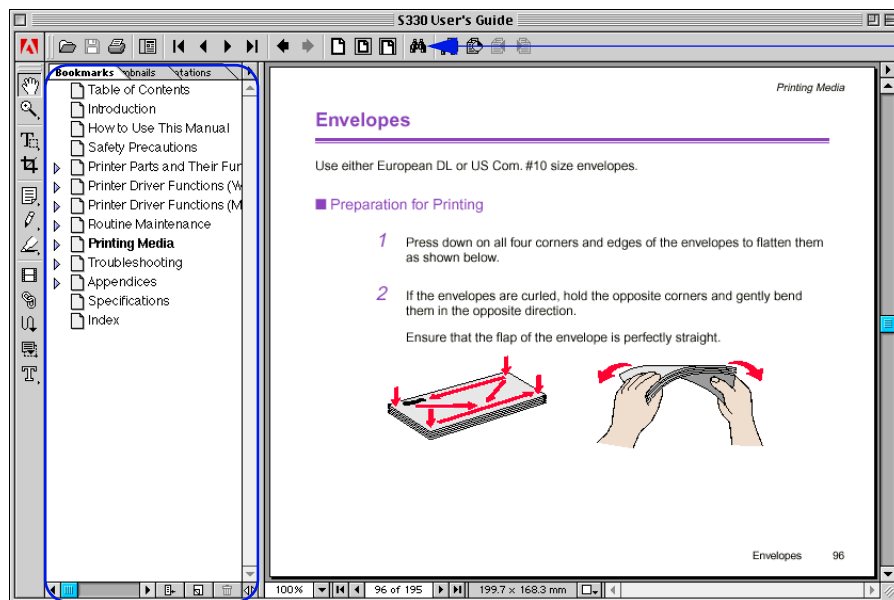

Use this button to search for a word.

Displays the table of contents.
Click the heading to jump to the topic.
Click the "+" symbol to see the headings for each chapter.
Click the "-" symbol to close the headings.

Safety Precautions

Please read the safety warnings and cautions provided in this manual to ensure that you use the printer safely. Do not attempt to use the printer in any way not described in this manual.

Warning ➤ You may cause an electric shock/fire or damage the printer if you ignore any of these safety precautions.

■ Choosing a location


Do not place the printer close to flammable solvents such as alcohol or thinners.

■ Power supply


Never attempt to plug in or unplug the printer from the power supply when your hands are wet.

Always push the plug all the way into the power outlet.

Never damage, modify, stretch or excessively bend or twist the power cord. Do not place heavy objects on the power cord.

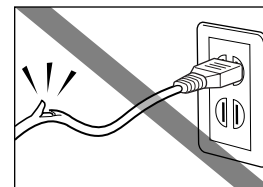


Never plug the printer into a power socket that is shared with other equipment (extension lead, double adapter, etc.).

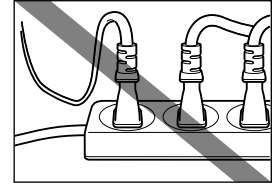

Never use the printer if the power cord is bundled or knotted.

If you detect smoke, unusual smells or strange noises around the printer, immediately unplug the printer at the power supply and call for service.


Periodically, unplug the printer and use a dry cloth to wipe off any dust or dirt collects on the plug and the power outlet. If the printer is placed at a location exposed to a lot of dust, smoke, or high humidity, the dust that collects on the plug absorbs moisture and may cause insulation failure and fire.

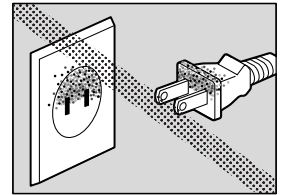

■ Cleaning the printer

Use a damp cloth to clean the printer. Never use flammable solvents such as alcohol, benzene or thinners.

If flammable solvents come in contact with electrical components inside the printer, it could cause a fire or electric shock.

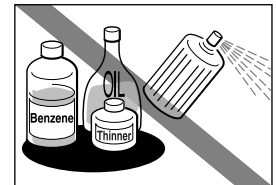

Always unplug the printer from the power outlet before cleaning the printer.

If you accidentally switch the printer on while cleaning it, you could injure yourself or damage the printer.

■ Maintaining the printer

Do not attempt to disassemble or modify the printer. There are no user serviceable parts inside the printer.

The printer contains high-voltage components. Never attempt any maintenance procedure not described in this guide.

■ Working around the printer

Do not use inflammable sprays near the printer.

This could cause a fire or electric shock if the spray comes into contact with electrical components inside the printer.

Caution ➤ You may cause injury or damage the printer if you ignore any of these safety precautions.

■ Choosing a location


Do not install the printer in a location that is unstable or subject to excessive vibration.

Do not install the printer in locations that are very humid or dusty, in direct sunlight, outdoors, or close to a heating source.

To avoid the risk of fire or electric shocks, install the printer in a location with an ambient temperature range of 5°C to 35°C (41°F to 95°F) and humidity of 10% to 90% (condensation free).

Do not place the printer on a thick rug or carpet.


Ensure that the area around the power outlet is kept clear at all times so you can easily unplug the power cord if necessary.

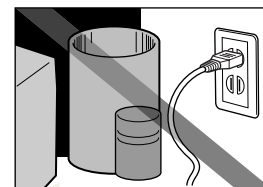


When moving the printer, carry the printer at both ends.

■ Power supply

Never remove the plug by pulling on the cord.

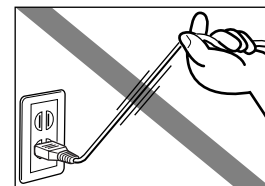

Do not use an extension lead.

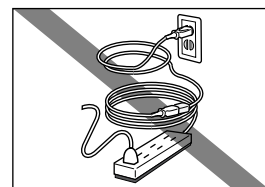

If you do not intend to use the printer for a long period of time, unplug the printer after turning it off.

Never use a power supply voltage other than that supplied in the country of purchase.

The correct power supply voltage and frequency is as follows:

Europe: AC 230V $\pm$ 10%, 50Hz

USA/Canada: AC 120V, 60Hz

Australia: AC 240V, 50Hz

■ Working around the printer

Never put your hands or fingers in the printer while it is printing.

Do not place metal objects (paper clips, staples, etc.) or containers of flammable solvents (alcohol, thinners, etc.) on top of the printer.

If any foreign object (metal or liquid) falls into the printer, unplug the power cord and call for service.

■ Print heads and ink tanks

For safety reasons store print heads and ink tanks out of the reach of small children.


If a child ingests any ink, consult a doctor immediately.

Do not shake print heads or ink tanks.


Ink may leak out and stain clothing or the surrounding area.

Never touch the electrical contacts on a print head after printing.

The metal parts may be very hot and could cause burns.

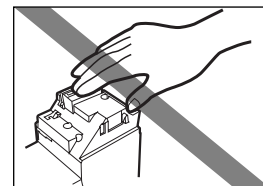

Printer Parts and Their Functions

 

- Front View
- Rear View
- Inside the Printer
- Operation Panel

Front View

Operation Panel
For details, refer to
"Operation Panel."

Paper Guide

When loading paper, ensure
the left edge just touches
this guide.

To move the paper guide,
pinch the knob and slide in
the appropriate direction.

Paper Rest


Sheet Feeder

Load paper here.
Paper feeds
automatically, one sheet
at a time.

Paper Output Tray

Front Cover


Open to replace the
ink tanks or remove
jammed paper.

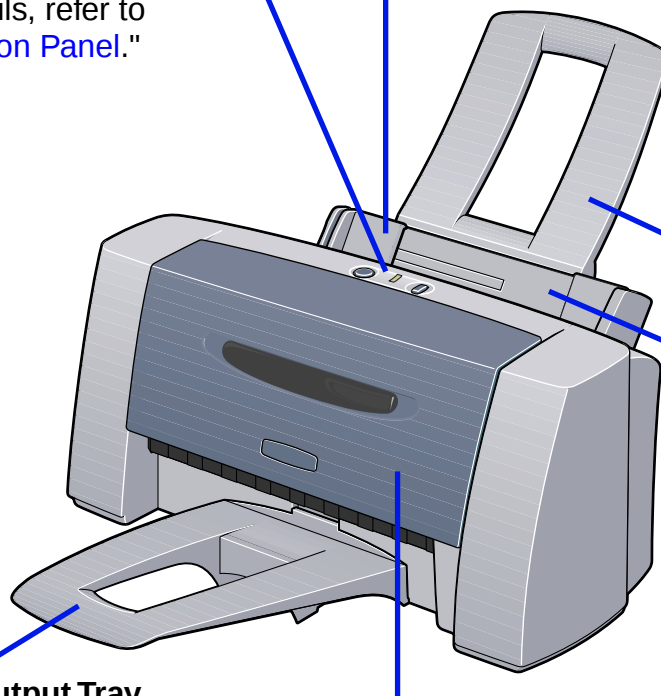

Rear View

USB Port


Connects the printer to a computer through a USB interface.

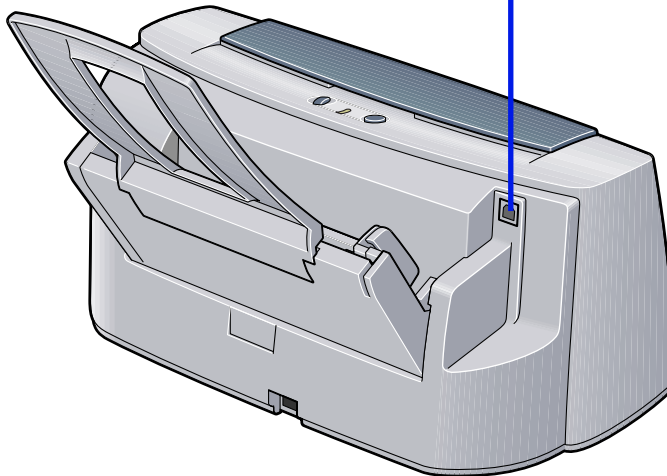

Inside the Printer

Paper Thickness Lever

Adjusts the gap between the print head and the surface of the printing paper.

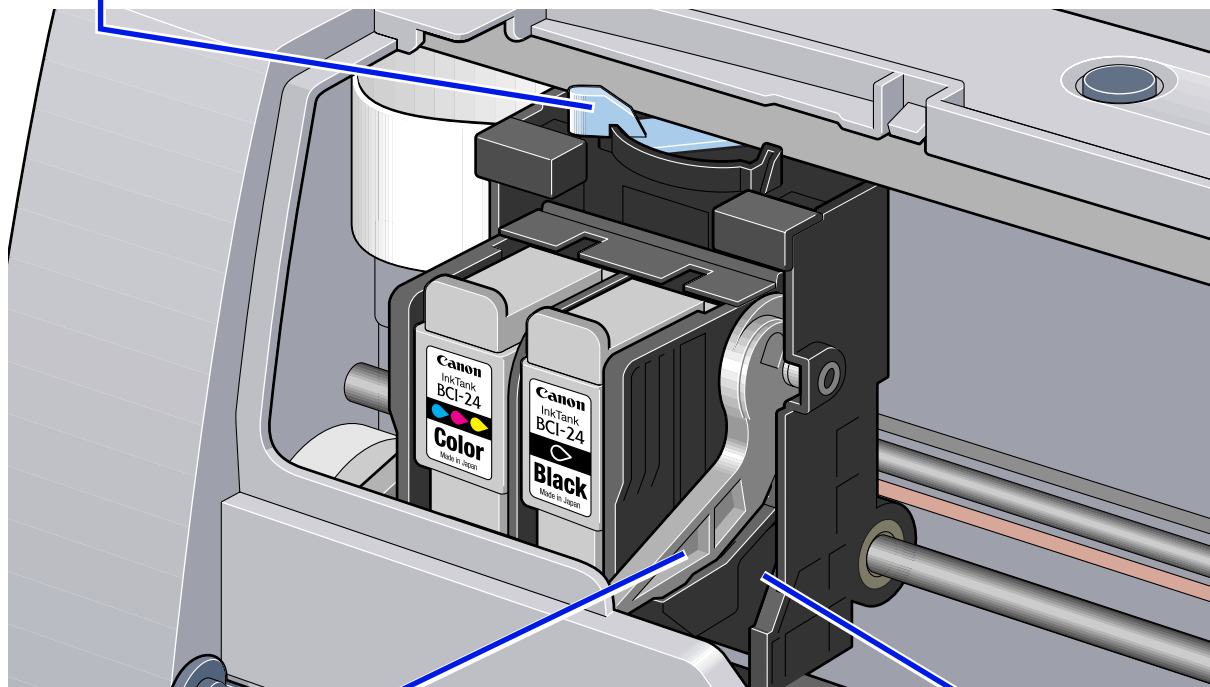

Print Head Lock Lever

Locks the print head into the holder.
Once the print head is installed, do not touch this lever.

Print Head Holder

Install the print head here.


Operation Panel

POWER Button

Press to turn the printer on or off.

RESUME/CANCEL Button

Press to resume printing once an error has been resolved. The printer will then initialise ready for printing. Also, to cancel printing in progress, press this button.

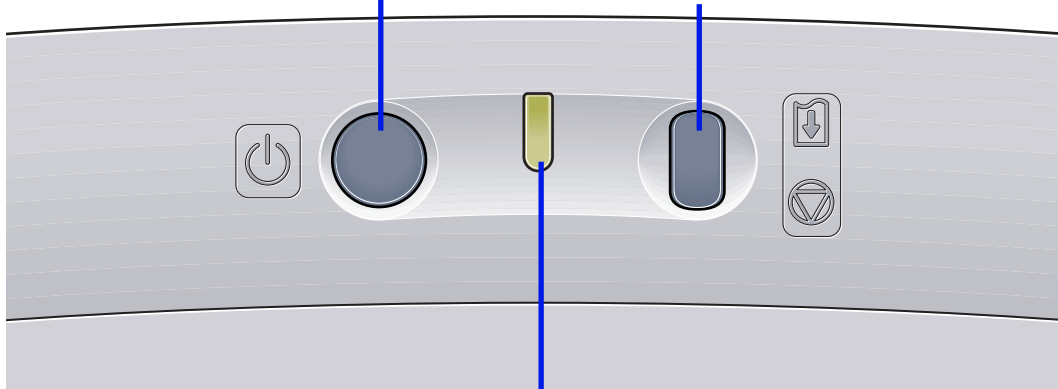

POWER Lamp

Off: the printer is turned off.

 
Green: the printer is ready to print.

Flashing green: the printer is preparing to print, or is currently printing.

Flashing orange: an error has occurred and the printer is not ready to print.

Flashing orange and green alternately: an error has occurred that may require a service call.

Printer Driver Functions (Windows)



- Opening the Printer Properties Dialog Box
- Printer Properties Dialog Box Description
- BJ Status Monitor Functions
- Cancelling a Print Job
- Uninstalling Printer Drivers

Opening the Printer Properties Dialog Box

The Printer Properties dialog box can be opened from either within an application, or directly from the Windows **Start** menu.

■ Opening the Printer Properties dialog box from your application program

This method is generally used to specify printer settings just before printing. The operations may vary slightly depending on your application program. This section describes only the general procedure for opening the Printer Properties dialog box.

- 1 In your application, select the command to print a document.

The **Print** dialog box can usually be opened by selecting **Print** from the **File** menu.

- 2 Ensure that **Canon S330** is selected in the **Name** field. Then click the **Properties** button.

The Printer Properties dialog box opens.

Note ➤ Depending on your application program, the command and menu names may differ, and there may be more steps involved in opening the Printer Properties dialog box. For further details, see the user's manual for your application.

■ Opening the Printer Properties dialog box directly from the **Start** menu

This method is used for maintenance operations such as print head cleaning, or to specify printer settings common to all application programs.

When the Printer Properties dialog box is opened from the **Start** menu, additional tabs appear, including the **Details** tab. These do not appear when the Printer Properties dialog box is opened from within an application.

For further information about these additional tabs, refer to your Windows documentation.

- 1 Click the **Start** button, then select **Settings, Printers**.


For Windows XP, click **Start** and select **Control Panel, Printers and Other Hardware**, and then **Printers and Faxes**.

- 2 Select the **Canon S330** icon.

- 3 Open the **File** menu and select:
 - Windows 98/Windows Me → **Properties**
 - Windows 2000/Windows XP → **Printing Preferences...**


The Printer Properties dialog box opens.

Printer Properties Dialog Box Description

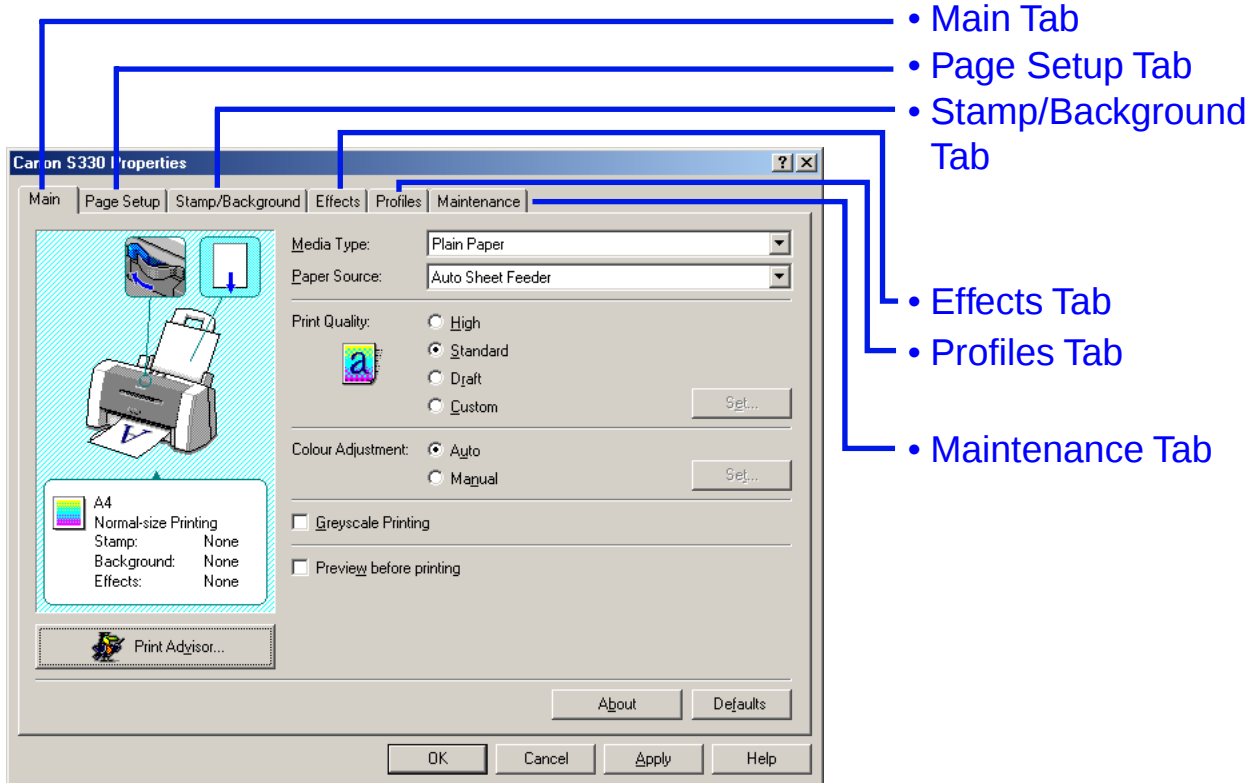

Note ➤ The screens in this section refer to Windows 98/Windows Me operation. The equivalent screens for Windows 2000 and Windows XP may look slightly different.

Main Tab

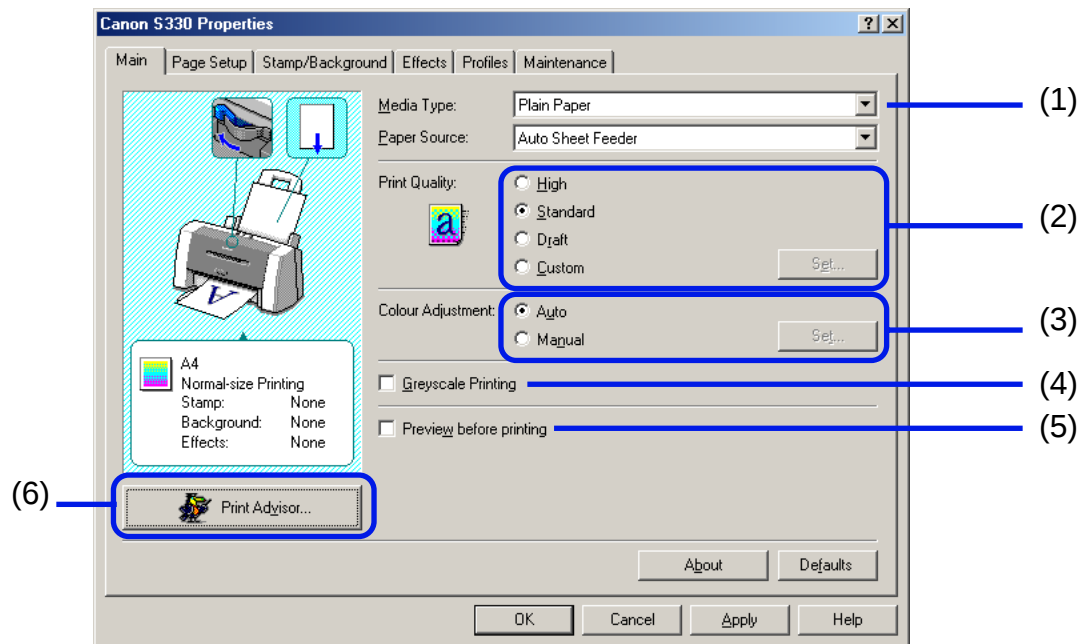

- (1) **Media Type**
Ensure this setting matches the type of media loaded in the printer.
- (2) **Print Quality**
Select the print quality you require from among the different options. To select custom Print quality, select **Custom** and click the **Set...** button.

(3) **Colour Adjustment/Color Adjustment**

Select the method of colour adjustment. To make detailed colour adjustments, select **Manual**, then click the **Set...** button.

(4) **Greyscale Printing/Grayscale Printing**

Select to print a greyscale version of a colour document.

(5) **Preview before printing**

Select to check the layout before printing.


(6) **Print Advisor...**

Click to start the Print Advisor.

The Print Advisor simplifies configuration of the printer driver. By having the user answer a series of questions, the Printer Advisor automatically configures the printer driver settings.

Note ► To see a description of any item in the Printer Properties dialog box, click the **?** mark then click the desired item. To see a description of operating procedures, click the **Help** button. If the button does not appear when using Windows 2000 or Windows XP, click the **Start** button then select **Programs** (or **All Programs**) - **Canon S330 - Guide**.

Page Setup Tab

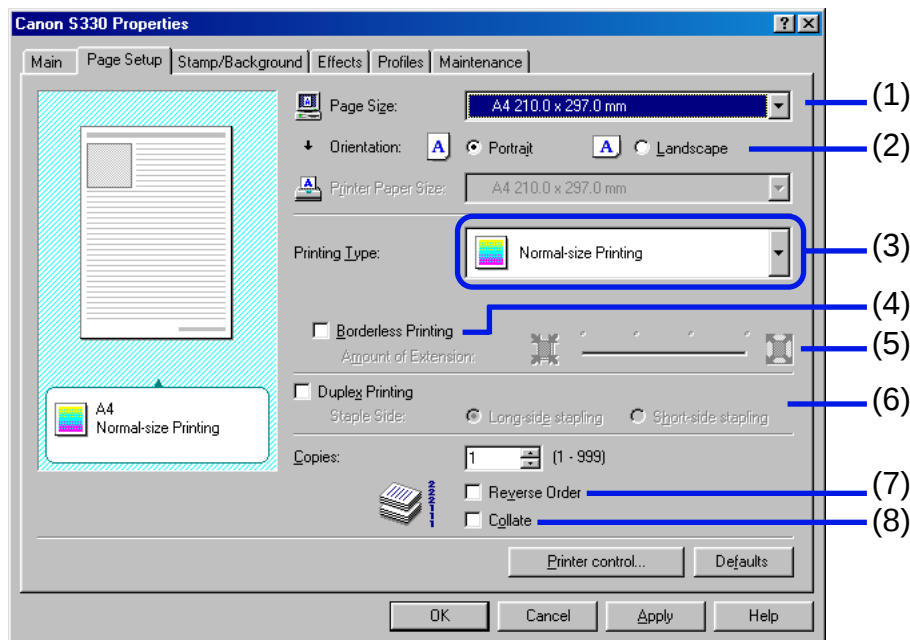

- (1) **Page Size**
Ensure the correct paper size is selected.

(2) Orientation

Select landscape or portrait printing and ensure it is the same orientation used in the application.

(3) Printing Type

Select the printing method from among the following.

Normal-size Printing The document is printed according to the original dimensions. This setting is usually selected by default.

Fit to Page Printing The document is automatically resized and printed to fit into a specified page size.

Scaled Printing The document is resized when printed. When this is selected, you can specify the **Printer Paper Size** and **Scaling**.

Page Layout Printing Pages are reduced and printed so that multiple document pages fit on each printed page.

Booklet Printing The multiple-page document is printed so that two pages of the document fit on each printed page. The print order is set automatically. After the document is printed, you can create a booklet by folding and saddle-stitching the document.

Poster Printing This enlarges and splits the print image across several sheets of paper. The printed sheets can then be assembled to make a large poster.

Banner Printing Select this when printing on banner paper.

(4) Borderless Printing

The image is printed on the entire paper surface, so that no margins are left on the four sides of the paper. The media types available for Borderless Printing are PR-101, GP-301/GP-301N, PP-101 and MP-101. For all other media types, the print quality may decrease.

(5) **Amount of Extension**

When you select Borderless Printing, the sections that extend beyond the paper are not printed because the image is enlarged to a size slightly larger than the paper size. You can use the slide bar to adjust how much the image extends beyond the paper. It is recommended that you normally set the slide bar to the right end. If you move the slide bar to the left to reduce the extension amount, a border may appear.

(6) **Duplex Printing**

The document is printed on both sides of the paper. After printing one side, turn the ejected page over, and print on the other side.


(7) **Reverse order**

Prints the document start with the last page.

(8) **Collate**

Select to print multiple copies of the document one copy at a time.

Stamp/Background Tab

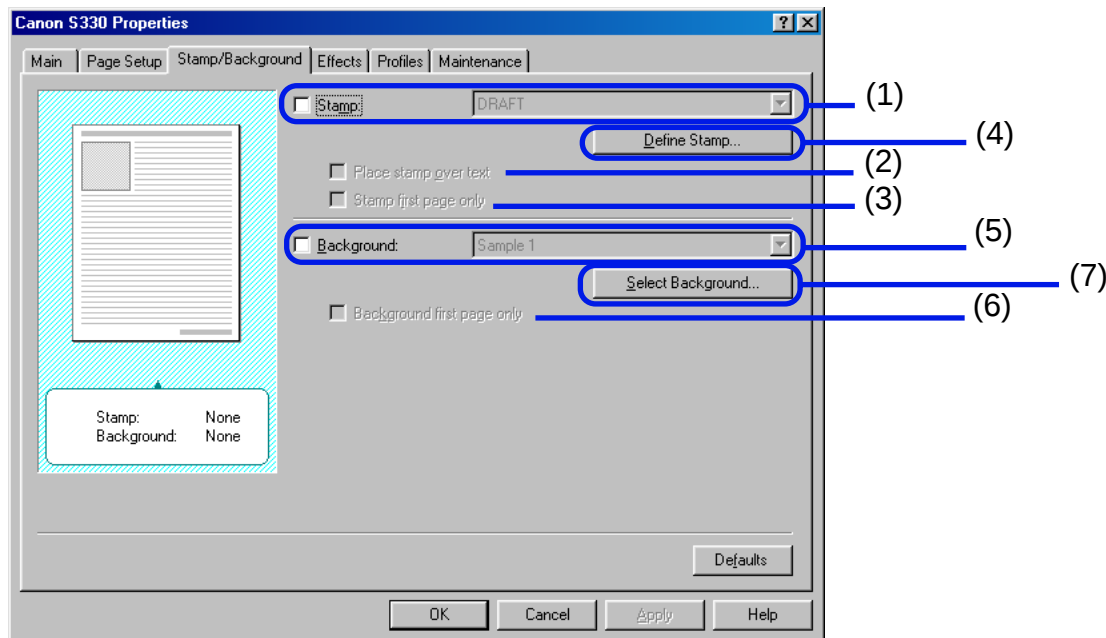

- (1) **Stamp**
Select the check box and choose the stamp.
- (2) **Place stamp over text**
When **Stamp** is selected, you can select this check box. When selected, the stamp is printed over the print data.

(3) **Stamp first page only**

When **Stamp** is selected, you can select this check box. When selected, the stamp is printed only on the first page.

(4) **Define Stamp...**

This allows you to create new stamps, or modify details of a selected stamp.

(5) **Background**

Select the check box and choose the background image you wish to use.


(6) **Background first page only**

When **Background** is selected, you can select this check box. When selected, the background image is printed only on the first page.

(7) **Select Background...**

This allows you to register a new background, or to display details of the background you have selected.

Effects Tab

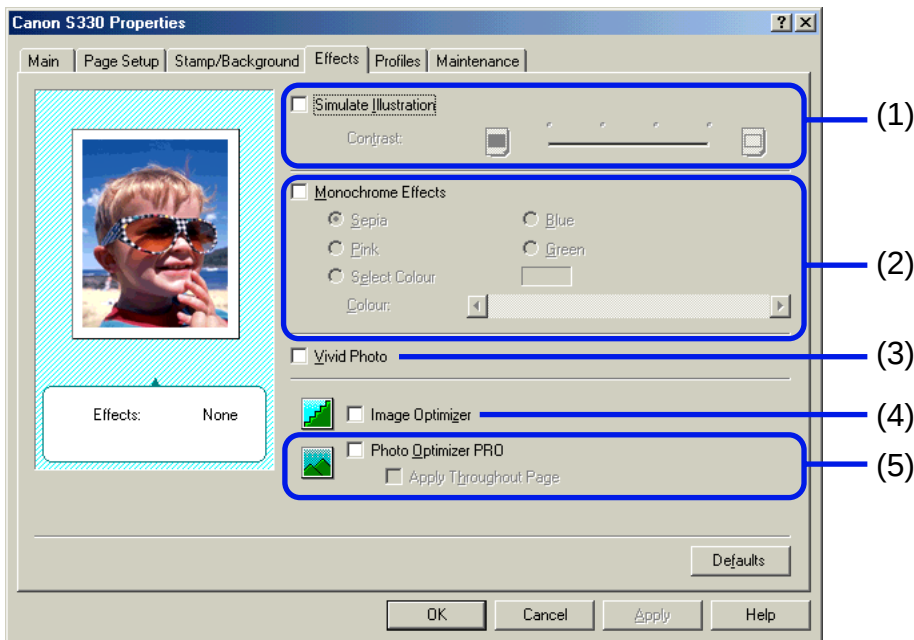

(1) Simulate Illustration

This function manipulates colour image data with certain effects. Select the check box and adjust the brightness of the image with the **Contrast** slide bar.

(2) **Monochrome Effects**

Prints a colour image in a single colour. Select the check box and choose a colour or use a custom colour using **Select Colour/Select Color**.

(3) **Vivid Photo**

By using this function, you can reproduce breathtaking sceneries in which colours, especially blues and greens, appear even more vibrant. A major feature of this function is its ability to create vivid backgrounds of fields, trees, oceans, and sky, while maintaining the natural skin tones of people that appear in the images.


(4) **Image Optimizer**

Improves the contours and smoothes jaggedness that occur when photographic or graphic image data is enlarged within an application.

(5) **Photo Optimizer PRO**

Optimises the colour of images taken from a digital camera or scanner. It is especially effective for images affected by colour imbalance and over- or under exposure. When printing several images on one page, optimisation is usually applied to each image according to its requirements. However, if the image data has been manipulated using cut and paste, rotation or other such operations, group optimisation of all images on the one page is recommended. In such cases, select the **Apply Throughout Page** check box.

Profiles Tab

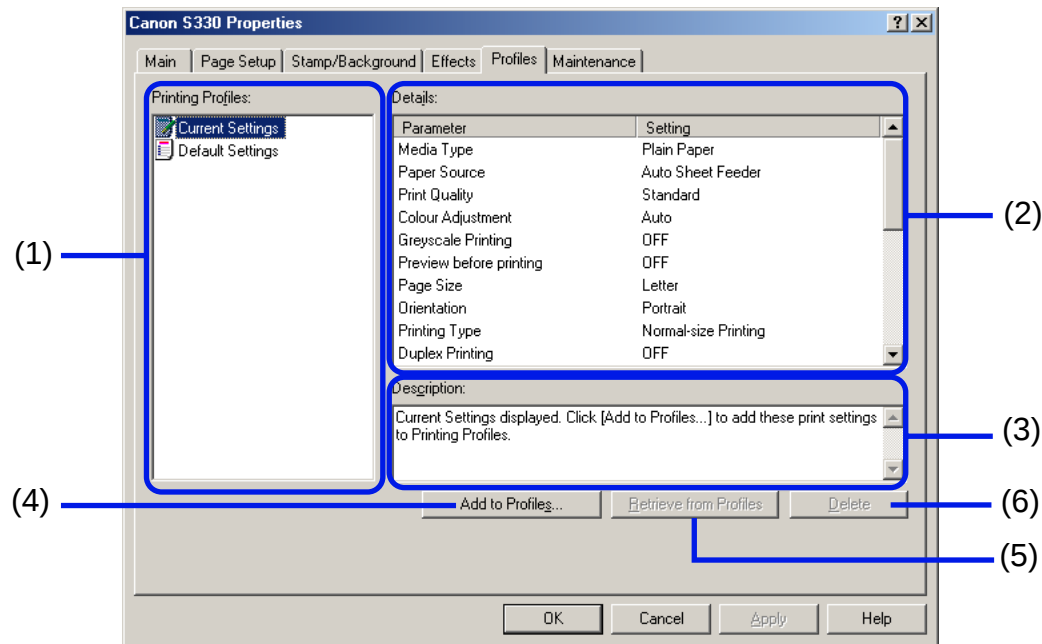


(1) Printing Profiles

This list displays the printing settings currently registered in the Profiles tab. The **Current Settings** profile contains the settings currently specified in the **Main**, **Page Setup**, **Stamp/Background** and **Effects** tabs. The **Default Settings** profile contains the factory default settings.

- (2) **Details**
Displays all the printer settings selected in **Printing Profiles**.
- (3) **Description**
Displays a description of the printer settings selected in **Printing Profiles**. You can enter the description when saving the printer settings.
- (4) **Add to Profiles...**
Click to save the settings currently specified in the **Main, Page Setup, Stamp/Background** and **Effects** tabs. Select **Current Settings** in the **Printing Profiles** list then click this button. The **Add to Profiles...** dialog box appears.
- (5) **Retrieve from Profiles**
Click to activate registered printer settings. The contents of the **Main, Page Setup, Stamp/Background** and **Effects** tabs are changed by selecting the printer settings in **Printing Profiles** and then clicking this button.
This button is disabled when **Current Settings** is selected.
- (6) **Delete**
Click to delete unwanted printer settings. Select the unwanted item in the **Printing Profiles** list and click the **Delete** button.
Current Settings and **Default Settings** cannot be deleted.

Maintenance Tab

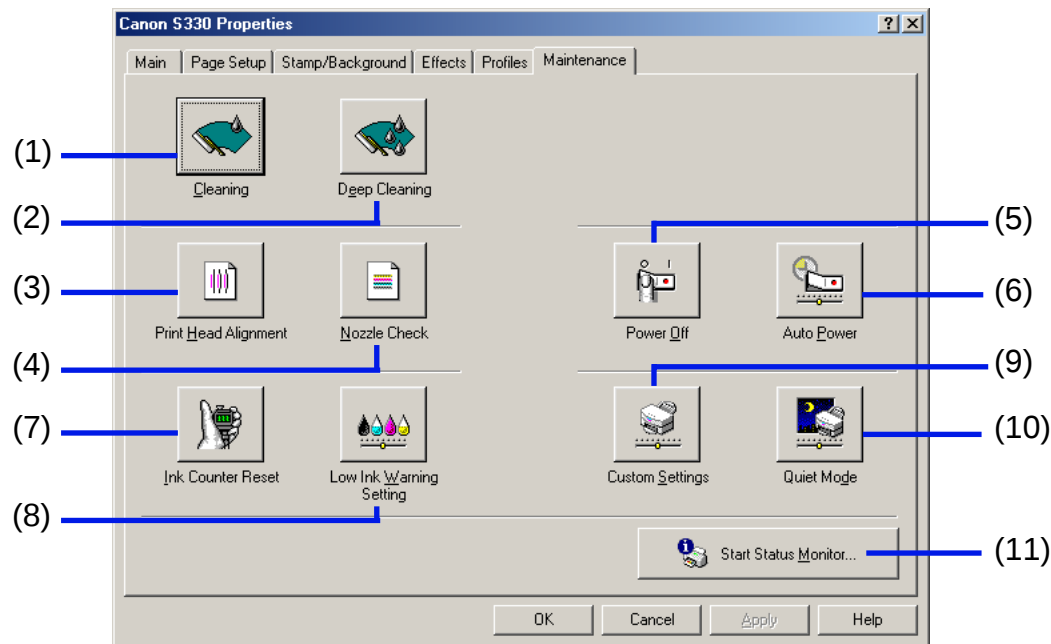

(1) **Cleaning**

Click to start print head cleaning.

(2) **Deep Cleaning**

Click to start print head deep cleaning.

Use this function only if **Cleaning** has not improved the print quality.

(3) **Print Head Alignment**

Aligns the print head. For details on print head alignment, refer to *Quick Start Guide*.

(4) **Nozzle Check**

Prints the nozzle check pattern to ensure the print head nozzles are outputting ink normally. For details, refer to "[Examining the Nozzle Check Pattern](#)".

(5) **Power Off**

Click to turn the printer off.

(6) **Auto Power**

This allows you to turn the printer off when no data is sent to the printer for a certain period of time, or turn the printer back on again when data is sent to the printer.

(7) **Ink Counter Reset**

Resets ink counter to an initial value. Click this if you did not select **Yes** when a confirmation message of ink tank replacement appeared after installing a new ink tank.

(8) **Low Ink Warning Setting**

Click to set whether to display alerts, such as **Low ink warning**, or **Ink tank replacement**.

(9) **Custom Settings...**

Click to modify the printer mode. Change the settings in the **Custom Setting** dialog box and click **Send** to change printer mode.

(10) **Quiet Mode**

Reduces the printing noise. You can also set the times during which the silent function is to be used.

However, the effect may be small, depending on the print quality setting. If you use Quiet Mode, the print speed may become slower than normal.

(11) **Start Status Monitor**

Click to start the BJ Status Monitor, to check the printer status and the progress of printing jobs.

BJ Status Monitor Functions

The BJ Status Monitor allows you to check the status of the printer. If an error occurs, the status monitor indicates the nature of the error and suggests an appropriate solution. When the low ink warning is set to be enabled, the status monitor also checks the ink tanks and displays a warning message when the ink is low.


■ Launching the BJ Status Monitor

The BJ Status Monitor launches automatically when data is sent to the printer. When launched, the BJ Status Monitor appears as an icon on the Task Bar.

- 1 Click the **Canon BJ Status Monitor** icon on the Task Bar.



The BJ Status Monitor appears.

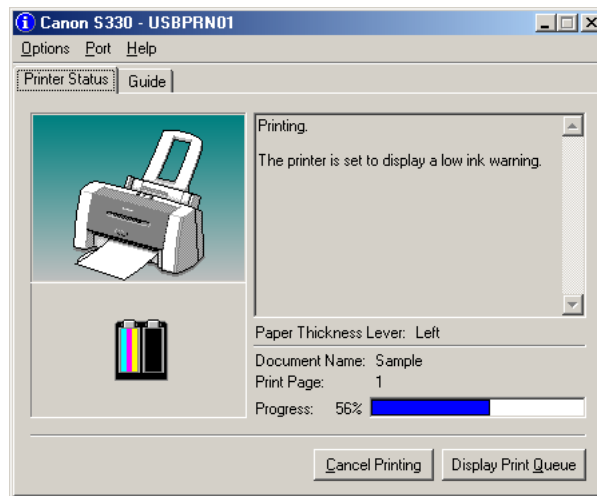

Note ➤ To open the BJ Status Monitor when the printer is not printing, click the **Maintenance** tab in the Printer Properties dialog box and click the **Start Status Monitor** button.


■ When errors occur

The BJ Status Monitor is automatically displayed when an error occurs, e.g. if the printer runs out of paper or paper jams.

In such cases, take the appropriate action as described in the **Printer Status** tab.

In Windows 98, Windows Me, click the **Guide** tab and follow the instructions on screen.

When paper has run out:

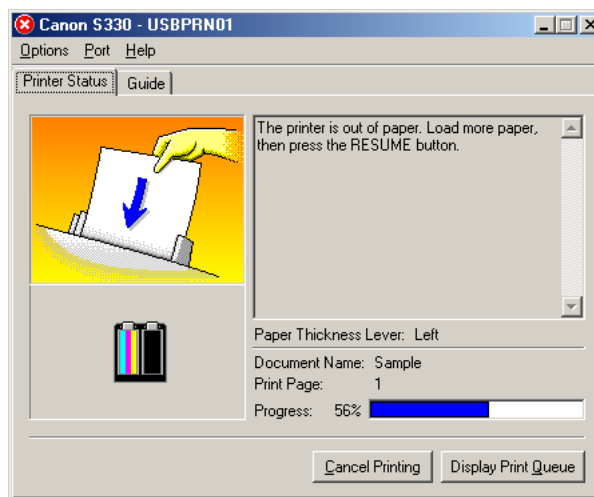

Note ➤ For details on the BJ Status Monitor, select the **Help** menu and click on the topic of interest.


Cancelling a Print Job

To cancel the current print job, first open the BJ Status Monitor.

- 1 Click the **Canon BJ Status Monitor** icon on the Task Bar.



- 2 Click **Cancel Printing**.

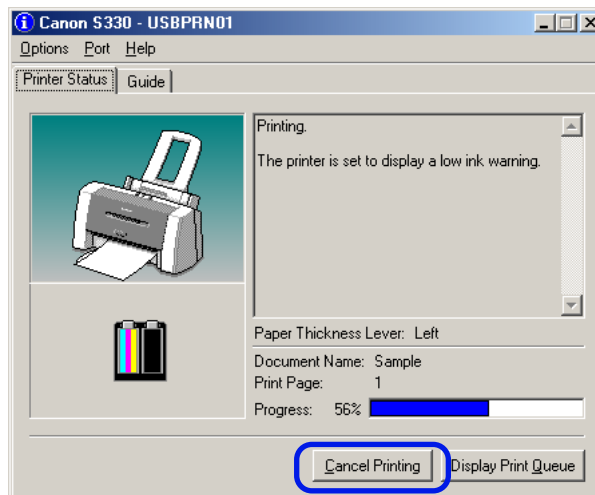

Note ➤ If **Cancel Printing** is greyed out, press the printer's RESUME/CANCEL button to terminate the print job.

Uninstalling Printer Drivers

 
Use the Uninstaller to delete any unwanted printer drivers. This allows you to delete all the files associated with the printer driver at the same time.

- 1 Click the **Start** button and select **Programs, Canon S330, Uninstall**.
For Windows XP, click the **Start** button and select **All Programs, Canon S330, Uninstall**.
- 2 Click **Yes** when the confirmation message appears.
- 3 When all the files have been deleted, click **OK**.
The deletion of the printer driver is complete.

If a message prompts you to restart your computer, click **OK** to restart your computer.

Note ➤ In Windows 98 or Windows Me, you can also start the Uninstaller by double-clicking on **Uninstall** in the **Canon S330** folder on the desktop.


Printer Driver Functions (Macintosh)



- Description of Print Settings
- BJ Print Monitor
- Cancelling a Print Job
- Using the Printer with a Network
- Uninstalling Printer Drivers


Description of Print Settings

• Page Setup Dialog Box

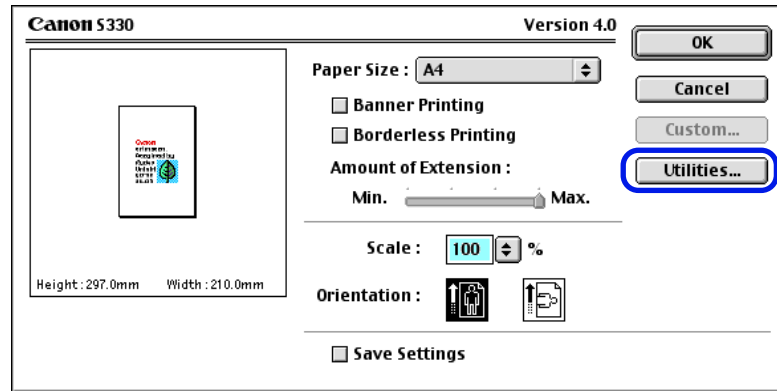

• Printer Utility Dialog Box

• Print Dialog Box

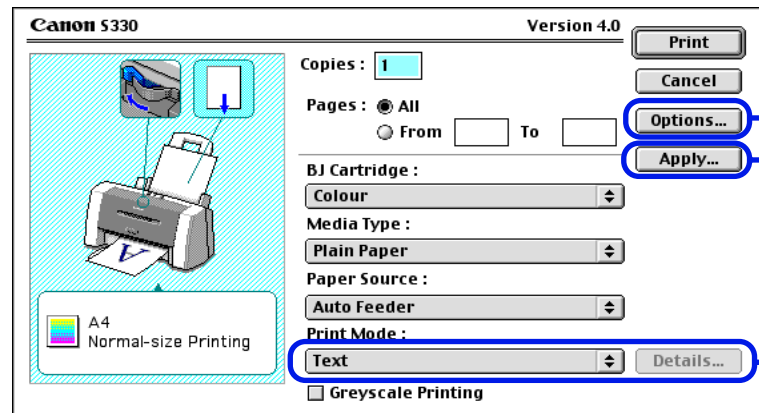


• Options Dialog Box

• Register Settings Dialog Box

• Detailed Setting Dialog Box

Page Setup Dialog Box

The Page Setup dialog box contains settings for the printed page, such as the size of the print media, and resizing the printed image. To open the Page Setup dialog box, select **Page Setup** from the **File** menu in your application program.

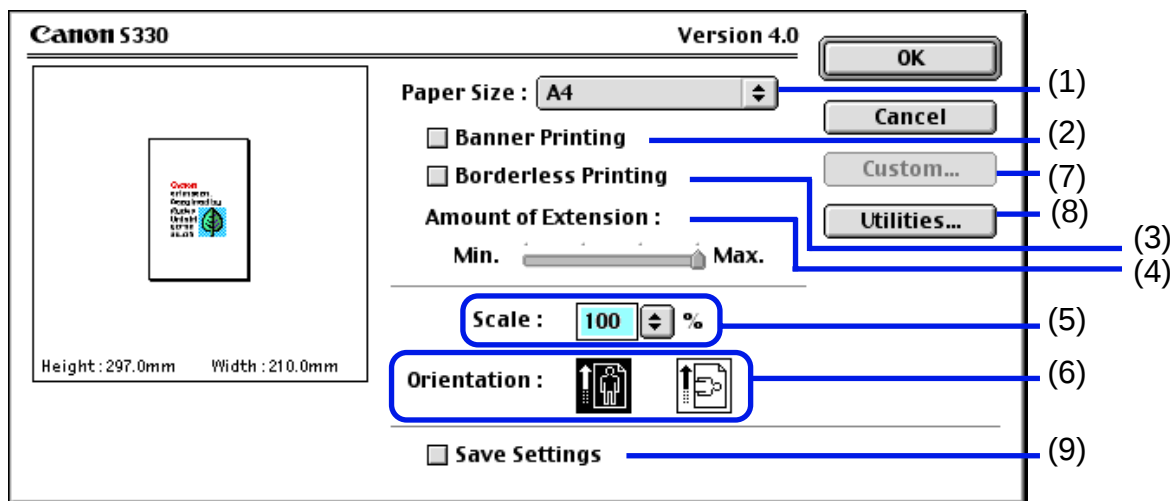

- (1) **Paper Size**
Select the size of the paper for the print job. To enter the size manually, select **Custom 1 - Custom 3** and click **Custom**.
- (2) **Banner Printing**
Select this check box when printing on banner paper.

(3) **Borderless Printing**

The image is printed on the entire paper surface, so that no margins are left on the four sides of the paper. The media types available for Borderless Printing are PR-101, GP-301/GP-301N, PP-101 and MP-101. For all other media types, the print quality may decrease.

(4) **Amount of Extension**

When you select Borderless Printing, the sections that extend beyond the paper are not printed because the image is enlarged to a size slightly larger than the paper size. You can use the slide bar to adjust how much the image extends beyond the paper. It is recommended that you normally set the slide bar to the right end. If you move the slide bar to the left to reduce the extension amount, a border may appear.

(5) **Scale**

Specify the scaling percentage to resize the document for printing.

(6) **Orientation**

Select landscape or portrait printing.

(7) **Custom**

To specify a custom paper size, click this button to open the **Custom** dialog box after selecting **Custom 1** to **Custom 3** in the **Paper Size** popup menu. The **Custom** Dialog Box allows you to specify the length and width of the paper.

(8) **Utilities**


Click to open the **Printer Utility** dialog box for maintenance operations such as print head cleaning and nozzle check pattern printing, as well as for changing the print mode.

(9) **Save Settings**

Saves the settings specified in the **Page Setup** dialog box.

Printer Utility Dialog Box

The **Printer Utility** dialog box is displayed when you click the **Utilities** button in the **Page Setup** dialog box.

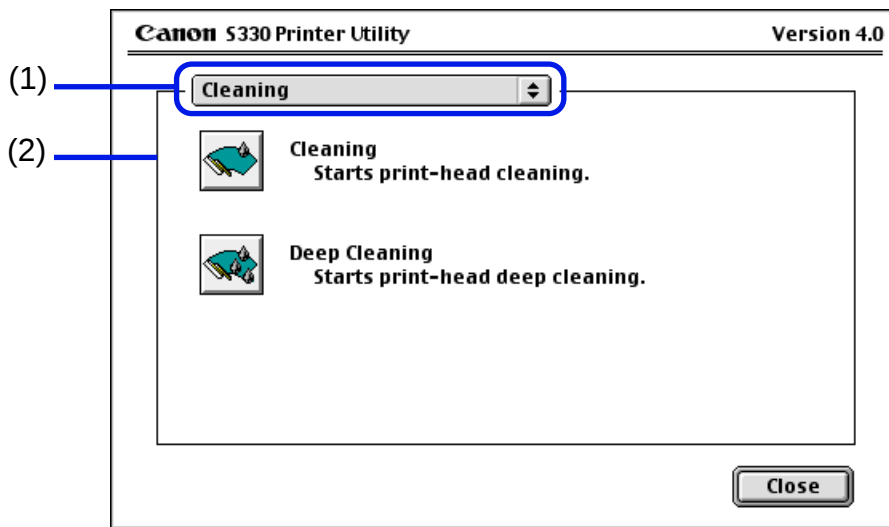


- (1) Select the function you wish to perform: Cleaning, Test Print, Remaining ink level setting, Auto Power, Quiet Mode or Custom Settings.
- (2) Display area showing the various maintenance functions, including cleaning and test pattern printing. Click the icon to start this function. For further details, refer to ["Routine Maintenance"](#).

- ➡ Printing the Nozzle Check Pattern
- ➡ Print Head Cleaning
- ➡ Print Head Deep Cleaning
- ➡ How Low Ink Warning Setting Works

Note ➤ For information about Print Head Alignment, refer to the *Quick Start Guide*.

Print Dialog Box

The **Print** dialog box specifies the media type and print settings to be used for your print job. To open the **Print** dialog box, select **Print** from the **File** menu in your application program.

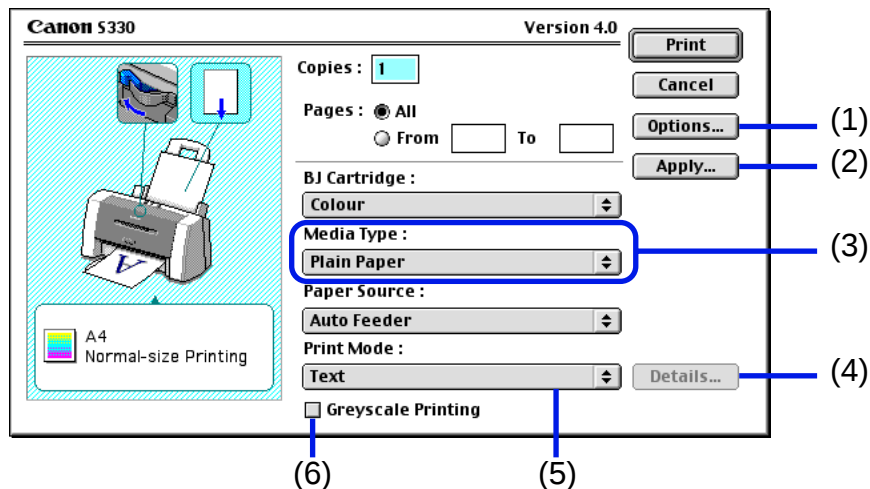


- (1) **Options...**
Specify the output destination, print order and page layout for the document you are printing.
- (2) **Apply...**
Allows you to register print settings or to implement a previously registered print setting.
- (3) **Media Type**
Ensure this setting matches the type of paper media loaded in the printer.

- (4) **Details...**
Allows you to manually set the print quality and colour settings in the [Detailed Setting Dialog Box](#).
- (5) **Print Mode**
Select the option in accordance with the document type and printing purpose.
- (6) **Greyscale Printing/Grayscale Printing**
Select to print a greyscale version of a colour document.

Detailed Setting Dialog Box

To open the **Detailed Setting** dialog box, select **Manual** from **Print Mode**, then click **Details**.

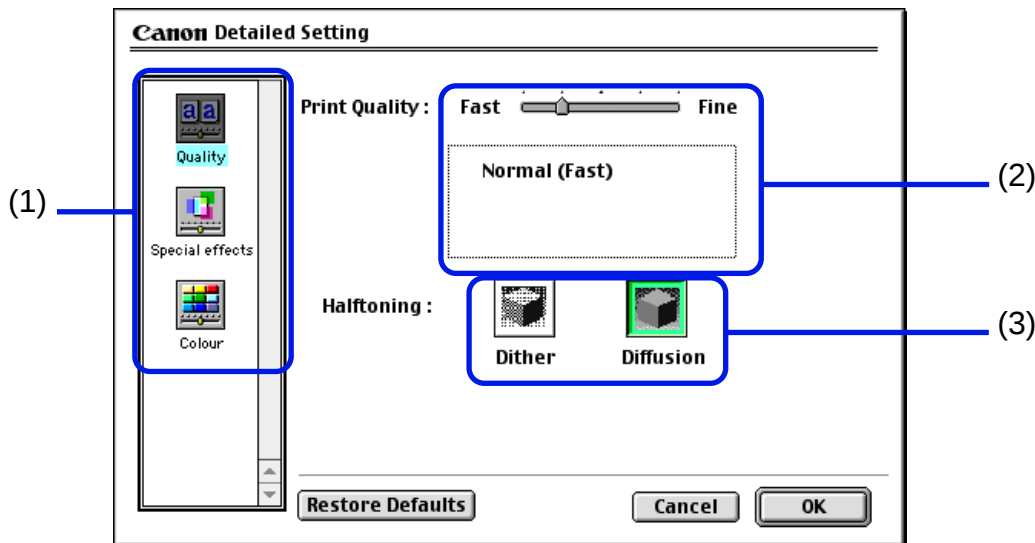

■ Quality panel

(1) Panel display icons

Click these icons to switch between panels in the **Detailed Setting** dialog box.

(2) **Print Quality**


Move the slide bar to adjust the balance between print quality and speed. Moving the bar to the right enhances print quality, and moving it to the left increases printing speed.

(3) **Halftoning**

Select either **Dither** or **Diffusion** ink dot configurations.

■ Special Effects Panel

To display the **Special Effects** panel, click the **Special effects** display icon.

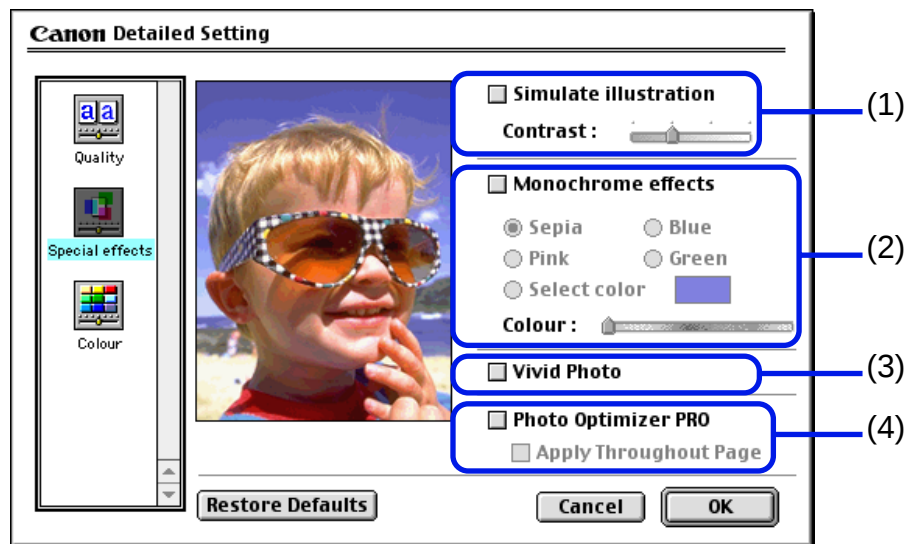

(1) Simulate illustration

This function manipulates colour image with certain effects. Select the check box and adjust the brightness of the image with the **Contrast** slide bar.

(2) **Monochrome effects**

Prints a colour image in a single colour. Select the check box and choose a colour or use a custom colour using **Select Colour/Select Color**.

(3) **Vivid Photo**


By using this function, you can reproduce breathtaking sceneries in which colours, especially blues and greens, appear even more vibrant. A major feature of this function is its ability to create vivid backgrounds of fields, trees, oceans, and sky, while maintaining the natural skin tones of people that appear in the images.

(4) **Photo Optimizer PRO**

Optimises the colour of images taken from a digital camera or scanner. It is especially effective for images affected by colour imbalance and over- or under exposure. When printing several images on one printing page, optimisation is usually applied to each image according to its requirements. However, if the image data has been manipulated using cut and paste, rotation or other such operations, group optimisation of all images on the page is recommended. In such cases, select the **Apply Throughout Page** check box.

■ Colour/Color Panel

To display the **Colour/Color** panel, click the **Colour/Color** display icon.

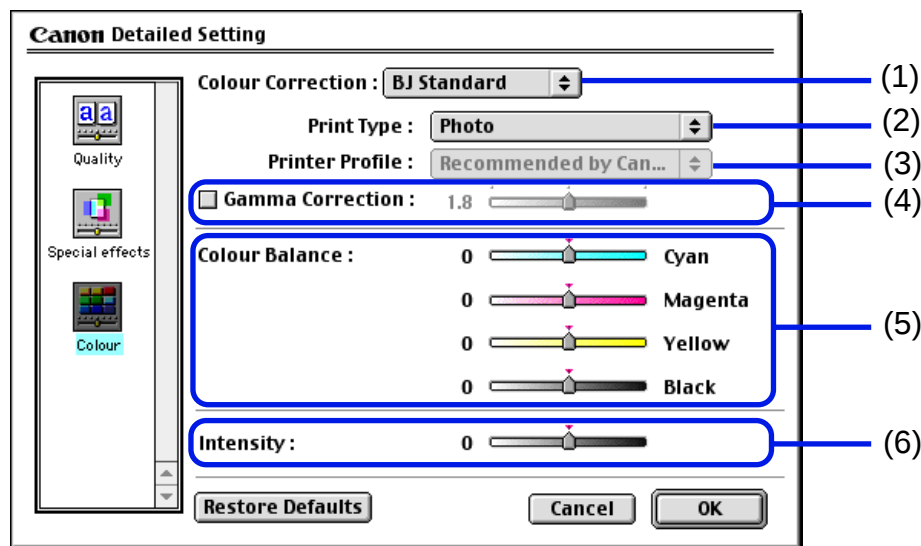

(1) Colour Correction/Color Correction

Select a colour correction method: **BJ Standard**, **ColorSync** or **None**. **BJ Standard** is usually the optimum colour correction method for printing with a BJ printer. When **ColorSync** is selected, you should also specify the **Print Type** and **Printer Profile** settings.

(2) **Print Type**

For printing that emphasises intermediate colours, select **Photo**. For printing that emphasises the brightness of primary colours, select **Graphics**. For documents that contain large amounts of a basic colour, select **Spot Colour/Spot Color**.

(3) **Printer Profile**

Select optimised colour characteristics (a profile) for the media type and other factors.

(4) **Gamma Correction**

This function adjusts the colour contrast (not including pure black and white). To adjust the contrast, select the check box and move the slide bar. Moving the bar to the right darkens the entire image while increasing contrast in the lighter areas and decreasing contrast in the darker areas.

(5) **Colour Balance/Color Balance**


Move the bar for each colour to adjust the balance of colour intensity. Moving the bar to the right intensifies the colour.

(6) **Intensity**

Move the slide bar to adjust the print density. Moving the bar to the right increases the density.

Options Dialog Box

To open the **Options** dialog box, click the **Options...** button in the **Print** dialog box.

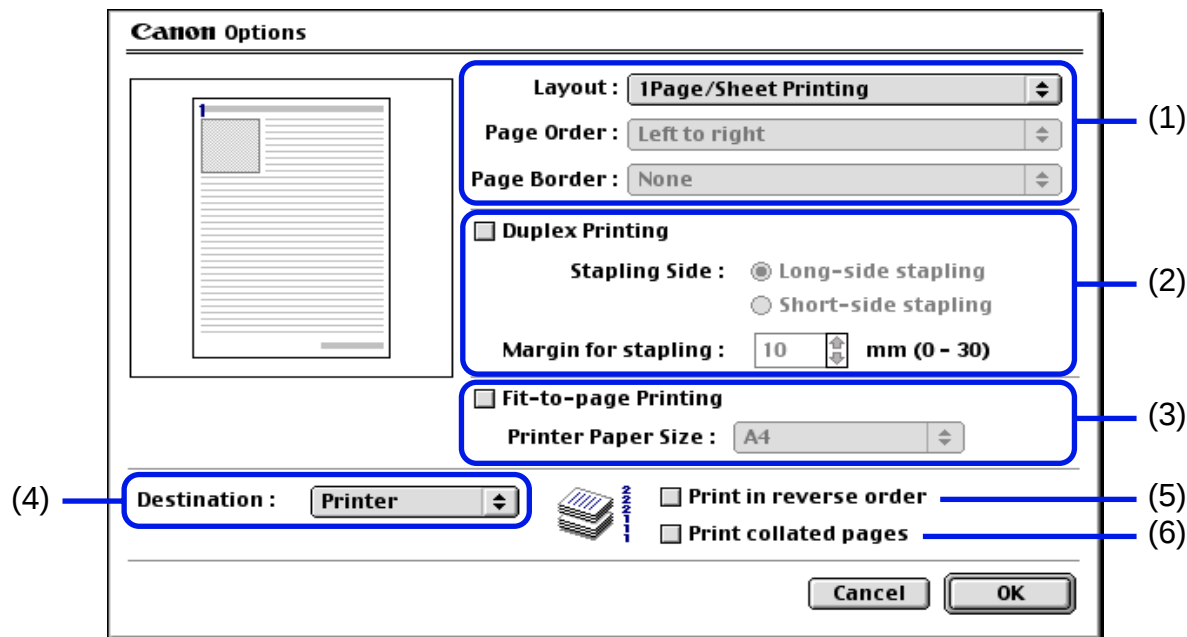

(1) Layout

Use this function to print more than one page on a single sheet of paper. Typically, this setting is set to display **1 Page/Sheet Printing**. If another option is selected, **Page Order** and **Border** can be specified.

2 Page/Sheet Printing/4 Page/Sheet Printing

Pages are reduced and printed so that two or four pages fit on each printed page. You can also select page order and whether to place a border around each page.

Poster (Divided into 4) / (Divided into 9) / (Divided into 16)

These enlarge and split the print image across several sheets of paper. The printer sheets can then be assembled to make a large poster. You can also select **Cut/Paste lines** and **Cut/Paste string**. To print only the certain pages, click the specific pages on the preview area.

(2) Duplex Printing

The document is printed on both sides of the paper. After printing one side, turn the ejected page over, and print on the other side.

(3) Fit-to-page Printing

Executes the scaled printing automatically. When selected, you can specify the **Printer Paper Size**

Fits the document paper size set in the application to the paper size loaded in the printer.

(4) Destination

Select the print output destination. **Printer** is the usual selection.

To check the layout or other image elements before printing, select **Preview**. To save the document as a PICT file, select **PICT File**.

(5) Print in reverse order


Prints the document starting with the last page.

(6) Print collated pages

Prints multiple copies of the document one copy at a time.

Register Settings Dialog Box

To open the **Register Settings** dialog box, click the **Apply...** button in the **Print** dialog box.

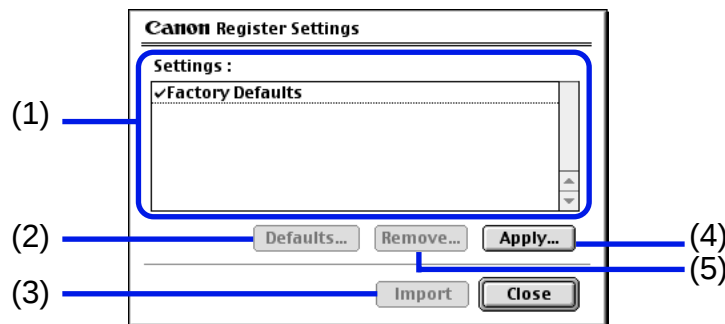


- (1) **Settings**
Displays a list of the registered print settings.
- (2) **Defaults**
Restores the print settings selected in **Settings** to defaults. A check mark appears next to the selected print settings.
- (3) **Import**
Imports a set of print settings. To use the settings, select the desired settings in the **Settings** list and click the **Import** button.
- (4) **Apply**
Saves the settings currently specified in the **Print** dialog box. After clicking the button, enter the name under which the settings are to be saved.
- (5) **Remove**
Deletes unwanted print settings. To delete unwanted settings, select the settings in **Settings** and click the **Remove** button.

BJ Print Monitor

The BJ Print Monitor allows you to check the progress of print jobs. You can launch the BJ Print Monitor if background printing is enabled in the **Chooser** utility.


■ Opening the BJ Print Monitor

- 1 Select **Chooser** from the Apple Menu.
- 2 Set **Backgrounding** to **On**.

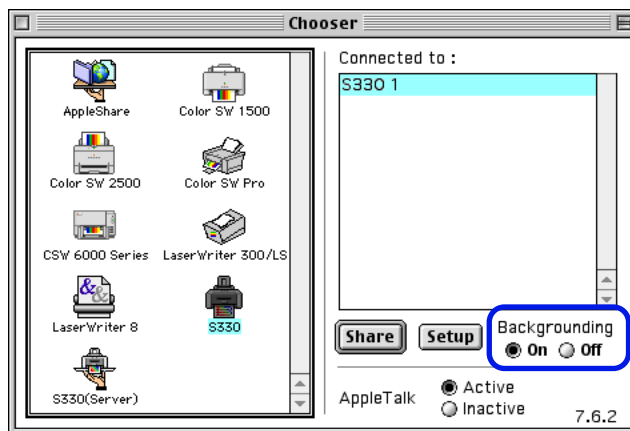

- 3 After starting a print job, select **BJ Print Monitor** in the Application Menu.
The BJ Print Monitor launches.

■ BJ Print Monitor Functions

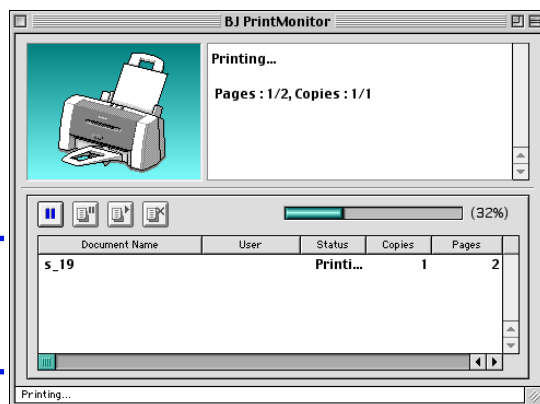

... Click to pause printing of the specified document.



... Click to resume printing.



... Click to cancel printing of the specified document.

Displays the printer status. If an error occurs, instructions on what to do are displayed.

Displays the printer status and ink status with images.

Displays information about the documents queued for printing.

The BJ Print Monitor allows you to change the print order of documents queued for printing. To change the print order, place the mouse pointer over the name of the document, hold the mouse button down while dragging the document name to the new position, then release. When the print order change includes the current job, it stops and the new job immediately starts instead.

Cancelling a Print Job

When the BJ Print Monitor is running, you can use it to cancel or suspend the current print job.

- 1 Select **BJ Print Monitor** in the Application Menu.
- 2 Click the name of the print job you wish to cancel, then click .

The document selected in the Print Monitor is deleted from the print list and the print job is cancelled.

Note ➤ To suspend printing, click the name of the document being printed then click . To resume printing, click .

Using the Printer with a Network

The printer can be used with an Ethernet network environment. Follow the steps described below to connect the printer to the network.

■ Before Setting up the Printer

Install the printer driver on each network computer that will use the printer. For information on installation, refer to the *Quick Start Guide*.

■ Printer Setup

To use the printer on a network, first set up the print server, then set up each client machine.

- Print server setup procedure

- 1 Select **Chooser** in the Apple Menu.
- 2 Select **Active** in **AppleTalk**.
- 3 Select the **S330** icon, then select the printer name in **Connected to:**.

- 4 Click **Share**.
- 5 Confirm that **S330 server** is selected in **Enter new print server name:** then click **Send**.
- 6 Confirm that the new print server name has been added to **Current print servers** then click **Close**.
- 7 Click the close box to close the Chooser.

- Client setup procedure

- 1 Select **Chooser** in the Apple Menu.
- 2 Select **Active** in **AppleTalk**.
- 3 Select the **S330 (Server)** icon, then select the printer server in **Connected to:**.
- 4 Click the close box to close the Chooser.


■ Checking Print Status

- Checking print status from the print server
To check the status of a print job from the print server, start the BJ Print Monitor.
Select **BJ Print Monitor** in the Application Menu.
To close the BJ Print Monitor, select **Close Status Window** in the **File** menu.
- Checking print status from a client
To check the status of a print job from a client, start the BJ Status Monitor. Click the **BJ Status Monitor** icon in the **BJ Extras** folder.
To close the BJ Status Monitor, select **Quit** in the **File** menu.
- The BJ Print Monitor and BJ Status Monitor
The BJ Print Monitor and the BJ Status Monitor both display a list of information concerning documents queued for printing. This information includes the document name, number of pages, number of copies and the time when the print job was accepted. The total number of queued documents is also displayed.
The BJ Print Monitor allows you to change the print order of the queued documents.

 [BJ Print Monitor Functions](#)

 [BJ Status Monitor Functions](#)

■ BJ Status Monitor Functions

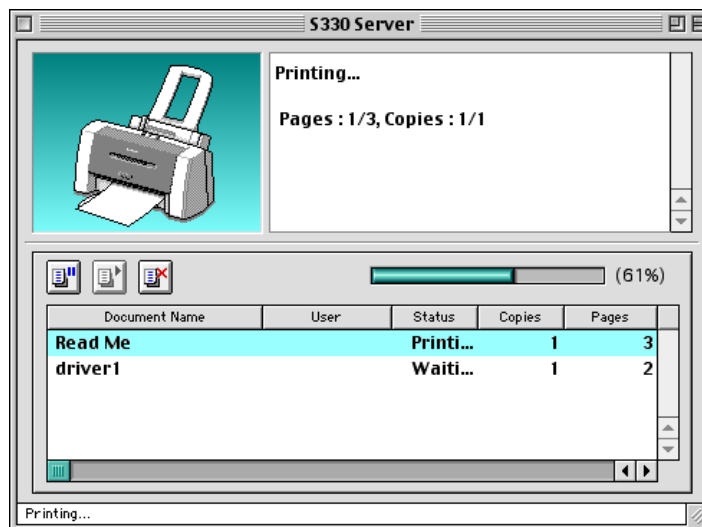

.... Click to pause printing of the specified document.



.... Click to resume printing.



.... Click to cancel printing of the specified document.

Note



- You can determine the owner of a computer by selecting the **File Sharing** control panel and checking the **Owner Name** item.
- If you are using two or more printer servers, you can switch between the BJ Status Monitor displays. Select **Print Server** in the **File** menu, then select the desired print server and click **OK**.

Uninstalling Printer Drivers

When a printer driver is no longer needed, use the Installer to delete, all the program files associated with it at the same time.

 
Before proceeding, ensure you save any unsaved files in any currently running applications.

- 1 Load the *Setup Software & User's Guide CD-ROM*.
- 2 Double-click the **Printer Driver** folder.
- 3 Double-click the **Installer** icon.
- 4 When the Software License Agreement is displayed, click **Accept**.
- 5 Select **Uninstall** from the popup menu and then click **Uninstall**.

Note

- If a warning message appears indicating that other applications are running:
- Click **Cancel** and save the document(s) if there are any unsaved documents open in the other applications.
 - Click **Continue** to continue the uninstall operation.
- 6 After the uninstall is complete, a message appears prompting you to restart your computer. Click **Restart**.

Routine Maintenance



- When to Replace Ink Tank and Maintain Print Head
- Replacing an Ink Tank
- Resetting the Ink Counter
- How Low Ink Warning Setting Works
- Printing the Nozzle Check Pattern
- Print Head Cleaning
- Print Head Deep Cleaning
- Transporting the Printer

When to Replace Ink Tank and Maintain Print Head

When printing becomes faint or colours are incorrect, see if the print head nozzles are clogged and clean them first. Follow the procedures below and replace an ink tank if necessary.

➡ Printing the Nozzle Check Pattern

↓ If the print quality is poor

➡ Print Head Cleaning

↓ If the problem remains

➡ Print Head Deep Cleaning

↓ Still the problem remains

➡ Replacing an Ink Tank

If ink tank replacement does not resolve the problem, the print head may be worn out. Contact a Canon service representative.

Replacing an Ink Tank

When replacing an ink tank, check the model number very carefully. The printer will not print properly if the wrong ink tank is used, or installed in the incorrect position.


- Black: BCI-24 Black
- Colour: BCI-24 Color

Note ➤ Damage caused by using a refilled cartridge is not covered by the Canon warranty. Canon recommends using only original Canon ink tanks to ensure the best quality.

- 1 Ensure that the printer is on, and then open the front cover.
The print head holder moves to the left.

2 Remove the empty ink tank.

Pull the tab on the ink tank towards you to release.

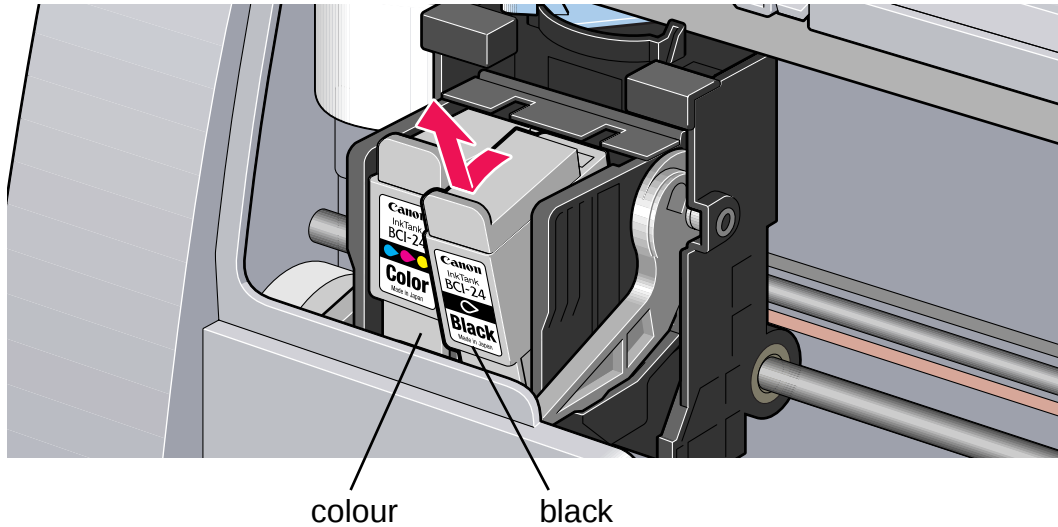


Then lift it from its slot.

Do not touch the lock lever; remove only the ink tank.

Important ►

- Handle ink tanks carefully to avoid staining clothing or the surrounding area.
- Discard empty ink tanks according to the local laws and regulations regarding disposal of consumables.


- 3 Unpack a new ink tank and remove the orange protective cap.

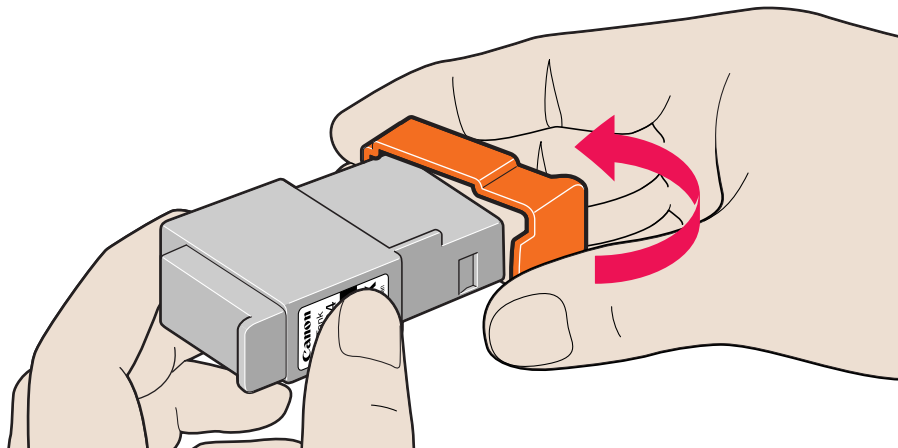


Important ➤

- Do not re-attach the protective cap once you have removed it.
- Once you have removed the protective cap, do not touch the open ink port.

- 4 Insert the ink tank into a slot.

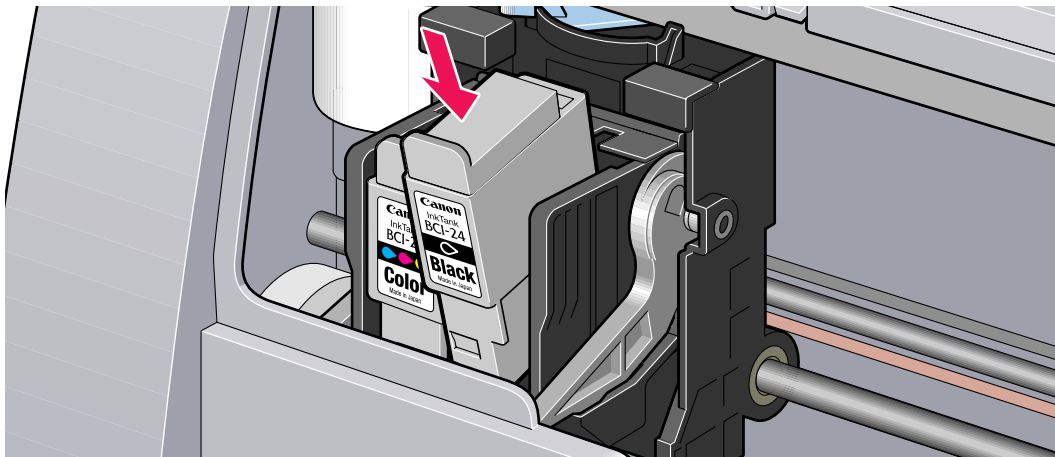

- 5 Press on the tab until the ink tank snaps firmly into place.

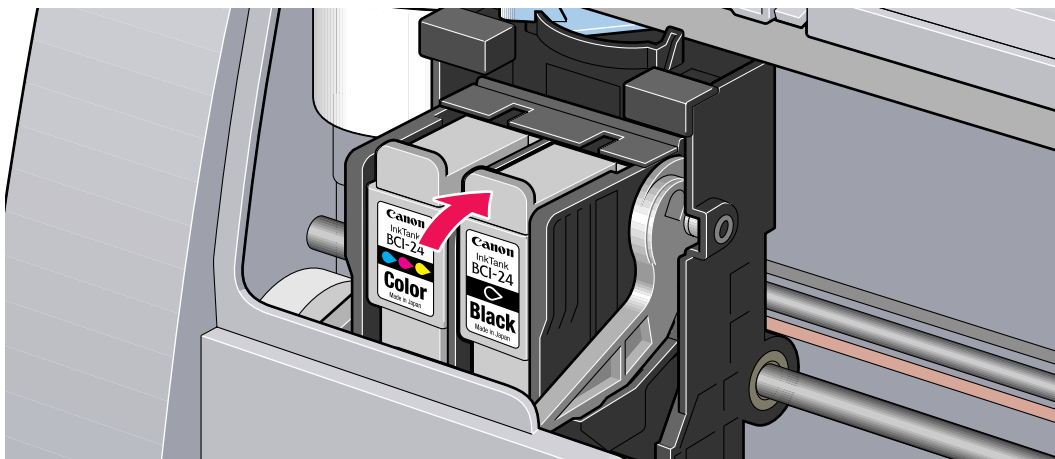

- 6 Close the front cover.

The print head holder moves to the right. The ink tank installation process is now complete.

- Note** ➤
- To maintain optimal print quality, use an ink tank within six months of first use.
 - Once an ink tank has been used, do not remove it from the printer and leave it out in the open. This will cause the ink tank to dry out and the printer may not function properly if it is reinstalled.
 - Reset the ink counter every time you replace the ink tank.

➡ [Resetting the Ink Counter](#)

Resetting the Ink Counter

When an ink tank is replaced, the ink counter must be reset. The low ink warning is only displayed properly if the ink counter is reset.

 [How Low Ink Warning Setting Works](#)

■ Ink Counter Reset

When the front cover has been open for a certain period, a confirmation message of ink tank replacement is displayed before the next print job.

Windows

- 1 Check the message, and click **Yes**.
- 2 Select the replaced ink tank, and click **OK**.

Note  When both black and colour ink tanks have been replaced, select both **Black** and **Colour**.

Macintosh

- 1 Check the message, and click **Yes**.
- 2 Select the replaced ink tank, and click **OK**.

Note ➤ When both black and colour ink tanks have been replaced, select both **Black** and **Colour**.

■ Resetting the ink counter from the printer driver setting screen

Note ➤ Do not reset an ink counter of an ink tank already in use.

Windows

- 1 Ensure the printer is on and open the Printer Properties dialog box.
➡ [Opening the Printer Properties Dialog Box](#)
- 2 On the **Maintenance** tab, click **Ink Counter Reset** icon.
- 3 Select the ink tank you have just installed and click **Execute**.

Macintosh


- 1 Ensure the printer is on and open the **Page Setup** dialog box.
The Page Setup dialog box can normally be opened by selecting **Page Setup...** in the **File** menu.
- 2 Click **Utilities** icon to open the **Printer Utility** dialog box.
- 3 Select **Remaining ink level setting** from the pull-down menu and click **Ink Counter Reset**.
- 4 Select the ink tank you have just installed and click **Execute**.

How Low Ink Warning Setting Works

The low ink warning notifies you of low ink levels during printing. The Low Ink Warning has been preset to be automatically displayed.

Note ➤ Refer to “[Modifying the low ink warning setting](#)” to change the setting if you do not want to display the Low Ink Warning.

■ What is Low Ink Warning?

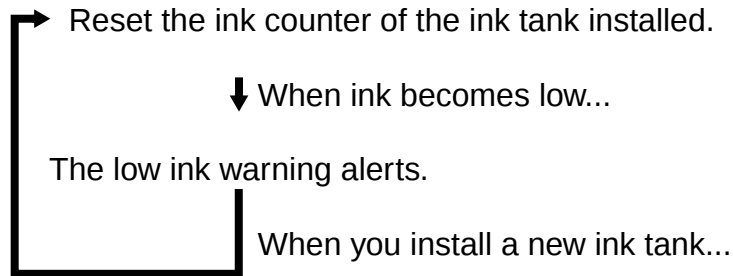


When you reset the ink counter, it will assume the ink tank is full regardless of how much ink actually remains. The reset is the only way to match the counter value with an actual ink volume. Reset the ink counter when installing a new ink tank.

➡ [How to Display Low Ink Warning Correctly](#)


■ Low Ink Warning Display

The '!' shows a low ink level in the ink tank.

The colour ink becomes low.

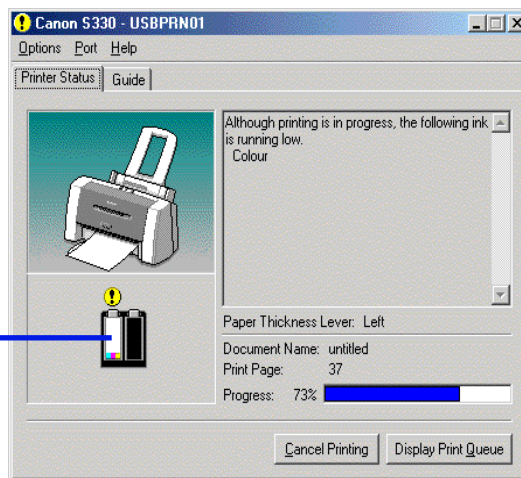

BJ Status Monitor (Windows)

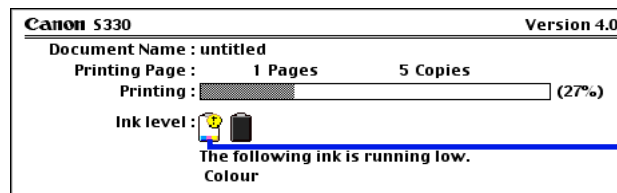

The colour ink becomes low.

BJ Status Dialog (Macintosh)

Macintosh

Note ➤ When the background printing is enabled, the low ink warning is displayed on the BJ Print Monitor (Macintosh).

➡ BJ Print Monitor

■ How to Display Low Ink Warning Correctly

- Reset the ink counter every time you install a new ink tank
The ink counter cannot work correctly unless you synchronise it with the actual ink level. The ink counter can only be adjusted when it is reset at the time a new ink tank is installed.
- Do not reset the ink counter of an ink tank in use.
Synchronisation of the counter and the actual ink level will not work properly.

Note ➤

- If you did not reset the counter when you installed the current ink tanks, the low ink warning may not function correctly, until the next time you replace the ink tanks. Also, ensure you treat both counters separately.
- Refer to '[Low Ink Warning Displays Ink Tank with '?'](#)' as it is in the case.

■ Modifying the low ink warning setting

Windows

- 1 Ensure the printer is on and open the Printer Properties dialog box.

 [Opening the Printer Properties Dialog Box](#)

- 2 On the **Maintenance** tab, click **Low Ink Warning Setting** icon.

- 3 Modify the **Display low ink warning** and **Display a confirmation message of ink tank replacement** settings, and click **Send**.

Macintosh

- 1 Ensure the printer is on and open the **Page Setup** dialog box.

The Page Setup dialog box can normally be opened by selecting **Page Setup...** in the **File** menu.

- 2 Click **Utilities** icon to open the **Printer Utility** dialog box.

- 3 Select **Low Ink Warning** from the pull-down menu and click the **Remaining ink level setting** icon.

- 4 Modify the **Display low ink warning** and **Display a confirmation message of ink tank replacement** settings, and click **Send**.

Printing the Nozzle Check Pattern

Print the nozzle check pattern to determine whether the ink ejects normally from the print head nozzles, and to verify print head alignment. Use this function when printed results are blurred or the colour is incorrect.

Nozzle check pattern printing can be executed from the Windows and Macintosh printer drivers, or from the printer itself.

■ Printing the Nozzle Check Pattern from the Printer Drivers

Windows

- 1 With the printer on, load a sheet of A4 or Letter paper in the printer.
- 2 Open the Printer Properties dialog box.
 [Opening the Printer Properties Dialog Box](#)
- 3 Click the **Maintenance** tab and then click the **Nozzle Check** icon.
- 4 When the confirmation message is displayed, click **OK**.
 [Examining the Nozzle Check Pattern](#)

Macintosh

1 With the printer on, load a sheet of A4 or Letter paper in the printer.

2 Open the Page Setup dialog box.

The Page Setup dialog box can normally be opened by selecting **Page Setup...** in the **File** menu.

3 Click the **Utilities** button to open the Printer Utilities dialog box.

4 Select **Test Print** from the pull-down menu, and then click the **Nozzle Check** icon.

5 When the confirmation message is displayed, click **OK**.

 [Examining the Nozzle Check Pattern](#)


■ Printing the Nozzle Check Pattern through the Printer

- 1 With the printer on, load a sheet of A4 or Letter paper in the printer.
- 2 Hold the RESUME/CANCEL button down until the POWER lamp flashes twice.


 [Examining the Nozzle Check Pattern](#)

■ Examining the Nozzle Check Pattern

The nozzle check pattern should appear as follows when ink is discharged properly. Examine the nozzle check pattern output by the printer.

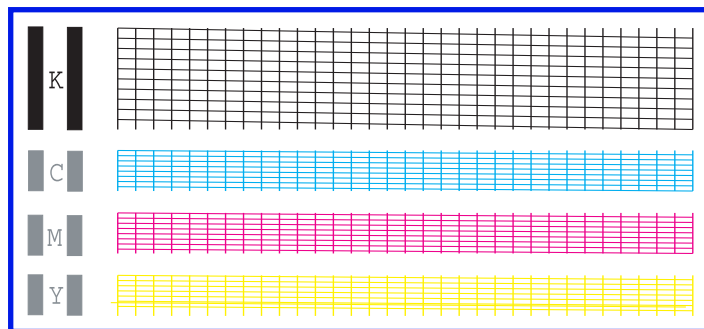

Lines missing here indicate the print head requires cleaning.

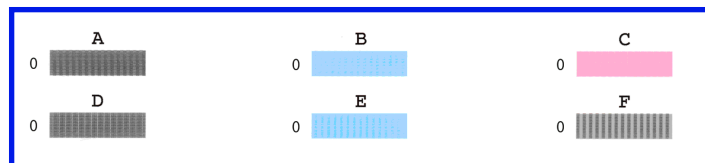

Unevenness in these patterns indicates the print head requires alignment.

Print Head Cleaning

Clean the print head if you suspect that the nozzles might be clogged. Head cleaning can be performed either from the printer drivers or from the printer itself.

Note ➤ Cleaning the head consumes ink, so perform head cleaning only when necessary.

■ Cleaning the Print Head from the Printer Drivers

Windows

- 1 Ensure that the printer is on.
- 2 Open the Printer Properties dialog box.
➡ [Opening the Printer Properties Dialog Box](#)
- 3 Click the **Maintenance** tab and then click the **Cleaning** icon.

- 4 Select the ink nozzles to be cleaned, and then click **Execute**.

All colours/All colors: All nozzles

Black: Black ink nozzles

Colour/Color: Colour ink nozzles

- 5 When a confirmation message is displayed, click **OK**.

Macintosh

- 1 Ensure the printer is on.

- 2 Open the Page Setup dialog box.

The Page Setup dialog box can normally be opened by selecting **Page Setup...** in the **File** menu.

- 3 Click the **Utilities** button to open the Printer Utility dialog box.

- 4 Select **Cleaning** from the pull-down menu, and then click the **Cleaning** icon.

- 5** Select the ink nozzles to be cleaned, and then click **OK**.

All colours/All colors:	All nozzles
Black:	Black ink nozzles
Colour/Color:	Colour ink nozzles

■ Cleaning the Print Head from the Printer

This operation cleans all nozzles, both black and colour. Because this method also resets the printer, any print data stored in the printer is lost.

- 1** Ensure the printer is on.
- 2** Hold down the RESUME/CANCEL button until the POWER lamp flashes once.

Now the POWER lamp starts flashing and print head cleaning begins. Do not perform any other operations until the head cleaning finishes. This takes about 50 seconds. After print head cleaning finishes, print the nozzle check pattern to verify that the print head nozzles are clean.

 **Printing the Nozzle Check Pattern**

Print Head Deep Cleaning

If print quality does not improve by standard print head cleaning, try deep cleaning, which is a more powerful process. Perform print head deep cleaning from the printer driver.

Note ➤ Print head deep cleaning consumes ink, so perform this procedure only when necessary.

Windows

- 1 Ensure the printer is on.
- 2 Open the Printer Properties dialog box.
 [Opening the Printer Properties Dialog Box](#)
- 3 Click the **Maintenance** tab and then click the **Deep Cleaning** icon.
- 4 When the confirmation message is displayed, click **OK**.

Macintosh

- 1 Ensure the printer is on.
- 2 Open the Page Setup dialog box.

The Page Setup dialog box can normally be opened by selecting **Page Setup...** in the **File** menu.
- 3 Click the **Utilities** button to open the Printer Utility dialog box.
- 4 Select **Cleaning** from the pull-down menu, and then click the **Deep Cleaning** icon.
- 5 Click **OK**.

Now the POWER lamp starts flashing and print head deep cleaning begins. The process takes one or two minutes to complete, so simply wait until the POWER lamp stops flashing. After print head deep cleaning finishes, print the nozzle check pattern to verify that the head is clean. If not, perform print head deep cleaning once more. If the head is still not clean after the second deep cleaning, the print head may be worn out, even if ink remains in the ink tanks. In this event, contact a Canon service representative.

 [Printing the Nozzle Check Pattern](#)

Transporting the Printer


Pack the printer carefully in its original packing materials.

If you do not have the original packing materials, pack the printer carefully and thoroughly in protective material inside of a sturdy box.

- 1 Turn the printer off.
- 2 After making sure that the POWER lamp is off, unplug the printer.


Important ► Do not unplug the printer while the POWER lamp is lit or flashing to protect the printer from damage.

- 3 Remove the paper rest and the paper output tray.

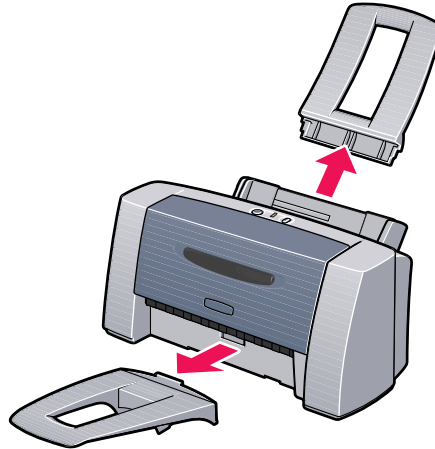


- 4 Disconnect the printer cable from the computer and from the printer, and then disconnect the power cord from the printer.

- 5 Secure the printer with adhesive tape as shown, and then pack it in a plastic bag.

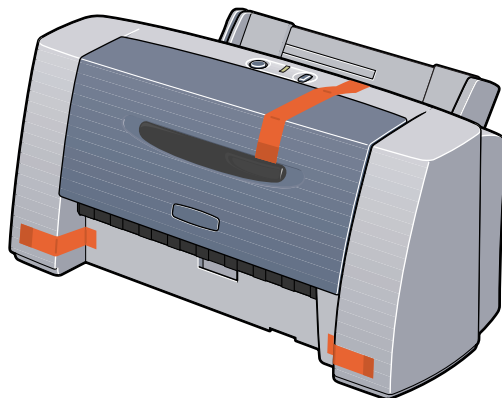


- 6 Attach protective material to both sides of the printer when packing the printer.

Clearly label the box as "Fragile", if using a transport company.

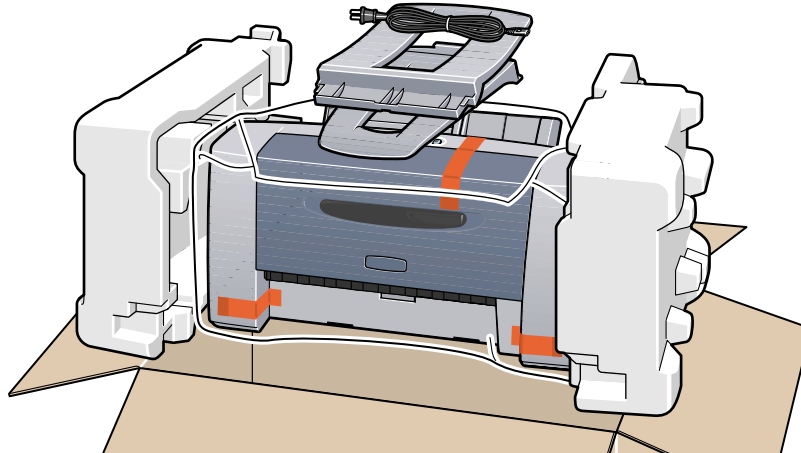

Printing Media

 

- Compatible Media Types
- Envelopes
- High Resolution Paper HR-101N
- Glossy Photo Paper GP-301N/GP-301
- High Gloss Photo Film HG-201
- Glossy Photo Cards FM-101
- Photo Paper Pro PR-101
- Photo Paper Pro PC-101S
- Photo Paper Plus Glossy PP-101
- Matte Photo Paper MP-101
- Transparencies CF-102
- T-Shirt Transfers TR-201
- Banner Paper

Compatible Media Types

You can use the following types of paper and other media.

■ Size

- Standard paper: From A5 size (148.0 x 210.0 mm / 5.83 x 8.27 in) to legal size (215.9 x 355.6 mm / 8.5 x 14.0 in)
- Non-standard paper: From 90.0 x 120.0 mm to 215.9 x 584.2 mm
(From 3.54 x 4.72 in to 8.5 x 23.0 in)
- Others: Envelopes (European DL and US Com. #10)

Important ► Do not use the following types of paper. Using such paper will not only produce unsatisfactory results, but can also cause the printer to jam or malfunction.

- Folded, curled or wrinkled paper
- Wet paper
- Paper that is too thin (less than 64 g/m² / 17 lb)
- Paper that is too thick *(more than 105 g/m² / 28 lb)
- Picture postcards
- Postcards with an affixed photo or sticker
- Envelopes with a double flap
- Sealed envelopes
- Envelopes with an embossed or treated surface
- Paper with holes (such as loose-leaf paper)

*non-Canon branded paper

■ Weight

64 to 105 g/m² (17 to 28 lb)

Do not use paper heavier than this (except for supported Canon-brand media), as it could jam in the printer.

■ Types

The following types of media can be used.

For more information about the media and the printing methods, refer to the specific sections.

Plain paper: Refer to the *Quick Start Guide*.

- ➡ Envelopes
- ➡ High Resolution Paper HR-101N
- ➡ Glossy Photo Paper GP-301N/GP-301
- ➡ High Gloss Photo Film HG-201
- ➡ Glossy Photo Cards FM-101
- ➡ Photo Paper Pro PR-101
- ➡ Photo Paper Pro PC-101S
- ➡ Photo Paper Plus Glossy PP-101
- ➡ Matte Photo Paper MP-101
- ➡ Transparencies CF-102

➡ T-Shirt Transfers TR-201

➡ Banner Paper



Envelopes

Use either European DL or US Com. #10 size envelopes.


■ Preparation for Printing

- 1 Press down on all four corners and edges of the envelopes to flatten them as shown below.
- 2 If the envelopes are curled, hold the opposite corners and gently bend them in the opposite direction.

Ensure that the flap of the envelope is perfectly straight.

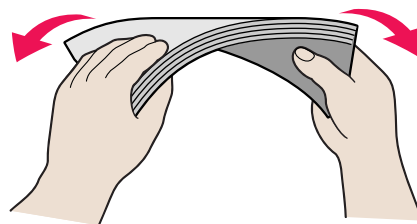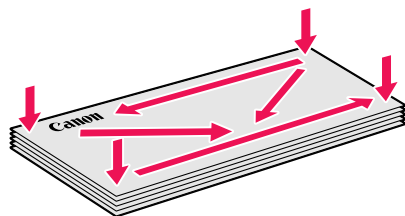

- 3 If the leading edge of an envelope is puffed up or curled, use a pen to press the envelope flat and sharpen the crease.

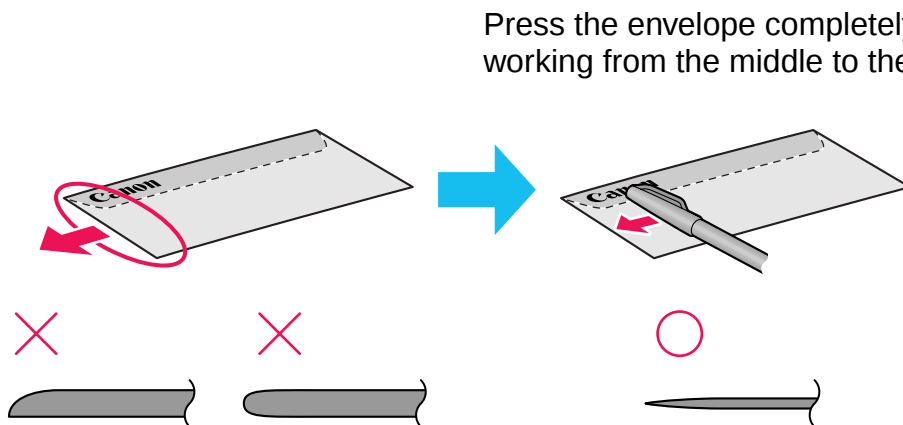

* The above illustrations show a side view of the leading edge of the envelope.

The envelopes may jam in the printer if they are not completely flat and the edges are not aligned.


Ensure that no curl or puff exceeds 3 mm (0.1 in).

■ Unsuitable Envelopes

- Envelopes with an embossed or treated surface
- Envelopes with a double flap or pressure seals

■ Loading

- Place envelopes lengthwise with the flap to the left and the address side facing upwards.
- Set the paper thickness lever to the right.
- Up to 10 envelopes can be loaded at once.

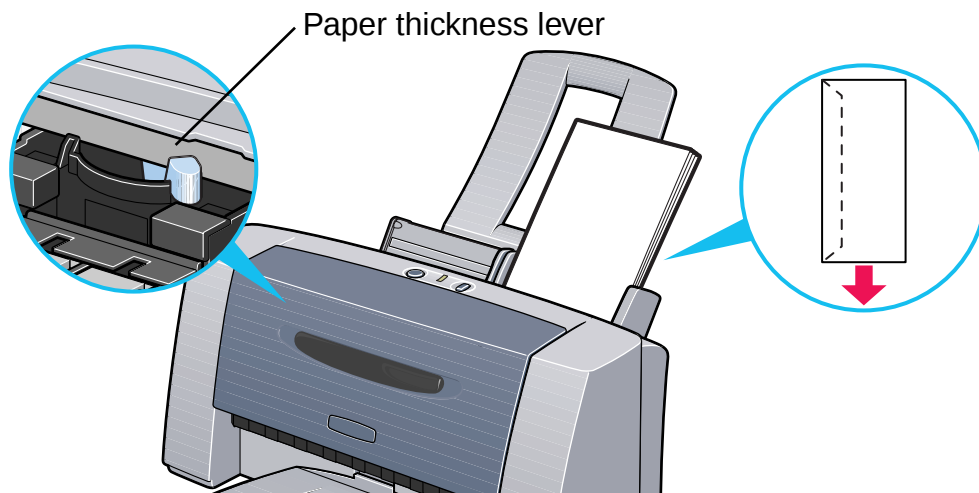

Note ➤ If the envelopes still do not feed properly even after removing curl, clean the paper feed roller.

- 1** Ensure the printer is on and there is not any paper loaded in the printer.
- 2** Hold the RESUME/CANCEL button down and release as the POWER lamp flashes three times.

The paper roller starts rotating ten times as it cleans.
Repeat this three times.

- 3** Load a sheet of A4 or Letter sized plain paper in the printer.
- 4** Hold the RESUME/CANCEL button down and release as the POWER lamp flashes three times to feed the sheet.
Repeat this three times.

If the printer still does not feed the envelopes through even after the cleaning, repeat Step 4 again.

■ Printer Driver Settings

- **Media Type:** Envelope
- **Page Size:** Select either **DL Env.** or **#10 Env.** according to the envelope size you are using
- **Orientation:** Landscape

■ Handling of Printed Output

Remove each envelope as it is printed.

■ Printable Area

 **Printing Area**


High Resolution Paper HR-101N

This type of paper provides better colour reproduction than plain paper. It is suitable for printing business documents that feature graphics, and for photographs.

■ Loading

- Load the paper with the whiter side facing up.
- Set the paper thickness lever to the left.
- Do not load paper higher than the limit mark. A maximum of 80 sheets can be loaded.

Paper thickness lever

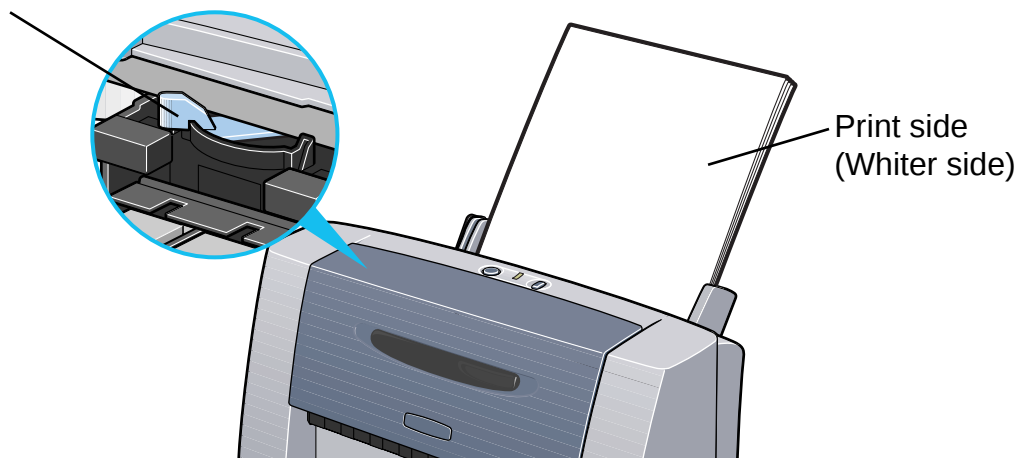

■ Printer Driver Settings

- **Media Type:** High Resolution Paper
- **Page Size:** Ensure the setting matches the size set in the application.

■ Handling of Printed Output

Do not stack more than 50 sheets in the paper output tray. If the output paper is curled, it may prevent the next sheet being ejected. In this case, or if the ink takes a long time to dry, remove each sheet as soon as it is printed.

■ Printable Area




Glossy Photo Paper GP-301N/GP-301

This media is still thicker than High Resolution Paper with a glossy printing surface to produce print-outs close to photograph quality.

■ Loading

- Load the paper with the whiter side facing up.
- Set the paper thickness lever to the left.
- A maximum of 10 sheets can be loaded at once.
- When printing on Glossy Photo Paper GP-301, do not use any loading support sheet.

Paper thickness lever

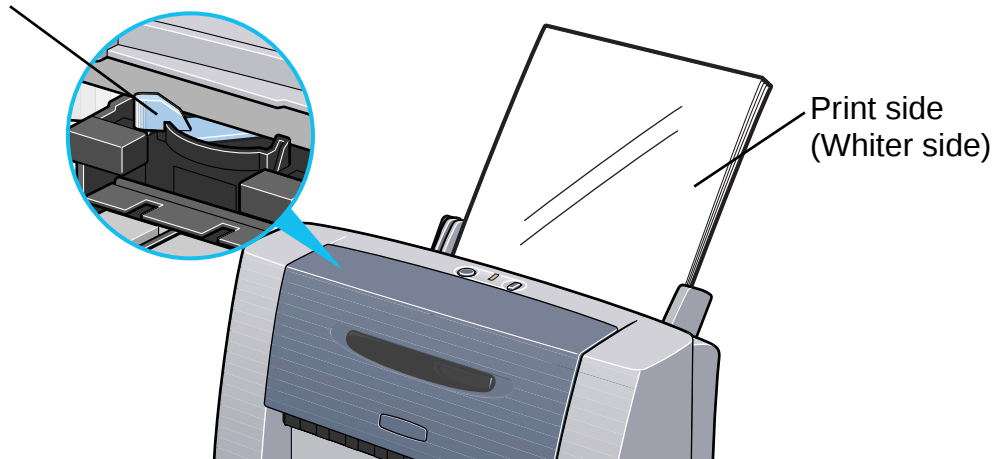

■ Printer Driver Settings

- **Media Type:** Glossy Photo Paper
- **Page Size:** Ensure the setting matches the size set in the application.

■ Handling of Printed Output

- Do not stack more than 10 sheets in the paper output tray.
- Do not touch the printed surface until the ink is fixed (approx. two minutes).

■ Printable Area



Note ➤ For photograph and illustration data that you want to print with Borderless Printing, create the data by using the same size as the paper size, and paste the data so that it fills the editing screen without leaving any margins. If you are using an application that allows you to set margins, set the left, right, top and bottom margins to 0 mm. For instructions on setting margins, refer to the user's manual for your application.


High Gloss Photo Film HG-201

This film has an extremely glossy surface, ideal for printing photographs with outstanding results.



■ Loading

- Load only one sheet at a time.
- Load the film with the cut corner at the upper right.
- If the film is curled, flatten it by curling in the opposite direction.
- Set the paper thickness lever to the left.

Paper thickness lever

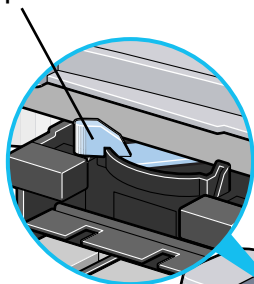

Cut corner

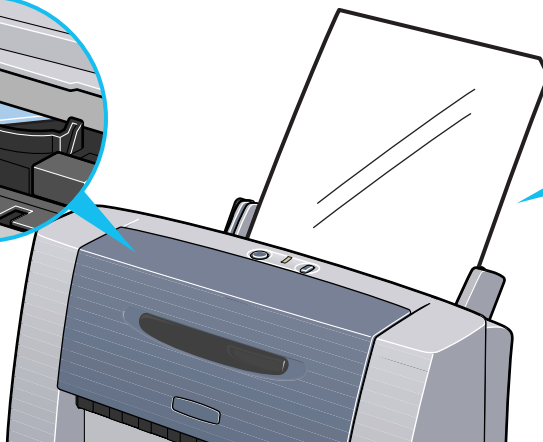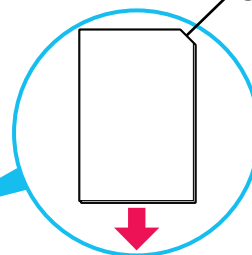

■ Printer Driver Settings

- **Media Type:** High Gloss Photo Film
- **Page Size:** Ensure the setting matches the size set in the application.

■ Handling of Printed Output

- Remove each sheet as soon as it is printed.
- Do not touch the printed surface until the ink is fixed.

■ Printable Area




Glossy Photo Cards FM-101

Made of the same material as Glossy Photo Paper GP-301, this photo-size paper is intended for printing images that cover the entire surface of the card, without a white border. When printing, use the original application software, Easy-PhotoPrint (for Windows) or ImageBrowser (for Macintosh).

■ Loading

- Load the paper with the glossy side facing up.
- Set the Paper Thickness Lever to the left.
- A maximum of 20 sheets can be loaded at once.
- Do not use the loading support sheet provided with the package.

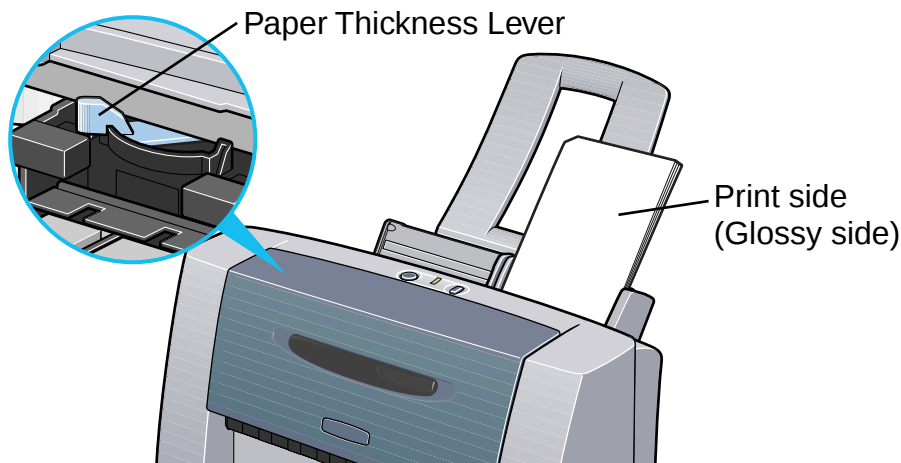

■ Handling of Printed Output

- Do not stack more than 20 sheets in the paper output tray.
- Do not touch the printed surface until the ink is fixed (approx. two minutes).



Photo Paper Pro PR-101

This is thick paper with a treated surface that enhances gloss and provides superior colour reproduction. It is ideal for printing high quality photographs. This media is available in A4/ Letter and 4 x 6 sizes.

■ Loading

- Load only one sheet of A4/Letter at a time. Up to 20 sheets of 4 x 6 size paper can be loaded at once.
- Load the paper with the glossier side facing up.
- Set the paper thickness lever to the left.

Paper thickness lever

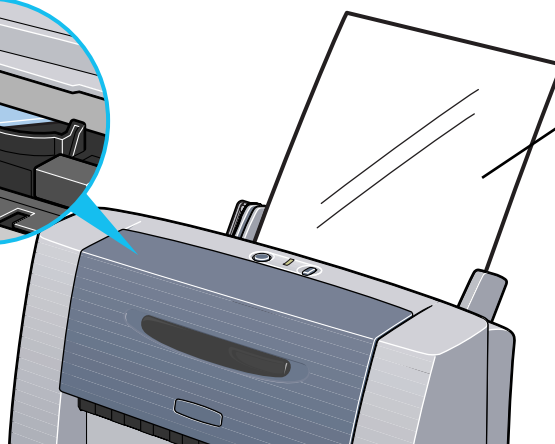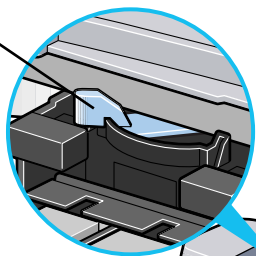

Print side
(Glossier side)

■ Printer Driver Settings

- **MediaType:** Photo Paper Pro
- **Page Size:** Ensure the setting matches the size set in the application.

■ Handling of Printed Output

- Remove each sheet as soon as it is printed.
- Do not stack more than 20 sheets of 4 x 6 size paper in the output tray.
- Do not touch the printed surface until the ink is fixed (approx. 30 minutes).
Colours in dark images may appear indistinct at first, but become clearer after about 30 minutes.
- Images may smudge if you place them in an album before the ink is completely dry. It is recommended that you allow the ink to dry for 24 hours.
- Do not attempt to dry the ink with a hair dryer or by exposing printed sheets to direct sunlight.

■ Storing Printed Output

- Do not store or display printouts in hot, damp or humid conditions.
Never expose them to heat or direct sunlight.
- Store printouts in photo albums, photo frames or presentation binders to protect them from direct exposure to air or sunlight.
- Do not mount printouts in an adhesive-type album, as you may not be able to remove them.

- Be aware that some types of clear plastic folders and albums may cause the edges of the paper to turn yellow.

■ Printable Area

Printing Area

Note  For photograph and illustration data that you want to print with Borderless Printing, create the data by using the same size as the paper size, and paste the data so that it fills the editing screen without leaving any margins. If you are using an application that allows you to set margins, set the left, right, top and bottom margins to 0 mm. For instructions on setting margins, refer to the user's manual for your application.



Photo Paper Pro PC-101S

Made of the same material as Photo Paper Pro PR-101, this photo-size paper is intended for printing images that cover the entire surface of the card, without a white border. When printing, use the original application software, Easy-PhotoPrint (for Windows) or ImageBrowser (for Macintosh).

■ Loading

- Load the paper with the glossy side facing up.
- Set the paper thickness lever to the left.
- A maximum of 20 sheets can be loaded at once.

Paper thickness lever

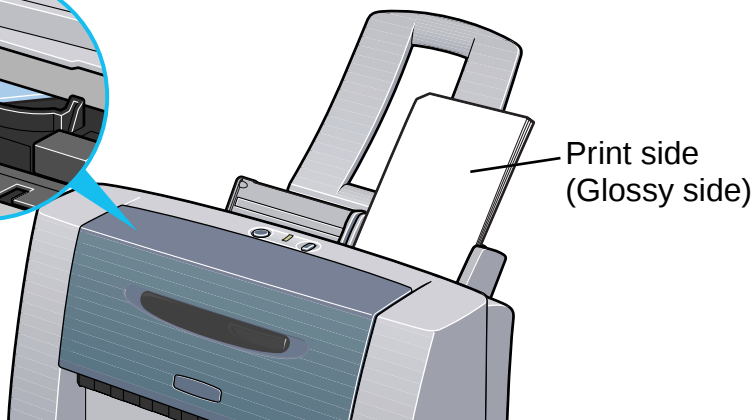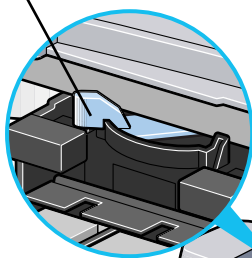

■ Handling of Printed Output

Follow the instructions described in "[Photo Paper Pro PR-101](#)".



Photo Paper Plus Glossy PP-101

This is a thick paper with a glossy water-resistant coating and provides superior colour reproduction. It is ideal for printing high quality photographs. This media is available in A4/ Letter and 4 x 6 sizes.

■ Loading

- Up to 10 sheets of A4/Letter size paper can be loaded at once. Up to 20 sheets of 4 x 6 size paper can be loaded at once.
- Load the paper with the glossier side facing up.
- Set the paper thickness lever to the left.

Paper thickness lever

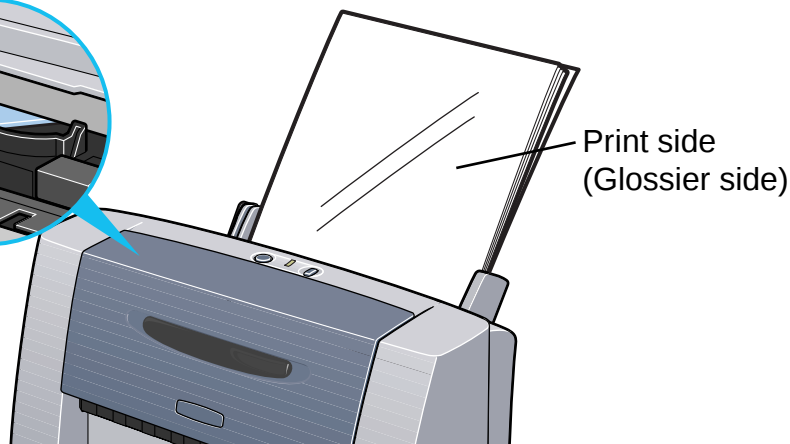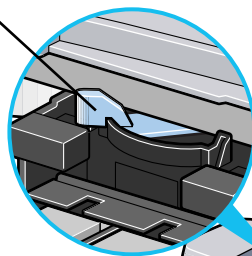

■ Printer Driver Settings

- **MediaType:** Photo Paper Plus Glossy
- **Page Size:** Ensure the setting matches the size set in the application.

■ Handling of Printed Output

- Remove each sheet as soon as it is printed.
- Colours may slightly change if papers are stacked up before the ink is completely dry. It is recommended that you allow the ink to dry for 24 hours.
- Do not attempt to dry the ink with a hair dryer or by exposing printed sheets to direct sunlight.

■ Storing Printed Output

- Do not store or display printouts in hot, damp or humid conditions. Never expose them to heat or direct sunlight.
- Store printouts in photo albums, photo frames or presentation binders to protect them from direct exposure to air or sunlight.
- Do not mount printouts in an adhesive-type album, as you may not be able to remove them.
- Be aware that some types of clear plastic folders and albums may cause the edges of the paper to turn yellow.

■ Printable Area



Note ➤ For photograph and illustration data that you want to print with Borderless Printing, create the data by using the same size as the paper size, and paste the data so that it fills the editing screen without leaving any margins. If you are using an application that allows you to set margins, set the left, right, top and bottom margins to 0 mm. For instructions on setting margins, refer to the user's manual for your application.



Matte Photo Paper MP-101

This is a thick matt water-resistant paper and provides superior colour reproduction. It is suitable for a variety of printing purposes such as paper crafts, calendars and matt photos. This media is available in A4/Letter sizes.

■ Loading

- A maximum of 10 sheets can be loaded at once.
- Load the paper with the whiter side facing up.
- Set the paper thickness lever to the left.

Paper thickness lever

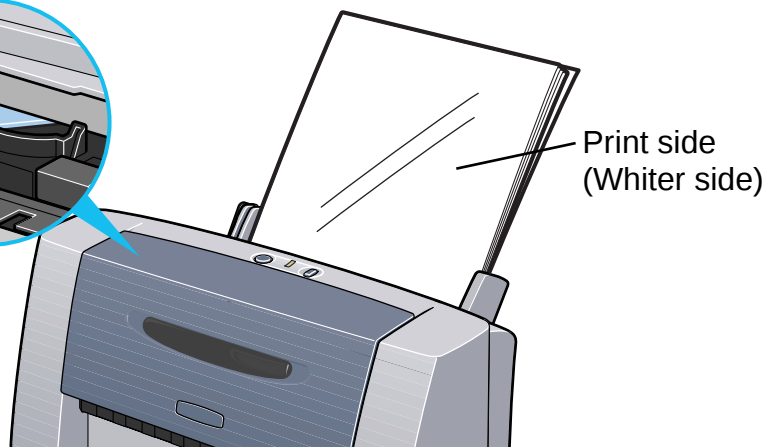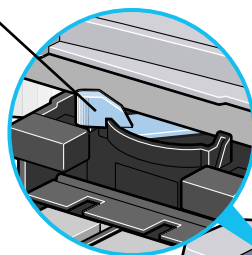

■ Printer Driver Settings

- **MediaType:** Matte Photo Paper
- **Page Size:** Ensure the setting matches the size set in the application.

■ Handling of Printed Output

- Remove each sheet as soon as it is printed.

■ Printable Area



Note ➤ For photograph and illustration data that you want to print with Borderless Printing, create the data by using the same size as the paper size, and paste the data so that it fills the editing screen without leaving any margins. If you are using an application that allows you to set margins, set the left, right, top and bottom margins to 0 mm. For instructions on setting margins, refer to the user's manual for your application.



Transparencies CF-102

This film is ideal for printing presentation material for use with overhead projectors.


■ Loading

- Place one sheet of plain A4 or Letter paper under the transparencies in the sheet feeder.
- Set the paper thickness lever to the left.
- A maximum of 30 sheets can be loaded at once.

Paper thickness lever

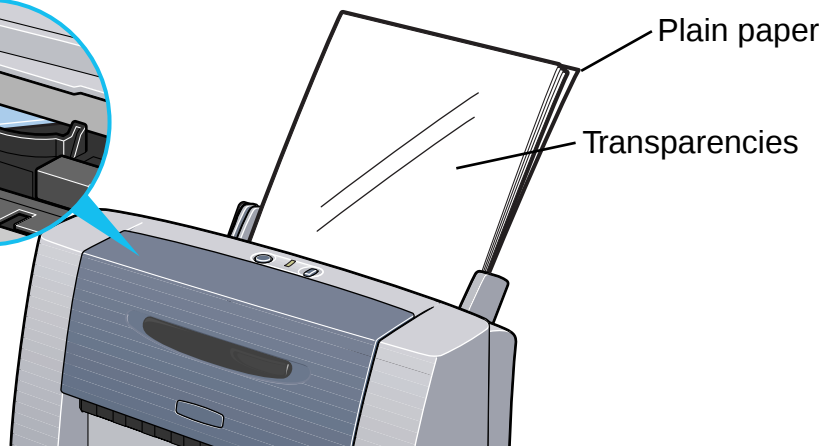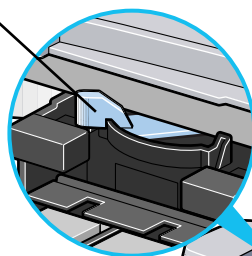

- Although you can print on either side of CF-102, best results can be obtained by printing on the side toward which it curls when held by the edge.

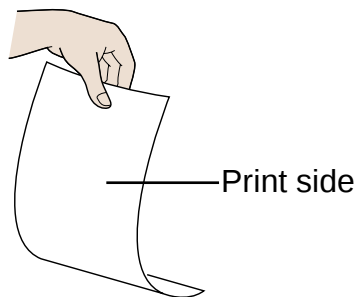

■ Printer Driver Settings

- **Media Type:** Transparency
- **Page Size:** Ensure the setting matches the size set in the application.

■ Handling of Printed Output

- Remove each transparency as soon as it is printed.
- Do not touch the printed surface until the ink is fixed (approx. 15 minutes).

■ Printable Area



T-Shirt Transfers TR-201


This paper is used to produce iron-on transfers. The image is printed backwards when **Media Type** is set to T-Shirt Transfer in the printer driver.

Note ➤ For the customers in the United States, refer to the *Quick Start Guide* for instructions on using TR-101 T-shirt transfers.

■ Loading

- Load only one sheet at a time.
- If the T-shirt transfer is curled, flatten it by curling it in the opposite direction.
- Load the paper with the side that does not have green lines facing up.
- Set the paper thickness lever to the right.

Paper thickness lever

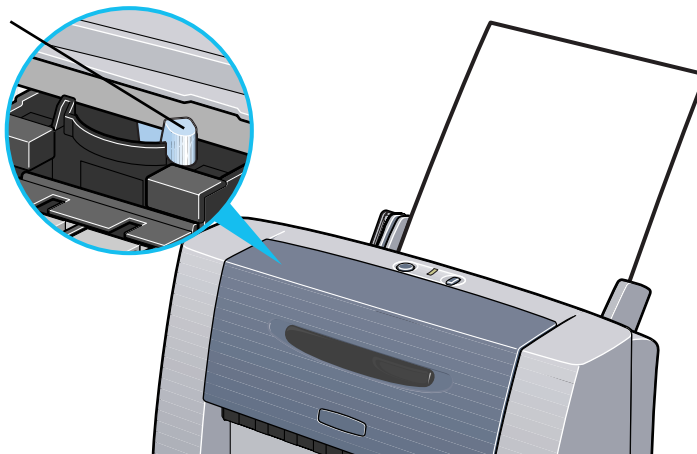

■ Printer Driver Settings

- **Media Type:** T-Shirt Transfer
- **Page Size:** Ensure the setting matches the size set in the application.

■ Handling of Printed Output

- Remove each T-shirt transfer as soon as it is printed.
- The T-shirt transfer should be used as soon as possible. Refer to the supplied instructions for details on how to use the paper.

■ Printable Area

 Printing Area

Banner Paper


This is long paper that consists of consecutive sheets of A4 or Letter size paper, ideal for printing long posters or banners (up to six sheets long).

■ Preparation for Printing


- When tearing the banner paper, tear off one more sheet than you actually need to print.
- The maximum length for one print job is six sheets, so if you will be printing on six sheets, tear off a seven-sheet length.

■ Loading

- 1 Set the Paper Thickness Lever to the right.
- 2 Load the banner paper with the printing side facing up. Gently fold the perforation between the first and second sheets.
Leave the rest of the paper folded up.

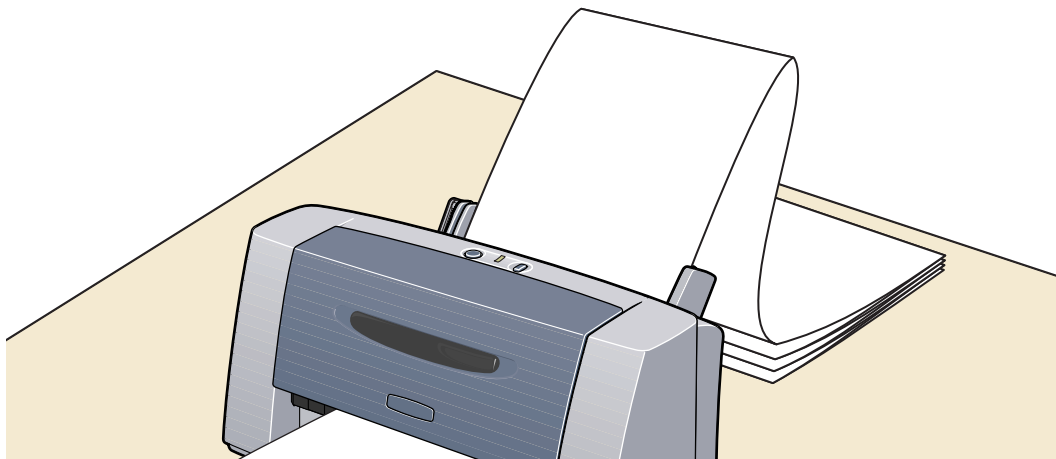

- 3 Place the printer where the printed banner output can hang over the edge of the table.

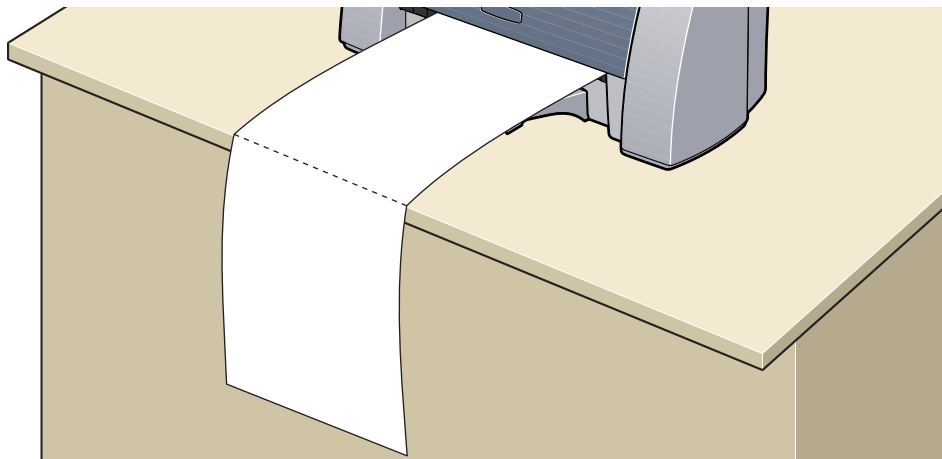

Ensure the ink does not stain the table or floor.

 
■ Printer Driver Settings

- **Media Type:** Plain Paper
- **Page Size:** When using A4 banner paper: A4
When using letter size banner paper: Letter
- **Printing Type:** Banner Printing
On a Macintosh, before creating the document, select **Banner Printing** in the **Page Setup** dialog box.
- **Copies:** Must be set to "1" to print correctly.

■ Printable Area

 Printing Area

Troubleshooting



- Cannot Install the Printer Driver
- Print Quality is Poor or Contains Errors
- Printer Does Not Start or Stops During Print Jobs
- Paper Does Not Feed Properly or Paper Jams
- The POWER Lamp Flashes Orange
- An Error Message is Displayed on the Screen
- Have you replaced an ink tank with a new one? is Displayed
- Low Ink Warning Displays Ink Tank with '?'
- Problems Unique to Windows
- Problems Unique to the Macintosh

Windows

Macintosh

Cannot Install the Printer Driver

■ Follow the installation procedure correctly.

Install the printer driver carefully following the procedures described in the *Quick Start Guide*.

If the printer driver was not installed correctly, reinstall it. If you are using Windows, delete the printer driver before reinstalling it.

[Uninstalling Printer Drivers](#)

Note  If the Installer was forcibly terminated due to an error in Windows, Windows may be unstable and this will prevent the printer driver from being installed. Restart the computer before reinstalling the printer driver.

■ Close any other applications before installation.

Sometimes the printer driver cannot be installed because another application is running.

- If the Installer for the printer driver does not start up automatically when you insert the *Setup Software & User's Guide CD-ROM*, open the My Computer window, and then double-click the CD-ROM icon.

Windows

Note ➤ If you are typing in the file name, you must specify the CD-ROM drive letter and the installation program ("MSetup.exe"). The CD-ROM drive letter is computer dependent.

- Confirm that there are no problems with the *Setup Software & User's Guide CD-ROM*.

In Windows, use Explorer to ensure that the CD-ROM can be read. In a Macintosh, check that the CD-ROM icon is visible. If there is a problem with the CD-ROM, contact a Canon service representative.

Print Quality is Poor or Contains Errors

- Cannot Print to End of Job
- Colours are Unclear
- Meaningless Characters or Symbols are Printed
- Printing is Blurred/Colours are Wrong
- Straight Lines are Misaligned
- Printed Paper Curls or Ink Blots
- Back of Paper is Smudged
- Printed Surface is Scratched
- White Streaks
- Colours are Uneven or Streaked

Cannot Print to End of Job

■ Confirm the Page Size setting matches the size of the paper loaded in the printer.

First, check the Page Size setting in the application.

Then check the **Page Size** setting in the Printer Properties dialog box for Windows or the Page Setup dialog box for Macintosh.

■ Check the amount of the free space on the hard disk.

You may need to increase the amount of free space by deleting any unnecessary files.

Colours are Unclear

- **Confirm the Media Type setting in the printer driver matches the type of paper loaded in the printer.**

If you are printing a photograph or an illustration from a Windows environment, also increase **Print Quality** on the **Main** tab.

If you are working in a Macintosh environment, select **Photo** or **Graphic** for the **Print Mode** in the Print dialog box.

- **Confirm the specified ink tank is installed.**

When an ink tank runs out of ink, replace it with a new one.

Note ► Printed colours may not match screen colours perfectly due to basic differences in the methods used to produce colours. Colour control settings and environmental differences can also affect how colours appear on the screen.

Meaningless Characters or Symbols are Printed

- **If the problem only occurs when printing a specific document, try editing the document and then printing it.**

If this does not resolve the problem, there may be a problem with your application program.

Printing is Blurred/Colours are Wrong

■ Print the nozzle check pattern to ensure that ink is output correctly.

If the nozzle check pattern does not print correctly, clean the print head.

➡ [Printing the Nozzle Check Pattern](#)

➡ [Print Head Cleaning](#)

If the problem is not resolved after cleaning the print head several times, replace either of ink tanks. If print quality still remains poor, the print head may be worn out. Contact a Canon service representative.

Note ➤ Always ensure you dispose of the protective cap from a print head.

■ Ensure you are printing on the correct side of the media.

You can only print on one side of certain media.

Straight Lines are Misaligned

■ Align the print head.

Windows

- 1 Open the Printer Properties dialog box.
 [Opening the Printer Properties Dialog Box](#)
- 2 Click the **Maintenance** tab.
- 3 Click **Print Head Alignment**.
Follow the instructions on the screen.

Macintosh

- 1 Open the Page Setup dialog box.

The Page Setup dialog box can normally be opened by selecting **Page Setup...** in the **File** menu.

- 2 Click **Utilities**.

- 3 Select **Test Print** from the pull-down menu, and then click **Print Head Alignment**.

Follow the instructions on the screen.

Note ➤ Straight lines can become misaligned if the paper thickness lever has been moved. Aligning the print head may also resolve this problem.

■ In the printer driver settings, select a higher print quality setting.

Windows

- 1 Open the Printer Properties dialog box.
 [Opening the Printer Properties Dialog Box](#)
- 2 On the **Main** tab, click **High** for the **Print Quality** setting.

Macintosh

- 1 Open the Print dialog box.

The Print dialog box can normally be opened by selecting **Print** in the **File** menu.
- 2 For **Print Mode**, select **Manual** and then click **Details**.
- 3 Click the **Quality** icon and then drag the **Print Quality** slide bar to the **Fine** end.

Printed Paper Curls or Ink Blots

- Use high resolution paper or photo paper to print images that require a lot of ink, (i.e. pictures with intense colours or photographs).
- Reduce the Intensity setting in the printer driver and try printing again.

Windows

- 1 Open the Printer Properties dialog box.
 [Opening the Printer Properties Dialog Box](#)
- 2 On the **Main** tab, select **Manual** for **Colour Adjustment/Color Adjustment**, and then click **Set**.
- 3 Drag the **Intensity** slide bar to adjust the intensity.

Macintosh

- 1 Open the Print dialog box.

The Print dialog box can normally be opened by selecting **Print** in the **File** menu.

- 2 For **Print Mode**, select **Manual** and then click **Details**.

- 3 Click the **Colour/Color** icon and then drag the **Intensity** slide bar to set the intensity.

Back of Paper is Smudged

- If the next page prints before the ink is dry, enable the **Pause Page** printer driver setting.

You can either remove each printed sheet from the output tray as soon as it is printed, or adjust the Ink Drying Wait Time to pause after each sheet has printed.

Windows

- 1 Open the Printer Properties dialog box.
 [Opening the Printer Properties Dialog Box](#)
- 2 Click the **Maintenance** tab.
- 3 Click **Custom Settings** to open the Custom Setting dialog box.
- 4 Drag the Ink Drying Wait Time slide bar, and then click **Send**.

Macintosh

- 1 Open the Page Setup dialog box.

The Page Setup dialog box can normally be opened by selecting **Page Setup...** in the **File** menu.

- 2 Click the **Utilities** button.

- 3 Select **Custom Settings** from the pull-down menu.

- 4 Drag the Ink Drying Wait Time slide bar, and then click **Send**.

■ **You may need to clean some internal parts of the printer. Follow the procedure below.**

- 1 Load sheets of A4 or Letter plain paper in the printer.

- 2 Hold down the RESUME/CANCEL button until the POWER lamp flashes three times, and release the button.

- 3 Repeat this operation until there are no more smudges on the test page.

Printed Surface is Scratched

■ Ensure you are using suitable paper.

- The paper weight must be less than 105 g/m² (28 lb).

If you use non-Canon brand paper heavier than 105 g/m² (28 lb), the print head may scratch the printed surface.

Clean the print head first and print with the correct paper.

- The paper must not be curled.

This problem can be resolved by simply turning the paper over.

- Before starting Borderless Printing, check the paper that you are using.

With Borderless Printing, the print quality may decrease or smudging may occur at the top and bottom edges of the paper. Use Photo Paper Pro, Glossy Photo Paper, Photo Paper Plus Glossy or Matte Photo Paper. If smudging still occurs, set the Paper Thickness Lever to the right and try printing again.

■ When printing on thick paper, set the paper thickness lever to the right.

This widens a gap between the print head and the paper. If the paper is scratched even when printing on plain paper, also try this. When the message suggesting that the position of the lever is not proper displayed, continue printing.

■ Reduce the Intensity setting in the printer driver and try printing again.

When printing an image with high intensity, especially on plain paper, the paper may absorb too much ink and become wavy. This may cause the printed surface to become scratched.

Windows

- 1 Open the Printer Properties dialog box.
 [Opening the Printer Properties Dialog Box](#)
- 2 On the **Main** tab, select **Manual** for **Colour Adjustment/Color Adjustment**, and then click **Set**.
- 3 Drag the **Intensity** slide bar to adjust the intensity.

Macintosh

- 1 Open the Print dialog box.

The Print dialog box can normally be opened by selecting **Print** in the **File** menu.

- 2 For **Print Mode**, select **Manual** and then click **Details**.

- 3 Click the **Colour/Color** icon and drag the **Intensity** slide bar to set the intensity.

■ Ensure you are printing within the recommended printing area.

 Printing Area

White Streaks

■ Print the nozzle check pattern to check the ink output.

If a specific colour does not print in the nozzle check pattern, clean the print head.

➡ [Printing the Nozzle Check Pattern](#)

➡ [Print Head Cleaning](#)

The problem can also be resolved by aligning the print head. For details on print head alignment, refer to "[Straight Lines are Misaligned](#)".

Colours are Uneven or Streaked

- Increase the print quality setting in the printer driver settings.

Windows

- 1 Open the Printer Properties dialog box.
 [Opening the Printer Properties Dialog Box](#)
- 2 On the **Main** tab, click **High** for the **Print Quality** setting.

Macintosh

- 1 Open the Print dialog box.

The Print dialog box can normally be opened by selecting **Print** in the **File** menu.
- 2 For **Print Mode**, select **Manual** and then click **Details**.
- 3 Click the **Quality** icon and then drag the **Print Quality** slide bar to the **Fine** end.

■ Set the halftoning method to Diffusion in the printer driver settings.

Windows

- 1 Open the Printer Properties dialog box.
 [Opening the Printer Properties Dialog Box](#)
- 2 On the **Main** tab, select **Custom** for the **Print Quality** setting, and click **Set**.
- 3 Click **Diffusion** for the **Halftoning** setting.

Macintosh

- 1 Open the Print dialog box.
The Print dialog box can normally be opened by selecting **Print** in the **File** menu.
- 2 For **Print Mode**, select **Manual** and then click **Details**.
- 3 Click the **Quality** icon and then click **Diffusion** for the **Halftoning** setting.

Printer Does Not Start or Stops During Print Jobs

- Printing Does Not Start
- Printing Stops Before It is Completed
- Printer Moves But Does Not Print
- Print Head Holder Does Not Move

Printing Does Not Start

■ Ensure the printer is turned on.

If the POWER lamp is off, press the POWER button.

If the POWER lamp is flashing green, the printer is initialising. Wait until the POWER lamp stops flashing.

Note ➤ When printing a large amount of data such as a photo or graphics, it takes longer than usual to begin printing. While the POWER lamp is flashing, the computer processes the data and sends it to the printer. Simply wait until the processing is completed.

■ Ensure the printer is securely connected to the computer.

Note ➤ If you are using a switch box or other device, remove and reconnect the printer directly to the computer. Try printing again.
If printing is now successful, there may be a problem with the device.
Also there could be a problem with the cable(s). Replace the cable(s) and try printing again.

■ Ensure the correct printer driver is selected.

In Windows, ensure that **Canon S330** is selected in the **Print** dialog box.

In Macintosh, ensure that **S330** is selected in the **Chooser**.

Note ➤ In Windows, you can set the Canon S330 as the default printer.

■ Ensure the printer port is set correctly. Windows

Set "USBPRNnn" or "USBnnn" ("n" represents a number) as the printer port.

- 1 Click the **Start** button, then select **Settings, Printers**.
- 2 Select the **Canon S330** icon.
- 3 Open the **File** menu and select **Properties**.
- 4 Click the **Details** tab (or **Ports** tab) and set the printer port.

Printing Stops Before It is Completed

■ Check the status of the POWER lamp.

When the POWER lamp is flashing green, the printer is processing data. Printing a large amount of data such as a photo or graphics takes time for the computer to process the data, during which the printer may appear to not be functioning.

In addition, when continuously printing material that uses a large amount of black ink on plain paper, the printer will sometimes pause. In either case, simply wait until the processing is completed.

■ Halt the print job and turn the printer off for at least 15 minutes to cool the print head down.

The print head can overheat when continuously printing for long time. To protect the print head, the printer will sometimes pause automatically at a line break before resuming. In this event, interrupt the print job at a convenient time and turn the printer off for at least 15 minutes.

Furthermore, when continuously printing graphics or photos with intense colours, printing may stop to protect the print head. In this case, printing will not resume. Turn the printer off and wait for at least 15 minutes.

Caution ➤ Inside the printer, the area around the print head can become extremely hot. Do not touch the print head or nearby components.

Printer Moves But Does Not Print

■ Print the nozzle check pattern to ensure that ink is output correctly.

If the nozzle check pattern does not print correctly, clean the print head.

➡ [Printing the Nozzle Check Pattern](#)

➡ [Print Head Cleaning](#)

If the problem is not resolved by cleaning the print head several times, replace either of ink tanks. If print quality still remains poor, the print head may be worn out. Contact a Canon service facility.

Print Head Holder Does Not Move

■ Ensure the printer is turned on.

The print head holder will not move unless the power is on. If the POWER lamp is off, close the front cover and turn the power on.

If the POWER lamp is flashing green, the printer is initialising.
When the POWER lamp stops flashing, open the front cover again.

■ If the front cover has been left open for a while, close and reopen it.

If the front cover is left open for more than 10 minutes, the print head holder moves to the right to prevent the print head from drying out. Close and reopen the front cover to return the holder.

Paper Does Not Feed Properly or Paper Jams

- Paper Does Not Feed Properly
- Envelopes or Post Cards Do Not Feed Properly
- Paper Jams

Paper Does Not Feed Properly

■ Confirm the paper conditions.

- If non-Canon brand media, the paper is not too thick (less than 105g/m² / 28 lb).
- The number of sheets loaded does not exceed the recommended level.
- The paper is not creased, curled or wrinkled.

 [Compatible Media Types](#)

■ Ensure that the left edge of the paper just touches the paper guide.

■ When printing envelopes, refer to "[Envelopes](#)" in "[Printing Media](#)," and prepare the envelopes before printing.

Once you have prepared the envelopes, load them in the printer in portrait orientation. If the envelopes are placed in landscape orientation, they may not feed properly.

■ When using transparencies, load one sheet of plain paper in the printer first, and then place the transparencies on top of it.

The last transparency may not feed properly unless there is a sheet of plain paper beneath it.

Envelopes or Post Cards Do Not Feed Properly

If envelopes or post cards do not feed properly even after removing curl, clean the paper feed roller.

- 1 Ensure the printer is on and there is not any paper loaded in the printer.
- 2 Hold the RESUME/CANCEL button down and release as the POWER lamp flashes three times.

The paper roller starts rotating ten times as it cleans.

Repeat this three times.

- 3 Load a sheet of A4 or Letter sized plain paper in the printer.
- 4 Hold the RESUME/CANCEL button down and release as the POWER lamp flashes three times feed the sheet.

Repeat this three times.

If the printer still does not feed the envelopes or the post cards through even after the cleaning, repeat these procedures again.

Paper Jams

Remove the paper according to the following procedure.

- 1 Slowly pull the paper out, either from the sheet feeder or from the paper output slot, whichever is easier.

If the paper tears and a piece remains inside the printer, open the front cover and remove it.

If you cannot pull the paper out, turn the printer off and turn it back on. The paper will be ejected automatically.
- 2 After removing all paper, close the front cover.
- 3 Reload the paper into the printer and press the RESUME/CANCEL button.

Note ➤ When reloading the paper into the printer, refer to "[Paper Does Not Feed Properly](#)" to confirm that you are using the correct paper and are loading it into the printer correctly.

The POWER Lamp Flashes Orange

An error has occurred in the printer. The number of flashes indicates the type of error, as outlined below. Check the cause and take the appropriate action.

■ Two flashes: Out of paper, paper jam or paper feed error

Replace the paper correctly and press the RESUME/CANCEL button.

If paper has jammed in the printer, clear the jam and press the RESUME/CANCEL button.

■ Three flashes: Paper jam

If paper has jammed in the printer, clear the jam, replace the paper in the printer correctly and press the RESUME/CANCEL button.

 [Paper Jams](#)

■ Six flashes: No print head installed

Install a print head.

■ Seven flashes: Defective print head

Contact a Canon service representative.

■ Eight flashes: Waste ink tank almost full

The printer has a built-in waste ink tank for the ink used during print head cleaning. Eight flashes indicates that the waste ink tank is nearly full. Press the RESUME/CANCEL button to cancel the error so you can continue printing. Before the waste ink tank becomes completely full, contact a Canon service representative to have the waste ink tank replaced.

Note ➤ Canon recommends to call for service as soon as this error occurs. Once the waste ink tank becomes completely full, printing will no longer be possible.

- **POWER lamp flashes alternate green and orange:**
An error that requires contacting a Canon service representative may have occurred.

Turn the printer off and unplug the printer from the power supply. Plug the printer back in and turn the printer back on.

If the problem remains, contact a Canon service representative.

An Error Message is Displayed on the Screen

- Error Writing to USBxxx Windows
- Application Error or General Protection Fault Windows
- Other Error Messages Windows
- Other Error Messages Macintosh

Error Writing to USBxxx

Windows

■ Ensure the printer is turned on.

If the POWER lamp is off, turn the printer on.

If the POWER lamp is flashing green, the printer is initialising. Wait until the POWER lamp stops flashing.

■ Ensure the printer is securely connected to the computer.

Note ➤ If you are using a switch box or other devices, remove and reconnect the printer directly to the computer and try printing again.
If printing is now successful, there may be a problem with the device.
Also there could be a problem with the cable(s). Replace the cable(s) and try printing again.

■ If spooling is enabled, disable it to send the print data directly to the printer and try printing again.

1 Open the Printer Properties dialog box from the **Start** menu.

➡ Opening the Printer Properties dialog box directly from the Start menu

- 2 On the **Details** tab, click **Spool Settings** and then select **Print directly to the printer**.

In Windows 2000 or Windows XP, click the **Advanced** tab and then click **Print directly to the printer**.

■ Verify the USB port status.

- 1 Right-click **My Computer** and select **Properties**.
- 2 On the **Device Manager** tab, double-click **Universal serial bus controller**, and then double-click **Canon S330**.

In Windows 2000 or Windows XP, click **Device Manager...**, **Universal serial Bus controller** on the **Hardware** tab, and then double-click **USB Printing Support**.

- 3 On the **General** tab, check if there is any indication of a problem with the device.

In Windows 2000 or Windows XP, open the **USB Printing Support Properties** dialog box to see the **General** tab.

If an error has occurred, follow the instruction of "Notes on Handling the USB Interface (for Windows Users)" in the *Quick Start Guide*.

■ **Ensure that the printer port setting corresponds to the printer interface connection.**

1 Open the Printer Properties dialog box from the **Start** menu.

➡ Opening the Printer Properties dialog box directly from the Start menu

2 On the **Details** tab (or **Ports** tab), select **USBPRNnn (Canon S330)** or **USBnnn (Canon S330)** ("n" represents a number) in the **Print to the following port**.

■ **There may be a problem in the printer driver. Uninstall the printer driver and reinstall it.**

➡ Uninstalling Printer Drivers

Also refer to the procedure “Notes on Handling the USB Interface (for Windows Users)” in the *Quick Start Guide*.

Application Error or General Protection Fault

Windows

- **Ensure the application program you are using is intended for your operating system.**

For example, if you attempt to print with a Windows 3.1 application under Windows 98, the application may not function correctly and an error may occur. Use an application program intended for your operating system.

- **If other applications are running, close them to increase available memory and try printing again.**

- **Ensure that enough memory is allocated to the application.**

Refer to the memory requirements of your application.

■ Check the amount of free space on the hard disk.

You may need to increase the amount of free space by deleting any unnecessary files.

■ If the problem only occurs when printing a specific document, try editing the document and then printing it.

If this resolves the problem, there may have been a problem in the original document. If the same problem occurs with the edited document, contact the manufacturer of your application.

■ There may be a problem in the printer driver. Uninstall the printer driver and reinstall it.

Also refer to the procedure “Notes on Handling the USB Interface (for Windows Users)” in the *Quick Start Guide*.

 [Uninstalling Printer Drivers](#)

Other Error Messages

Windows

■ If the BJ Status Monitor is displayed, follow the instructions on screen.

If an error occurs during printing, the BJ Status Monitor displays the error on the **Printer Status** tab. Follow the instructions on screen.

In Windows 98 or Windows Me, click the **Guide** tab for action to be taken in response to the error.

Refer to "[Low Ink Warning Displays Ink Tank with '?'](#)" as it is in the case.

■ If one of the following messages is displayed outside of the BJ Status Monitor:

Could not spool successfully due to insufficient disk space

Increase the amount of free space on the disk by deleting any unnecessary files.

Could not spool successfully due to insufficient memory

Increase available memory by closing any other applications currently running.

Printer driver could not be found

Uninstall the printer driver and reinstall it.

 [Uninstalling Printer Drivers](#)

Background printing failed (Windows 98/Windows Me only)

Restart Windows and try printing again.

Could not print Application name – File name

Try printing again once the current job is finished.

Other Error Messages

Macintosh

- If a message with the format "Error No.: Xn" (where "X" represents a letter and "n" represents a number) is displayed:

Error No.: X202

Not enough memory for printing. Increase available memory by closing any other applications currently running.

Error No.: X203

There is a problem with the printer driver. Uninstall the printer driver and reinstall it.

Uninstalling Printer Drivers

Error No.: X300

Ensure the power is on, and that the printer and the computer are securely connected. If the problem remains, verify the Chooser setting.

- 1 In the Apple menu, select **Chooser**.
- 2 Click the S330 icon and ensure S330 is selected as the connected destination.

If it is not selected, select it.

If the problem remains, delete all unnecessary documents from the Extensions and Control Panels folder.

Have you replaced an ink tank with a new one? is Displayed

If the front cover has been open for a certain period, a confirmation message of ink tank replacement may be displayed before the next print job.

■ If the ink tank has been replaced with a new one:

Click **Yes** to reset the ink counter.

■ If the front cover has been open for a while (the ink tank has not been replaced):


Click **No** to close the dialog box.

You can choose to disable the display of a confirmation message.

 [Modifying the low ink warning setting](#)


Low Ink Warning Displays Ink Tank with '?'

The ink level of an ink tank displayed with a '?' is not synchronised with its ink counter.

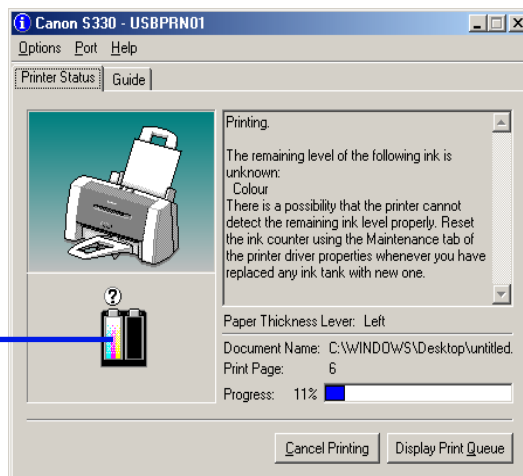

The colour ink level may not be correctly displayed.

BJ Status Monitor (Windows)

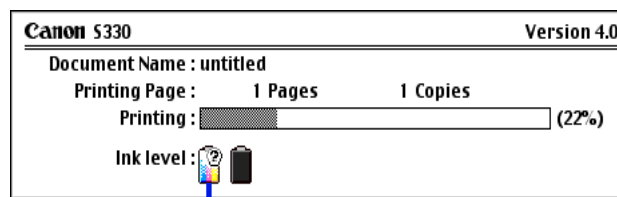

BJ Status Dialog (Macintosh)

The colour ink level may not be correctly displayed.

Macintosh

Note ➤ When the background printing is enabled, the low ink warning displays on the BJ Print Monitor (Macintosh).

➡ BJ Print Monitor

■ **Reset the ink counter from the printer driver when you replace the ink tank.**

➡ Resetting the ink counter from the printer driver setting screen

Note ➤ When **Display a confirmation message of ink tank replacement** is selected, a message asking whether or not the ink tank has been replaced is automatically displayed whenever the ink tank is replaced.

➡ Modifying the low ink warning setting

■ **Turn the low ink warning off until you replace the ink tank to stop the warning message.**

Windows

1 Ensure the printer is on and open the Printer Properties dialog box.

➡ Opening the Printer Properties Dialog Box

- 2 On the **Maintenance** tab, click **Low Ink Warning Setting** icon.
- 3 Clear a check box of **Display low ink warning** off and click **Send**.

Macintosh

- 1 Ensure the printer is on and open the Page Setup dialog box.
The Page Setup dialog box can normally be opened by selecting **Page Setup...** in the **File** menu.
- 2 Click the **Utilities** icon to open the Printer Utilities dialog box.
- 3 Select **Remaining ink level setting** from the pull-down menu and click the **Low Ink Warning Setting** icon.
- 4 Clear a check box of **Display low ink warning** off and click **Send**.

Note

- Also refer to "[How Low Ink Warning Setting Works](#)" to display the ink level correctly.

Problems Unique to Windows

- The BJ Status Monitor is Not Displayed
- Cannot Print in Background (Windows 98/Windows Me only)

The BJ Status Monitor is Not Displayed

■ Ensure "Enable bi-directional support for this printer" is selected.

- 1 Open the Printer Properties dialog box from the **Start** menu.
 - ➡ Opening the Printer Properties dialog box directly from the Start menu
- 2 On the **Details** tab, click **Spool Settings** and select "Enable bi-directional support for this printer."

In Windows 2000 or Windows XP, select "Enable bi-directional support" on the **Ports** tab.

Cannot Print in Background (Windows 98/Windows Me only)

■ Check the amount of free space on the hard disk.

Background printing requires a certain amount of disk space. You may need to delete unnecessary files, or disable background printing.

■ Ensure that background printing is enabled.

1 Open the Printer Properties dialog box.

 [Opening the Printer Properties Dialog Box](#)

2 On the **Page Setup** tab, click **Printer control...** and select **Background Printing**.

Problems Unique to the Macintosh

- Jagged Text or Graphics, or Banded Gradations
- Cannot Print in Background

Jagged Text or Graphics, or Banded Gradations

■ Ensure your application supports Quick Draw.

If you are using a PostScript-compatible application, printed text and lines may appear jagged and gradations may appear banded. As S330 is not a PostScript printer but a Quick Draw printer, use an application compatible with Quick Draw for printing.

Cannot Print in Background

■ Ensure background printing is enabled.

- 1 In the Apple menu, select **Chooser**.
- 2 Click **Backgrounding** on.

■ Check the amount of free space on the hard disk.

Background printing requires a certain amount of disk space. You may need to remove unnecessary files, or disable background printing.

Specifications



Printing method:

Bubble Jet on-demand

Printing resolution:

2400 (horizontal) × 1200 (vertical) dpi. max.

Print speed (printing with Canon standard pattern):

Black printing	Draft:	14 ppm
	Standard:	10.5 ppm
Colour printing	Draft:	10 ppm
	Standard:	4.7 ppm

Print direction:

Bi-directional

Print width:

203.2 mm max. (8.0 in)
(for borderless printing: 216.0 mm/8.5 in)

Resident print control mode:

Canon extended mode

Receive buffer:

56 KB

Interface:

USB 2.0-compatible

Interface connector:

USB standard Series B receptacle (USB interface)

Recommended printer cable:

Material: AWG28 (data wiring pair) or AWG20 to 28 (distribution pair)

Type: Twisted-pair shielded cable

Length: Up to 5.0 m (16.4 ft)

Connectors: USB standard Series B pluggable

Acoustic noise level:

Approx. 45 dB (A) (in the highest print quality mode)

Operating environment:

Temperature: 5 to 35°C (41 to 95°F)

Humidity: 10 to 90%RH (no condensation)

Storage environment:

Temperature: 0 to 35°C (32 to 95°F)

Humidity: 5 to 90% RH (no condensation)

Power supply:

Europe AC 230 V $\pm$ 10%, 50 Hz

USA/Canada AC 120 V, 60 Hz
Australia AC 240 V, 50 Hz

Power consumption:

Standby: Approx. 2 W
Printing: Approx. 30 W

Dimensions (without a paper rest and paper output tray):

390 (W) × 248 (D) × 185 (H) mm
15.35 (W) × 9.76 (D) × 7.28 (H) in

Weight:

Approx. 3.4 kg (7.48 lb.)

■ Feed method:

Continuous feed through auto sheet feeder

For Plain Paper, Envelopes, High Resolution Paper,
Glossy Photo Paper, High Gloss Photo Film,
Glossy Photo Cards, Photo Paper Pro,
Photo Paper Plus Glossy, Matte Photo Paper
Transparencies, T-shirt Transfers, Banner Paper

■ Sheet feeder capacity:

Plain Paper (75 gsm)	100 sheets max.
High Resolution Paper	80 sheets max.
Envelopes	10 pieces max.
Glossy Photo Paper	10 sheets max.
High Gloss Photo Film	1 sheet
Glossy Photo Cards	20 sheets max.
Photo Paper Pro PR-101	1 sheet (A4/Letter), 20 sheets max. (4x6)
Photo Paper Pro PC-101S	20 sheets max.
Photo Paper Plus Glossy PP-101	10 sheets max. (A4/Letter), 20 sheets max. (4x6)
Matte Photo Paper MP-101	10 sheets max.
Transparencies	30 sheets max.
T-Shirt Transfers	1 sheet
Banner Paper	1 sheet

■ Ordinary print media:

Regular size: A4, A5, B5, Letter, Legal, European DL, US Com.#10

Custom size: width: 90.0 to 215.9 mm (3.54 to 8.5 in)
height: 120.0 to 584.2mm (4.72 to 23.0 in)

Weight: 64 to 105 g/m² (17 to 28 lb)

Canon Special media:

High Resolution Paper	HR-101N
Glossy Photo Paper	GP-301N/GP-301
High Gloss Photo Film	HG-201
Glossy Photo Cards	FM-101
Photo Paper Pro	PR-101
Photo Paper Pro	PC-101S
Photo Paper Plus Glossy	PP-101
Matte Photo Paper	MP-101
Transparencies	CF-102
T-Shirt Transfers	TR-201
Banner Paper	

■ Graphic image printing:

Data format: Canon extended mode: Raster image format

Resolution: Canon extended mode: 300, 600, 1200, 2400 dpi

■ Print Head:

Black: 320 nozzles (600 dpi)

Cyan, Magenta, Yellow: 128 nozzles per each colour (600 dpi)

■ Ink Tanks:

Capacity:

Black (BCI-24 Black) approx. 300^{*1}, approx. 580^{*2}

Colour (BCI-24 Color) approx. 170^{*2}

*1 1500 characters per page, normal text, at standard and plain paper mode with Windows 98/Windows Me

*2 Based on printing the ISO JIS-SCID No.5 pattern at standard and plain paper mode with Windows 98/Windows Me

■ Printer driver operating environment:

IBM PC/AT-compatible computer running on Windows 98, Windows Me, Windows 2000, Windows XP or Macintosh computers with USB interface running on Mac OS 8.6 - Mac OS 9.X

■ Hard disk space:

Approx. 15 MB to install on Windows 98 and Windows Me, 30 MB on Mac OS 8.6-Mac OS 9.X, or approx. 25 MB on Windows 2000 and Windows XP (including temporary files)

Note ➤ Use the system under the following operating environment.

Windows

Computer with Microsoft Windows 98, Windows Me, Windows 2000 or Windows XP which is preinstalled by a computer manufacturer on purchase. (USB port operation also needs to be assured by the manufacturer.)

Macintosh

Macintosh computers with USB and Mac OS 8.6 - Mac OS 9.X, which is preinstalled by a computer manufacturer on purchase.

 
 
Specifications subject to change without prior notice.

■ Printing Area

To ensure the best print quality, the printer allows a margin along each edge of media.

Printing area (dark blue): Canon recommends that you print within this area.
()

Printable area (light blue): The area where it is possible to print. However, printing in this area can adversely affect the print quality or the paper feed precision. ()



➡ A4, B5, A5, 4" x 6"

➡ Letter, Legal


➡ Envelopes

➡ Banner Paper

A4, B5, A5, 4" x 6"

Size	Printable Area (width x height)
A4	203.2 × 289.0 mm / 8.0 × 11.4 in
B5	175.2 × 249.0 mm / 6.9 × 9.8 in
A5	141.2 × 202.0 mm / 5.6 × 7.9 in
4" x 6"	94.8 × 144.4 mm / 5.6 × 7.9 in


Note ➤ When printing on PR-101, GP-301 / GP-301N, PP-101 and MP-101, selection of "Borderless Printing" enables you to make prints with no margins. However, borderless printing may cause the top and bottom edges of paper to decrease in print quality or become soiled. (Under certain circumstances, the edges of the reverse side may be smudged.)

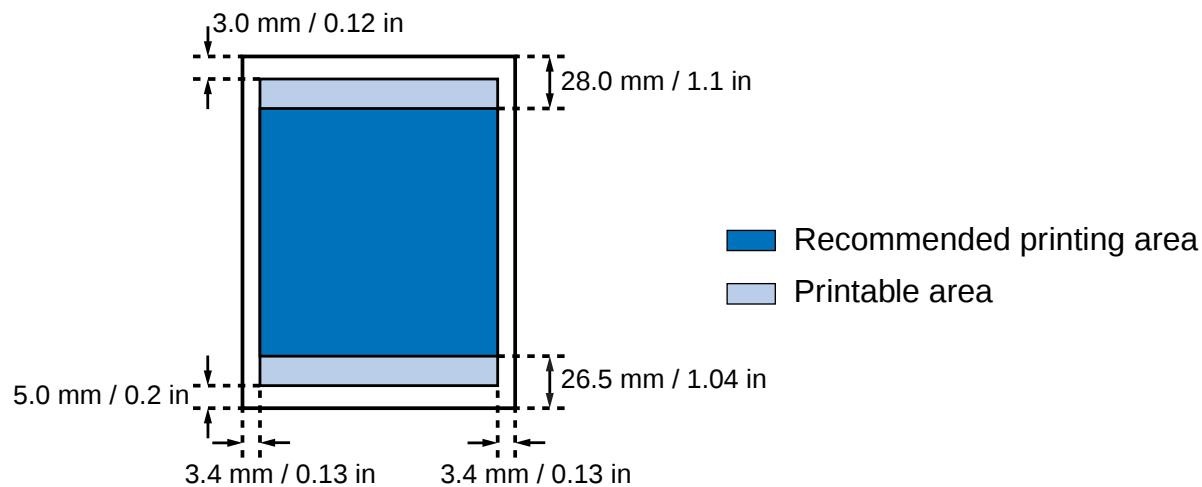

Letter, Legal


Size	Printable Area (width x height)
Letter	203.2 × 271.4 mm / 8.0 × 10.7 in
Legal	203.2 × 347.6 mm / 8.0 × 13.7 in

Note ➤ When printing on PR-101, GP-301 / GP-301N, PP-101 and MP-101, selection of "Borderless Printing" enables you to make prints with no margins. However, borderless printing may cause the top and bottom edges of paper to decrease in print quality or become soiled. (Under certain circumstances, the edges of the reverse side may be smudged.)

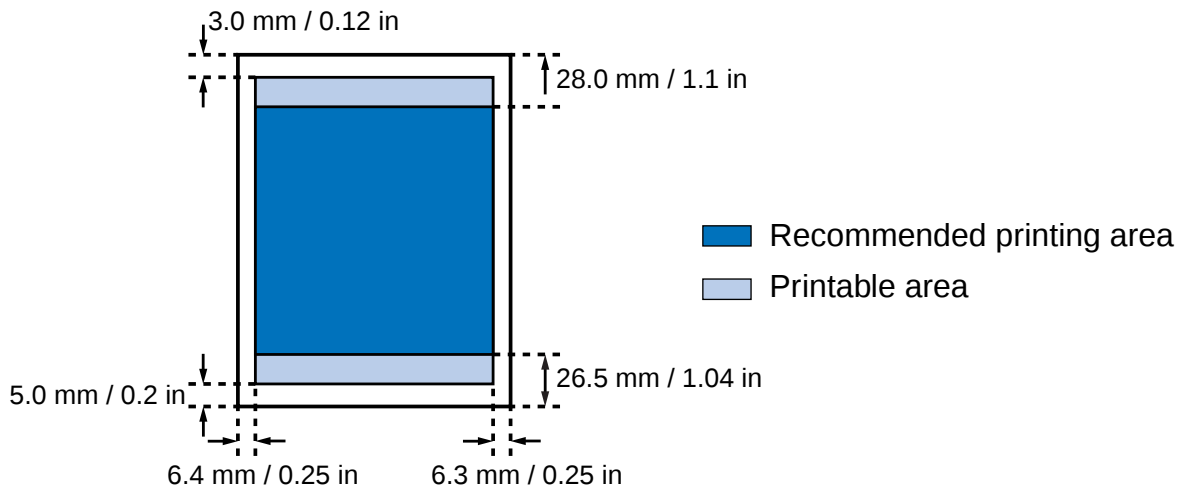


Envelopes

Size	Printable Area (width x height)
European DL	190.5 × 103.2 mm / 7.5 × 4.1 in
US Com. #10	211.8 × 98.0 mm / 8.3 × 3.9 in

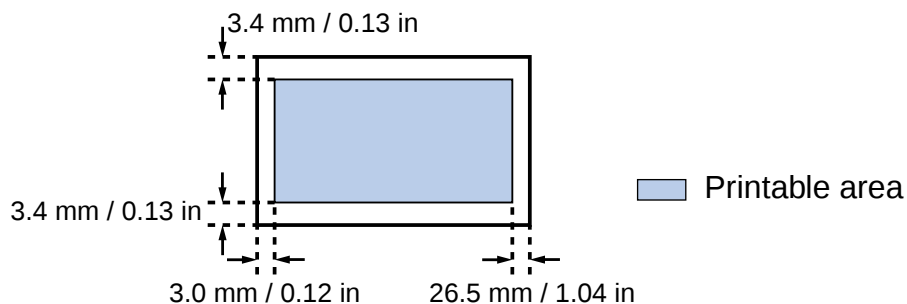

Banner Paper

Size	Printable Area (width x height)
Banner Paper	A4: 203.2 × 1774.0 mm / 8.0 × 69.8 in
	Letter: 203.2 × 1668.4 mm / 8.0 × 65.7 in

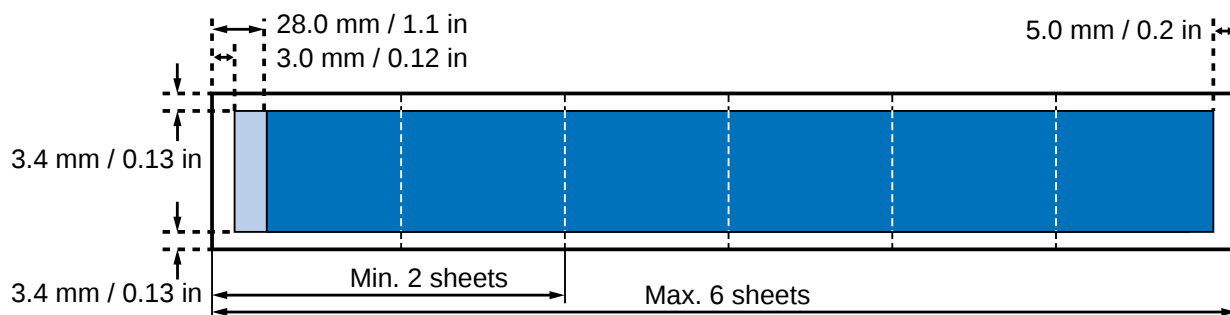

■ Recommended printing area

■ Printable area

Index



A

Amount of Extension	27
Application Error	166

B

Background printing (Macintosh)	59
Background printing (Windows)	177
Banner Paper	125
BCI-24 Black	69
BCI-24 Color	69
BJ Print Monitor (Macintosh)	59
BJ Status Dialog (Macintosh)	78, 172
BJ Status Monitor (Macintosh)	65
BJ Status Monitor (Windows)	37, 78, 168, 172, 176
Booklet Printing	26
Borderless Printing	45

C

Cancelling a Print Job (Macintosh)	61
Cancelling a Print Job (Windows)	40
Chooser (Macintosh)	59

Cleaning	34, 46, 86
Client (Macintosh)	63
Compatible Media Types	96

D

Deep Cleaning	34, 89
Duplex Printing	27, 57

E

Enabling Low Ink Warning	77
Envelopes	99
Error Message	162, 168, 170

F

Fit to Page Printing	26, 57
Front cover	15, 154

G

Gamma Correction (Macintosh)	55
General Protection Fault	166
Glossy Photo Cards FM-101	109
Glossy Photo Paper GP-301N/GP-301	105

H

High Gloss Photo Film HG-201	107
High Resolution Paper HR-101N	103

I

Ink Counter Reset	35, 75
Ink Tank	68, 69

L

Low Ink Warning	35, 77
Low Ink Warning Displays Ink Tank with '?'	172

M

Matte Photo Paper MP-101	119
Media Type (Macintosh)	48
Media Type (Windows)	23

N

Network (Macintosh)	62
Nozzle Check Pattern	85

O

Opening the Printer Properties Dialog Box (Windows)	20
---	----

P

Page Setup Dialog Box (Macintosh)	44
Page Size (Windows)	25
paper feed roller	101, 157
Paper Guide	15
Paper Jams	158
Paper Output Tray	15
Paper Rest	15

Paper Size (Macintosh)	44
Paper Thickness Lever	17
Photo Optimizer PRO (Macintosh)	53
Photo Optimizer PRO (Windows)	31
Photo Paper Plus Glossy PP-101	116
Photo Paper Pro PC-101S	114
Photo Paper Pro PR-101	111
PICT File (Macintosh)	57
Poster	57
Poster Printing	26
POWER Button	18
POWER Lamp	18, 159
Preview before printing	24
Print Advisor (Windows)	24
Print Dialog Box (Macintosh)	48
Print Head Holder	17
Print Head Lock Lever	17
Print Mode (Macintosh)	49
Print server (Macintosh)	62
Printable area	188
Printer Driver (Macintosh)	42
Printer Driver (Windows)	19
Printer port	165
Printer Properties Dialog Box (Windows)	20, 22
Printing Area	188
Printing the Nozzle Check Pattern	82

R

Replacing an Ink Tank	69
RESUME/CANCEL Button	18

S

Sheet Feeder	15
Simulate illustration (Macintosh)	52
Simulate Illustration (Windows)	30
Specifications	181

T

Transparencies CF-102	121
Transporting the Printer	91
T-Shirt Transfers TR-201	123

U

Uninstalling Printer Drivers (Macintosh)	66
Uninstalling Printer Drivers (Windows)	41
USB Port	16, 164

V

Vivid Photo	31, 53
-------------	--------

W

When to Replace Ink Tank and Maintain Print Head	68
--	----