 


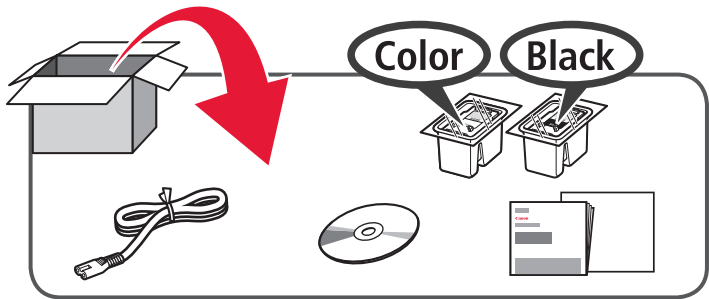


Canon **PIXMA MG2270**
Model Number: K10380 series


1



 
2

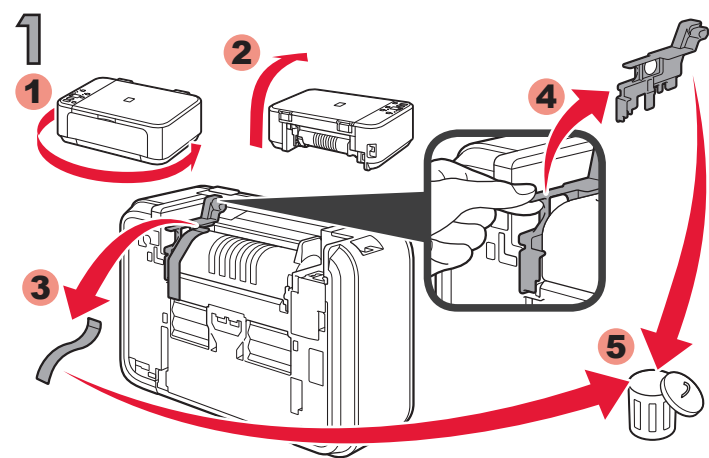


2

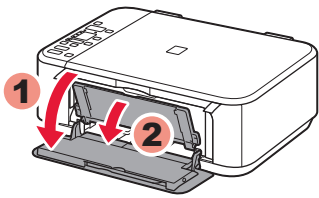 

3

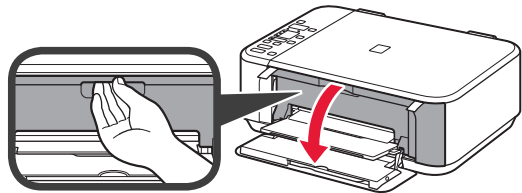 


4

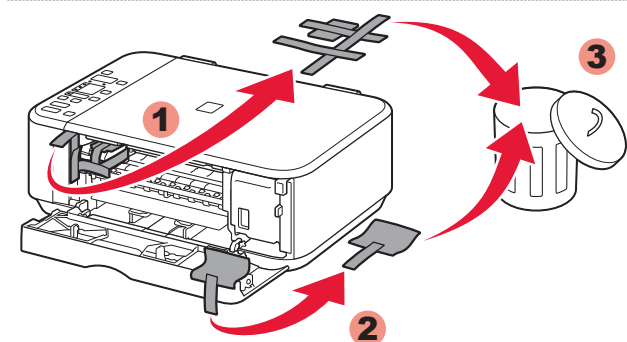 


3


 
1

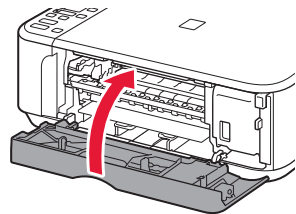


2

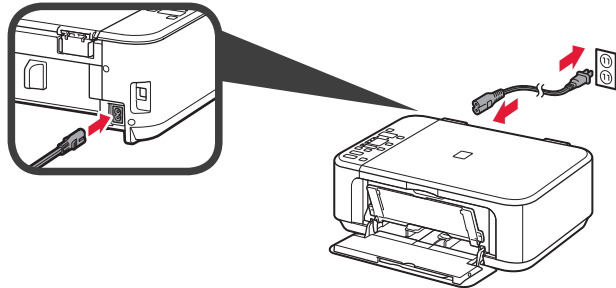 

3

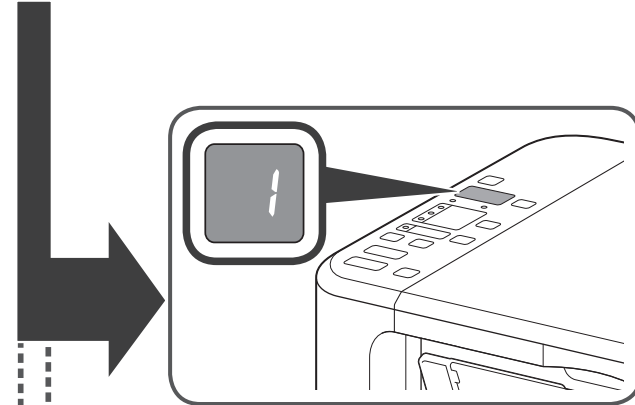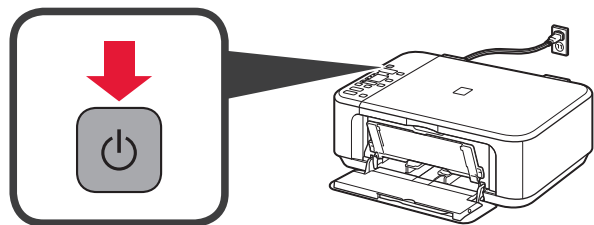  


4 1

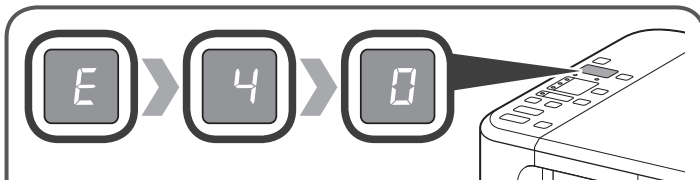 

1



 
2

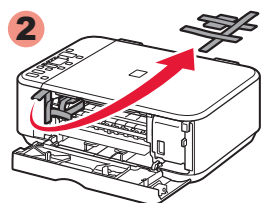



3 1

4


 
1

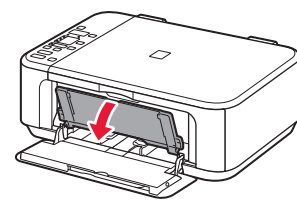



2

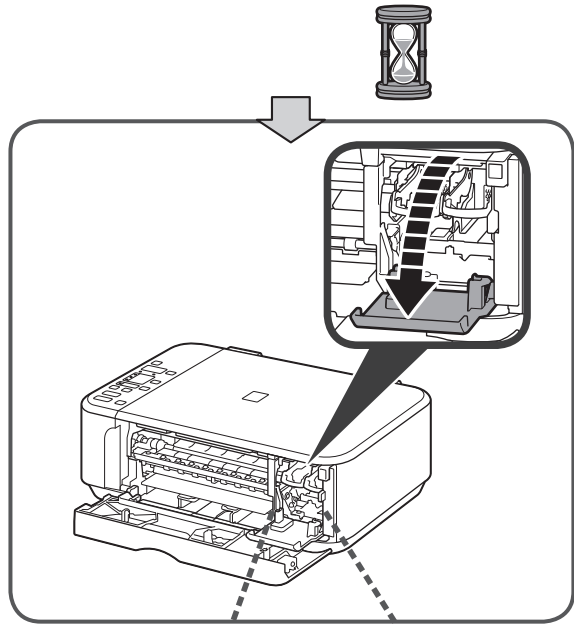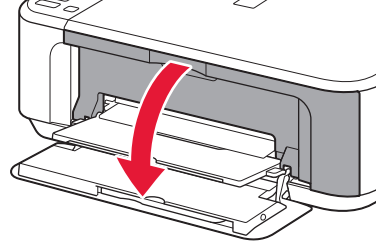  


3

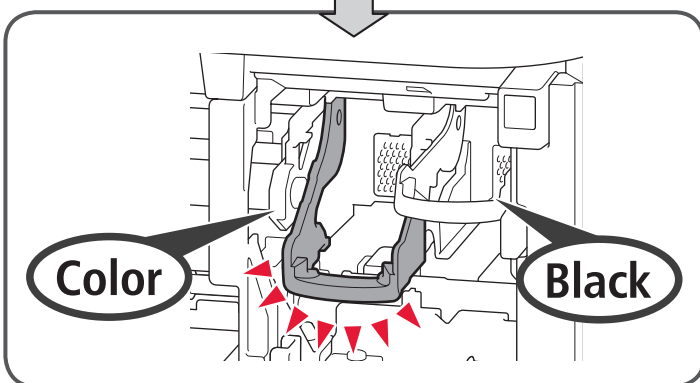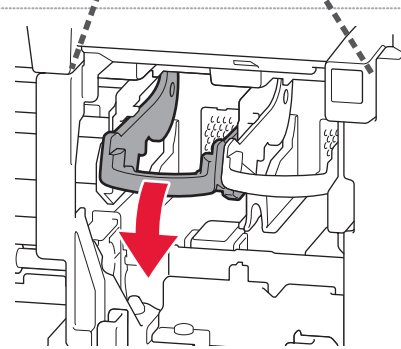  



4

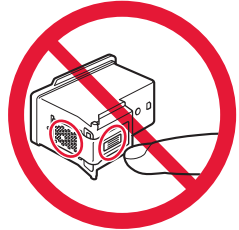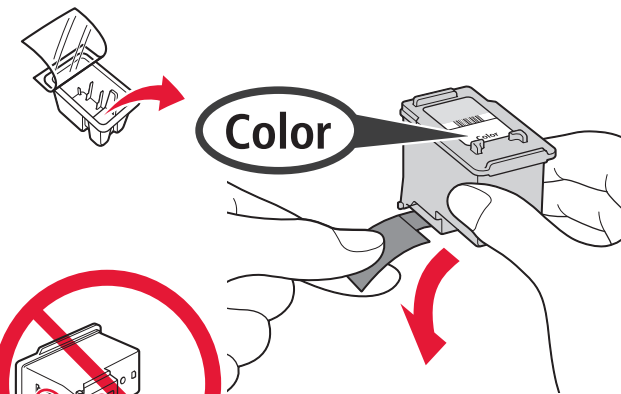  




5

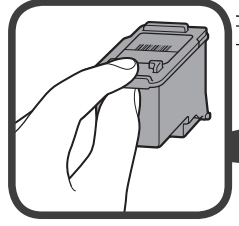 


6

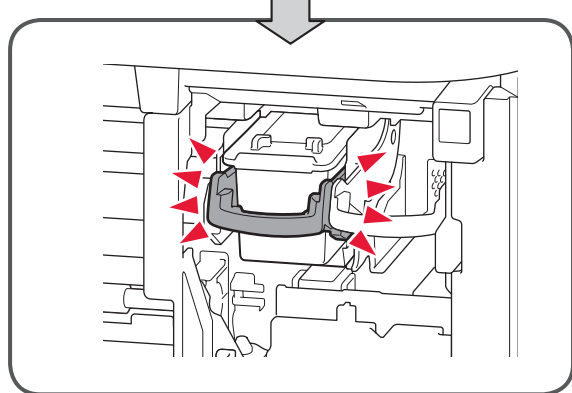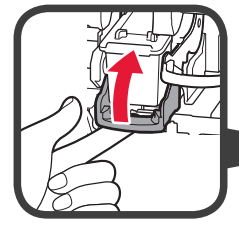  


7

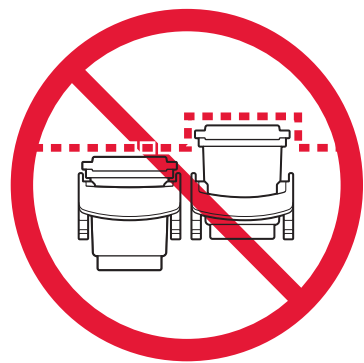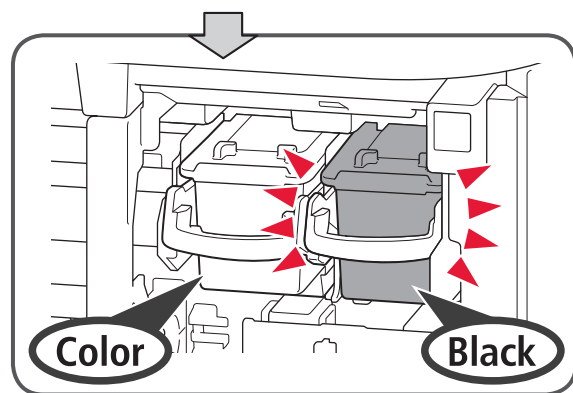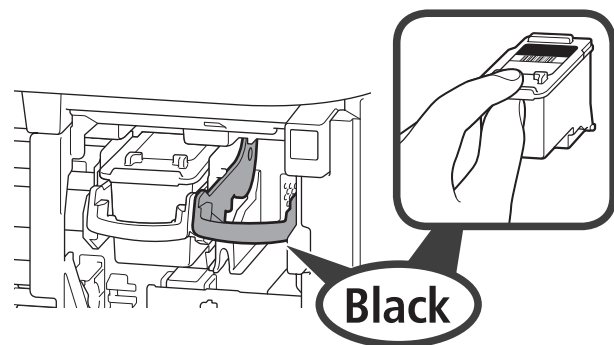   







8

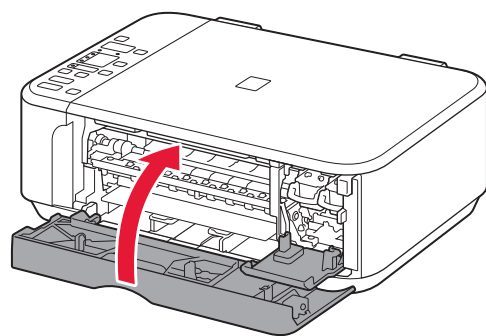 





00:00:20

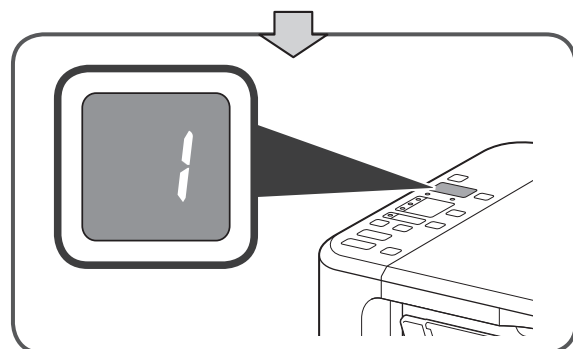 

5

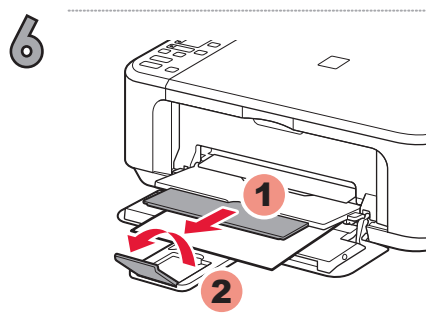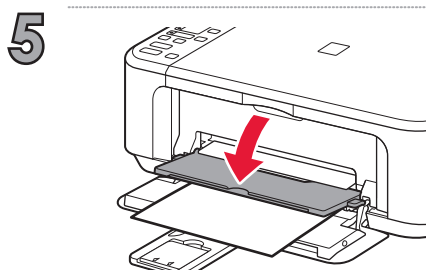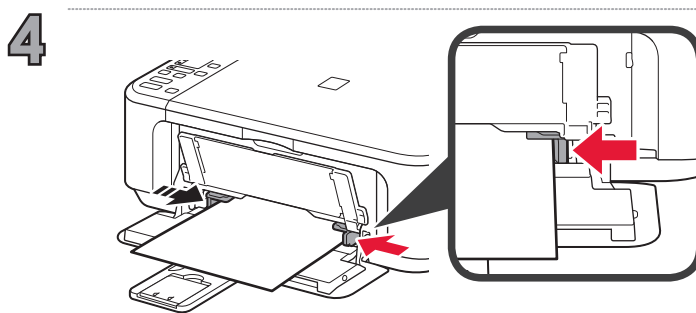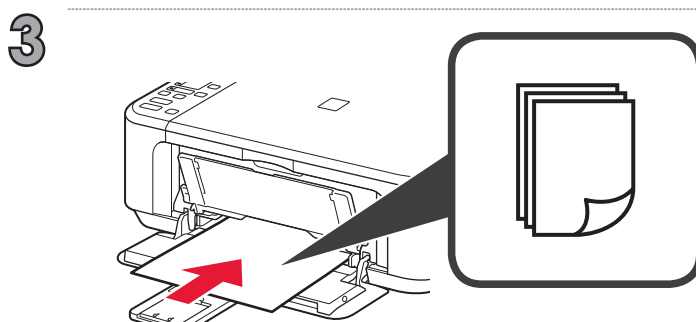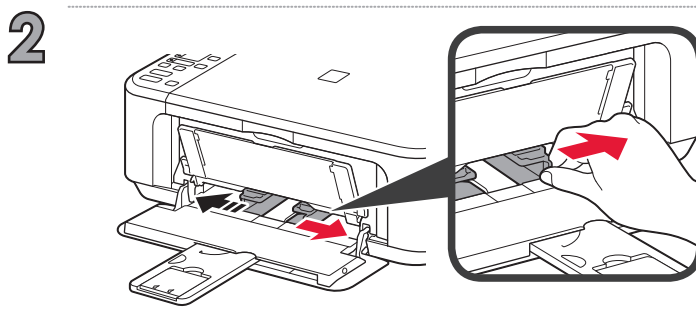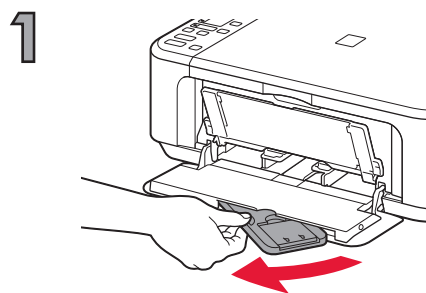      

6

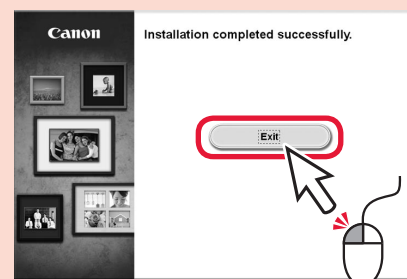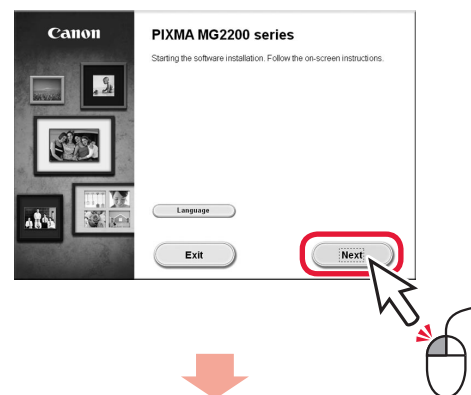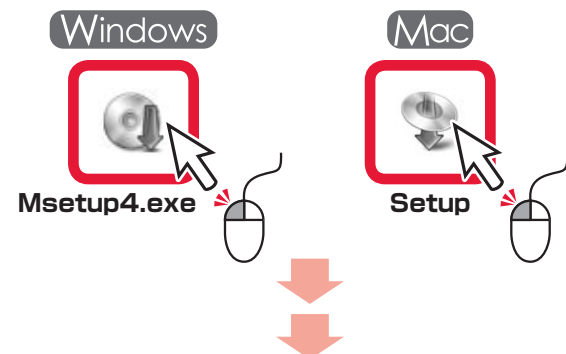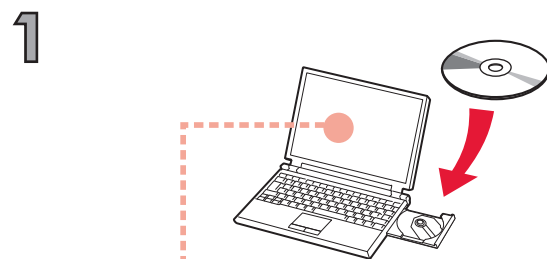    741XL
Color740XL
Black741
Color740
Black