 
 
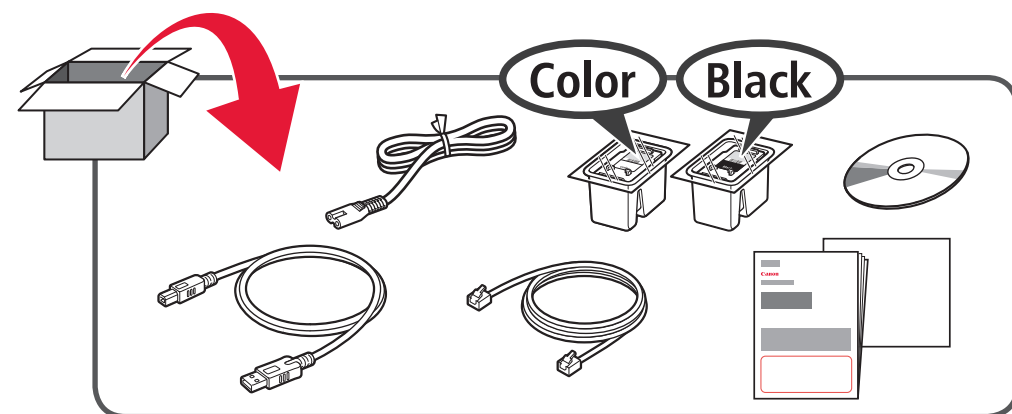 
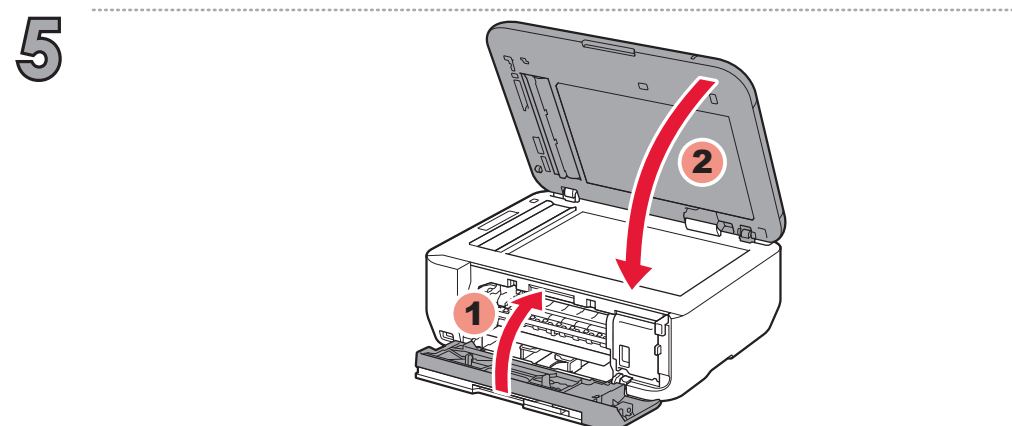 
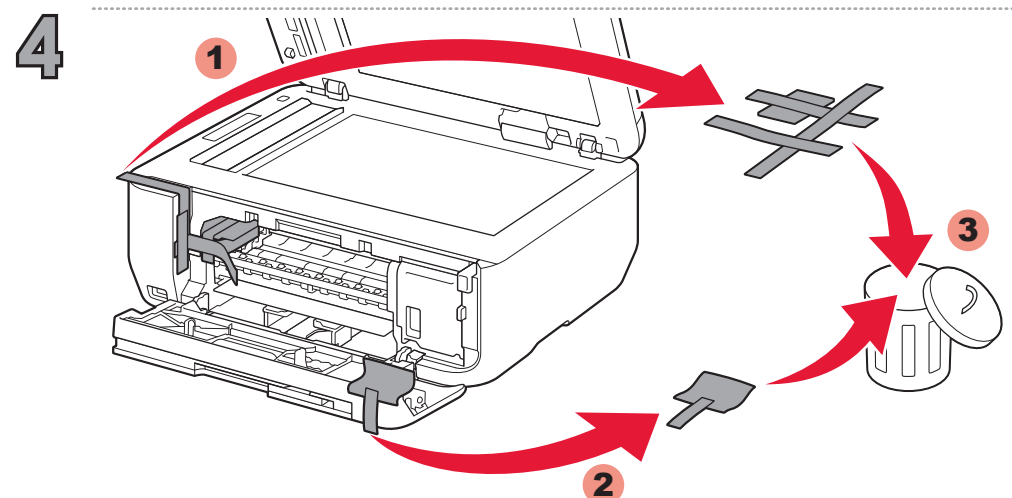 
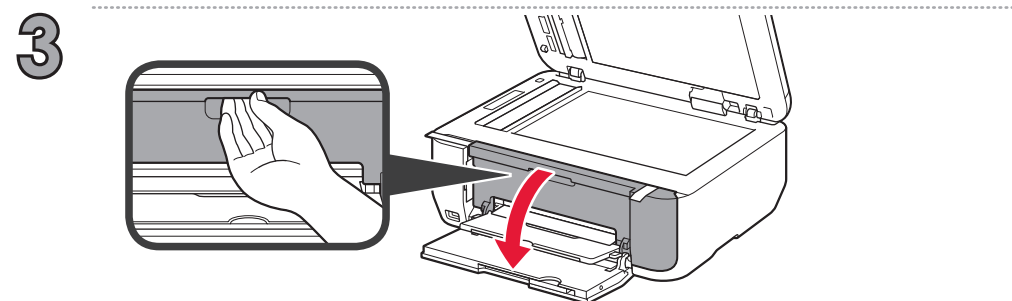 


Canon PIXMA MX455 series

 
 
 
 
 
 
 
1

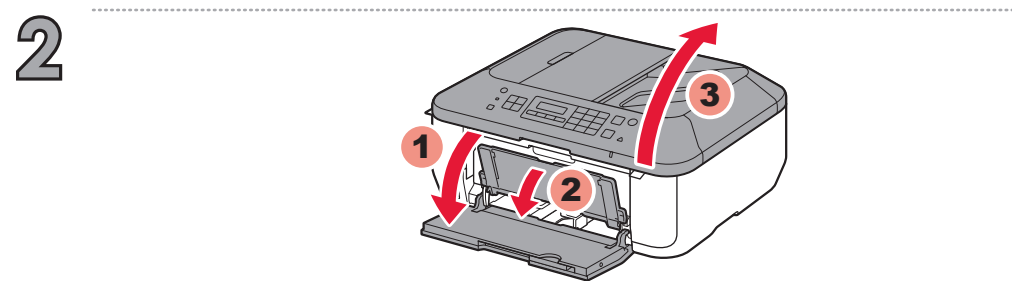







2

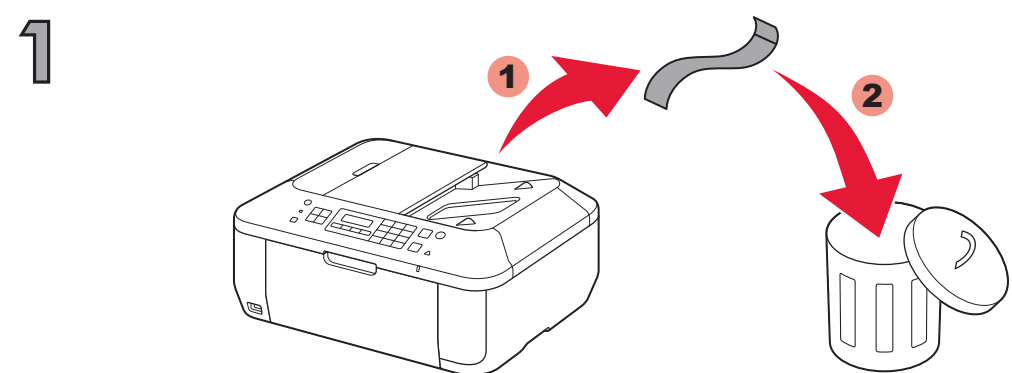








3

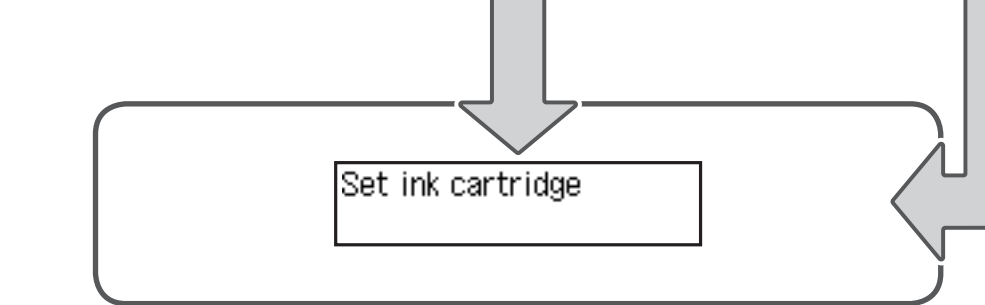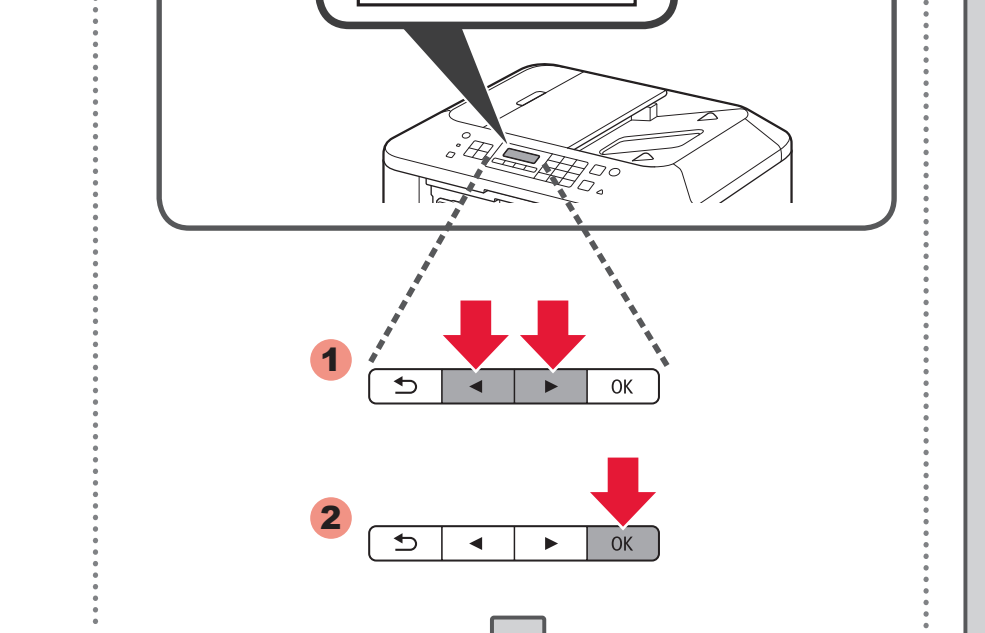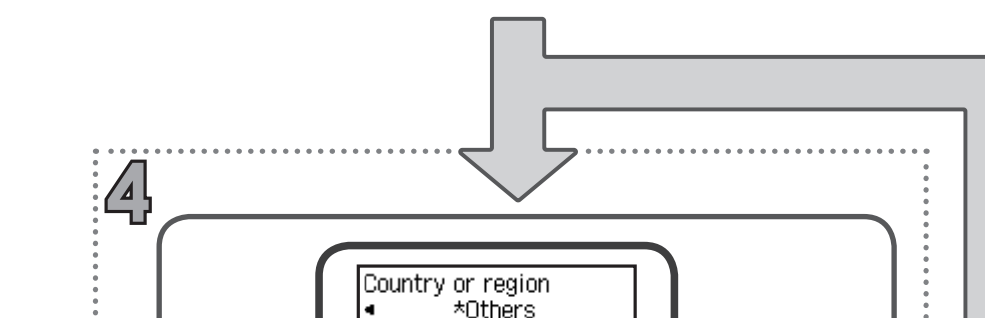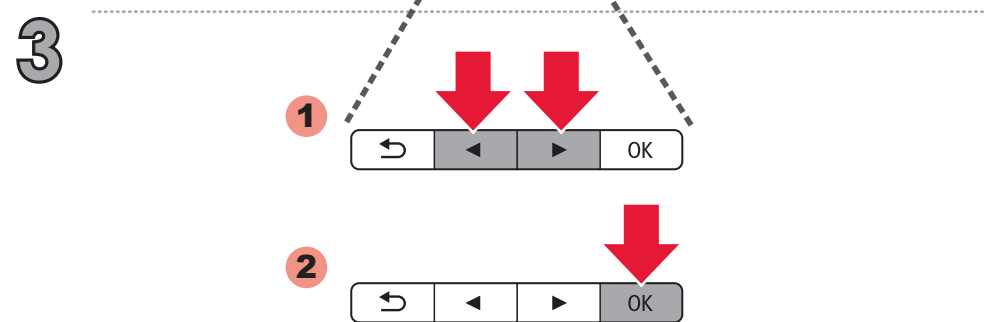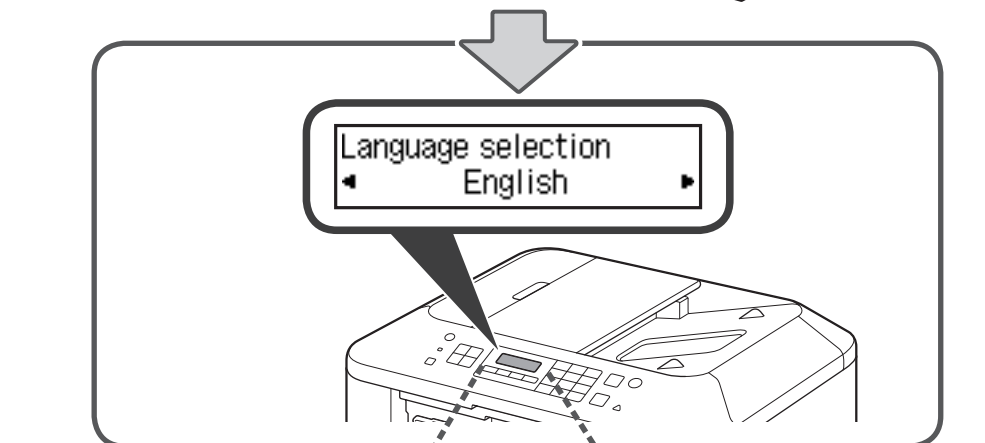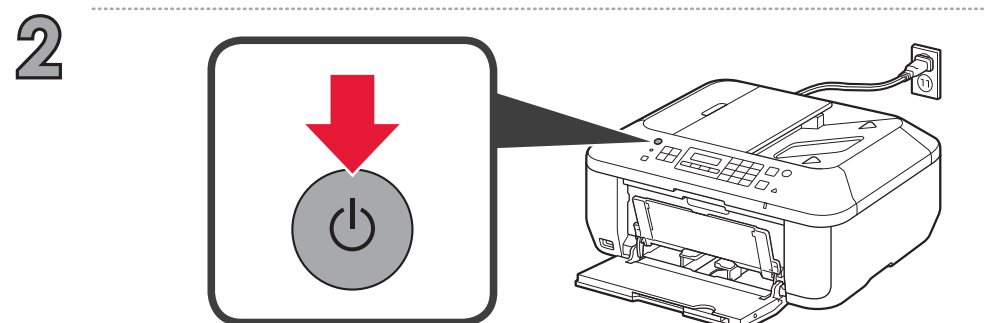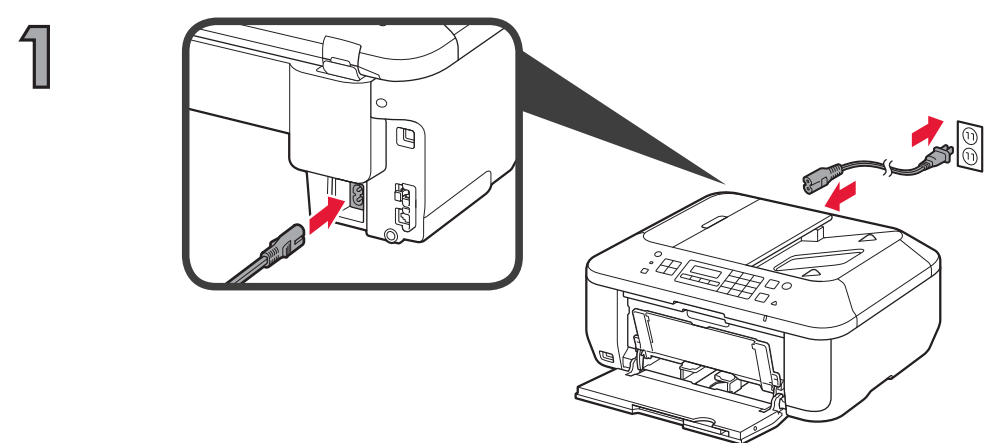

4

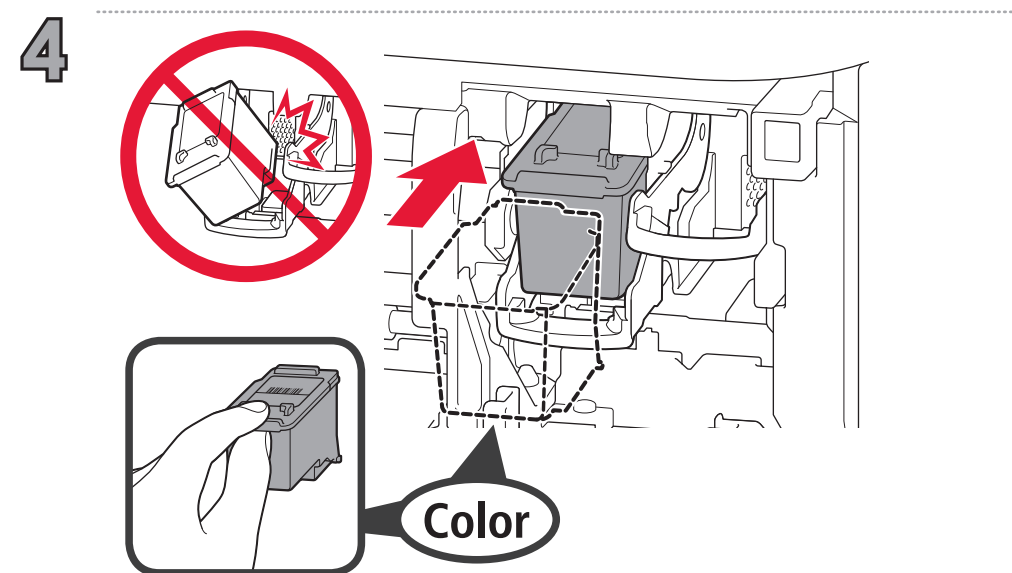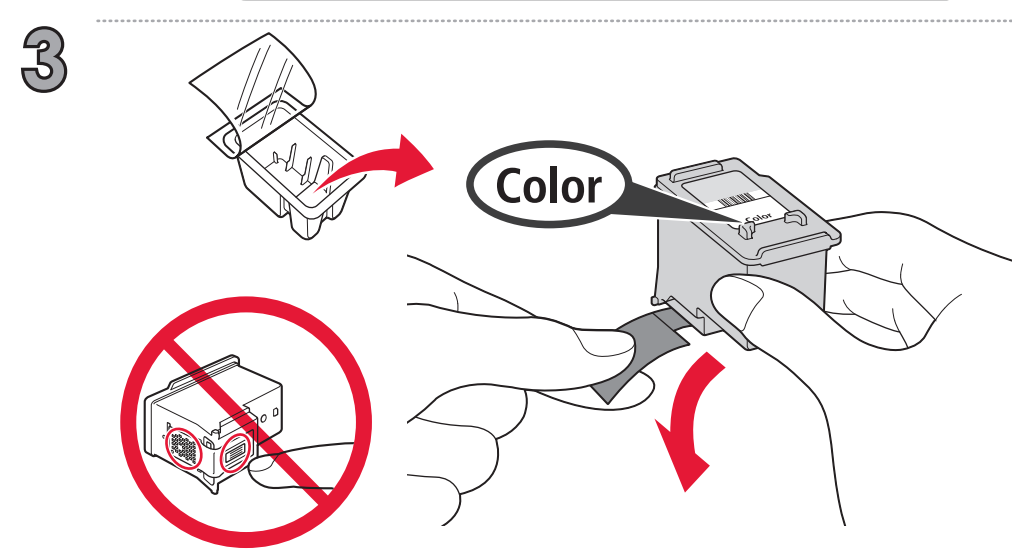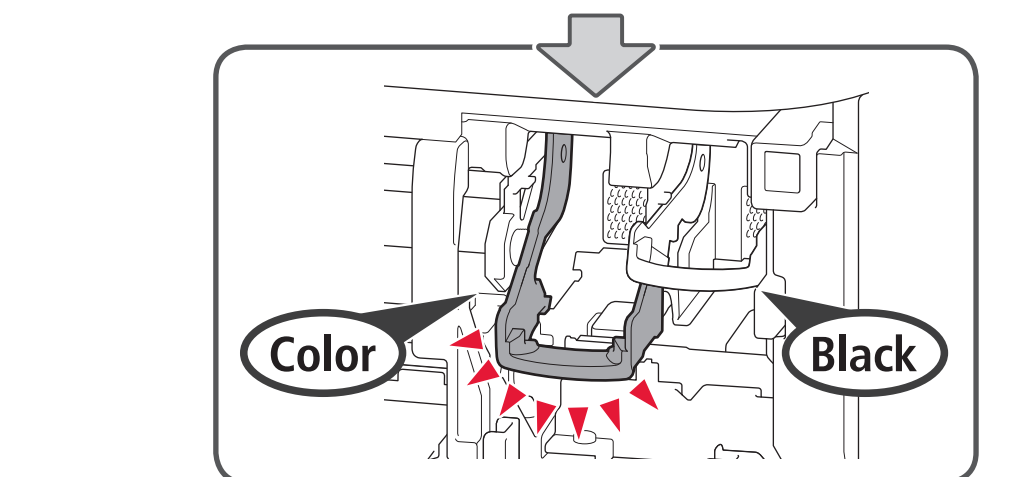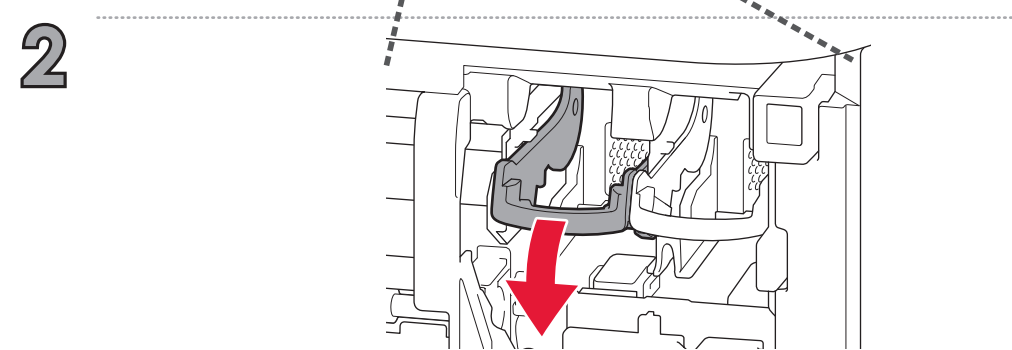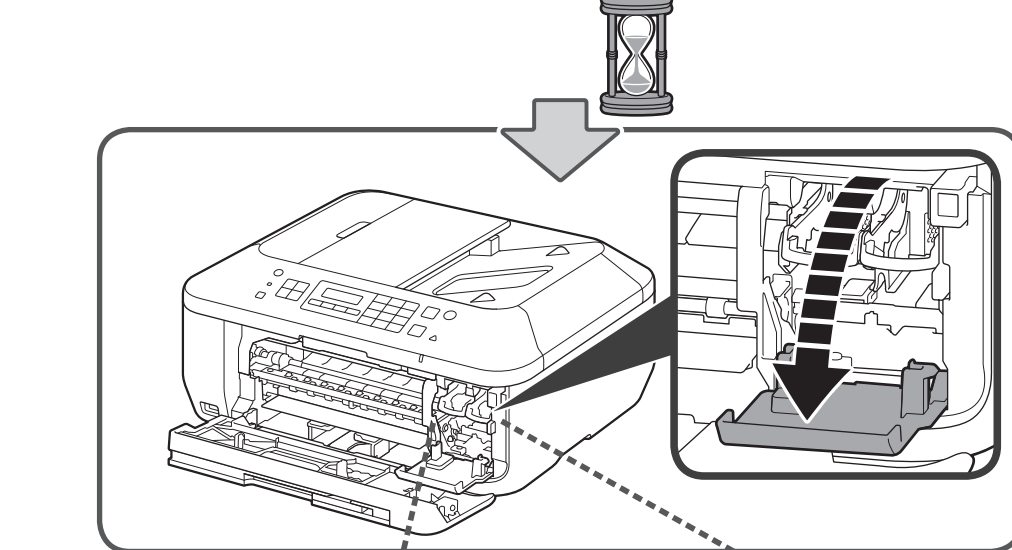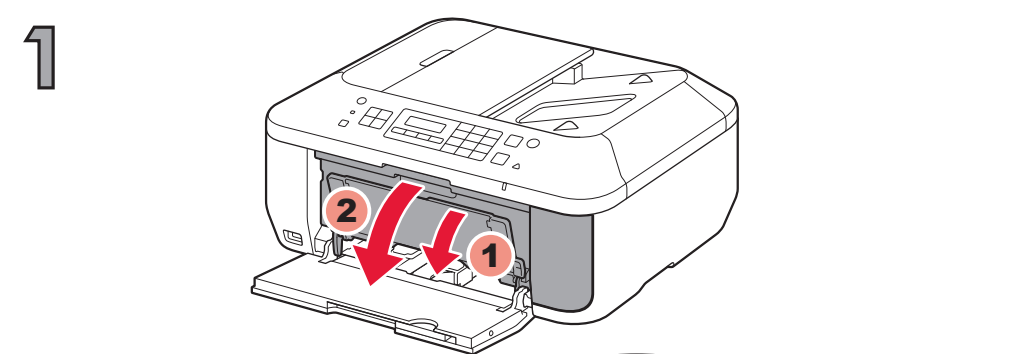      

5

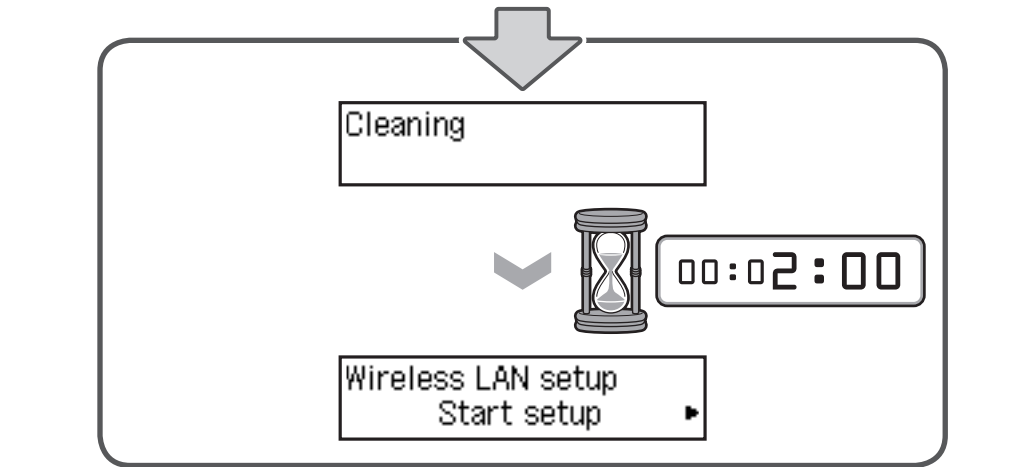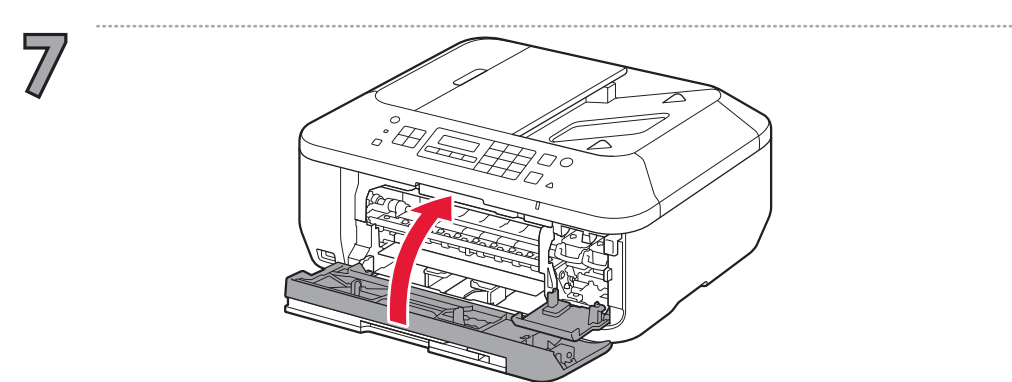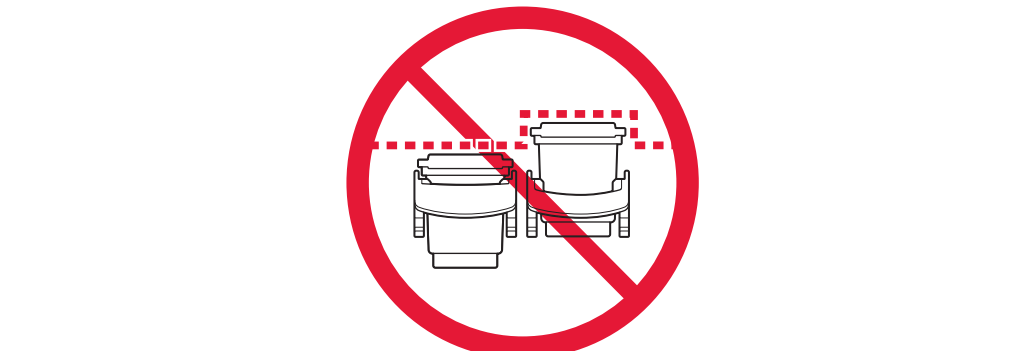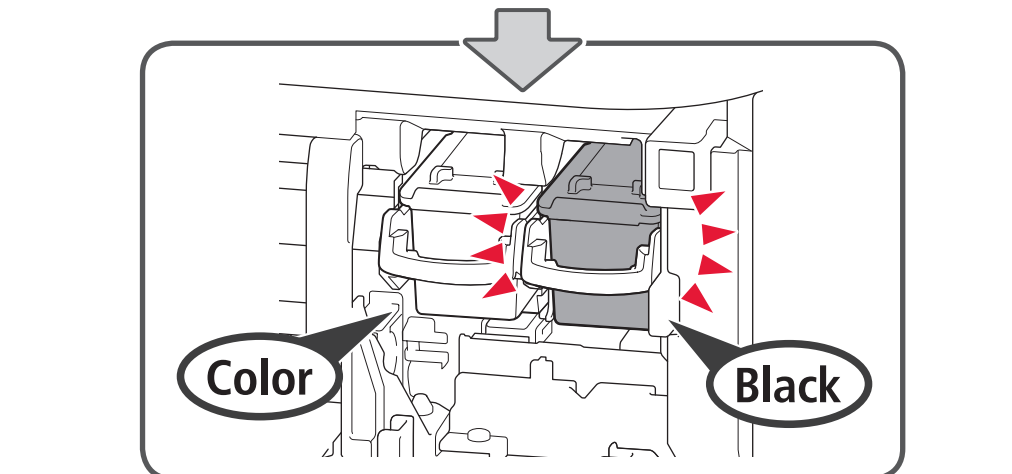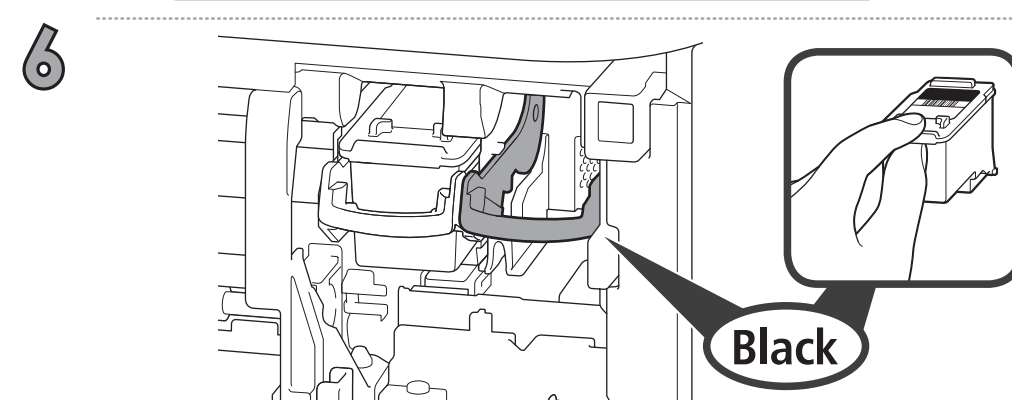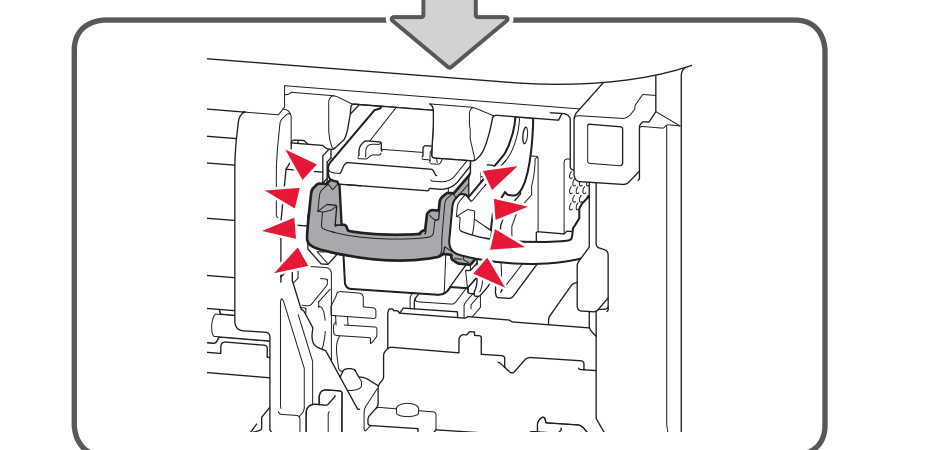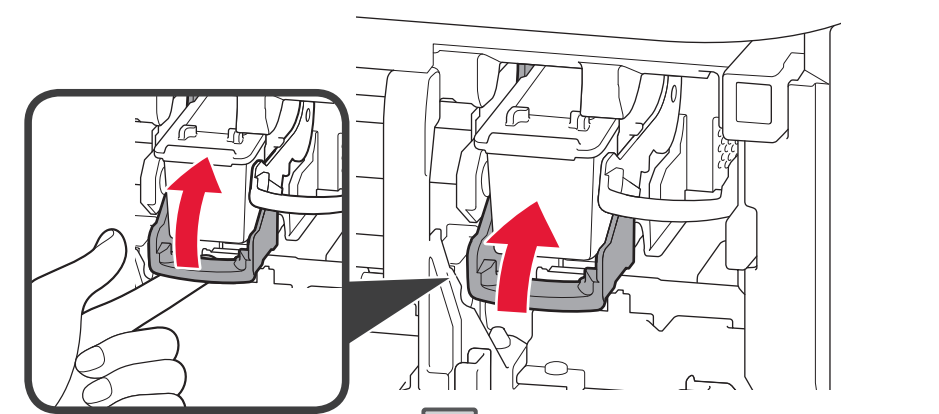       

5

Wireless LAN setup
Start setup ▶

If you are using a WPS-compatible access point, select **Start setup** on the screen to connect to wireless LAN, then follow the on-screen instruction.
If you choose other settings or have difficulty with the procedure, select **Cancel for now**, then proceed to 6.

* In 7, you can follow the instruction on the computer screen to connect to wireless LAN or other kind of network.

Ako koristite pristupnu točku koja podržava WPS, odaberite **<Start Setup> (Pokreni postavljanje)** na zaslonu radi povezivanja bežičnog LAN-a, a zatim slijedite upute na zaslonu.

Ako odaberete druge postavke ili imate poteškoća s postupkom, odaberite **<Cancel for now> (Zasad odustani)**, a zatim prijedite na 6.

 
* Pod 7 možete slijediti upute na zaslonu računala kako biste povezali uređaj s bežičnom LAN mrežom ili nekom drugom mrežom.

אם אתה משתמש בנקודת גישה תואמת WPS, בחר את האפשרות **<Start Setup> (התחיל התקנה)** שעל המסך כדי להתחבר ל-LAN אלחוטי ולאחר מכן למלא את ההוראות המופיעות על המסך.
אם תבחר הגדרות אחרות או שיש לך קשיים עם התהליך, בחר באפשרות **<Cancel for now> (בטל לעת עתה)**, ולאחר מכן המשיך אל 6.


* ב-7, באפשרותך למלא את ההוראות שעל מסך המחשב כדי להתחבר ל-LAN אלחוטי או לסוג אחר של רשת.

6


1

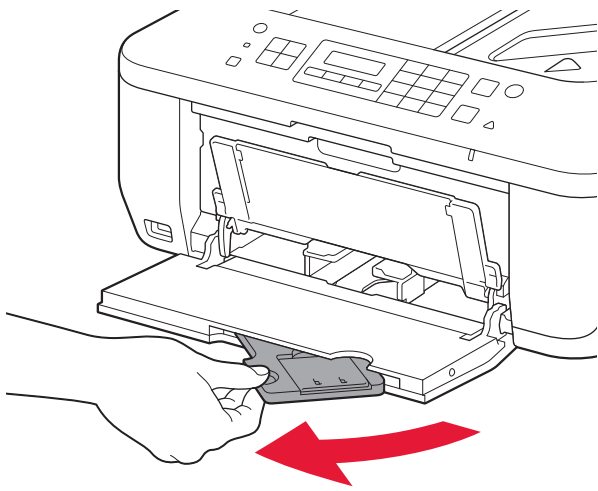


2

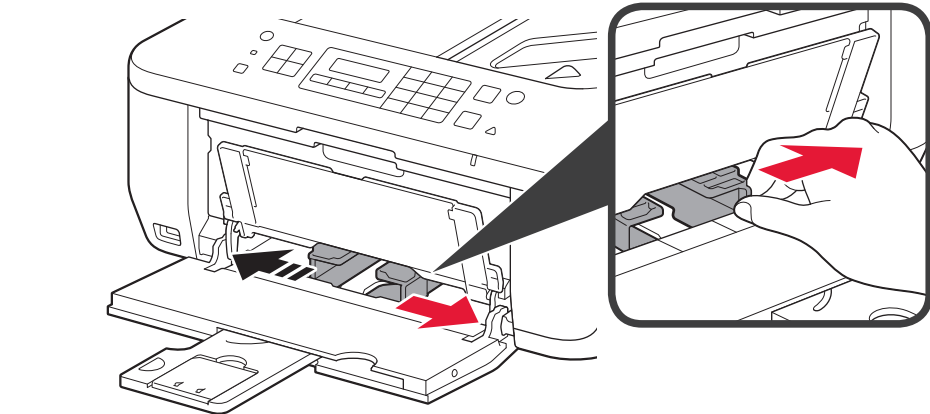 


3

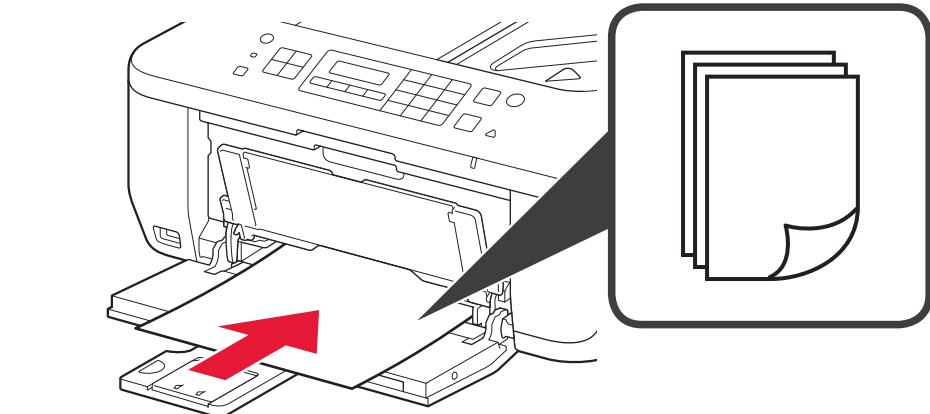 


4

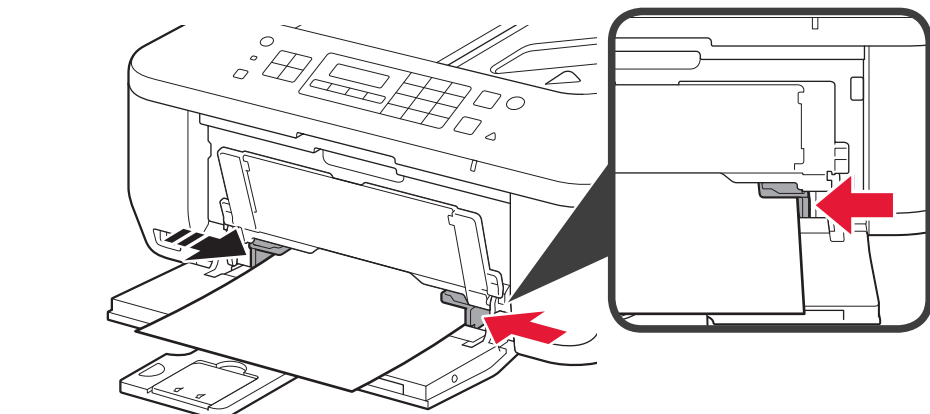 

5



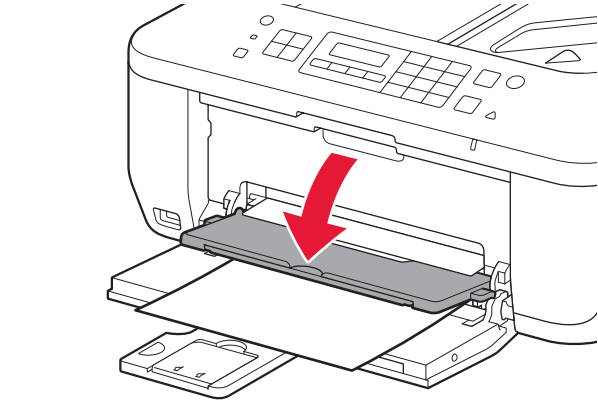 


6

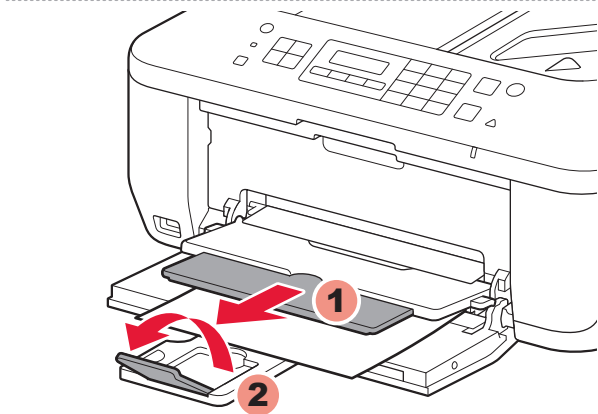 

7

   1

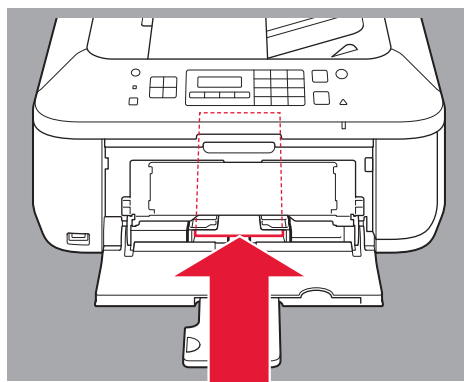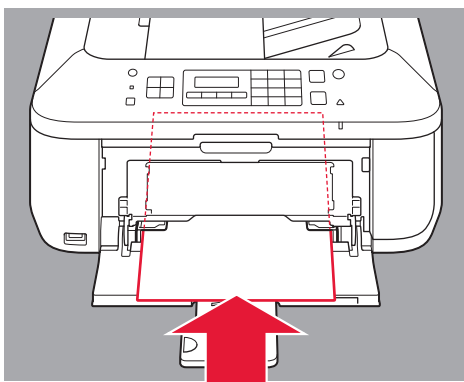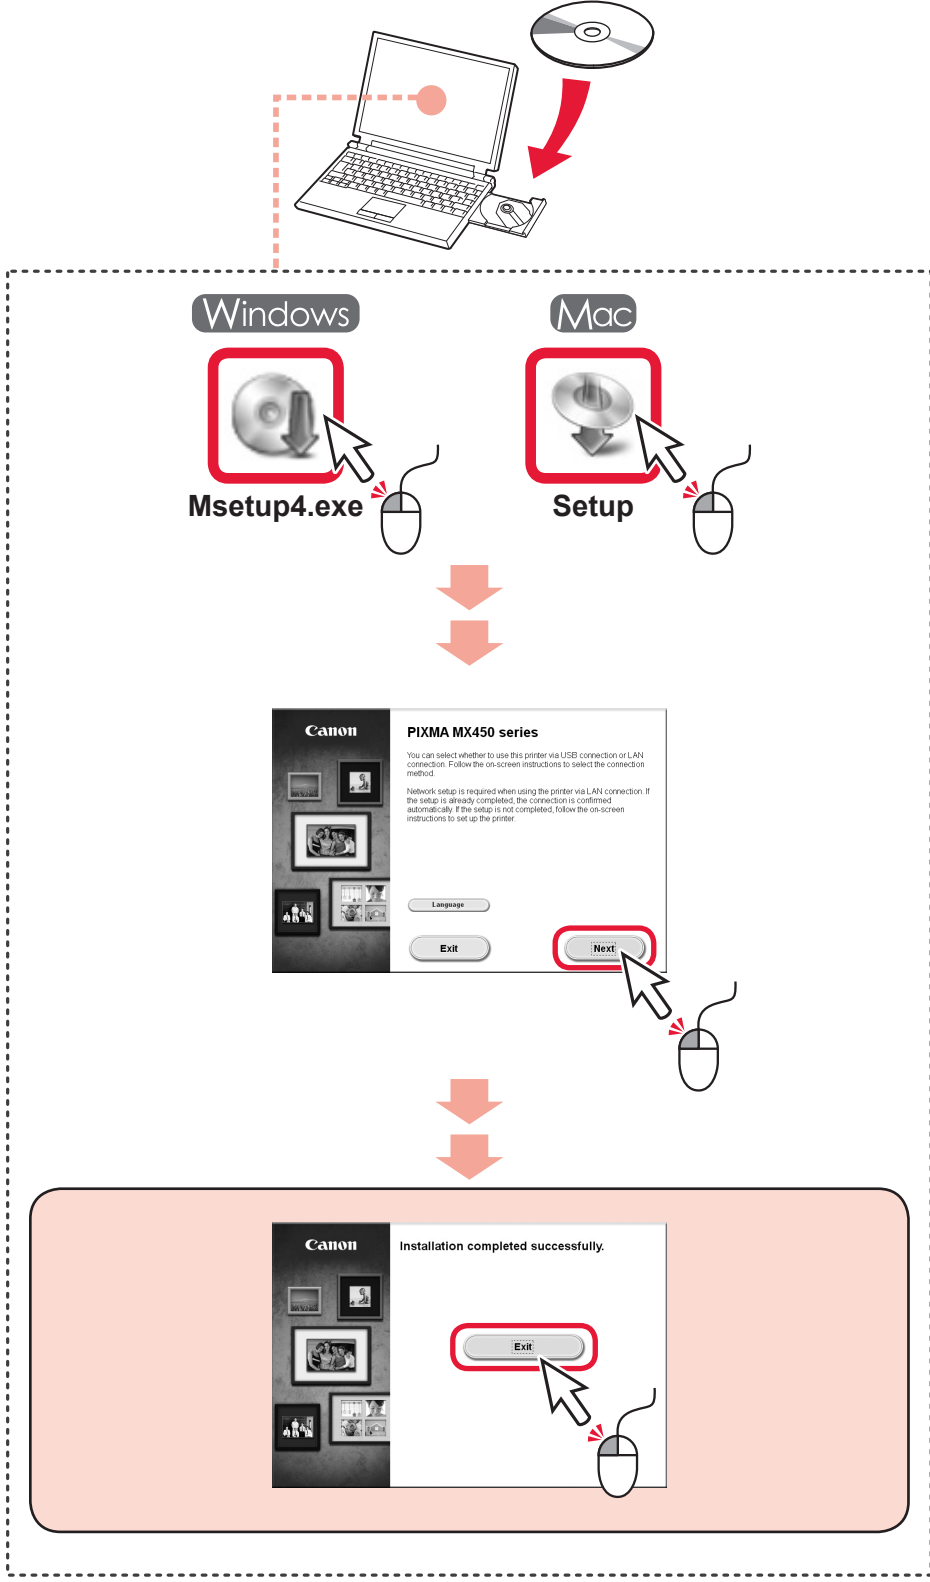

541xL
Color

540xL
Black

541
Color

540
Black

