 


How to Set Up the Machine

You can also install the printer driver by directly specifying the inf file in [Driver]. See "Installing to Use WSD" in the Printer Driver Installation Guide (HTML manual).

LAN Connecting via a Network

- 1 Perform [Network_Setting_Tool] - [CNAN1STK.exe].

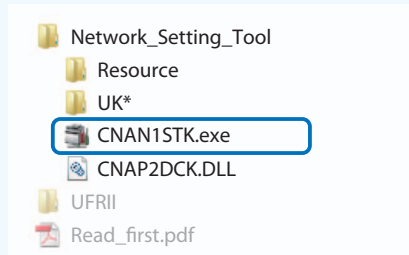

* The folder names change with the language you have selected.

- When [User Account Control] is displayed, click [Yes] or [Continue].

- 2 Follow the on-screen instructions to configure the settings.

- 3 When <Configuration of the network settings for the printer has ended.> is displayed, click [Exit].

- 4 Perform either of the following operations.


32-bit version

Open [UFR11] - [XXXXXX]* - [32BIT], and execute [Setup.exe].

64-bit version

Open [UFR11] - [XXXXXX]* - [x64], and execute [Setup.exe].

* For [XXXXXX], select your desired language.

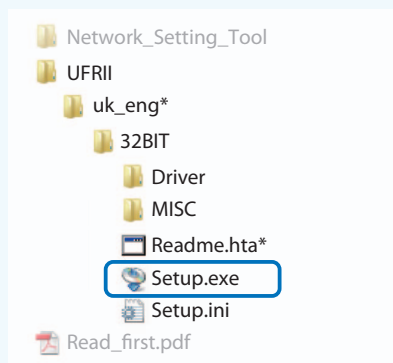

The above illustration is for the 32-bit version.

* The folder names and file names change with the language you have selected.

- When [User Account Control] is displayed, click [Yes] or [Continue].

- 5 Follow the on-screen instructions to configure the settings.

USB Connecting via USB

- 1 Perform either of the following operations.

 
32-bit version

Open [UFR11] - [XXXXXX]* - [32BIT], and execute [Setup.exe].

64-bit version

Open [UFR11] - [XXXXXX]* - [x64], and execute [Setup.exe].

* For [XXXXXX], select your desired language.

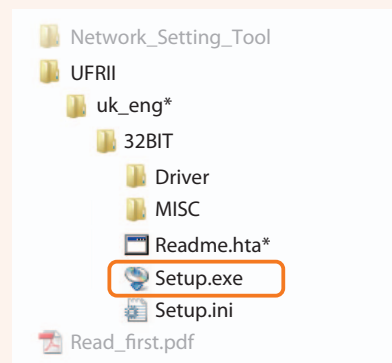

The above illustration is for the 32-bit version.

* The folder names and file names change with the language you have selected.

- When [User Account Control] is displayed, click [Yes] or [Continue].

- 2 Follow the on-screen instructions to configure the settings.