



ENGLISH

FRANÇAIS

Canon

Getting Started 2

2

You can connect the printer to a PC/smartphone/tablet and install software.

Have you finished all the steps in the **Getting Started 1**? Please read this manual after completing the printer setup in the **Getting Started 1**.

Proceed to connect printer to

PC



Smartphone or Tablet



PC (Windows/Mac OS)

1. Download setup file.

1 Access the following URL in your web browser.

<http://canon.com/ijsetup>

Windows PC users: you can also open the file from the setup CD-ROM.



The screen in 3 will appear when you open the file from the CD-ROM. Perform the remaining steps in the same way as on the website.

2 Click **Set Up**.



3 Select the region where you purchased the product.

4 Select your product.

5 Click **Connecting to Computer, Smartphone or Tablet**.



6 Select your operating system.

 
7 Click **Download** to download the setup file.

* If a download security warning appears, allow your web browser to continue downloading.

Click Download on the computer to which you want to connect the printer.

Download

8 Open the downloaded file and click **Start Setup**.

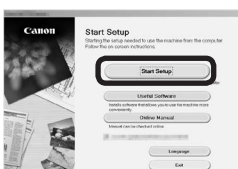

9 Follow the on-screen instructions to proceed the setup.

Smartphone/Tablet (iOS/Android)

1. Install Canon PRINT Inkjet/SELPHY to your smartphone/tablet.

iOS : Search "Canon PRINT" in App Store.

Android : Search "Canon PRINT" in Google Play.



Or access the website by scanning the code on the right.

 
* This procedure is described based on Canon PRINT Inkjet/SELPHY 2.1.0. In other versions, follow the application instructions to complete the setup.

2. Check your network configuration.

Turn on Wi-Fi on your smartphone or tablet before you start.


iOS

• Using wireless router



A

 • Not using/having wireless router
(Connecting printer to device via wireless LAN connection directly)



B

Android



C

Proceed to right side. >>>

A iOS Using wireless router

1 Tap **Settings** on the home screen.



2 Tap **Canon_ij_XXXX** on the Wi-Fi setting.



If **Canon_ij_XXXX** does not appear on the list, see NOTE to setup the printer and wait until **Canon_ij_XXXX** appears. XXXX varies depending on your printer.

3 Tap **PRINT** which was installed.




The extended survey screen appears on the first startup.


4 Tap the printer icon on the top left of the screen.



 5 Tap **Register Printer**.

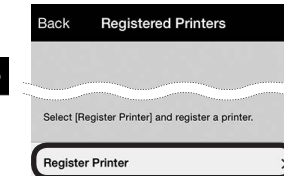


6 Tap **Printer Setup**.

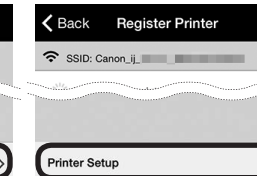 

7 Tap **Connect via wireless router (recommended)**.



 8 Tap **OK**.

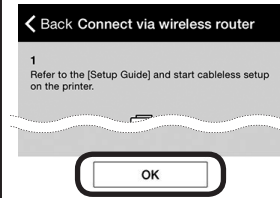


9 Select the SSID of your wireless router connected to your device.



10 When a password entry screen appears, enter the password for your wireless router and tap **OK**.




 11 Wait for a while until the printer is detected.

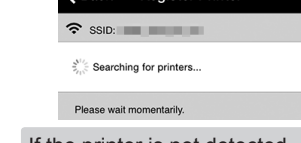


If the printer is not detected and the **Alarm** lamp is lit on the printer, press the **Color** or **Black** button and start over from 1.

 12 When the printer is detected, tap your printer's model name.

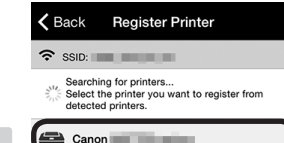

 13 Enter the printer name as needed and tap **OK**.

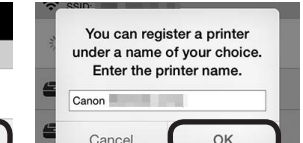

14 When the printer information appears on the screen, the setup is complete.



B iOS Not using/having wireless router

1 Tap **Settings** on the home screen.



2 Tap **Canon_ij_XXXX** on the Wi-Fi setting.



If **Canon_ij_XXXX** does not appear on the list, see NOTE to setup the printer and wait until **Canon_ij_XXXX** appears. XXXX varies depending on your printer.

3 Tap **PRINT** which was installed.




The extended survey screen appears on the first startup.


4 Tap the printer icon on the top left of the screen.



 5 Tap **Register Printer**.

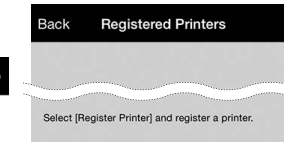


6 Tap **Printer Setup**.

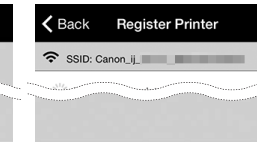 


7 Tap **Direct Connection**.



 8 Tap **OK**.

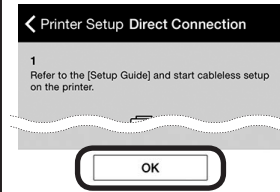

 
9 Check the SSID and password and tap **Copy Password**.

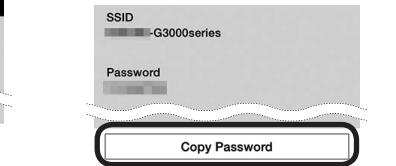


10 Tap **Settings** on the home screen.



 11 Tap the same SSID as checked in 9.

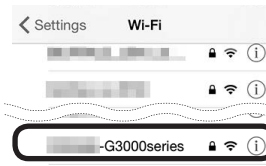


12 Paste the password and tap **Join**.

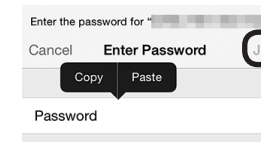 

13 Tap **PRINT**.



 14 Tap **Done**.

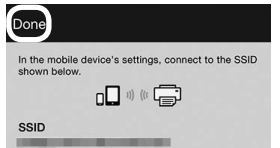

C Android

1 Tap **PRINT** which was installed.



The license agreement screen appears on the first startup.

2 Tap **Yes**.

 


If the screen in 2 does not appear, see NOTE to setup the printer and wait until the screen appears.


3 Follow the on-screen instruction.

If none of these screens appears, see "If **Select Router** screen appears".

Make sure the SSID of the desired wireless router appears and tap **Yes**.

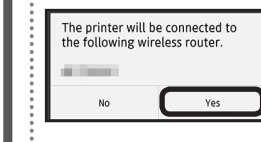


Tap **Yes**.

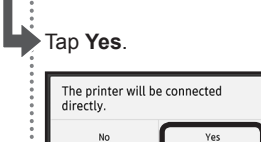 


Enter the password of the wireless router and tap **OK**.



 
Tap **OK**.

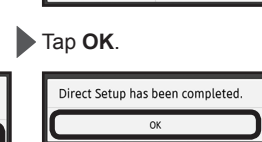

 
4 Wait for a while until the printer is detected.

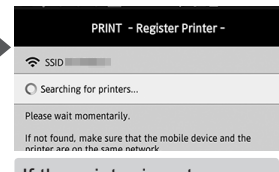


 
5 When the printer is detected, tap your printer's model name.

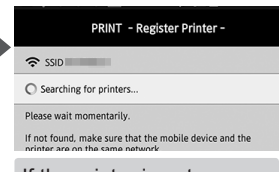

 6 Enter the printer name as needed and tap **OK**.

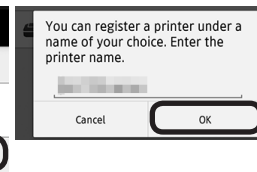

  7 When the printer information appears on the screen, the setup is complete.

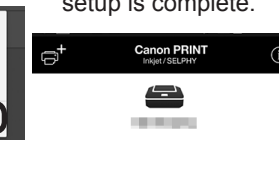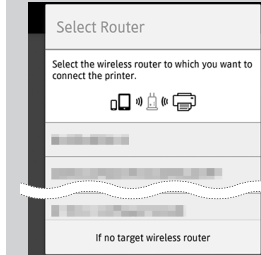If **Select Router** screen appears:

Do the following if this screen appears.

- When the SSID of the desired wireless router appears, tap it. Make sure your device is connected to the same SSID.
- If the SSID of the desired wireless router does not appear or you are not sure, tap **If no target wireless router**.

Using Google Cloud Print

Do the following to use Google Cloud Print.

1 Press the **Stop** button on the printer.

2 Connect the printer to your network.



3 Register the printer to Google Cloud Print.



 
NOTE

iOS If **Canon_ij_XXXX** does not appear:


Android If a message saying "Printer is not registered. Perform printer setup?" does not appear at Canon PRINT Inkjet/SELPHY startup:

Do the following on the printer.


1 Press and hold down the **Wi-Fi** button (A) on the printer until the **ON** lamp (B) starts flashing.

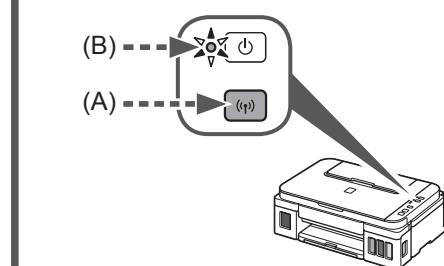

 2 Press the **Color** button (C) and then the **Wi-Fi** button (A).

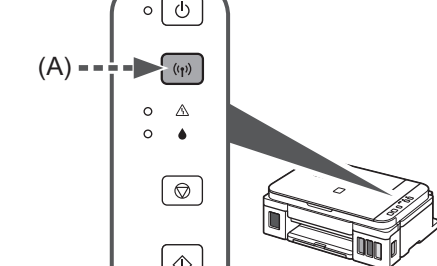

 3 Make sure the **Wi-Fi** lamp (D) is flashing fast and the **ON** lamp (B) is lit.

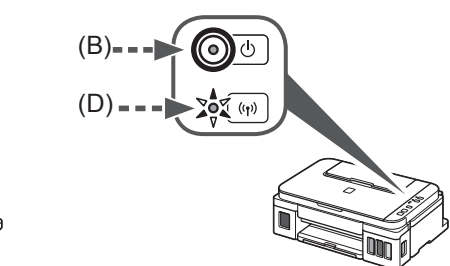

Démarrage 2

2

Vous pouvez connecter l'imprimante à un PC, à un smartphone ou à une tablette et installer le logiciel.

 
Avez-vous effectué toutes les étapes du document Démarrage 1 ?
Veuillez lire ce manuel après avoir procédé à la configuration de l'imprimante comme décrit dans le document Démarrage 1.



PC (Windows/Mac OS)

1. Téléchargez le fichier de configuration.

- Accédez à l'URL suivante à partir de votre navigateur Web.
<http://canon.com/ijsetup>
 - Cliquez sur **Configuration**.
 - Sélectionnez la région d'achat du produit.
 - Sélectionnez votre produit.
 - Cliquez sur **Connexion à un ordinateur, un smartphone ou une tablette**.
 - Sélectionnez votre système d'exploitation.
 - Cliquez sur **Télécharger** pour télécharger le fichier de configuration.
- * Si un avertissement de sécurité lié au téléchargement apparaît, autorisez le navigateur Web à poursuivre l'opération.

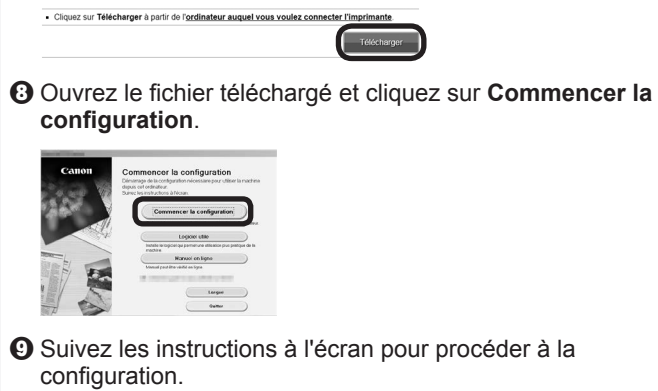

Utilisateurs de PC Windows : vous pouvez également ouvrir le fichier à partir du CD-ROM d'installation.

L'écran de l'étape 3 apparaît lorsque vous ouvrez le fichier à partir du CD-ROM d'installation. Procédez aux étapes restantes de la même manière que sur le site Web.

Smartphone ou tablette (iOS/Android)

1. Installez Canon PRINT Inkjet/SELPHY sur votre smartphone ou votre tablette.

- iOS** : Recherchez « Canon PRINT » dans App Store.
- Android** : Recherchez « Canon PRINT » dans Google Play.

Vous pouvez également accéder au site Web en numérisant le code de droite.

* Cette procédure est décrite pour Canon PRINT Inkjet/SELPHY 2.1.0. Dans des versions différentes, suivez les instructions relatives à l'application pour procéder à la configuration.

2. Vérifiez votre configuration réseau.

Activez la fonction Wi-Fi sur votre smartphone ou votre tablette avant de commencer.

iOS

- Avec un routeur sans fil



- Sans routeur sans fil (Connexion directe de l'imprimante au périphérique via une connexion réseau sans fil)

 


Android


- * Si vous connectez directement votre périphérique à l'imprimante via une connexion réseau sans fil, vous risquez de ne plus pouvoir accéder à Internet à partir de ce périphérique ou de devoir payer des frais de connexion Internet.

►►► Passez à la partie de droite. ►►►

A iOS Utilisation du routeur sans fil

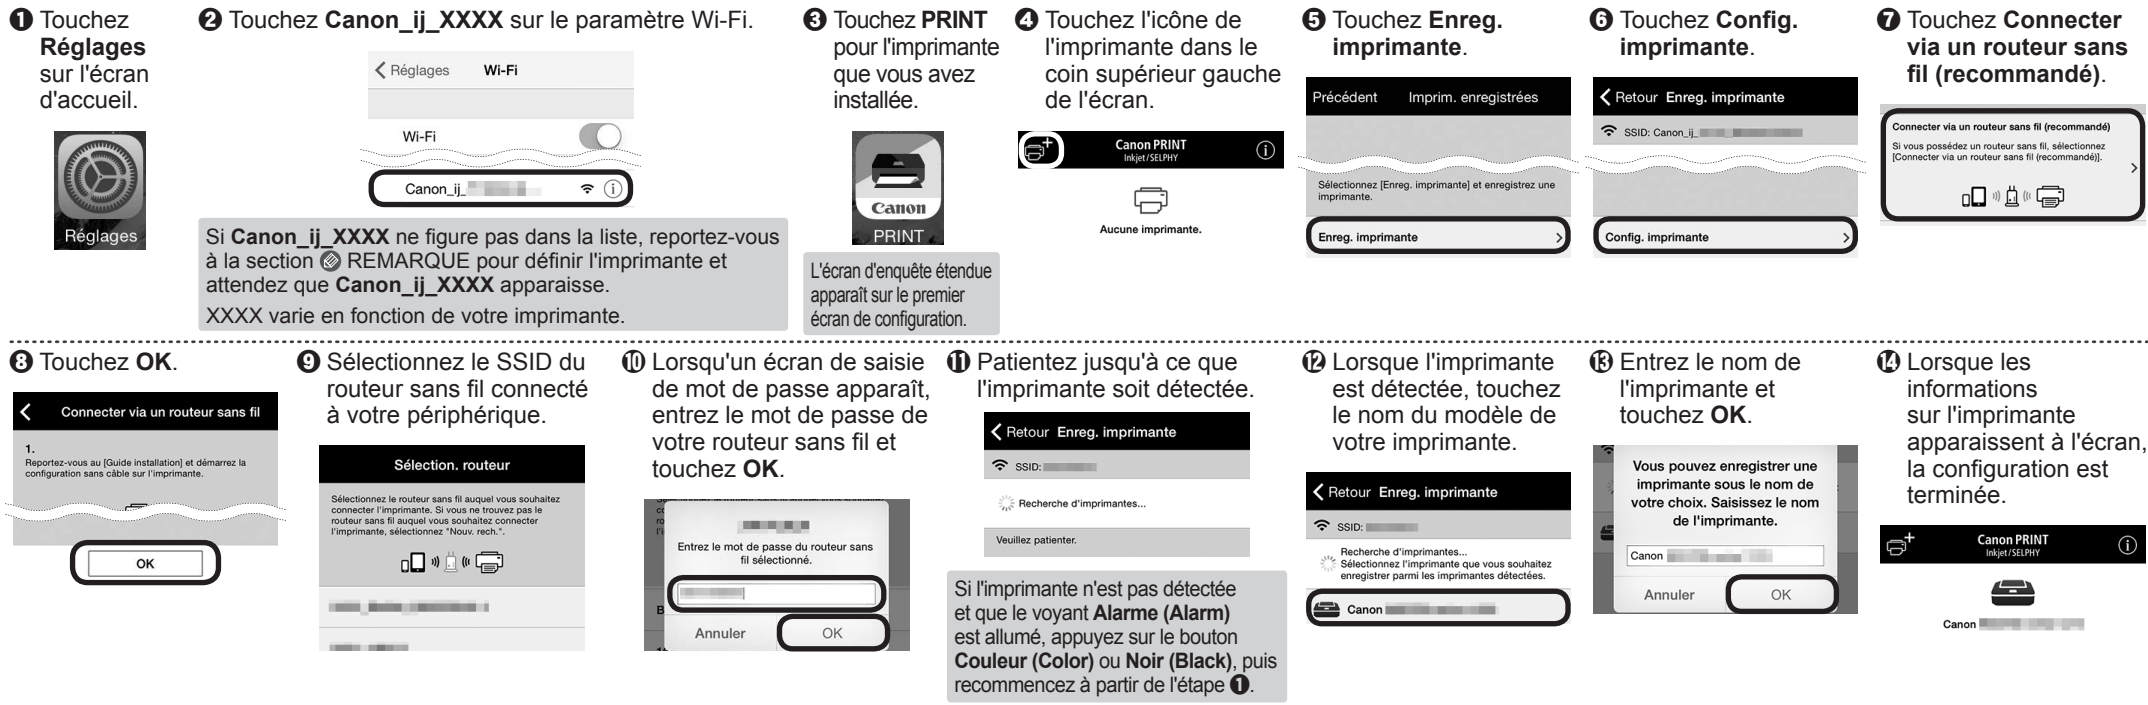

B iOS Sans routeur sans fil

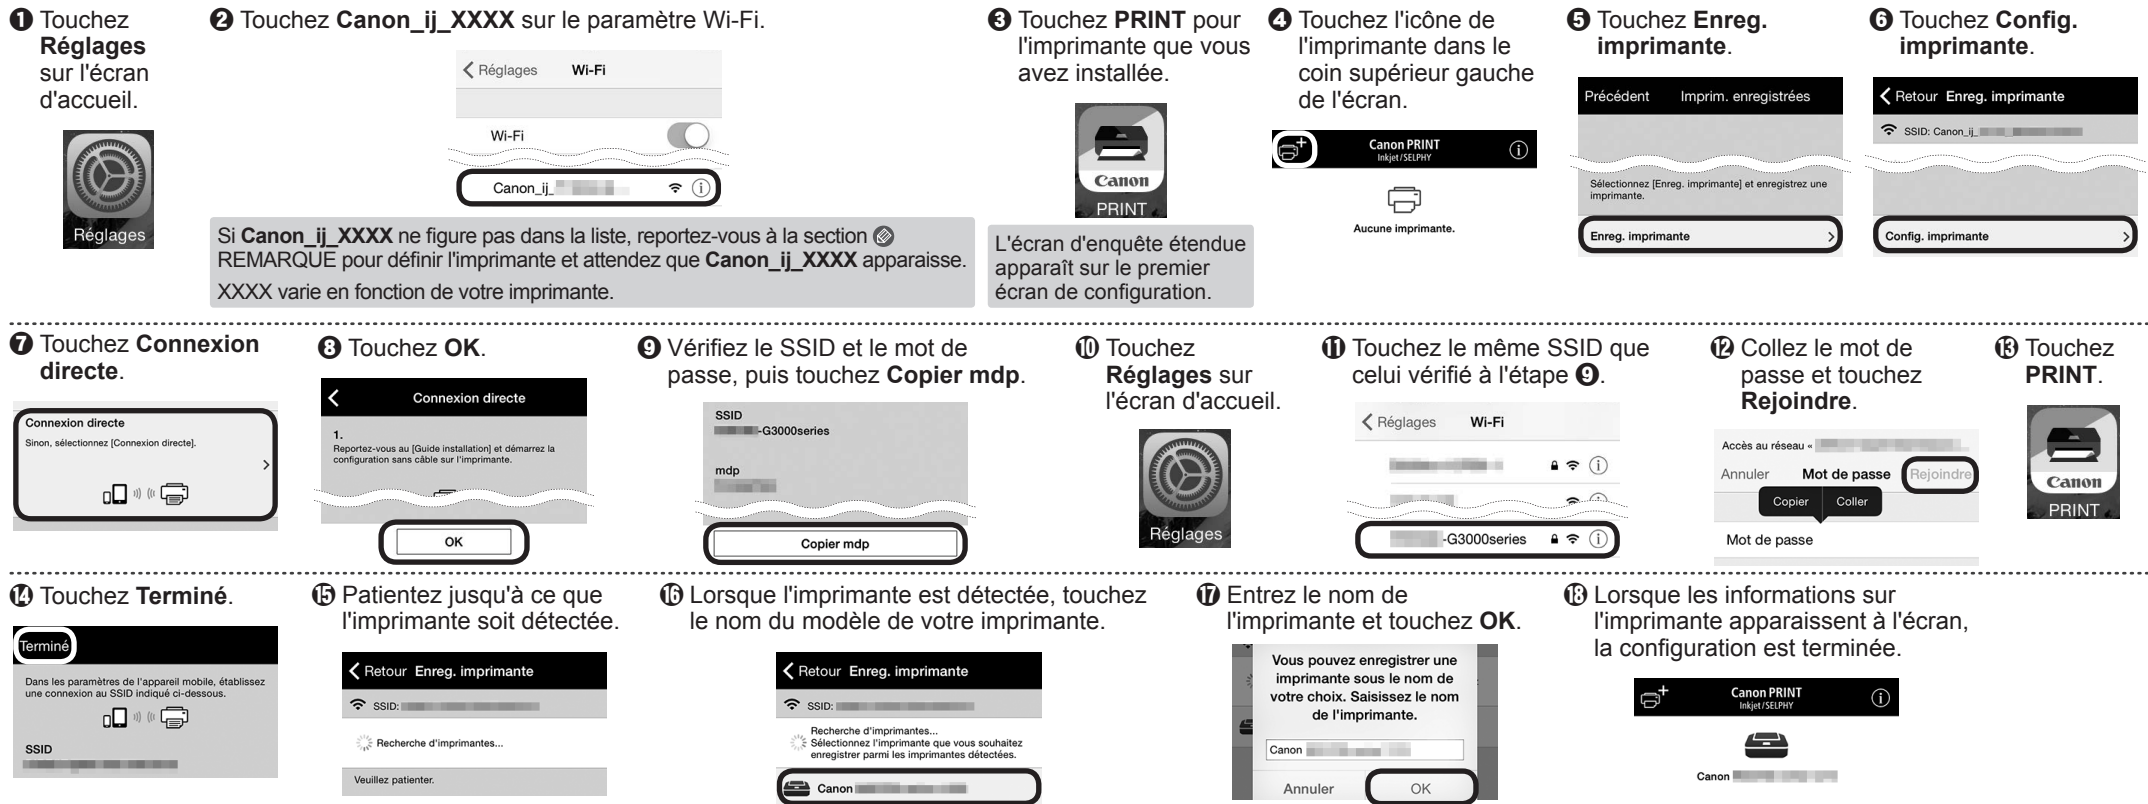 

C Android



Utilisation de Google Cloud Print

Procédez comme suit pour utiliser Google Cloud Print.

- Appuyez sur le bouton **Arrêt (Stop)** de l'imprimante.
- Connectez l'imprimante à votre réseau.



Enregistrez l'imprimante dans Google Cloud Print.



REMARQUE

iOS Si **Canon_ij_XXXX** n'apparaît pas :

Android Si le message « **L'imprimante n'est pas enregistrée. Configurer l'imprimante ?** » n'apparaît pas au démarrage de Canon PRINT Inkjet/SELPHY :

Effectuez les opérations suivantes sur l'imprimante.

