

Canon

**MX450 series
Online Manual**

Faxing

English

Faxing

- Preparing for Faxing
 - Connecting the Telephone Line
 - Setting the Telephone Line Type
 - Setting the Receive Mode
 - Setting the Sender Information
- Sending Faxes Using the Operation Panel of the Machine
 - Sending Faxes with the Numeric Buttons  **Basic**
 - Resending Faxes (Redialing a Busy Number)
 - Sending Faxes Using Useful Functions
- Registering Recipients
 - Registering Recipients Using the Operation Panel of the Machine
 - Registering Recipients Using Speed Dial Utility
- Receiving Faxes
 - Receiving Faxes
 - Changing the Paper Settings
 - Advanced Settings of Receive Mode
 - Memory Reception
 - Receiving Faxes Using Useful Functions
- Other Useful Fax Functions
 - Using the Information Services
 - Transmission/Reception of Faxes Using ECM
 - Document Stored in Machine's Memory
 - Summary of Reports and Lists
- Sending Faxes from a Computer
 - Sending a FAX (Fax Driver)
 - Creating an Address Book (Fax Driver)
 - Edit or Remove a Recipient from an Address Book (Fax Driver)
 - Search for a Recipient in an Address Book (Fax Driver)
 - Troubleshooting Problems Sending Faxes (Fax Driver)
 - General Notes (Fax Driver)

Sending Faxes Using the Operation Panel of the Machine

- Sending Faxes with the Numeric Buttons  **Basic**
- Resending Faxes (Redialing a Busy Number)
- Sending Faxes Using Useful Functions

Registering Recipients

- [Registering Recipients Using the Operation Panel of the Machine](#)
- [Registering Recipients Using Speed Dial Utility](#)

Receiving Faxes

- Receiving Faxes
- Changing the Paper Settings
- Advanced Settings of Receive Mode
- Memory Reception
- Receiving Faxes Using Useful Functions

Other Useful Fax Functions

- [Using the Information Services](#)
- [Transmission/Reception of Faxes Using ECM](#)
- [Document Stored in Machine's Memory](#)
- [Summary of Reports and Lists](#)

Sending Faxes from a Computer

- [Sending a FAX \(Fax Driver\)](#) 📌 **Basic**
- [Creating an Address Book \(Fax Driver\)](#)
- [Edit or Remove a Recipient from an Address Book \(Fax Driver\)](#)
- [Search for a Recipient in an Address Book \(Fax Driver\)](#)
- [Troubleshooting Problems Sending Faxes \(Fax Driver\)](#)
- [General Notes \(Fax Driver\)](#)

Preparing for Faxing

Connect the machine to the telephone line and set up the machine before using the faxing functions. Then specify the basic setting such as sender information, date/time, and daylight saving time.

Important

- If the Power Disconnects Unexpectedly:
If there is a power failure or if you accidentally disconnect the power plug, the date/time settings will be reset.
 - The settings for user information, coded memory dial, group dial, and rejected numbers will be retained.
 - All faxes stored in the machine's memory, such as unsent and received faxes, will be lost.
- If the power disconnects, the following will apply:
 - You will not be able to send or receive faxes, make copies, or scan originals.
 - When you are connecting the telephone, whether or not you can use it depends upon your telephone line or telephone.

Setting Up the Machine

The machine must be set up depending on your telephone line and use of the faxing function. Follow the procedure below to set up the machine.

1. [Connecting the Telephone Line](#)

Connect the machine to your telephone line.

2. [Setting the Telephone Line Type](#)

Set the correct telephone line type for your telephone line.

3. [Setting the Receive Mode](#)

Set the receiving operation (receiving mode).

Note

- You can set the fax setting according to the instruction on the LCD.
 - ➡ Easy setup
- If you set up according to the instruction on the LCD, the receive mode is set to **TEL priority mode** or **Fax only mode**. To receive faxes with **DRPD** or **Network switch**, change the receive mode.
 - ➡ [Setting the Receive Mode](#)

Specifying the Basic Settings for Faxing

You can specify the basic setting such as sender information, date/time, and daylight saving time.

➡ [Setting the Sender Information](#)

Connecting the Telephone Line


The connection method differs depending on your telephone line.

- If you connect the machine to wall telephone line directly/If you connect the machine with the xDSL splitter:
 - ➔ [Basic Connection](#)
- If you connect the machine to another line such as an xDSL:
 - ➔ [Connecting Various Lines](#)

If the connection is incorrect, the machine cannot send/receive faxes. Connect the machine correctly.

Important


- Do not connect fax machines and/or telephones in parallel (US and Canada only).
If two or more fax machines and/or telephones are connected in parallel, the following problems may occur and the machine may not operate properly.
 - If you pick up the handset of the telephone that is connected in parallel during fax transmission or reception, the fax image may be corrupted or a communication error may occur.
 - Such services as Caller ID, etc. may not operate properly on the telephone.

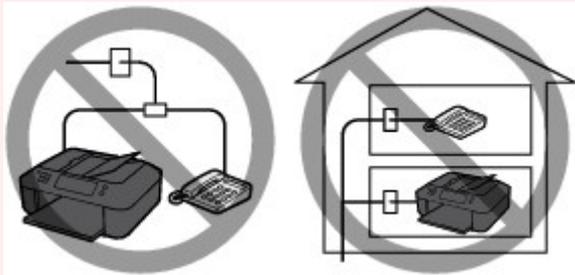


If you cannot avoid parallel connections, set the receive mode to **TEL priority mode**, understanding that the above problems may occur. You will only be able to receive faxes manually.

Basic Connection

Make sure that the machine is turned off, connect one end of supplied telephone line cable to the telephone line jack near the "LINE" mark of the machine, then connect the other end to the telephone line jack on the wall or to the telephone line jack of the xDSL splitter.

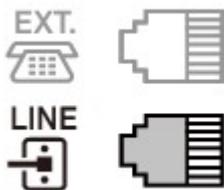

When you connect the telephone to the machine, make sure that the machine is turned off, connect one end of the modular cable to the external device jack near the "EXT." mark of the machine, then connect the other end to the telephone line jack of the telephone.

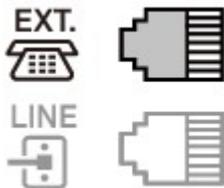

Important

- Be sure to connect the telephone line before the machine is turned on.
If you connect the telephone line when the machine is turned on, turn the machine off and disconnect the power plug. Wait for 1 minute then connect the telephone line and power plug.

Note

- Refer to Rear View for the position of the telephone line jack and the external device jack.
- Before connecting a telephone or answering machine, remove the Telephone connector cap.
- **For users in the UK:**
If the connector of the external device cannot be connected to the jack on the machine, you will need to purchase a B.T. adapter to connect as follows:
Attach the B.T. adapter to the modular cable connecting the external device, then connect the B.T. adapter to the external device jack.

Connecting Various Lines


This section introduces how to connect various lines.

These are examples and could not be guaranteed to suit every connecting condition. For details, refer to the instruction manual supplied with the network device (control devices such as an xDSL (Digital Subscriber Line) modem or terminal adapter) you are connecting to this machine.

►► Note

- xDSL is the generic term for the high speed digital communication technology with telephone line such as ADSL/HDSL/SDSL/VDSL.

• Connecting to an Internet Telephone

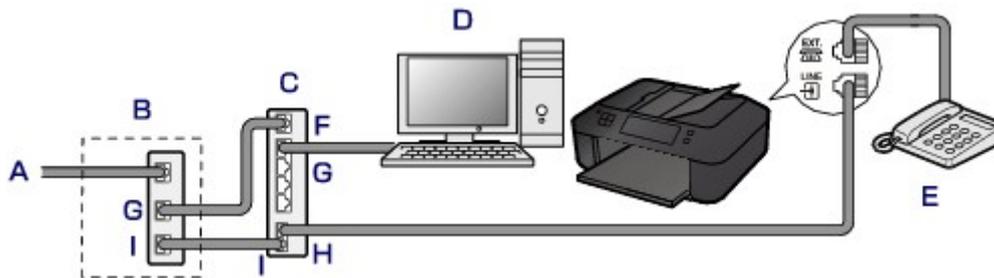


- A. Digital Subscriber Line
- B. xDSL modem (splitter may not be built-in to the modem)
- C. Broadband router compatible with Internet Telephone
- D. Computer
- E. Telephone or answering machine
- F. WAN (Wide Area Network) port
- G. LAN (Local Area Network) port
- H. TEL port
- I. LINE port

* Port configurations and names may vary depending on the product.

►► Note

- When connecting to the xDSL line, select the same line type as you are subscribing to in **Telephone line type**.
➔ [Setting the Telephone Line Type](#)

• Connecting to an xDSL

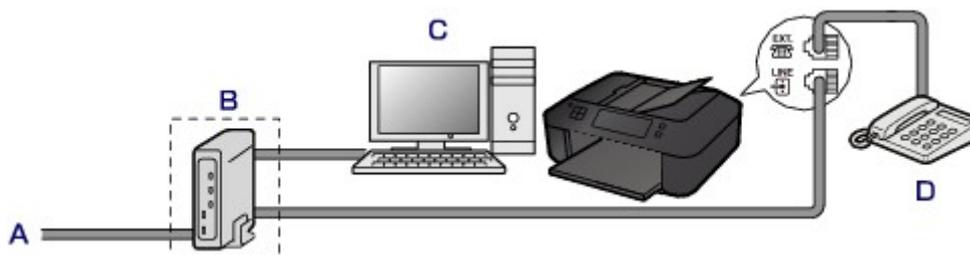

- A. Analog Subscriber Line
- B. xDSL modem (splitter may not be built-in to the modem)

- C. Computer
- D. Telephone or answering machine

»» Important

- When the splitter is not built-in to the modem, do not branch the telephone line before the splitter (wall side). And also, do not connect splitters in parallel. The machine may not be able to operate properly.

»» Note

- When connecting to the xDSL line, select the same line type as you are subscribing to in **Telephone line type**.
 - ➔ [Setting the Telephone Line Type](#)

- **Connecting to an ISDN Line**

For details on ISDN (Integrated Service Digital Network) connection and settings, refer to the manuals supplied with your terminal adapter or dial-up router.

Setting the Telephone Line Type

Before using your machine, make sure you set the correct telephone line type for your telephone line. If you are unsure of your telephone line type, contact your telephone company. For xDSL or ISDN connections, contact the telephone company or service provider to confirm your line type.

▶▶▶ Note

- **Telephone line type** will not appear in countries or regions where **Rotary pulse** is not supported.
- You can print USER'S DATA LIST to check the current setting.

➔ [Summary of Reports and Lists](#)

1. Make sure that the machine is turned on.

➔ Confirming that the Power Is On

2. Press the **Setup** button.


The **Setup menu** screen is displayed.

3. Use the ◀▶ button to select **Fax settings**, then press the **OK** button.

4. Use the ◀▶ button to select **FAX user settings**, then press the **OK** button.

5. Use the ◀▶ button to select **Telephone line type**, then press the **OK** button.

6. Use the ◀▶ button to select a telephone line type, then press the **OK** button.



Telephone line type
◀ *Touch tone

Rotary pulse

Select when your telephone line type is pulse dialing.

Touch tone

Select when your telephone line type is tone dialing.

▶▶▶ Note

- The * (asterisk) on the LCD indicates the current setting.

7. Press the **FAX** button to return to the Fax standby screen.

Setting the Receive Mode

Set the receiving operation (receiving mode).

For details on how to set the receive mode:

➔ [Setting the Receive Mode](#)

You can select the appropriate mode.

For details on the selectable receive mode:

➔ [About the Receive Mode](#)

➤➤➤ Note

- The receiving operation procedure varies depending on the selected receive mode.
For details on receiving method depending on each receive mode:
➔ [Receiving Faxes](#)
- If you want to use a single telephone line for faxes and voice calls, you need to connect a telephone or an answering machine to the external device jack of this machine.
For details on how to connect the telephone or the answering machine to the machine:
➔ [Basic Connection](#)

Setting the Receive Mode

This section describes the procedure to select the receive mode.

1. Make sure that the machine is turned on.
➔ [Confirming that the Power Is On](#)
2. Press the **FAX** button.
The Fax standby screen is displayed.
3. Press the **Menu** button.
The **FAX menu** screen is displayed.
4. Use the ◀▶ button to select **Receive mode set.**, then press the **OK** button.
5. Use the ◀▶ button to select the receive mode, then press the **OK** button.
The confirmation screen asking whether to make advanced settings is displayed.
If you select **Yes** and press the **OK** button, you can specify the advanced settings of each receive mode.
➔ [Advanced Settings of Receive Mode](#)

➤➤➤ Note

- The * (asterisk) on the LCD indicates the current setting.
- If **DRPD** is selected, the fax ring pattern can be selected on the **DRPD: FAX ring pat.** screen.
For details:
➔ [Setting the DRPD Ring Pattern \(US and Canada only\)](#)

Setting the DRPD Ring Pattern (US and Canada only)


If you have subscribed to a Distinctive Ring Pattern Detection (DRPD) service provided by your telephone company, your telephone company will assign two or more telephone numbers with distinctive ring patterns to your single telephone line, allowing you to have different numbers for fax calls and voice calls using only one telephone line. Your machine will automatically monitor the ring pattern, and will automatically receive the fax if the ring pattern is a fax call.

To use DRPD, follow the procedure below to set the fax ring pattern that matches the pattern assigned by your telephone company.

»»» Note

- Contact your local telephone company for detailed information on this service.

- Make sure that the machine is turned on.
 ➔ Confirming that the Power Is On
- Press the **FAX** button.
 The Fax standby screen is displayed.
- Press the **Menu** button.
 The **FAX menu** screen is displayed.
- Use the ◀▶ button to select **Receive mode set.**, then press the **OK** button.
- Use the ◀▶ button to select **DRPD**, then press the **OK** button.
 The confirmation screen asking whether to make advanced settings is displayed.
- Use the ◀▶ button to select **Yes**, then press the **OK** button.
- Use the ◀▶ button to select **DRPD: FAX ring pat.**, then press the **OK** button.
 The **DRPD: FAX ring pat.** screen is displayed.
- Use the ◀▶ button to select the ring pattern that your telephone company assigned to your fax number, then press the **OK** button.



Select from **Normal ring**, **Double ring**, **Short-short-long**, or **Short-long-short**.

»»» Note

- The * (asterisk) on the LCD indicates the current setting.

- Press the **FAX** button to return to the Fax standby screen.

About the Receive Mode

You can select the receive mode suitable for your fax use conditions: whether you use a dedicated line for fax, etc.

Receive mode	Your fax use condition	Receiving operation
TEL priority mode	When mainly receiving voice calls (with a telephone or answering machine connected to the machine):	<p>When a call incomes, the telephone will ring. Pick up the handset. If the call is a voice call, talk on the telephone. If the call is a fax, hang up the handset after the machine starts receiving the fax.</p> <p>»»» Note</p> <ul style="list-style-type: none"> The machine can receive a fax automatically without the handset being picked up when a call incomes (Manual/auto switch). And, the machine can receive a fax automatically when you pick up the handset or when the answering machine answers a call that is a fax (User-friendly RX). ➔ Advanced setting in TEL priority mode The telephone may not ring when a call incomes even if it is connected to the machine, depending on the type or settings of the telephone.

<p>DRPD or Network switch</p>	<p>When receiving voice calls (with a telephone or answering machine connected to the machine) and subscribing to a ring pattern detection service provided by your telephone company:</p>	<p>When a call comes, the telephone will ring. The machine detects a fax call by the fax ring pattern. If the call is a fax, the machine will receive the fax automatically. If the machine does not detect the fax ring pattern, the telephone will continue ringing.</p> <p>▶▶▶ Note</p> <ul style="list-style-type: none"> ■ You can select the ring pattern assigned to the fax number (for DRPD) and change the number of times to ring the telephone. <ul style="list-style-type: none"> ➡ Advanced setting in DRPD ➡ Advanced setting in Network switch ■ The telephone may not ring when a call comes even if it is connected to the machine, depending on the type or settings of the telephone.
<p>Fax only mode</p>	<p>When not receiving voice calls:</p>	<p>When a fax comes, the machine will receive the fax automatically.</p> <p>▶▶▶ Note</p> <ul style="list-style-type: none"> ■ You can change the number of times to ring the telephone (for Incoming ring). <ul style="list-style-type: none"> ➡ Advanced setting in Fax only mode


Setting the Sender Information

You can set the sender information such as date/time, unit name, and unit fax/telephone number.

- ➔ [About the Sender Information](#)
- ➔ [Setting the Date and Time](#)
- ➔ [Setting Daylight Saving Time \(Summer Time\)](#)
- ➔ [Registering User Information](#)

About the Sender Information

If the unit name and unit fax/telephone number are registered, they are printed with date and time as sender information on the recipient's fax.

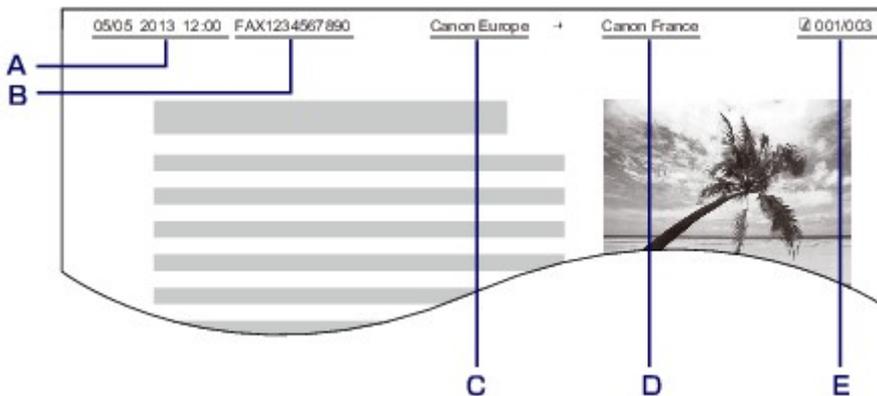

- A. Date and time of transmission
- B. Unit fax/telephone number
- C. Unit name
- D. The registered recipient's name is printed when sending faxes with the coded memory dial.
- E. Page number

➤➤ Note

- You can print USER'S DATA LIST to confirm the sender information you have registered.
 - ➔ [Summary of Reports and Lists](#)
- When sending faxes in black & white, you can select whether to print the sender information inside or outside the image area.
Specify the setting on **TTI position** in **Adv. FAX settings** under **Fax settings**.
 - ➔ **Adv. FAX settings**
- You can select the date print format from three formats: **YYYY/MM/DD**, **MM/DD/YYYY**, and **DD/MM/YYYY**.
Select the date print format on **Date display format** under **Dev. user settings**.
 - ➔ **Dev. user settings**

Setting the Date and Time

This section describes the procedure to set the date and time.


1. Make sure that the machine is turned on.
 - ➔ **Confirming that the Power Is On**
2. Press the **Setup** button.
The **Setup menu** screen is displayed.
3. Use the ◀▶ button to select **Device settings**, then press the **OK** button.

4. Use the ◀▶ button to select **Dev. user settings**, then press the **OK** button.

5. Use the ◀▶ button to select **Date/time setting**, then press the **OK** button.

6. Set the date and time.

Use the ◀▶ button to move the cursor under the desired position, then use the Numeric buttons to enter the date and time.



Date/time setting
05/05/2012 12:00

Enter the date and time in 24-hour format.

Enter only the last two digits of the year.

7. Press the **OK** button.

8. Press the **FAX** button to return to the Fax standby screen.

Setting Daylight Saving Time (Summer Time)

Some countries adopt the daylight saving time (summer time) system that shifts the clock time forward at certain periods of the year.

You can set your machine to automatically change the time by registering the date and time that daylight saving time (summer time) begins and ends.

▶▶ Important

- Not all the latest information of all countries or regions is applied for **Summer time setting** by default. You need to change the default setting according to the latest information of your country or region.

▶▶ Note

- This setting may not be available depending on the country or region of purchase.

1. Make sure that the machine is turned on.

➡ Confirming that the Power Is On

2. Press the **Setup** button.

The **Setup menu** screen is displayed.

3. Use the ◀▶ button to select **Device settings**, then press the **OK** button.

4. Use the ◀▶ button to select **Dev. user settings**, then press the **OK** button.

5. Use the ◀▶ button to select **Summer time setting**, then press the **OK** button.

6. Use the ◀▶ button to select **ON**, then press the **OK** button.

To disable summer time, select **OFF**.

7. Set the date and time when summer time starts.

1. Use the ◀▶ button to select **Start date/time**, then press the **OK** button.

2. Make sure that **Set month** is selected, then press the **OK** button.

3. Use the ◀▶ button to select the month when summer time starts, then press the **OK** button.

4. Make sure that **Set week** is selected, then press the **OK** button.

5. Use the ◀▶ button to select the week when summer time starts, then press the **OK** button.

6. Make sure that **Set day of week** is selected, then press the **OK** button.

7. Use the ◀▶ button to select the day of the week when summer time starts, then press the **OK** button.
8. Make sure that **Set shift time** is selected, then press the **OK** button.
9. Use the ◀▶ button to move the cursor under the desired position, use the Numeric buttons to enter the time (in 24-hour format) when summer time starts, then press the **OK** button.

Precede single digits with a zero.

Set shift time
01:00

8. Set the date and time when summer time ends.
 1. Use the ◀▶ button to select **End date/time**, then press the **OK** button.
 2. Make sure that **Set month** is selected, then press the **OK** button.
 3. Use the ◀▶ button to select the month when summer time ends, then press the **OK** button.
 4. Make sure that **Set week** is selected, then press the **OK** button.
 5. Use the ◀▶ button to select the week when summer time ends, then press the **OK** button.
 6. Make sure that **Set day of week** is selected, then press the **OK** button.
 7. Use the ◀▶ button to select the day of the week when summer time ends, then press the **OK** button.
 8. Make sure that **Set shift time** is selected, then press the **OK** button.
 9. Use the ◀▶ button to move the cursor under the desired position, use the Numeric buttons to enter the time (in 24-hour format) when summer time ends, then press the **OK** button.

Precede single digits with a zero.

Set shift time
02:00

9. Press the **FAX** button to return to the Fax standby screen.

Registering User Information

This section describes the procedure to register the user information.

▶▶▶ Note

- Before sending a fax, be sure to enter your name and fax/telephone number in **Unit TEL no. registr.** and **Unit name registr.** on the **FAX user settings** screen (for US only).

1. Make sure that the machine is turned on.
 - ➡ Confirming that the Power Is On
2. Press the **Setup** button.
The **Setup menu** screen is displayed.
3. Use the ◀▶ button to select **Fax settings**, then press the **OK** button.
4. Use the ◀▶ button to select **FAX user settings**, then press the **OK** button.
5. Enter the unit fax/telephone number.
 1. Make sure that **Unit TEL no. registr.** is selected, then press the **OK** button.
 2. Use the Numeric buttons to enter the unit fax/telephone number.

Unit TEL no. registr.
☎ = 0123456789 _


3. Press the **OK** button.

▶▶▶ Note

-
- You can enter the fax/telephone number up to 20 digits, including spaces.
 - For details on how to enter or delete characters:
 - ➡ Entering Numbers, Letters, and Symbols
-

6. Enter the unit name.

1. Make sure that **Unit name registr.** is selected, then press the **OK** button.
2. Use the Numeric buttons to enter the unit name.



Unit name registr. :a
Canon Europe

3. Press the **OK** button.

▶▶▶ **Note**

-
- You can enter the name up to 24 characters, including spaces.
 - For details on how to enter or delete characters:
 - ➡ Entering Numbers, Letters, and Symbols
-

7. Press the **FAX** button to return to the Fax standby screen.

Sending Faxes Using the Operation Panel of the Machine

- Sending Faxes with the Numeric Buttons  **Basic**
- Resending Faxes (Redialing a Busy Number)
- Sending Faxes Using Useful Functions

Sending Faxes with the Numeric Buttons

This section describes dialing and sending faxes directly using the Numeric buttons.

»» Important


- It may be possible that faxes will reach unintended recipients due to the misdialing or incorrect registration of fax/telephone numbers. When you send important documents, it is recommended that you send them after speaking on the telephone.
 - ➔ [Sending a Fax after Speaking on Telephone](#)

1. Make sure that the machine is turned on.

- ➔ Confirming that the Power Is On

2. Press the **FAX** button.

The Fax standby screen is displayed.



FAX [Start]=Offhook
05/05 12:00 TEL prior

3. Load documents on the platen glass or in the ADF.

- ➔ Loading Originals

»» Important

- When sending a double-sided document, load the document on the platen glass. Double-sided documents cannot be automatically scanned and sent from the ADF.

»» Note

- For details on the types, conditions of document, and how to load the document:
 - ➔ Loading Originals


4. Adjust the scan contrast and resolution as necessary.

Adjust the scan contrast and resolution following the procedure below.

1. Press the **Menu** button.

The **FAX menu** screen is displayed.
2. Use the ◀▶ button to select **FAX TX settings**, then press the **OK** button.
3. Use the ◀▶ button to select **Scan contrast**, then press the **OK** button.

The **Scan contrast** screen is displayed.
4. Use the ◀▶ button to select the scan contrast, then press the **OK** button.




Scan contrast
◀ Lt (0000) Hi ▶

The ◀ button decreases the scan contrast, and the ▶ button increases the scan contrast. By pressing the **OK** button, the LCD returns to the **FAX TX settings** screen.

5. Use the ◀▶ button to select **Scan resolution**, then press the **OK** button.

The **Scan resolution** screen is displayed.
6. Use the ◀▶ button to select the scan resolution, then press the **OK** button.



Scan resolution
*Standard ▶

By pressing the **OK** button, the LCD returns to the Fax standby screen. The following settings are selectable on **Scan resolution**.

Standard

Suitable for text-only documents.

Fine

Suitable for fine-print documents.

Extra fine

Suitable for detailed illustration or fine-print quality documents.

If the recipient's fax machine is not compatible with **Extra fine** (300 x 300 dpi), the fax will be sent in the **Standard** or **Fine** resolution.


Photo

Suitable for photographs.

▶▶▶ Note

- The * (asterisk) on the LCD indicates the current setting.
- When sending a color fax, documents are always scanned in the same resolution (200 x 200 dpi). The image quality (compression rate) is determined by which scan resolution is selected, except that **Extra fine** and **Photo** provide the same image quality.

5. Use the Numeric buttons to dial the recipient's fax/telephone number.



Use the following buttons to dial the recipient's fax/telephone number.

Numeric buttons:

Enters the number.

▶ button:

Enters a space.

◀ button:

Deletes the last character you entered.

button:

By pressing this button once, "#" is entered. By pressing this button one more time, "P" is entered.

6. Press the **Color** button for color transmission, or the **Black** button for black & white transmission.

The machine starts scanning the document.

▶▶▶ Important

- Color transmission is available only when the recipient's fax machine supports color faxing.
- Do not open the document cover until scanning is completed.

7. Start sending.

- **If you load the document in the ADF:**

The machine scans the document automatically and starts sending the fax.

▶▶▶ Note

- To cancel a fax transmission, press the **Stop** button. To cancel a fax transmission while it is in progress, press the **Stop** button, then follow the instructions on the LCD.
- If documents remain in the ADF after the **Stop** button is pressed while scanning is in progress, **Close the feeder cover [OK]Eject the document** is displayed on the LCD. By pressing the **OK** button, the remaining documents are automatically ejected.

- **If you load the document on the platen glass:**

After scanning the document, the confirmation screen asking you if you load the next document is displayed.

To send the scanned document, press the **OK** button to start sending it.

▶▶▶ Note

- To send two or more pages, follow the message to load the next page, and press the **Color** or **Black** button. After scanning all pages, press the **OK** button to start sending.
- To cancel sending the fax, press the **Stop** button.

▶▶▶ Note

- When your machine is connected to a PBX (Private Branch Exchange) system, refer to the operating instructions of the system for details on dialing the recipient's fax/telephone number.
- In case the machine was not able to send a fax, such as when the recipient's line was busy, it has the function to automatically redial the number after a specified interval. Automatic redialing is enabled by default.
 - ▶ [Automatic Redialing](#)
- Unsent documents, such as those pending redial, are stored in the machine's memory. They are not stored in the case of a sending error.
 - ▶ [Document Stored in Machine's Memory](#)
- Do not disconnect the power plug until all documents are sent. If you disconnect the power plug, all unsent documents stored in the machine's memory are lost.

Resending Faxes (Redialing a Busy Number)

There are two methods of redialing: Automatic redialing and Manual redialing.

- Automatic Redialing
If you send a document and the recipient's line is busy, the machine will redial the number after a specified interval.
➔ [Automatic Redialing](#)
- Manual Redialing
You can redial to the recipients dialed using the Numeric buttons.
➔ [Manual Redialing](#)

▶▶▶ Important

- It may be possible that faxes will reach unintended recipients due to the misdialing or incorrect registration of fax/telephone numbers. When you send important documents, it is recommended that you send them after speaking on the telephone.
➔ [Sending a Fax after Speaking on Telephone](#)

▶▶▶ Note

- Automatic redialing is enabled by default.
- For details on the basic sending operations:
➔ [Sending Faxes with the Numeric Buttons](#)

Automatic Redialing

You can enable or disable automatic redialing. If you enable automatic redialing, you can specify the maximum number of redial attempts and the length of time the machine waits between redial attempts.

Enable and specify the automatic redialing setting on **Auto redial** in **Adv. FAX settings** under **Fax settings**.

➔ [Adv. FAX settings](#)

▶▶▶ Important

- While automatic redialing, the unsent fax is stored in the machine's memory temporarily until the sending fax is complete. If a power failure occurs or you unplug the power cord before automatic redialing is complete, all faxes stored in the machine's memory are deleted and not sent.

▶▶▶ Note

- To cancel automatic redialing, wait until the machine starts redialing, then press the **Stop** button.
- To cancel automatic redialing, delete the unsent fax from the machine's memory while the machine is on-standby for a redial operation. For details, see [Deleting a Document in Machine's Memory](#).

Manual Redialing

Follow the procedure below for manual redialing.

1. Make sure that the machine is turned on.
➔ [Confirming that the Power Is On](#)
2. Press the **FAX** button.
The Fax standby screen is displayed.
3. Load documents on the platen glass or in the ADF.
➔ [Loading Originals](#)
4. Adjust the scan contrast and resolution as necessary.

▶▶▶ Note

-
- For details on how to adjust the scan contrast and resolution, see [Sending Faxes with the Numeric Buttons](#).
-

5. Press the **Menu** button.

The **FAX menu** screen is displayed.

6. Use the ◀▶ button to select **Redial**, then press the **OK** button.

The **Redial** screen is displayed.



7. Use the ◀▶ button to select the recipient's number to redial, then press the **OK** button.

8. Press the **Color** button for color transmission, or the **Black** button for black & white transmission.

▶▶▶ Important

- Color transmission is available only when the recipient's fax machine supports color faxing.

▶▶▶ Note

- For manual redialing, the machine memorizes up to 10 recent recipients dialed using the Numeric buttons. Note that the machine does not memorize any recipients dialed using the memory dialing or the manual redialing.
 - To cancel manual redialing, press the **Stop** button. To cancel a fax transmission while it is in progress, press the **Stop** button, then follow the instructions on the LCD.
 - If documents remain in the ADF after the **Stop** button is pressed while scanning is in progress, **Close the feeder cover [OK]Eject the document** is displayed on the LCD. By pressing the **OK** button, the remaining documents are automatically ejected.
-

Sending Faxes Using Useful Functions

- [Sending a Fax after Speaking on Telephone](#)
- [Sending a Fax Using the Memory Dialing Feature](#)
- [Searching a Registered Recipient by Name](#)
- [Sending the Same Document to Several Recipients \(Sequential Broadcasting\)](#)
- [Preventing Mistransmission of Faxes](#)
- [Using the On Hook Dial Function](#)

Sending a Fax after Speaking on Telephone

If you want to speak to the recipient before sending a fax, or if the recipient does not have a fax machine that can receive faxes automatically, send a fax manually after speaking to the recipient on the telephone to check whether the recipient can receive faxes.

»»» Important

- It may be possible that faxes will reach unintended recipients due to the misdialing or incorrect registration of fax/telephone numbers. When you send important documents, it is recommended that you send them after speaking on the telephone. See below for the procedure to send a fax manually.
- With manual transmission, you cannot use the platen glass to load documents. Load the documents in the ADF.

When loading document on the platen glass, send a fax with automatic transmission.

➡ [Sending Faxes with the Numeric Buttons](#)

- To speak to the recipient before sending a fax, you need to connect a telephone to the machine. For details on how to connect the telephone to the machine:

➡ [Basic Connection](#)

»»» Note

- For details on the basic sending operations:

➡ [Sending Faxes with the Numeric Buttons](#)

1. Make sure that the machine is turned on.

➡ Confirming that the Power Is On

2. Press the **FAX** button.

The Fax standby screen is displayed.

3. Load documents in the ADF.

➡ Loading Originals

4. Adjust the scan contrast and resolution as necessary.

»»» Note

- For details on how to adjust the scan contrast and resolution, see [Sending Faxes with the Numeric Buttons](#).

5. Lift the handset of the telephone connected to the machine.

6. Use the telephone to dial the recipient's fax/telephone number.

7. Speak to the recipient.

When you hear a high-pitched signal instead of the recipient's voice, you cannot check whether the recipient can receive faxes. If you want to stop sending the fax, replace the handset. If you want to send the fax, go to step 9.

8. Ask the recipient to set the recipient's fax machine to receive faxes.

9. When you hear a high-pitched signal, press the **Color** button or the **Black** button.

Press the **Color** button for color transmission, or the **Black** button for black & white transmission.

»»» Important

- Color transmission is available only when the recipient's fax machine supports color faxing.

10. Hang up the handset.

▶▶ **Note**

- To cancel a fax transmission, press the **Stop** button. To cancel a fax transmission while it is in progress, press the **Stop** button, then follow the instructions on the LCD.
- If documents remain in the ADF after the **Stop** button is pressed while scanning is in progress, **Close the feeder cover [OK]Eject the document** is displayed on the LCD. By pressing the **OK** button, the remaining documents are automatically ejected.

Sending a Fax Using the Memory Dialing Feature

Registering recipient's fax/telephone number and name for coded memory dial or group dial enables you to send faxes easily.

Important

- It may be possible that faxes will reach unintended recipients due to the misdialing or incorrect registration of fax/telephone numbers. When you send important documents, it is recommended that you send them after speaking on the telephone.
➔ [Sending a Fax after Speaking on Telephone](#)

Note

- For details on the basic sending operations:
➔ [Sending Faxes with the Numeric Buttons](#)

1. Make sure that the machine is turned on.
➔ Confirming that the Power Is On
2. Press the **FAX** button.
The Fax standby screen is displayed.
3. Load documents on the platen glass or in the ADF.
➔ Loading Originals
4. Adjust the scan contrast and resolution as necessary.

Note

- For details on how to adjust the scan contrast and resolution, see [Sending Faxes with the Numeric Buttons](#).


5. Press the **Menu** button.
The **FAX menu** screen is displayed.
6. Use the ◀▶ button to select **Memory dial**, then press the **OK** button.
The screen to select a coded memory dial code or a group dial code is displayed.



Note

- When **Enter first letter** is displayed on the LCD, you can search the recipient's name by sorting in alphabetical order and send the fax.
➔ [Searching a Registered Recipient by Name](#)
To return to the screen to select the coded memory dial code or the group dial code, press the **#** button.

7. Select a coded memory dial code or a group dial code.
 1. Use the ◀▶ button or the Numeric buttons to select a coded memory dial code or a group dial code.



2. Press the **OK** button.

8. Press the **Color** button for color transmission, or the **Black** button for black & white transmission.

▶▶▶ Important

- Color transmission is available only when the recipient's fax machine supports color faxing.

▶▶▶ Note

- To cancel a fax transmission, press the **Stop** button. To cancel a fax transmission while it is in progress, press the **Stop** button, then follow the instructions on the LCD.
- If documents remain in the ADF after the **Stop** button is pressed while scanning is in progress, **Close the feeder cover [OK]Eject the document** is displayed on the LCD. By pressing the **OK** button, the remaining documents are automatically ejected.
- In case the machine was not able to send a fax, such as when the recipient's line was busy, it has the function to automatically redial the number after a specified interval. Automatic redialing is enabled by default.

➡ Automatic Redialing

To cancel automatic redialing, wait until the machine starts redialing, then press the **Stop** button.

Searching a Registered Recipient by Name

You can search a registered recipient by sorting in alphabetical order and send the fax.

►►► Important

- It may be possible that faxes will reach unintended recipients due to the misdialing or incorrect registration of fax/telephone numbers. When you send important documents, it is recommended that you send them after speaking on the telephone.
 - ➔ [Sending a Fax after Speaking on Telephone](#)

►►► Note

- For details on the basic sending operations:
 - ➔ [Sending Faxes with the Numeric Buttons](#)

1. Make sure that the machine is turned on.
 - ➔ Confirming that the Power Is On
2. Press the **FAX** button.

The Fax standby screen is displayed.
3. Load documents on the platen glass or in the ADF.
 - ➔ Loading Originals
4. Adjust the scan contrast and resolution as necessary.

►►► Note

- For details on how to adjust the scan contrast and resolution, see [Sending Faxes with the Numeric Buttons](#).

5. Press the **Menu** button.

The **FAX menu** screen is displayed.
6. Use the ◀▶ button to select **Memory dial**, then press the **OK** button.

The screen to select a coded memory dial code or a group dial code is displayed.




►►► Note

- If **Enter first letter** is displayed on the LCD, go to step 8.

7. Press the **#** button.

The screen to enter the first letter of the registered recipient's name or of the group name is displayed.



►►► Note

- To return to the screen to select the coded memory dial code or the group dial code, press the **#** button.

8. Use the Numeric buttons to enter the first letter of the recipient's name you want to search or of the group name you want to search.

The recipients' names and the group names are sorted in alphabetical order.

☎= 0567891234
*06 Ronaldo's office

▶▶▶ Note

- For details on how to enter or delete characters:
 - ▶ Entering Numbers, Letters, and Symbols
- You can enter the following characters using the Numeric buttons.
A, D, G, J, M, P, T, W
- If the entered character does not match the first character of any of the recipients' name or the group name, names beginning with the character closest to that entered are displayed.

9. Use the ◀▶ button to select the recipient's name or the group name, then press the **OK** button.
10. Press the **Color** button for color transmission, or the **Black** button for black & white transmission.

▶▶▶ Important

- Color transmission is available only when the recipient's fax machine supports color faxing.

▶▶▶ Note

- To cancel a fax transmission, press the **Stop** button. To cancel a fax transmission while it is in progress, press the **Stop** button, then follow the instructions on the LCD.
- If documents remain in the ADF after the **Stop** button is pressed while scanning is in progress, **Close the feeder cover [OK]Eject the document** is displayed on the LCD. By pressing the **OK** button, the remaining documents are automatically ejected.
- In case the machine was not able to send a fax, such as when the recipient's line was busy, it has the function to automatically redial the number after a specified interval. Automatic redialing is enabled by default.
 - ▶ [Automatic Redialing](#)
To cancel automatic redialing, wait until the machine starts redialing, then press the **Stop** button.

Sending the Same Document to Several Recipients (Sequential Broadcasting)

This machine allows you to prepare for sending the same document to a maximum of 21 recipients in one operation. The recipients can be specified with the Numeric buttons, coded memory dial, and group dial in combination.

The following number of recipients can be specified in combination.

- The recipient registered to the machine:
Up to 20 (total of coded memory dial and group dial)
- Dialing using the Numeric buttons or redialing:
1

▶▶▶ Important

- It may be possible that faxes will reach unintended recipients due to the misdialing or incorrect registration of fax/telephone numbers. When you send important documents, it is recommended that you send them one by one after speaking on the telephone.
➡ [Sending a Fax after Speaking on Telephone](#)

▶▶▶ Note

- If you frequently send documents to the same group of recipients, you can group these numbers for group dialing. This will allow you to send documents to all the recipients in the group by simply pressing a few buttons.
➡ [Registering Recipients for Group Dial](#)
- For details on the basic sending operations:
➡ [Sending Faxes with the Numeric Buttons](#)

1. Make sure that the machine is turned on.

- ➡ Confirming that the Power Is On

2. Press the **FAX** button.

The Fax standby screen is displayed.

3. Load documents on the platen glass or in the ADF.

- ➡ Loading Originals

4. Adjust the scan contrast and resolution as necessary.

▶▶▶ Note

- For details on how to adjust the scan contrast and resolution, see [Sending Faxes with the Numeric Buttons](#).

5. Specify all recipients' fax/telephone numbers one by one.

Before finishing specifying all recipients' fax/telephone numbers, do not press the **Color** button or the **Black** button.


- By specifying with the recipient registered to the machine (coded memory dial or group dial):
Press the **Menu** button, use the ◀▶ button to select **Memory dial**, then press the **OK** button.
Next, select a recipient, then press the **OK** button.
➡ [Sending a Fax Using the Memory Dialing Feature](#)
➡ [Searching a Registered Recipient by Name](#)
- By dialing using the Numeric buttons:
Use the Numeric buttons to enter the recipient's fax/telephone number, then press the **OK** button.

▶▶▶ Note

- If **FAX no. re-entry** in **Security control** under **Fax settings** is set to **ON**, use the Numeric buttons again to enter the number, then press the **OK** button.

- By redialing:
Press the **Menu** button, use the ◀▶ button to select **Redial**, then press the **OK** button. Next, use the ◀▶ button to select the number you want to dial, then press the **OK** button.

Broadcasting is displayed after specifying the multiple recipients.



▶▶▶ Note

- When **Broadcasting** is displayed, you can review the numbers you have entered by pressing the ◀▶ button.
- Pressing the **Back** button allows you to delete the recipient's number you entered last.

6. Press the **Color** button for color transmission, or the **Black** button for black & white transmission.

▶▶▶ Important

- Color transmission is available only when the recipient's fax machine supports color faxing.

▶▶▶ Note

- To cancel sequential broadcasting, press the **Stop** button. To cancel a fax transmission while it is in progress, press the **Stop** button, then follow the instructions on the LCD.
- If documents remain in the ADF after the **Stop** button is pressed while scanning is in progress, **Close the feeder cover [OK]Eject the document** is displayed on the LCD. By pressing the **OK** button, the remaining documents are automatically ejected.
- When you press the **Stop** button, fax transmission to all the recipients specified will be canceled. You cannot cancel a fax transmission to only one recipient.

Preventing Mistransmission of Faxes

This machine has two functions for preventing the mistransmission of faxes.


- Sending faxes after entering the fax/telephone number twice
This function requires you to re-enter the fax/telephone number after entering the number using the Numeric buttons, so that the machine prevents you from misdialing.
➔ [Sending Faxes after Dialing Twice \(Fax Number Re-entry\)](#)
- Sending faxes after the machine checks the recipient's fax machine information
Before sending a fax, the machine checks whether the recipient's fax machine information matches the dialed number.
➔ [Sending Faxes after Checking Information \(Checking the Recipient's Information\)](#)

Sending Faxes after Dialing Twice (Fax Number Re-entry)

Set **FAX no. re-entry** to **ON** following the procedure below.

1. Make sure that the machine is turned on.
➔ Confirming that the Power Is On
2. Press the **Setup** button.
The **Setup menu** screen is displayed.
3. Use the ◀▶ button to select **Fax settings**, then press the **OK** button.
4. Use the ◀▶ button to select **Security control**, then press the **OK** button.
5. Use the ◀▶ button to select **FAX no. re-entry**, then press the **OK** button.
6. Use the ◀▶ button to select **ON**, then press the **OK** button.

If you send a fax with this function, the following screen is displayed after entering the recipient's fax/telephone number using the Numeric buttons.



Enter the recipient's fax/telephone number using the Numeric buttons again.

▶▶▶ Note

- If the number is not identical with the number entered first, the Fax standby screen is displayed.

Sending Faxes after Checking Information (Checking the Recipient's Information)

Set **Check RX FAX info** to **ON** following the procedure below.

▶▶▶ Important

- This function is not available when you send a fax manually.
➔ [Sending a Fax after Speaking on Telephone](#)

1. Make sure that the machine is turned on.
➔ Confirming that the Power Is On
2. Press the **Setup** button.
The **Setup menu** screen is displayed.

3. Use the ◀▶ button to select **Fax settings**, then press the **OK** button.
4. Use the ◀▶ button to select **Security control**, then press the **OK** button.
5. Use the ◀▶ button to select **Check RX FAX info**, then press the **OK** button.
6. Use the ◀▶ button to select **ON**, then press the **OK** button.

»» Important

- Transmission will be canceled if the machine fails to receive the recipient's fax information or if the received information does not match the fax/telephone number.

Using the On Hook Dial Function

Follow the procedure below to send faxes with the on hook dial function.

►► Important

- It may be possible that faxes will reach unintended recipients due to the misdialing or incorrect registration of fax/telephone numbers. When you send important documents, it is recommended that you send them after speaking on the telephone.
 - ➔ [Sending a Fax after Speaking on Telephone](#)
- With manual transmission, you cannot use the platen glass to load documents. Load the documents in the ADF.
When loading document on the platen glass, send a fax with automatic transmission.
 - ➔ [Sending Faxes with the Numeric Buttons](#)

►► Note

- You can use the on hook dial function only when **On-hook setting** in **Security control** under **Fax settings** is set to **Enable**.
 - ➔ Security control
- For details on the basic sending operations:
 - ➔ [Sending Faxes with the Numeric Buttons](#)

1. Make sure that the machine is turned on.

- ➔ Confirming that the Power Is On

2. Press the **FAX** button.

The Fax standby screen is displayed.

3. Load documents in the ADF.

- ➔ Loading Originals

4. Adjust the scan contrast and resolution as necessary.

►► Note

- For details on how to adjust the scan contrast and resolution, see [Sending Faxes with the Numeric Buttons](#).

5. Press the **Color** button or the **Black** button.

6. Use the Numeric buttons to dial the recipient's fax/telephone number.

►► Note

- You can also dial using memory dialing or manual redialing.
 - ➔ [Sending a Fax Using the Memory Dialing Feature](#)
 - ➔ [Resending Faxes \(Redialing a Busy Number\)](#)

7. When you hear a high-pitched signal, press the **Color** button or the **Black** button.

Press the **Color** button for color transmission, or the **Black** button for black & white transmission.

►► Important

- Color transmission is available only when the recipient's fax machine supports color faxing.

►► Note

- To cancel a fax transmission, press the **Stop** button. To cancel a fax transmission while it is in progress, press the **Stop** button, then follow the instructions on the LCD.

- If documents remain in the ADF after the **Stop** button is pressed while scanning is in progress, **Close the feeder cover [OK]Eject the document** is displayed on the LCD. By pressing the **OK** button, the remaining documents are automatically ejected.
-

Registering Recipients

- [Registering Recipients Using the Operation Panel of the Machine](#)
- [Registering Recipients Using Speed Dial Utility](#)

Registering Recipients Using the Operation Panel of the Machine

Memory dialing allows you to dial fax/telephone numbers by simply pressing a few buttons.

The following memory dialing methods are available:

- Coded Memory Dialing
Registering the recipient's fax/telephone number and name to the coded memory dial allows you to send a fax by entering the coded memory dial code assigned to that number or using the ◀▶ button to select the coded memory dial code after selecting **Memory dial** on the **FAX menu** screen.
➔ [Registering Recipients to Coded Memory Dial](#)
- Group Dialing
Register two or more registered coded memory dial codes as a group in advance. You can send the same document to all the registered recipients in the group.
➔ [Registering Recipients for Group Dial](#)

You can register up to 20 recipients in total of coded memory dial code and group dial code.

▶▶▶ Note

- To change information registered to the coded memory dial or the group dial, see [Changing Registered Information](#).
- To delete information registered to the coded memory dial or the group dial, see [Deleting Registered Information](#).
- To print a list of the recipient's fax/telephone numbers and names registered, see [Printing a List of the Registered Destinations](#).
- You can register, change, or delete information registered to the coded memory dial or the group dial using Speed Dial Utility.
➔ [Registering Recipients Using Speed Dial Utility](#)

Registering Recipients to Coded Memory Dial

Before you can use the coded memory dialing feature, you need to register the recipients' fax/telephone numbers. Follow the procedure below to register the recipients' fax/telephone numbers.

1. Make sure that the machine is turned on.

➡ Confirming that the Power Is On

2. Press the **Setup** button.


The **Setup menu** screen is displayed.

3. Use the ◀▶ button to select **Fax settings**, then press the **OK** button.

4. Use the ◀▶ button to select **TEL no. registration**, then press the **OK** button.

5. Use the ◀▶ button to select **Memory dial**, then press the **OK** button.

The screen to select a coded memory dial code is displayed.



Registr. memory dial
★

6. Use the ◀▶ button or the Numeric buttons to select an unoccupied coded memory dial code, then press the **OK** button.

▶▶▶ Note

- If you select a code already used as a coded memory dial, the fax/telephone number is displayed. If you select a code already used as a group dial, **(Not available)** is displayed.


7. Use the ◀▶ button to select a registration method, then press the **OK** button.

8. Register the recipients' fax/telephone number.

Register the recipients' fax/telephone number depending on the registration method selected.

- **From call log (OUT)**

When you select this registration method, the screen to select the fax/telephone number from the outgoing call logs is displayed.




Outgoing call log ▶
☎ = 0987654321

1. Use the ◀▶ button to select a fax/telephone number, then press the **OK** button.
2. When **TEL number** is displayed, press the **OK** button.
The fax/telephone number selected from the outgoing call logs is displayed.
3. Check the fax/telephone number, then press the **OK** button.

The fax/telephone number is registered to the machine. Go to next step.

- **From call log (IN)**

When you select this registration method, the screen to select the fax/telephone number or the name from the incoming call logs is displayed.



Incoming call log ▶
J. Willard

1. Use the ◀▶ button to select a fax/telephone number or a name, then press the **OK** button.
2. When **TEL number** is displayed, press the **OK** button.
The fax/telephone number selected from the incoming call logs is displayed.
3. Check the fax/telephone number, then press the **OK** button.
The fax/telephone number is registered to the machine. Go to next step.


▶▶▶ Note

- This registration method may not be available depending on the country or region of purchase.


• Direct entry

The screen to register the recipient's fax/telephone number and name is displayed.

1. Use the ◀▶ button to select **TEL number**, then press the **OK** button.
The screen to enter the fax/telephone number is displayed.



2. Use the Numeric buttons to enter the fax/telephone number you want to register.



3. Press the **OK** button.
The fax/telephone number is registered to the machine. Go to next step.

▶▶▶ Note


- You can enter the fax/telephone number up to 60 digits (40 digits for the US, Canada, Korea and some regions of Latin America), including spaces.
- For details on how to enter or delete characters:
 - ▶ Entering Numbers, Letters, and Symbols
- Press the # button twice to enter a pause.
- When **Telephone line type** in **FAX user settings** under **Fax settings** is set to **Rotary pulse**, you can enter a tone ("T") by pressing the **Tone** button.

9. Make sure that **Name** is displayed, then press the **OK** button.

The screen to enter the recipient's name is displayed.



10. Use the Numeric buttons to enter the recipient's name.



▶▶▶ Note

- You can enter the name up to 16 characters, including spaces.
- For details on how to enter or delete characters:
 - ▶ Entering Numbers, Letters, and Symbols

11. Press the **OK** button to finalize registration.

▶▶▶ Note

- To register another recipient's number and name to a coded memory dial, select an unoccupied coded memory dial code and operate in the same procedure when you register.
- To return to the Fax standby screen, press the **FAX** button.

■ You can check the recipient's numbers and names you have registered by printing MEMORY DIAL TELEPHONE NO. LIST.

➡ [Printing a List of the Registered Destinations](#)

Registering Recipients for Group Dial

If you register two or more registered coded memory dial codes to a group dial, you can send the same document successively to all recipients registered to the group dial.

1. Make sure that the machine is turned on.

➔ Confirming that the Power Is On

2. Press the **Setup** button.


The **Setup menu** screen is displayed.

3. Use the ◀▶ button to select **Fax settings**, then press the **OK** button.

4. Use the ◀▶ button to select **TEL no. registration**, then press the **OK** button.

5. Use the ◀▶ button to select **Group dial**, then press the **OK** button.

The screen to select a group dial code is displayed.




Select group number
★

6. Use the ◀▶ button or the Numeric buttons to select an unoccupied coded memory dial code, then press the **OK** button.

▶▶▶ Note

- If you select a code already used as a coded memory dial, **(Not available)** is displayed. If you select a code already used as a group dial, the registered group name is displayed.

The **Group member** screen is displayed.




Group member
03

7. Register the members.


1. Press the **Menu** button.

The screen to select a coded memory dial code is displayed.



Add to group ▶
03 *00 L. George

2. Use the ◀▶ button to select a coded memory dial code to register to the group dial.



Add to group ◀▶
03 *02 D. V. Michael


▶▶▶ Note

- When **Enter first letter** is displayed on the LCD, you can search the recipient's name by sorting in alphabetical order.
Use the Numeric buttons to enter the first letter of the recipient's name you want to search, use the ◀▶ button to select a coded memory dial code to register to the group dial, then press the **OK** button.
➔ [Searching a Registered Recipient by Name](#)

To return to the screen to select the coded memory dial code or the group dial code, press the **#** button.

3. Press the **OK** button.

The coded memory dial code is registered to the group dial.



Group member
03 *02 D. V. Michael

4. Press the **Menu** button to display the screen to select a coded memory dial code, then add another member.


Repeat this step to register the other coded memory dial codes to the same group dial.

▶▶▶ Note

- You can check the coded memory dial code and the recipient's name registered to the group dial by using the ◀▶ button.
- To delete the registered coded memory dial code from the group dial, press the **Tone** button.


8. Press the **OK** button after finishing registering the member you want to register to the group dial.

The screen to enter the group name is displayed.



Group name :A

9. Use the Numeric buttons to enter the group name.



Group name :1
Friend 1

▶▶▶ Note

- You can enter the name up to 16 characters, including spaces.
- For details on how to enter or delete characters:
 - ➔ Entering Numbers, Letters, and Symbols

10. Press the **OK** button to finalize registration.

▶▶▶ Note

- To register another group dial code to the machine, select an unoccupied coded memory dial code and operate in the same procedure when you register.
- To return to the Fax standby screen, press the **FAX** button.
- You can check the recipients you have registered to the group dial by printing GROUP DIAL TELEPHONE NO. LIST.
 - ➔ [Printing a List of the Registered Destinations](#)

Changing Registered Information

To change information registered for coded memory dial and group dial, follow the procedure below.

1. Make sure that the machine is turned on.
 - ➡ Confirming that the Power Is On
2. Press the **Setup** button.

The **Setup menu** screen is displayed.
3. Use the ◀▶ button to select **Fax settings**, then press the **OK** button.
4. Use the ◀▶ button to select **TEL no. registration**, then press the **OK** button.
5. Use the ◀▶ button to select a registration menu to change, then press the **OK** button.
6. Change the registered information.
 - To change a coded memory dial code:
 1. Use the ◀▶ button or the Numeric buttons to select a coded memory dial code to change, then press the **OK** button.
 2. Display the screen to enter the recipient's fax/telephone number as well as you register the fax/telephone number to the coded memory dial.
 3. Change the recipient's fax/telephone number, then press the **OK** button.

▶▶▶ Note

- You can enter the fax/telephone number up to 60 digits (40 digits for the US, Canada, Korea and some regions of Latin America), including spaces.
- For details on how to enter or delete characters:
 - ➡ Entering Numbers, Letters, and Symbols
- Press the **#** button twice to enter a pause.
- When **Telephone line type** in **FAX user settings** under **Fax settings** is set to **Rotary pulse**, you can enter a tone ("T") by pressing the **Tone** button.

4. Display the screen to enter the recipient's name as well as you register the name to the coded memory dial.
5. Change the recipient's name, then press the **OK** button.

▶▶▶ Note

- You can enter the name up to 16 characters, including spaces.
- For details on how to enter or delete characters:
 - ➡ Entering Numbers, Letters, and Symbols

- To change a group dial code:
 1. Use the ◀▶ button or the Numeric buttons to select a group dial code to change, then press the **OK** button.
 2. Use the ◀▶ button to select **Edit**, then press the **OK** button.
 3. Add the member or delete as well as you register the coded memory dial code to the group dial, then press the **OK** button.
 4. Change the group name, as well as you register the coded memory dial code to the group dial, then press the **OK** button.

▶▶▶ Note

- You can enter the name up to 16 characters, including spaces.

For details on how to enter or delete characters:

➡ Entering Numbers, Letters, and Symbols

»» Note

- To return to the Fax standby screen, press the **FAX** button.
-

Deleting Registered Information

To delete information registered for coded memory dial and group dial, follow the procedure below.

1. Make sure that the machine is turned on.
 - ➡ Confirming that the Power Is On
2. Press the **Setup** button.

The **Setup menu** screen is displayed.
3. Use the ◀▶ button to select **Fax settings**, then press the **OK** button.
4. Use the ◀▶ button to select **TEL no. registration**, then press the **OK** button.
5. Use the ◀▶ button to select a registration menu to delete the dial code, then press the **OK** button.
6. Delete the registered information.
 - To delete a coded memory dial code:
 1. Use the ◀▶ button or the Numeric buttons to select a coded memory dial code to delete, then press the **OK** button.
 2. Use the ◀▶ button to select **Direct entry**, then press the **OK** button.
 3. Use the ◀▶ button to select **TEL number**, then press the **OK** button.

The screen to enter the fax/telephone number is displayed.
 4. Press the **Back** button repeatedly until all numbers are deleted.
 5. Press the **OK** button.

The fax/telephone number is deleted.
The recipient's name will automatically be deleted when you delete the fax/telephone number.
 - To delete a group dial code:
 1. Use the ◀▶ button or the Numeric buttons to select a group dial code to delete, then press the **OK** button.
 2. Use the ◀▶ button to select **Delete**, then press the **OK** button.
 3. Use the ◀▶ button to select **Yes**, then press the **OK** button.

▶▶▶ Note

-
- To return to the Fax standby screen, press the **FAX** button.
-

Printing a List of the Registered Destinations

You can print a list of the recipients registered for memory dialing and can keep it near the machine to refer to when dialing.

1. Make sure that the machine is turned on.

➡ Confirming that the Power Is On

2. Load paper.

➡ Loading Paper

3. Press the **FAX** button.

The Fax standby screen is displayed.

4. Press the **Menu** button.

The **FAX menu** screen is displayed.

5. Use the ◀▶ button to select **Print reports/lists**, then press the **OK** button.

6. Use the ◀▶ button to select **TEL number list**, then press the **OK** button.

▶▶▶ Note

- When **Change the paper A4/LTR/LGL Plain paper** is displayed on the LCD, the paper settings are incorrect.

In **FAX paper settings**, set **Page size** to **A4**, **Letter**, **LTR**, or **Legal**. Set **Media type** to **Plain paper**.

* Some of page sizes are not available depending on the country or region of purchase.

7. Use the ◀▶ button to select a memory dialing menu to print, then press the **OK** button.

- If you selected **Memory dial**:

Use the ◀▶ button to select whether to print the list in alphabetical order of the registered names, or in numerical order of the coded memory codes, then press the **OK** button.

If you select **Yes**, MEMORY DIAL TELEPHONE NO. LIST is printed with the destination names in alphabetical order.

If you select **No**, MEMORY DIAL TELEPHONE NO. LIST is printed with the registered entries in numerical order.

- If you selected **Group dial**:

GROUP DIAL TELEPHONE NO. LIST is printed.

Registering Recipients Using Speed Dial Utility

About Speed Dial Utility

Speed Dial Utility is a utility for forwarding the fax/telephone numbers registered on the machine to a computer and registering/changing them on the computer. In addition, you can register the fax/telephone number, user's name, user's fax/telephone number, and rejected numbers edited on the computer to the machine. You can also save them on the computer as a backup.

For safety reasons, it is recommended that you backup the registered data on the computer using Speed Dial Utility.

- ➔ [Starting Up Speed Dial Utility](#)
- ➔ [Speed Dial Utility Dialog box](#)
- ➔ [Saving Registered Information on the Machine to Your Computer](#)
- ➔ [Registering a Fax/telephone Number Using Speed Dial Utility](#)
- ➔ [Changing a Fax/telephone Number Using Speed Dial Utility](#)
- ➔ [Deleting a Fax/telephone Number Using Speed Dial Utility](#)
- ➔ [Changing Sender Information Using Speed Dial Utility](#)
- ➔ [Registering/Changing Rejected Number Using Speed Dial Utility](#)
- ➔ [Calling the Registered Information Up from Your Computer and Registering the Information to the Machine](#)
- ➔ [Uninstalling Speed Dial Utility](#)

Starting Up Speed Dial Utility

Before starting up Speed Dial Utility, confirm the following:

- **The necessary application software (MP Drivers and Speed Dial Utility) is installed.**

If the application software (MP Drivers and Speed Dial Utility) is not yet installed, insert the Setup CD-ROM into the computer's disc drive, then install MP Drivers and Speed Dial Utility.

- **The machine is connected to a computer correctly.**

Make sure that the machine is connected to the computer correctly.

Do not plug in or unplug any cables while the machine is in operation, or when the computer is in sleep or standby mode.

If your machine is compatible with LAN connection, make sure that the machine is connected to the computer with LAN connection to use Speed Dial Utility via LAN connection.

Follow the procedure below to start up Speed Dial Utility.

1. Make sure that the machine is turned on.
2. Click **Start** and select **All programs, Canon Utilities, Speed Dial Utility**, and then **Speed Dial Utility**.


Speed Dial Utility starts up.

▶▶ Note

- You can also start up the Speed Dial Utility by clicking  **Speed Dial Settings** from **Device Settings & Maintenance** on Quick Menu.

Speed Dial Utility Dialog box

The following items are on the **Speed Dial Utility** dialog box.

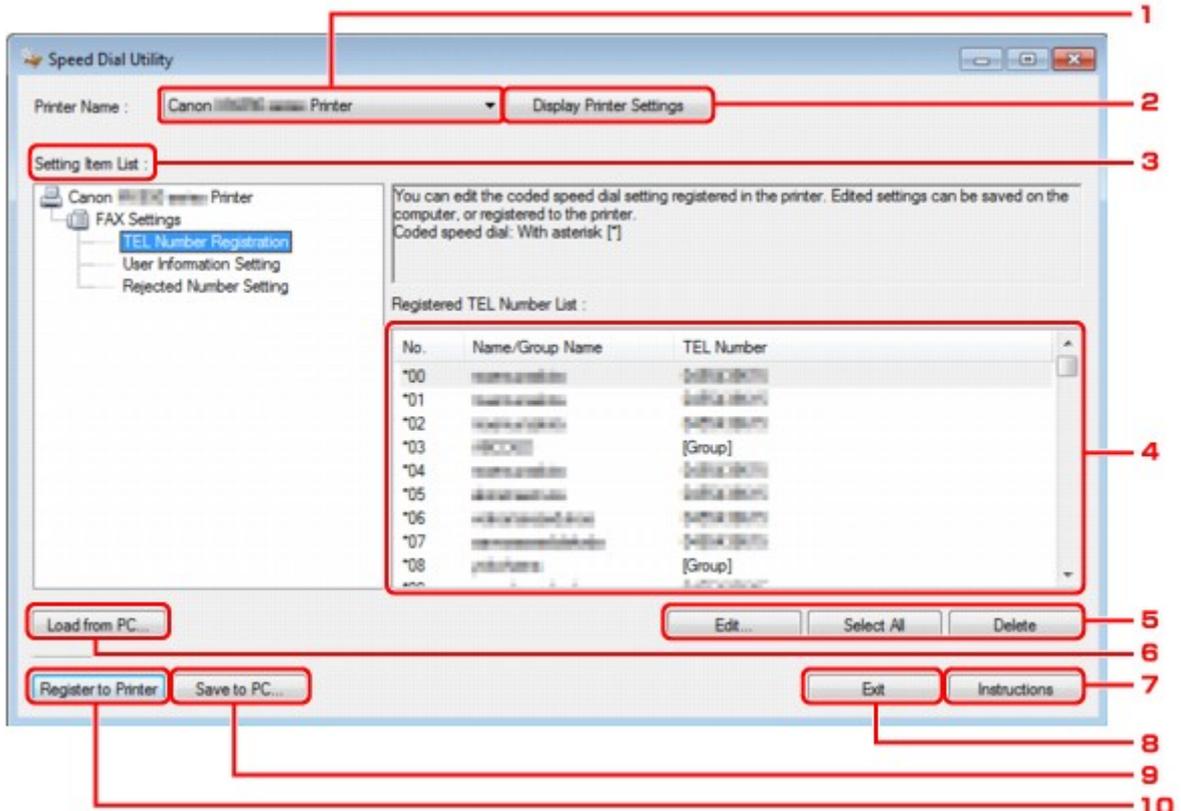

1. Printer Name:

Selects the machine for editing the registered information using Speed Dial Utility.

2. Display Printer Settings

Loads the registered information on the machine selected for **Printer Name:** into Speed Dial Utility.

3. Setting Item List:

Selects the registered information for editing. Choose one item from **TEL Number Registration**, **User Information Setting**, and **Rejected Number Setting**.

4. Registered information list

Displays the registered information selected for **Setting Item List:**.

5. Edit.../Select All/Delete

Edits/deletes the registered information or selects all the registered information selected for **Setting Item List:**.

When multiple items on the registered information list are selected, you cannot use the **Edit...** button.

6. Load from PC...

Displays the registered information saved on the computer.

7. Instructions

Displays this guide.

8. Exit

Quits Speed Dial Utility. Information registered or edited using Speed Dial Utility is neither saved on the computer nor registered on the machine.

9. Save to PC...

Saves information edited using Speed Dial Utility on the computer.

10. Register to Printer

Registers information edited using Speed Dial Utility to the machine.

Saving Registered Information on the Machine to Your Computer

Follow the procedure below to save the speed dial (or memory dial)/group dial numbers, user's name, fax/telephone number, or rejected numbers on the machine to the computer.

1. Start up Speed Dial Utility.
 ➡ [Starting Up Speed Dial Utility](#)
2. Select the machine from the **Printer Name:** list box, then click **Display Printer Settings**.
3. Click **Save to PC....**
4. Enter the file name on the displayed screen, then click **Save**.

Registering a Fax/telephone Number Using Speed Dial Utility

Follow the procedure below to register fax/telephone numbers.

►► Note

- Before you register fax/telephone numbers using Speed Dial Utility, make sure that no fax operations are in progress.

1. Start up Speed Dial Utility.
➔ [Starting Up Speed Dial Utility](#)
2. Select the machine from the **Printer Name:** list box, then click **Display Printer Settings**.
3. Click **TEL Number Registration** from **Setting Item List:**.
The list of registered fax/telephone numbers is displayed.
4. Select an unoccupied code from the list, then click **Edit...**.
The **Individual or Group Selection** dialog box is displayed.
5. Click **Register individual TEL number** or **Register group dial**, then click **Next....**
 - If **Register individual TEL number** is selected:

Individual TEL Number Registration

No. : *00

Name :

TEL Number :

OK Cancel

1. Enter the name.
2. Enter the fax/telephone number.

- If **Register group dial** is selected:

Group Dial Registration

No. : *10

Group Name :

Registered TEL Number List :

No.	Name/Group Name	TEL Number
*00	xxxxxx	[+004 0000]
*01	xxxxxx	[+004 0000]
*02	xxxxxx	[+004 0000]
*03	[Group]	[Group]
*04	xxxxxx	[+004 0000]
*05	xxxxxx	[+004 0000]
*06	xxxxxx	[+004 0000]
*07	xxxxxx	[+004 0000]
*08	xxxxxx	[+004 0000]

Group Dial List :

No.	Member	TEL Number
-----	--------	------------

Add >>

<< Delete

OK Cancel

1. Enter the group name.
2. Select the code you want to add to the group dial, then click **Add >>**.

»» Note

- You can only enter numbers that have already been registered.

6. Click OK.

To continue registering fax/telephone numbers or a group dial, repeat steps 4 to 6.

- To save the registered information on the computer.
 1. Click **Save to PC...**
 2. Enter the file name on the displayed screen, then click **Save**.
- To register the registered information to the machine:
 1. Click **Register to Printer**.
 2. Confirm the message on the display, then click **OK**.
The information is registered to the machine.

Changing a Fax/telephone Number Using Speed Dial Utility

Follow the procedure below to change fax/telephone numbers.

►►► Note

- Before you change fax/telephone numbers using Speed Dial Utility, make sure that no fax operations are in progress.

1. Start up Speed Dial Utility.

➔ [Starting Up Speed Dial Utility](#)

2. Select the machine from the **Printer Name:** list box, then click **Display Printer Settings**.

3. Click **TEL Number Registration** from **Setting Item List:**.

The list of registered fax/telephone numbers is displayed.


4. Select a code to change from the list, then click **Edit....**

- If an individual fax/telephone number is selected:



1. Enter the new name.
2. Enter the new fax/telephone number.

- If a group dial is selected:

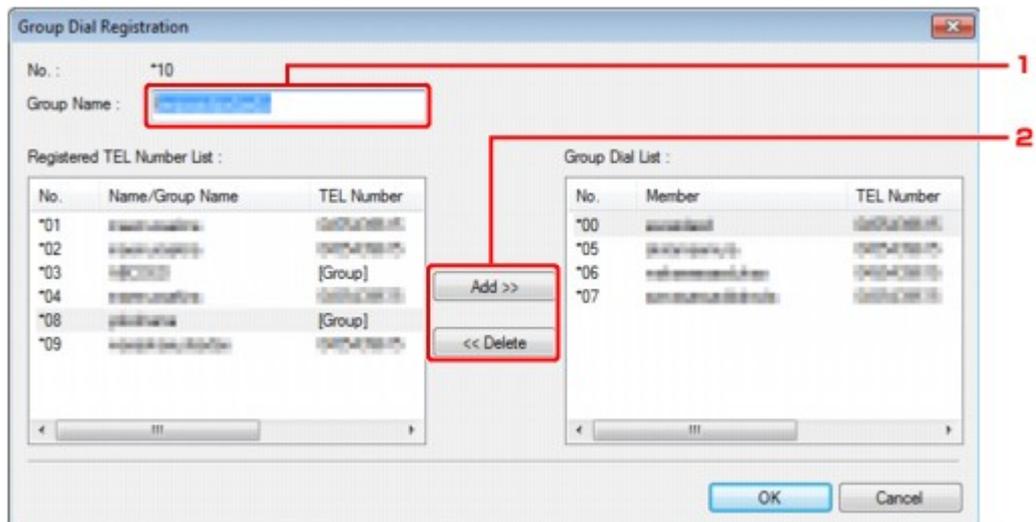

No.	Name/Group Name	TEL Number
*01	testmachine	020428810
*02	testmachine	020428810
*03	[Group]	[Group]
*04	testmachine	020428810
*08	testmachine	[Group]
*09	testmachine	020428810

No.	Member	TEL Number
*00	testmachine	020428810
*05	testmachine	020428810
*06	testmachine	020428810
*07	testmachine	020428810

1. Enter the new group name.
2. Add or delete a member to/from the group dial.

To add a member:

Select the code to add to the group dial, then click **Add >>**.

To delete a member:

Select the code to delete from the group dial, then click **<< Delete**.

5. Click OK.

To continue changing fax/telephone numbers or group dials, repeat steps 4 and 5.

- To save the edited information on the computer.
 1. Click **Save to PC...**
 2. Enter the file name on the displayed screen, then click **Save**.
- To register the edited information to the machine:
 1. Click **Register to Printer**.
 2. Confirm the message on the display, then click **OK**.

The information is registered to the machine.

Deleting a Fax/telephone Number Using Speed Dial Utility

Follow the procedure below to delete fax/telephone numbers.

▶▶▶ Note

- Before you delete fax/telephone numbers using Speed Dial Utility, make sure that no fax operations are in progress.

1. Start up Speed Dial Utility.

➡ [Starting Up Speed Dial Utility](#)

2. Select the machine from the **Printer Name: list box, then click **Display Printer Settings**.**

3. Click **TEL Number Registration from **Setting Item List:**.**

The list of registered fax/telephone numbers is displayed.

4. Select a code to delete from the list, then click **Delete.**

The selected fax/telephone number is deleted.

To continue deleting fax/telephone numbers, repeat step 4.

▶▶▶ Note

- To delete all fax/telephone numbers on the list, click **Select All**, then **Delete**.

- To save the edited information on the computer.
 1. Click **Save to PC...**
 2. Enter the file name on the displayed screen, then click **Save**.
- To register the edited information to the machine:
 1. Click **Register to Printer**.
 2. Confirm the message on the display, then click **OK**.
The information is registered to the machine.

Changing Sender Information Using Speed Dial Utility

Follow the procedure below to change the user's name or fax/telephone number.

1. Start up Speed Dial Utility.

➡ [Starting Up Speed Dial Utility](#)

2. Select the machine from the **Printer Name:** list box, then click **Display Printer Settings**.

3. Click **User Information Setting** from **Setting Item List:**.

The user's information is displayed.

4. Select an item to change, then click **Edit...**

The **User Information** dialog box is displayed.

5. Enter the new user's name on **User Name** and new fax/telephone number in **TEL Number**, then click **OK**.

- To save the edited information on the computer:

1. Click **Save to PC...**
2. Enter the file name on the displayed screen, then click **Save**.

- To register the edited information to the machine:

1. Click **Register to Printer**.
2. Confirm the message on the display, then click **OK**.

The information is registered to the machine.

Registering/Changing Rejected Number Using Speed Dial Utility

Follow the procedure below to register, change, or delete rejected numbers.

1. Start up Speed Dial Utility.

➡ [Starting Up Speed Dial Utility](#)

2. Select the machine from the **Printer Name:** list box, then click **Display Printer Settings**.

3. Click **Rejected Number Setting** from **Setting Item List:**.

The list of rejected numbers is displayed.

- To register a rejected number:
 1. Select an unoccupied code from the list, then click **Edit...**
 2. Enter the fax/telephone number in the **Rejected Number** dialog box, then click **OK**.
- To change a rejected number:
 1. Select a code to change from the list, then click **Edit...**
 2. Enter the fax/telephone number in the **Rejected Number** dialog box, then click **OK**.
- To delete a rejected number:
 1. Select a code to delete from the list, then click **Delete**.
The selected fax/telephone number is deleted.

▶▶▶ Note

- To delete all fax/telephone numbers on the list, click **Select All**, then **Delete**.

Calling the Registered Information Up from Your Computer and Registering the Information to the Machine

You can register the fax/telephone numbers, user's name, user's fax/telephone number, and rejected numbers saved on the computer to the machine.

1. Start up Speed Dial Utility.
➡ [Starting Up Speed Dial Utility](#)
2. Select the machine from the **Printer Name:** list box, then click **Display Printer Settings**.
3. Click **Load from PC...**
4. Select the RSD file (*.rsd) to register to the machine.
5. Click **Open** on the dialog box.
6. Click **Register to Printer**.

The registered information on the computer is registered to the machine.

Uninstalling Speed Dial Utility

Follow the procedure below to uninstall Speed Dial Utility.

Important

- Log into a user account with administrator privilege.

1. Uninstall Speed Dial Utility.

- In Windows 7 or Windows Vista:
 1. Click **Start > Control Panel > Programs > Programs and Features**.
 2. Select **Canon Speed Dial Utility** from the program list, then click **Uninstall**.
If the **User Account Control** screen appears, click **Continue**.
- In Windows XP:
 1. Click **Start > Control Panel > Add or Remove Programs**.
 2. Select **Canon Speed Dial Utility** from the program list, then click **Remove**.

2. Click **Yes** when the confirmation message appears.

When the message prompting you to restart your computer is displayed, click **OK** to restart your computer.

Note

- To reinstall Speed Dial Utility, uninstall Speed Dial Utility, then install it again with the Setup CD-ROM.

Receiving Faxes

- Receiving Faxes
- Changing the Paper Settings
- Advanced Settings of Receive Mode
- Memory Reception
- Receiving Faxes Using Useful Functions

Receiving Faxes

This section describes the preparation necessary for receiving a fax and how to receive a fax.


Preparing for Receiving a Fax

Prepare for receiving a fax according to the following procedure.

1. Make sure that the machine is turned on.
➡ [Confirming that the Power Is On](#)

2. Press the **FAX** button.
The Fax standby screen is displayed.

3. Make sure of the receive mode setting.
Make sure of the receive mode setting displayed on the Fax standby screen.



➤➤➤ Note

- For details on how to change the receive mode:
➡ [Setting the Receive Mode](#)

4. Load paper.
Load the sheets of plain paper.
➡ [Loading Paper](#)
5. Specify the paper settings as necessary.
➡ [Changing the Paper Settings](#)
This completes the preparation for receiving fax.
When a fax is received, it is printed on the loaded paper automatically.


Receiving a Fax

Depending on the selected receive mode, the receive operation varies.

➤➤➤ Note

- For details on the receive mode:
➡ [Setting the Receive Mode](#)
- You can specify the advanced settings of each receive mode.
For details on the advanced settings of the receive mode:
➡ [Advanced Settings of Receive Mode](#)
- If the machine was not able to print a received fax, the machine stores the unprinted fax temporarily in its memory (memory receiving).
➡ [Memory Reception](#)
- You can save received faxes on a USB flash drive as PDF files automatically when receiving a fax.
➡ [Saving Received Faxes Automatically on a USB Flash Drive](#)

- **When TEL priority mode is selected:**
When the call is a fax:

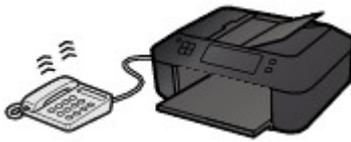


The telephone will ring when a call incomes.



Pick up the handset. If you hear the fax tone, wait for at least 5 seconds after it stops, then hang up the handset. The machine will receive the fax.

➤➤➤ Note

- If the machine will not switch to fax reception, press the **FAX** button, then the **Color** or **Black** button to receive the fax.
- To receive a fax without picking up the handset, set **Manual/auto switch** of the advanced setting to **ON**. **RX start time** allows you to specify the number of seconds until the machine switches to fax reception.
- If you have subscribed to Duplex Ringing service in Hong Kong, the telephone will ring a specified number of times when there is an incoming call with a fax distinctive ring pattern. Then, the machine will switch to fax reception automatically without the handset being picked up.
The number of times to ring the telephone until switching to fax reception can be changed.
- Set the machine to enable you to initiate fax reception from a connected telephone (remote reception).
➔ [Remote Reception](#)

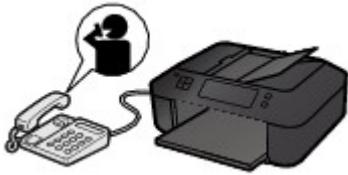


➤➤➤ Note

- **When the answering machine is connected to the machine:**
 - If the answering machine is set to the answering mode, set **User-friendly RX** of the advanced setting to **ON**. If the call is a fax, the machine will receive the fax automatically.
 - If the answering mode is turned off on the answering machine, pick up the handset. If you hear the fax tone, wait for at least 5 seconds after it stops, then hang up the handset.
 - If **Manual/auto switch** of the advanced setting is set to **ON**, set **RX start time** to longer than the time before the answering machine starts playing the answering message. After making this setting, we recommend that you call the answering machine using a mobile phone, etc. to confirm that messages are recorded successfully in the answering machine.
 - Set your answering machine to answering mode and adjust it as follows:
 - The entire message should be no longer than 15 seconds.
 - In the message, tell your callers how to send a fax.

When the call is a voice call:



The telephone will ring when a call incomes.

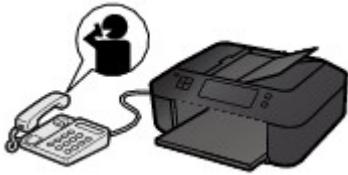

Pick up the handset, and talk on the telephone.

▶▶▶ **Note**

- If the machine unexpectedly switches to fax reception during telephone calls, set **User-friendly RX** of the advanced setting to **OFF**.
- If **Manual/auto switch** of the advanced setting is set to **ON**, you must answer an incoming call by picking up the handset within the time specified in **RX start time**. Otherwise the machine will switch to fax reception.

- **When Fax only mode is selected:**
When the call is a fax:



The machine will receive the fax automatically.

▶▶▶ **Note**

- If a telephone is connected to the machine, the telephone will ring when a call comes.
- You can change the number of times to ring the telephone with **Incoming ring** of the advanced setting.

- **When DRPD or Network switch is selected:**
When the call is a fax:



The telephone will ring when a call comes.



The machine will receive the fax automatically when the fax ring pattern is detected.

▶▶▶ **Note**

- You can change the number of times to ring the telephone.
➔ [Advanced Settings of Receive Mode](#)

- When the call is a voice call:



The telephone will ring when a call comes. When the machine does not detect the fax ring pattern, the telephone will continue ringing.



Pick up the handset, and talk on the telephone.

▶▶▶ **Note**

- To use this feature, you need to subscribe to a compatible service provided by your telephone company.
- **For DRPD**

You need to select the appropriate ring pattern on the machine.

➔ [Setting the DRPD Ring Pattern \(US and Canada only\)](#)

■ **For Network switch**

The name of this service varies depending on the country or region of purchase. This setting may not be also available depending on the country or region of purchase.

Changing the Paper Settings

This machine prints received faxes to paper loaded in the machine beforehand. You can use the operation panel to change the paper settings for printing faxes. Make sure that the settings are appropriate for the loaded paper.

►►► Important

- If the size of loaded paper is different from that specified in the paper size setting, the received faxes are stored in the machine's memory and **Check page size** and **Press [OK]** are displayed on the LCD. In this case, load the same size of paper as that specified in the paper size setting, then press the **OK** button.

You can also press the **Stop** button to close the message and print the stored documents in the machine's memory later.

➡ [Printing a Document in Machine's Memory](#)

- If no paper is loaded, or paper has run out while printing is in progress, the received faxes are stored in the machine's memory and **Load paper** and **Load paper and press [OK]** are displayed on the LCD. In this case, load paper and press the **OK** button.

You can also press the **Stop** button to close the message and print the stored documents in the machine's memory later.

➡ [Printing a Document in Machine's Memory](#)

►►► Note

- If the sender sends a document that is larger than Letter-size or Legal-size, such as 11 x 17 inches, the sender's machine may send the fax automatically reduced in size or divided, or send only a part of the original.

1. Make sure that the machine is turned on.

➡ Confirming that the Power Is On

2. Press the **FAX** button.

The Fax standby screen is displayed.

3. Press the **Menu** button.

The **FAX menu** screen is displayed.

4. Use the ◀▶ button to select **FAX paper settings**, then press the **OK** button.

5. Make sure that **Page size** is selected, then press the **OK** button.

6. Use the ◀▶ button to select **A4**, **Letter**, **LTR**, or **Legal**, then press the **OK** button.

►►► Note

- The * (asterisk) on the LCD indicates the current setting.
- Some of page sizes are not available depending on the country or region of purchase.

7. Make sure that **Media type** is selected, then press the **OK** button.

8. Make sure that **Plain paper** is selected, then press the **OK** button.

►►► Note

- If any media type other than **Plain paper** is selected, select **Plain paper** using the ◀▶ button, then press the **OK** button.

9. Press the **FAX** button to return to the Fax standby screen.

Advanced Settings of Receive Mode

You can specify the advanced settings of each receive mode.

This section describes the procedure to specify the advanced settings of the receive mode and the setting items.

Specify the advanced settings following the procedure below.

1. Make sure that the machine is turned on.
➡ Confirming that the Power Is On
2. Press the **FAX** button.
The Fax standby screen is displayed.
3. Press the **Menu** button.
The **FAX menu** screen is displayed.
4. Use the ◀▶ button to select **Receive mode set.**, then press the **OK** button.
5. Use the ◀▶ button to select a receive mode, then press the **OK** button.
The confirmation screen asking whether to make advanced settings is displayed.
6. Use the ◀▶ button to select **Yes**, then press the **OK** button.
7. Use the ◀▶ button to select a setting item, then press the **OK** button.
8. Use the ◀▶ button to specify the setting, then press the **OK** button.
Depending on the setting items, the related setting items are displayed after you specify the setting of the advanced settings and press the **OK** button. Use the ◀▶ button again to specify the setting, then press the **OK** button. The LCD returns to the Fax standby screen after you finish specifying all settings.

▶▶▶ Note

- The * (asterisk) on the LCD indicates the current setting.

For details on advanced settings of each receive mode, see below.

➡ [Advanced setting in TEL priority mode](#)

➡ [Advanced setting in Fax only mode](#)

➡ [Advanced setting in DRPD](#)

➡ [Advanced setting in Network switch](#)

▶▶▶ Note

- Refer to [Receiving Faxes](#) for information on receiving faxes or the procedure for each receive mode.
- **DRPD** is available only in the US and Canada.
- **Network switch** may not be available depending on the country or region of purchase.

Advanced setting in TEL priority mode

You can specify the following setting items.

- **Manual/auto switch**

If you select **ON**, the machine automatically receives faxes after the external device rang a specified length of time.

You can specify the length of time until automatic reception is started.

- **User-friendly RX**

If you select **ON**, the machine automatically switches from telephone calling to fax reception by detecting the fax signal (CNG signal) when you lift the handset of the telephone or the answering machine answers. When you have an answering machine connected to the machine, select **ON** to switch to fax reception automatically after the answering machine answers.

If you select **OFF**, the machine does not switch from telephone calling to fax reception automatically even if the machine detects the fax signal (CNG signal). Select **OFF** if you want the machine not to switch automatically during a call.

►► Note

- If you subscribe to Duplex Ringing service in Hong Kong, the number of times the external device rings specified with **Incoming ring** in **Fax only mode** is available in **TEL priority mode**. If you want to specify the number of times the external device rings in **TEL priority mode**, select **Fax only mode** for **Receive mode set**. under **FAX menu**, specify the number of times the external device rings with **Incoming ring**, then switch to **TEL priority mode** for **Receive mode set**.
- If you subscribe to Duplex Ringing service in Hong Kong, we recommend that **Manual/auto switch** be set to **OFF**.

Advanced setting in Fax only mode

You can specify the following setting item.

- **Incoming ring**
You can specify the number of times the external device rings when incoming.

Advanced setting in DRPD

You can specify the following setting items.

- **DRPD: FAX ring pat.**
Sets the distinctive ring pattern of a call that the machine assumes is a fax call.
If you subscribe to a DRPD service, set the ring pattern to match the pattern assigned by your telephone company.
- **Incoming ring**
You can specify the number of times the external device rings when incoming.

Advanced setting in Network switch

You can specify the following setting item.

- **Incoming ring**
You can specify the number of times the external device rings when incoming.

Memory Reception

If the machine was not able to print the received fax, the received fax is stored in the machine's memory. The **FAX Memory** lamp is lit and **Received in memory** is displayed on the LCD.

Important

- If the power plug is disconnected, all faxes stored in the machine's memory are deleted. The next time you turn the machine on, press the **OK** button after a confirmation screen is displayed. The list of the faxes deleted from the machine's memory (MEMORY CLEAR REPORT) will be printed.

If the machine receives a fax under one of the following conditions, the received fax will be automatically stored in the machine's memory.

- **The machine is set to store received faxes in its memory:**

When **Do not print** is selected for **Received documents** in **Auto print settings** under **Fax settings**, the received faxes are stored in the machine's memory.

You can print the faxes stored in the machine's memory from the **Memory reference** screen under **FAX menu**.

➔ [Printing a Document in Machine's Memory](#)

Note

- To print the received faxes automatically, select **Print** for **Received documents** in **Auto print settings** under **Fax settings**.
 - ➔ Auto print settings

- **An error has occurred on the machine:**

If you select **Print** for **Received documents** in **Auto print settings** under **Fax settings**, a received fax will be printed automatically. However, if any of the following errors occurs, the received fax will not be printed. It will instead be stored in the machine's memory.

When the error is resolved, the fax stored in the machine's memory is printed automatically.

- The amount of remaining ink is insufficient to print a fax:
 - Replace the FINE cartridge.
 - ➔ [Replacing a FINE Cartridge](#)

Note

- You can set the machine to forcibly print a received fax even if the ink has run out. Set **Print when no ink** in **Auto print settings** under **Fax settings** to **Print**. However, part or all of the fax may not be printed since the ink has run out. Also, the contents of the fax will not be stored in the machine's memory. If the ink has already run out, we recommend that **Do not print** be selected for **Received documents** in **Auto print settings** under **Fax settings** to store the received fax in the machine's memory. After you replace the FINE cartridge and select **Print** for **Received documents** in **Auto print settings**, the fax stored in the machine's memory will be printed automatically.
 - ➔ Auto print settings

- Paper has run out:
 - Load the paper and press the **OK** button.
- A different size of paper from that specified by **Page size** is loaded:
 - Load the same size of paper as that specified by **Page size**, then press the **OK** button.
- **Page size** is set to other than **A4**, **Letter**, **LTR**, or **Legal**:
 - Set **Page size** to **A4**, **Letter**, **LTR**, or **Legal**.
 - ➔ [Changing the Paper Settings](#)

Note

- Some of page sizes are not available depending on the country or region of purchase.

- **Media type** is set to other than **Plain paper**:
 - Set **Media type** to **Plain paper**.
 - ➔ [Changing the Paper Settings](#)

- **You pressed the Stop button to cancel printing of a fax:**

Press the **FAX** button to resume printing of the fax.

▶▶ Note

- The machine can store up to max. 50 pages* (max. 20 documents) of faxes in the machine's memory.
* When using ITU-T No.1 chart (Standard mode)
- If the machine's memory becomes full during memory reception, only pages which already have been received are stored in the memory. Print the received faxes stored in the machine's memory or save them on the USB flash drive, delete them from the machine's memory, and have the sender resend the faxes.

➡ [Document Stored in Machine's Memory](#)

Receiving Faxes Using Useful Functions

- [Saving Received Faxes Automatically on a USB Flash Drive](#)
- [Remote Reception](#)
- [Rejecting Fax Reception](#)
- [Using the Caller ID Service to Reject Calls](#)

Saving Received Faxes Automatically on a USB Flash Drive

You can save received faxes on a USB flash drive as PDF files automatically when receiving a fax.

This section describes the procedure to enable the machine to save received faxes on a USB flash drive automatically.

Important

- Do not remove the USB flash drive from the machine when the machine is set to save received faxes on a USB flash drive automatically.
- For safety reasons, we recommend backing up faxes saved on a USB flash drive to another media periodically to avoid unexpected accidents.
- We assume no responsibility for damage to or loss of data for whatever reason even within the warranty period.
- **Awaiting doc. processing** is displayed on the LCD and the faxes are stored in the machine's memory when the received faxes are not saved on the USB flash drive because the USB flash drive is not inserted or because it is not writable.
You can save the faxes stored in the machine's memory to the USB flash drive manually. Delete the unnecessary fax from machine's memory after saving to the USB flash drive.
 - ➡ [Saving a Document in Machine's Memory to USB Flash Drive](#)
 - ➡ [Deleting a Document in Machine's Memory](#)

1. Make sure that the machine is turned on.

- ➡ Confirming that the Power Is On

2. Insert the USB flash drive into the USB flash drive port.

- ➡ Inserting the USB Flash Drive

3. Press the **Setup** button.

The **Setup menu** screen is displayed.

4. Use the ◀▶ button to select **Fax settings**, then press the **OK** button.

5. Use the ◀▶ button to select **Auto save setting**, then press the **OK** button.

6. Use the ◀▶ button to select **ON**, then press the **OK** button.

7. Press the **FAX** button to return to the Fax standby screen.

Note

- You can save up to 50 pages of fax as one PDF file.
- You can save up to 2000 PDF files on a USB flash drive.
- If the USB flash drive is removed or becomes full while saving faxes is in progress, the error message is displayed on the LCD. Press the **OK** button to dismiss the error.
- The folder and file name of faxes saved on the USB flash drive is as follows:
 - Folder name: CANON_SC\FAXDOC\0001
 - File name (file extension: PDF): Running numbers, starting from FAX_0001
 - File date: The date and time of saving as set in the machine.
For details on how to set the date and time:
 - ➡ [Setting the Date and Time](#)
- When removing the USB flash drive, set **Auto save setting** to **OFF**.

• Importing Faxes Saved on a USB Flash Drive to the Computer

You can import faxes saved on a USB flash drive to the computer.

After saving faxes, connect the USB flash drive to the computer, then import the data.

Remote Reception

If the machine is located away from the telephone, pick up the handset of the telephone connected to the machine and dial 25 (the remote reception ID) to receive faxes (remote reception).

- If you use a rotary pulse line, temporarily switch your telephone to tone dialing. For details on how to switch to tone dialing, refer to your telephone's instruction manual.
- If you have an answering machine connected to the machine that can carry out remote control operations, the security code for this function may be the same as the remote reception ID. In this case, change the remote reception ID in **Remote RX ID** in **Remote RX** in **Adv. FAX settings** under **Fax settings**.

➡ Adv. FAX settings

Remote reception can be disabled.

Rejecting Fax Reception

You can set the machine to reject faxes with no sender information or those from specific senders.

Select one of the following conditions to reject faxes.

- Faxes with no caller identification.
- Faxes from senders not registered to the coded memory dial codes.
- Faxes from senders registered in the machine as rejected numbers.

Select a fax rejection condition following the procedure below.

1. Make sure that the machine is turned on.
➡ Confirming that the Power Is On
2. Press the **Setup** button.
The **Setup menu** screen is displayed.
3. Use the ◀▶ button to select **Fax settings**, then press the **OK** button.
4. Use the ◀▶ button to select **Security control**, then press the **OK** button.
5. Use the ◀▶ button to select **FAX RX reject**, then press the **OK** button.
6. Use the ◀▶ button to select **ON**, then press the **OK** button.
7. Use the ◀▶ button to select the fax rejection condition, then press the **OK** button.

No sender info.

Rejects faxes with no caller identification.

Memory dial unset

Rejects faxes from the senders not registered to coded memory dial codes.

Rejected numbers

Rejects faxes from the senders registered in the machine as rejected numbers.

For details on how to register the rejected number, see [Registering the Rejected Number](#).

▶▶▶ Note


- The * (asterisk) on the LCD indicates the current setting.
- When the machine rejects reception, **Reception rejected** is displayed on the LCD.
- Faxes with no caller identification are also rejected when the setting other than **No sender info.** is selected.

Registering the Rejected Number

Register the rejected number following the procedure below.

1. When the confirmation screen to register the rejected number is displayed, use the ◀▶ button to select **Yes**, then press the **OK** button.
2. Use the ◀▶ button to select the dial code to register, then press the **OK** button.
3. Use the ◀▶ button to select a registration method, then press the **OK** button.
Register the rejected number depending on the registration method.
 - **From call log (OUT)**


When you select this registration method, the screen to select the fax/telephone number from the outgoing call logs is displayed.



1. Use the ◀▶ button to select a fax/telephone number, then press the **OK** button.
2. Press the **OK** button again.

- **From call log (IN)**

When you select this registration method, the screen to select the fax/telephone number or the name from the incoming call logs is displayed.




1. Use the ◀▶ button to select a fax/telephone number or a name, then press the **OK** button.
2. Press the **OK** button again.

▶▶▶ **Note**

- This registration method may not be available depending on the country or region of purchase.

- **Direct entry**

When you select this registration method, the screen to register the fax/telephone number is displayed.



Use the Numeric buttons to enter the fax/telephone number you want to register, then press the **OK** button.

▶▶▶ **Note**

- To register another rejected number, use the ◀▶ button to select another dial code, then register the rejected number.
You can register up to 10 rejected numbers.
- To return to the Fax standby screen, press the **FAX** button.
- You can print the list of rejected numbers (REJECTED NUMBER LIST).
➡ [Summary of Reports and Lists](#)
- To change the registered rejected number, display the screen to register the fax/telephone number in the same operation, change rejected number, then press the **OK** button.
- To delete the registered rejected number, display the screen to register the fax/telephone number in the same operation, press the **Back** button repeatedly to delete the rejected number, then press the **OK** button.
- You can register the rejected number in **Rejected numbers** in **TEL no. registration** under **Fax settings**.

Using the Caller ID Service to Reject Calls

If you subscribe to the Caller ID service, the machine detects the sender's Caller ID. If the sender's ID matches the condition specified in this setting, the machine rejects the phone call or fax reception from the sender.

▶▶▶ Note

- This setting may not be supported depending on the country or region of purchase. Contact your telephone company to confirm whether it provides this service.

Specify the setting following the procedure below.

1. Make sure that the machine is turned on.
➡ Confirming that the Power Is On
2. Press the **Setup** button.
The **Setup menu** screen is displayed.
3. Use the ◀▶ button to select **Fax settings**, then press the **OK** button.
4. Use the ◀▶ button to select **Security control**, then press the **OK** button.
5. Use the ◀▶ button to select **Caller rejection**, then press the **OK** button.
6. Use the ◀▶ button to select **Subscribed**, then press the **OK** button.
You can now perform settings for **Caller rejection**.
7. Use the ◀▶ button to select whether to reject a phone call or fax reception from an anonymous number, then press the **OK** button.
8. Use the ◀▶ button to select whether to reject a phone call or fax reception out of the subscribed service area, then press the **OK** button.
9. Use the ◀▶ button to select whether to reject a phone call or fax reception from the specified numbers, then press the **OK** button.

If you select **Reject**, you can register the fax/telephone number to reject.

When **Register rejected no.?** is displayed on the LCD, use the ◀▶ button to select **Yes**, then register the fax/telephone number to reject.

For details on how to register the rejected number, see [Registering the Rejected Number](#).

▶▶▶ Note

- Even if you select **Reject**, the machine rings once.
(The machine may not ring depending on the country or region of purchase.)

Other Useful Fax Functions

- [Using the Information Services](#)
- [Transmission/Reception of Faxes Using ECM](#)
- [Document Stored in Machine's Memory](#)
- [Summary of Reports and Lists](#)

Using the Information Services

You can use various information services such as provided by banks, and make airline reservations or hotel reservations. Since these services require tone dialing to use their services, you need to temporarily switch to tone dialing if your machine is connected to a rotary pulse line.

➔ [Using the Touch Tone Line](#)

➔ [Using the Rotary Pulse Line](#)

▶▶▶ Important

- You may need to contract with the service providers for some information services. For details, contact the service providers.

Using the Touch Tone Line

• Dialing by Using the On Hook Dial Function

▶▶▶ Note

- You can use the on hook dial function only when **On-hook setting** in **Security control** under **Fax settings** is set to **Enable**.
 - ➔ Security control

1. Make sure that the machine is turned on.
 - ➔ Confirming that the Power Is On
2. Press the **FAX** button.
The Fax standby screen is displayed.
3. Press the **Color** button or the **Black** button.
4. Use the Numeric buttons to dial the number of the information service.
5. When the recorded message for the information service answers, use the Numeric buttons to press the numbers in accordance with the message.
6. Press the **Stop** button to finish using the service.

• Dialing by Using the Telephone Connected to the Machine

1. Make sure that the machine is turned on.
 - ➔ Confirming that the Power Is On
2. Press the **FAX** button.
The Fax standby screen is displayed.
3. Lift the handset of the telephone.
4. Use the telephone to dial the number of the information service.
5. When the recorded message for the information service answers, use the telephone to press the numbers in accordance with the message.

6. Hang up the handset to finish using the service.

Using the Rotary Pulse Line

• Dialing by Using the On Hook Dial Function

▶▶ Note

- You can use the on hook dial function only when **On-hook setting** in **Security control** under **Fax settings** is set to **Enable**.
 - ➡ Security control

1. Make sure that the machine is turned on.
 - ➡ Confirming that the Power Is On
2. Press the **FAX** button.
The Fax standby screen is displayed.
3. Press the **Color** button or the **Black** button.
4. Use the Numeric buttons to dial the number of the information service.
5. When the recorded message for the information service answers, press the **Tone** button to switch to tone dialing.
6. Use the Numeric buttons to press the numbers in accordance with the message.
7. Press the **Stop** button to finish using the service.

• Dialing by Using the Telephone Connected to the Machine

1. Make sure that the machine is turned on.
 - ➡ Confirming that the Power Is On
2. Press the **FAX** button.
The Fax standby screen is displayed.
3. Lift the handset of the telephone.
4. Use the telephone to dial the number of the information service.
5. When the recorded message for the information service answers, use the telephone to switch to tone dialing.
When you dial the number of the information service using the telephone connected to the machine, you cannot use the machine to switch to tone dialing. For instructions on how to switch to tone dialing, refer to your telephone's instruction manual.
6. Use the telephone to press the numbers in accordance with the message.
7. Hang up the handset to finish using the service.

Transmission/Reception of Faxes Using ECM

This machine is set to send/receive faxes in Error Correction Mode (ECM). If the recipient's fax machine is compatible with ECM, ECM automatically corrects errors and resends the fax.

Note

- If the sender's or recipient's fax machine is not compatible with ECM, the fax will be sent/received without automatic error correction.
- To receive color faxes, make sure that **ECM RX** in **Adv. communication** in **Adv. FAX settings** under **Fax settings** is set to **ON**.
 - ➡ Adv. FAX settings
 - To disable ECM transmission/reception, set **ECM TX** and **ECM RX** in **Adv. communication** to **OFF**.
- Transmission may take longer when ECM is enabled.

Document Stored in Machine's Memory

If the sending faxes is not complete or the machine was not able to print the received faxes, these faxes are stored in the machine's memory.

If an error occurred during a fax transmission, the document is not stored in the machine's memory.

In the following cases, the machine is not able to print the received fax and will automatically store the fax in its memory.

- **The amount of remaining ink is insufficient to print a fax.**
- **Paper has run out.**
- **A different size of paper from that specified by Page size is loaded.**
- **Page size is set to other than A4, Letter, LTR, or Legal.**

▶▶▶ Note

- Some of page sizes are not available depending on the country or region of purchase.

- **Media type is set to other than Plain paper.**
- **Do not print is selected for Received documents in Auto print settings under Fax settings.**
- **You pressed the Stop button to cancel printing of a received fax.**

▶▶▶ Important

- If you unplug the power cord of the machine, all faxes stored in the machine's memory are deleted. For details on how to unplug the power cord, refer to Notice for Unplugging the Power Cord.

You can print or delete the faxes stored in the machine's memory. You can also save the received faxes stored in the machine's memory on the USB flash drive.

- To print a document in the machine's memory:
➔ [Printing a Document in Machine's Memory](#)
- To delete a document in the machine's memory:
➔ [Deleting a Document in Machine's Memory](#)
- To save a document on a USB flash drive
➔ [Saving a Document in Machine's Memory to USB Flash Drive](#)

▶▶▶ Note

- When confirming, printing, or deleting a document stored in the machine's memory, you specify it by its transaction number. If you do not know the transaction number for your target document, print the list of documents (MEMORY LIST) first. For details on how to print MEMORY LIST, see [Printing a List of the Document in Machine's Memory](#).

Printing a Document in Machine's Memory

You can print a specified document in the machine's memory or print all the documents in its memory at a time.

When printing a specified document, you specify it by its transaction number. If you do not know the transaction number for your target document, print the list of documents (MEMORY LIST) first.

➔ [Printing a List of the Document in Machine's Memory](#)

➔ [Printing a Specified Document in Machine's Memory](#)

➔ [Printing All the Documents in Machine's Memory](#)

➤➤➤ Note

- MEMORY LIST shows the transaction number of the unsent or unprinted fax (TX/RX NO.), transaction mode, recipient's number, and the date and time of the transaction.

Printing a List of the Document in Machine's Memory

Print the list of the documents (MEMORY LIST) following the procedure below.

1. Make sure that the machine is turned on.
 - ➔ [Confirming that the Power Is On](#)
2. Load paper.
 - ➔ [Loading Paper](#)
3. Press the **FAX** button.

The Fax standby screen is displayed.
4. Press the **Menu** button.

The **FAX menu** screen is displayed.
5. Use the ◀▶ button to select **Memory reference**, then press the **OK** button.

➤➤➤ Note

- If no document is stored in the machine's memory, **No documents in memory** is displayed on the LCD.

6. Use the ◀▶ button to select **Print memory list**, then press the **OK** button.

The list of documents stored in the machine's memory is printed.

➤➤➤ Note

- A transaction number from "0001" to "4999" indicates a document being sent. A transaction number from "5001" to "9999" indicates a document being received.
- When **Change the paper A4/LTR/LGL Plain paper** is displayed on the LCD, the paper settings are incorrect.

In **FAX paper settings**, set **Page size** to **A4**, **Letter**, **LTR**, or **Legal**. Set **Media type** to **Plain paper**.

* Some of page sizes are not available depending on the country or region of purchase.

Printing a Specified Document in Machine's Memory

Specify the document and print it following the procedure below.

1. Make sure that the machine is turned on.
 - ➔ [Confirming that the Power Is On](#)

2. Load paper.

➡ Loading Paper

3. Press the **FAX** button.

The Fax standby screen is displayed.

4. Press the **Menu** button.

The **FAX menu** screen is displayed.

5. Use the ◀▶ button to select **Memory reference**, then press the **OK** button.

▶▶▶ **Note**

- If no document is stored in the machine's memory, **No documents in memory** is displayed on the LCD.

6. Use the ◀▶ button to select **Print specified doc.**, then press the **OK** button.

The document selection screen is displayed.

Print specified doc.
TX/RX no. *0001

▶▶▶ **Note**

- A transaction number from "0001" to "4999" indicates a document being sent. A transaction number from "5001" to "9999" indicates a document being received.
 - Each mark before the transaction number indicates the following:
 - No mark: Indicates a black and white document.
 - *: Indicates a color document.
 - #: Indicates the document during transmission.
 - ⊗: Indicates the document sent with sequential broadcasting.
 - By pressing the # button or the **Tone** button, the transaction number displayed on the LCD is switched to transaction time or fax/telephone number.
 - When **Change the paper A4/LTR/LGL Plain paper** is displayed on the LCD, the paper settings are incorrect.
In **FAX paper settings**, set **Page size** to **A4, Letter, LTR, or Legal**. Set **Media type** to **Plain paper**.
- * Some of page sizes are not available depending on the country or region of purchase.

7. Use the ◀▶ button to select the transaction number (TX/RX no.) of the document you want to print, then press the **OK** button.

8. Use the ◀▶ button to select whether to print only the first page of the document, then press the **OK** button.

- If you select **Yes**:
 - Only the first page of the document will be printed.
 - The document is still stored in the machine's memory.
- If you select **No**:
 - All pages of the document will be printed.
 - The screen to confirm whether to delete the printed document in the machine's memory is displayed.
 - If you select **Yes** using the ◀▶ button and press the **OK** button, the printed document in the machine's memory is deleted.

▶▶▶ **Note**

- If there is not the specified document in the machine's memory, **No document** is displayed, and the machine returns to the previous screen.
- To return to the Fax standby screen, press the **Stop** button.

Printing All the Documents in Machine's Memory

Print all the documents in the machine's memory following the procedure below.

1. Make sure that the machine is turned on.

➡ Confirming that the Power Is On

2. Load paper.

➡ Loading Paper

3. Press the **FAX** button.

The Fax standby screen is displayed.

4. Press the **Menu** button.

The **FAX menu** screen is displayed.

5. Use the ◀▶ button to select **Memory reference**, then press the **OK** button.

▶▶▶ Note

- If no document is stored in the machine's memory, **No documents in memory** is displayed on the LCD.

6. Use the ◀▶ button to select **Print all RX docs**, then press the **OK** button.

The confirmation screen is displayed.

▶▶▶ Note

- When **Change the paper A4/LTR/LGL Plain paper** is displayed on the LCD, the paper settings are incorrect.
In **FAX paper settings**, set **Page size** to **A4**, **Letter**, **LTR**, or **Legal**. Set **Media type** to **Plain paper**.
* Some of page sizes are not available depending on the country or region of purchase.

7. Use the ◀▶ button to select **Yes**, then press the **OK** button.

All the documents in the machine's memory will be printed.

Each time a document is printed, the screen to confirm whether to delete the printed document in the machine's memory is displayed.

If you select **Yes** using the ◀▶ button and press the **OK** button, the printed document in the machine's memory is deleted.

Deleting a Document in Machine's Memory

You can delete a specified document in the machine's memory or delete all the documents in its memory at a time.

➔ [Deleting a Specified Document in Machine's Memory](#)

➔ [Deleting All the Documents in Machine's Memory](#)

▶▶▶ Note

- When deleting a specified document, you specify it by its transaction number. If you do not know the transaction number for your target document, print the list of documents (MEMORY LIST) first.

➔ [Printing a List of the Document in Machine's Memory](#)

Deleting a Specified Document in Machine's Memory

Specify the document and delete it following the procedure below.

1. Make sure that the machine is turned on.

➔ [Confirming that the Power Is On](#)

2. Press the **FAX** button.

The Fax standby screen is displayed.

3. Press the **Menu** button.

The **FAX menu** screen is displayed.

4. Use the ◀▶ button to select **Memory reference**, then press the **OK** button.

▶▶▶ Note

- If no document is stored in the machine's memory, **No documents in memory** is displayed on the LCD.

5. Use the ◀▶ button to select **Del. specified doc.**, then press the **OK** button.

The document selection screen is displayed.

Del. specified doc.
TX/RX no. *0001

▶▶▶ Note

- A transaction number from "0001" to "4999" indicates a document being sent. A transaction number from "5001" to "9999" indicates a document being received.
- Each mark before the transaction number indicates the following:
 - No mark: Indicates a black and white document.
 - *: Indicates a color document.
 - #: Indicates the document during transmission.
 - ⊗: Indicates the document sent with sequential broadcasting.
- By pressing the **#** button or the **Tone** button, the transaction number displayed on the LCD is switched to transaction time or fax/telephone number.

6. Use the ◀▶ button to select the transaction number (TX/RX no.) of the document you want to delete, then press the **OK** button.

The confirmation screen is displayed.

7. Use the ◀▶ button to select **Yes**, then press the **OK** button.

The specified document will be deleted from machine's memory.

▶▶▶ Note

- If there is not the specified document in the machine's memory, **No document** is displayed, and the machine returns to the previous screen.
- To return to the Fax standby screen, press the **Stop** button.

Deleting All the Documents in Machine's Memory

Delete all the documents in the machine's memory following the procedure below.

1. Make sure that the machine is turned on.

➡ Confirming that the Power Is On

2. Press the **FAX** button.

The Fax standby screen is displayed.

3. Press the **Menu** button.

The **FAX menu** screen is displayed.

4. Use the ◀▶ button to select **Memory reference**, then press the **OK** button.

▶▶▶ Note

- If no document is stored in the machine's memory, **No documents in memory** is displayed on the LCD.

5. Use the ◀▶ button to select **Delete all docs**, then press the **OK** button.

The confirmation screen is displayed.

6. Use the ◀▶ button to select **Yes**, then press the **OK** button.

All the documents in the machine's memory will be deleted.

Saving a Document in Machine's Memory to USB Flash Drive

You can save the received faxes stored in the machine's memory to the USB flash drive as PDF files using the operation panel of the machine.

You can save a specified document in the machine's memory to the USB flash drive or save all the documents in its memory to the USB flash drive at a time.

➡ [Saving a Specified Received Document in Machine's Memory to USB Flash Drive](#)

➡ [Saving All the Received Documents in Machine's Memory to USB Flash Drive](#)

▶▶▶ Important

- Do not remove the USB flash drive from the machine until saving is complete.
- For safety reasons, we recommend backing up faxes saved on a USB flash drive to another media periodically to avoid unexpected accidents.
- We assume no responsibility for damage to or loss of data for whatever reason even within the warranty period.

▶▶▶ Note

- When saving a specified document, you specify it by its transaction number. If you do not know the transaction number for your target document, print the list of documents (MEMORY LIST) first.
 - ➡ [Printing a List of the Document in Machine's Memory](#)
- After saving the fax in the machine's memory to the USB flash drive, the fax is still stored in the machine's memory.
For details on how to delete the fax in the machine's memory, see [Deleting a Document in Machine's Memory](#).

Saving a Specified Received Document in Machine's Memory to USB Flash Drive


Specify the received document and save it on the USB flash drive following the procedure below.

1. Make sure that the machine is turned on.
 - ➡ [Confirming that the Power Is On](#)
2. Insert the USB flash drive into the USB flash drive port.
 - ➡ [Inserting the USB Flash Drive](#)
3. Press the **FAX** button.
The Fax standby screen is displayed.
4. Press the **Menu** button.
The **FAX menu** screen is displayed.
5. Use the ◀▶ button to select **Memory reference**, then press the **OK** button.

▶▶▶ Note

- If no document is stored in the machine's memory, **No documents in memory** is displayed on the LCD.

6. Use the ◀▶ button to select **Save specified doc.**, then press the **OK** button.
The document selection screen is displayed.



Save specified doc.
TX/RX no. *0001

▶▶▶ Note

- A transaction number from "0001" to "4999" indicates a document being sent. A transaction number from "5001" to "9999" indicates a document being received.
- Each mark before the transaction number indicates the following:
No mark: Indicates a black and white document.
✳: Indicates a color document.
: Indicates the document during transmission.
⊗: Indicates the document sent with sequential broadcasting.
- By pressing the **#** button or the **Tone** button, the transaction number displayed on the LCD is switched to transaction time or fax/telephone number.

7. Use the **◀▶** button to select the transaction number (TX/RX no.) of the document you want to save, then press the **OK** button.

The specified document is saved on the USB flash drive.

▶▶▶ Note

- If there is not the specified document in the machine's memory, **No document** is displayed, and the machine returns to the previous screen.
- To return to the Fax standby screen, press the **Stop** button.

Saving All the Received Documents in Machine's Memory to USB Flash Drive

Save all the received documents in the machine's memory to the USB flash drive following the procedure below.

1. Make sure that the machine is turned on.
➡ Confirming that the Power Is On
2. Insert the USB flash drive into the USB flash drive port.
➡ Inserting the USB Flash Drive
3. Press the **FAX** button.
The Fax standby screen is displayed.
4. Press the **Menu** button.
The **FAX menu** screen is displayed.
5. Use the **◀▶** button to select **Memory reference**, then press the **OK** button.

▶▶▶ Note

- If no document is stored in the machine's memory, **No documents in memory** is displayed on the LCD.

6. Use the **◀▶** button to select **Save all documents**, then press the **OK** button.
7. Use the **◀▶** button to select **Yes**, then press the **OK** button.
All the documents in the machine's memory will be saved to the USB flash drive.

▶▶▶ Note

- You can save up to 50 pages of fax as one PDF file.
- You can save up to 2000 PDF files on a USB flash drive.
- Faxes are saved according to the order of the transaction number when **Save all documents** is selected.
- If the USB flash drive is removed or becomes full while saving faxes is in progress, the error message is displayed on the LCD. Press the **OK** button to dismiss the error.
- The folder and file name of faxes saved on the USB flash drive is as follows:
 - Folder name: CANON_SC\FAXDOC\0001

- File name (file extension: PDF): Running numbers, starting from FAX_0001
 - File date: The date and time of saving as set in the machine.
For details on how to set the date and time:
➡ [Setting the Date and Time](#)
-

- Importing Faxes Saved on a USB Flash Drive to the Computer
You can import faxes saved on a USB flash drive to the computer.
After saving faxes, connect the USB flash drive to the computer, then import the data.

Summary of Reports and Lists

The machine prints the report of sending or receiving a fax automatically. You can print the list of the fax/ telephone number or the current settings.

➡ [Type of Reports and Lists](#)

➡ [Printing Report or List](#)

Type of Reports and Lists

Report or List	Description
ACTIVITY REPORT	Shows recent fax transactions at sight. <ul style="list-style-type: none"> You can print ACTIVITY REPORT manually. For details on the procedure to print, see Printing Report or List. The * (asterisk) is appended to the history already printed on ACTIVITY REPORT. If you select Print for Activity report in Auto print settings under Fax settings, the machine prints ACTIVITY REPORT for the 20 histories of sent and received faxes automatically. ➡ Auto print settings
Telephone number list <ul style="list-style-type: none"> MEMORY DIAL TELEPHONE NO. LIST GROUP DIAL TELEPHONE NO. LIST 	Lists the numbers and names registered. You can print the list for coded memory dial and group dial. For details on the procedure to print, see Printing Report or List .
USER'S DATA LIST	Lists the current settings of the machine and the registered sender information. For details on the procedure to print, see Printing Report or List .
MEMORY LIST	Lists the documents currently stored in the machine's memory. For details on the procedure to print, see Printing Report or List . ▶▶▶ Note <ul style="list-style-type: none"> You can print MEMORY LIST by selecting Print memory list in Memory reference under FAX menu. ➡ Printing a List of the Document in Machine's Memory
REJECTED NUMBER LIST	Lists the rejected numbers. For details on the procedure to print, see Printing Report or List .
CALLER HISTORY	Lists the caller history. This list is available when Caller ID service is subscribed. For details on the procedure to print, see Printing Report or List . This list may not be supported depending on the country or region of purchase.
TX REPORT/ERROR TX REPORT	Either of these reports is printed after each fax transmission. <ul style="list-style-type: none"> At the time of purchase, ERROR TX REPORT is set to be printed only when a transmission error occurred. You can set the machine to print TX REPORT each time it sends a document, or disable printing of the report by selecting TX report in Auto print settings under Fax settings. You can also specify the print setting so that the first page of the fax is printed along with the report. ➡ Auto print settings ▶▶▶ Note <ul style="list-style-type: none"> The first page of the fax is not printed in color transmission. <ul style="list-style-type: none"> MULTI TRANSMISSION REPORT is printed after sequential broadcasting of a document. If an error occurs when you send a fax, the error number is printed on ERROR TX REPORT (there are some errors for which the cause is also printed).

	For details on the error number, see Errors When You Send a Fax .
MULTI TRANSMISSION REPORT	This report is printed after sequential broadcasting of a document. Confirms whether the transmission to all the recipients has been completed successfully. The procedure to print and the error number is same as TX REPORT.
RX REPORT	This report is printed after each fax reception. <ul style="list-style-type: none"> At the time of purchase, the machine is set so that RX REPORT is not printed at all. You can set the machine to print RX REPORT each time it receives a document, or only when an error occurs by selecting RX report in Auto print settings under Fax settings. <ul style="list-style-type: none"> Auto print settings If an error occurs when you receive a fax, the error number is printed on RX REPORT (there are some errors for which the cause is also printed). For details on the error number, see Errors When You Receive a Fax.
MEMORY CLEAR REPORT	Lists the deleted faxes in the machine's memory if the faxes stored in the machine's memory are deleted by a power failure or unplugging the power cord. When the machine is turned on, Data error and Press [OK] are displayed on the LCD. MEMORY CLEAR REPORT is printed by pressing the OK button.

Printing Report or List

This section describes the procedure to print the report or the list manually.

Print the following report or list manually.

- ACTIVITY REPORT
- Telephone number list (MEMORY DIAL TELEPHONE NO. LIST/GROUP DIAL TELEPHONE NO. LIST)
- USER'S DATA LIST
- MEMORY LIST
- REJECTED NUMBER LIST
- CALLER HISTORY

▶▶▶ Note

- CALLER HISTORY may not be supported depending on the country or region of purchase.

- Make sure that the machine is turned on.
 - Confirming that the Power Is On
- Load paper.
 - Loading Paper
- Press the **FAX** button.

The Fax standby screen is displayed.
- Press the **Menu** button.

The **FAX menu** screen is displayed.
- Use the ◀▶ button to select **Print reports/lists**, then press the **OK** button.
- Use the ◀▶ button to select the report or list you want to print, then press the **OK** button.
 - When you select **TEL number list**:

Use the ◀▶ button to select **Memory dial** or **Group dial**, then press the **OK** button. If you select **Memory dial**, select whether to print MEMORY DIAL TELEPHONE NO. LIST in alphabetical order of the registered names, then press the **OK** button. If you select **Yes**, the machine prints MEMORY DIAL TELEPHONE NO. LIST with the destination names in alphabetical order. If you select **No**, the machine prints MEMORY DIAL TELEPHONE NO. LIST with the registered entries in numerical order. If you select **Group dial**, the machine prints GROUP DIAL TELEPHONE NO. LIST.
 - When you select an item other than **TEL number list**:

Press the **OK** button.
The machine prints the selected report or list.

▶▶ Note

- When **Change the paper A4/LTR/LGL Plain paper** is displayed on the LCD, the paper settings are incorrect.
In **FAX paper settings**, set **Page size** to **A4, Letter, LTR, or Legal**. Set **Media type** to **Plain paper**.
- * Some of page sizes are not available depending on the country or region of purchase.

Errors When You Send a Fax

If an error occurs when you send a fax, the error number is printed on ERROR TX REPORT (there are some errors for which the cause is also printed).

The causes corresponding to the error numbers are as follows.

No.	Cause	Action
#001	Document is jammed in the ADF.	The document is jammed in the ADF. When the error is cleared, redo the operation.
#003	Document is too long.	You attempted to send a document longer than 15.75 inches / 400 mm. You cannot send a document longer than 15.75 inches / 400 mm from the ADF. "#003" is also printed if it takes time to send a page. Divide the document or set the image quality (Fax resolution) to a lower setting, then resend it.
#005	No answer.	The recipient's fax machine does not respond. Contact the recipient and have the recipient check that the telephone line is connected correctly.
#012	Try again.	There is no paper in the recipient's fax machine. Contact the recipient and have the recipient load paper.
#017	No tone is detected.	The machine could not detect the dial tone. Dial tone detect in Adv. FAX settings under Fax settings is set to ON . Set to OFF . ➡ Adv. FAX settings
#018	Line was busy.	The fax/telephone number you dialed is busy. Try dialing again after waiting for a moment.
#022	Number is deleted.	The fax/telephone number registered to the memory dial is incorrect. Check the recipient's fax/telephone number, correct the fax/telephone number registered to the memory dial code, then send the document again. ➡ Changing Registered Information
#037	Memory is full.	The machine could not send a fax because its memory is full. Delete contents in memory, then send a fax again. ➡ Document Stored in Machine's Memory
#059	Transmission has been canceled due to a fax information mismatch.	Transmission has been canceled because the machine could not detect the recipient's fax machine information or the information did not match the dialed number. This message is displayed when Check RX FAX info in Security control under Fax settings is set to ON . For details, see Sending Faxes after Checking Information (Checking the Recipient's Information) .
#085	Try again in black & white transmission.	The recipient's fax machine is not color-compatible. Resend the document in black & white.
#099	The Stop button was pressed during transmission.	The Stop button was pressed to cancel transmission of the document. Resend it if necessary.

#412	The fax could not be sent from the computer.	The fax could not be sent from the computer (Windows only). Ensure that the machine is connected with the computer correctly and redo operation.
------	--	--

Errors When You Receive a Fax

If an error occurs when you receive a fax, the error number is printed on RX REPORT (there are some errors for which the cause is also printed).

The causes corresponding to the error numbers are as follows.

No.	Cause	Action
#003	It takes too long to receive a page.	Contact the sender and have the sender divide the fax or set the image quality (Fax resolution) to a lower setting and resend it.
#005	No answer.	When receiving a fax manually, the machine could not detect the signals from the sender's fax machine. Contact the sender and have the sender resend it, or set the machine to receive the fax automatically.
#037	Memory is full.	The machine could not receive a fax because its memory is full. Delete contents in memory, then ask the sender to resend the fax. See Document Stored in Machine's Memory .
#046	Reception has been rejected due to the specified fax rejection condition.	Reception has been rejected because the fax matches the fax rejection condition specified by FAX RX reject in Security control under Fax settings . For details, see Rejecting Fax Reception .
#099	The Stop button was pressed during reception.	The Stop button was pressed to cancel reception of the fax. Contact the sender and have the sender resend it if necessary.

Sending Faxes from a Computer

- [Sending a FAX \(Fax Driver\)](#) 📌 **Basic**
- [Creating an Address Book \(Fax Driver\)](#)
- [Edit or Remove a Recipient from an Address Book \(Fax Driver\)](#)
- [Search for a Recipient in an Address Book \(Fax Driver\)](#)
- [Troubleshooting Problems Sending Faxes \(Fax Driver\)](#)
- [General Notes \(Fax Driver\)](#)


Sending a FAX (Fax Driver)

You can send faxes using the fax driver from applications that support document printing.

►► Note

- Only black and white transmission is supported.

1. Make sure that the machine is turned on.
2. Open the document you want to fax with an application (such as Notepad), and then click the Print command. (The command is **Print...** on the **File** menu.)
3. In **Select Printer** or **Name** in the **Print** dialog box, select **Canon XXX series FAX** (where "XXX" is the model name).
4. Click **Print** or **OK**.

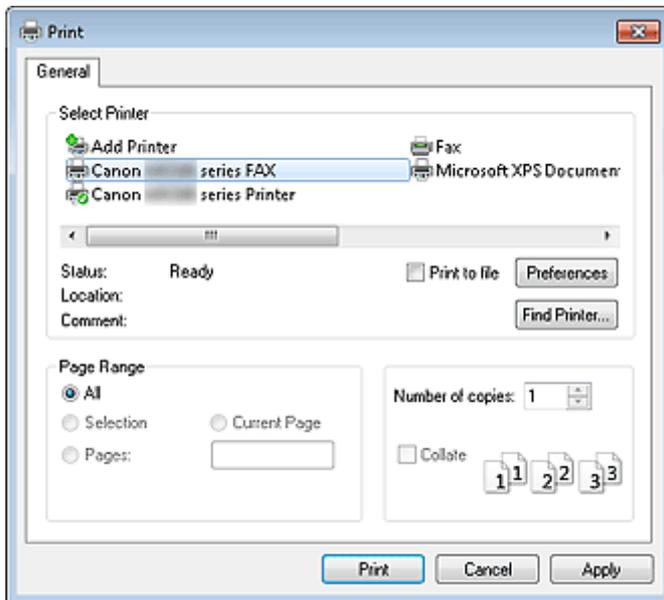


* **Print** dialog box in Notepad

►► Note


- You can specify the paper size and print orientation by clicking **Preferences** or **Properties** in the **Print** dialog box.
- You can also specify the paper size and print orientation in the dialog box displayed by following the instructions below:
 - Windows 7:
 1. From the **Start** menu, select **Control Panel > Hardware and Sound > Devices and Printers**.
 2. Right-click the **Canon XXX series Printer** icon and select **Printing Preferences**, then **Canon XXX series FAX**. Or right-click the **Canon XXX series FAX** icon and select **Printing Preferences**. (Where "XXX" is the model name.)
 - Windows Vista:
 1. From the **Start** menu, select **Control Panel > Hardware and Sound > Printers**.
 2. Right-click the **Canon XXX series FAX** icon (where "XXX" is the model name) and select **Printing Preferences**.
 - Windows XP:
 1. From the **Start** menu, select **Control Panel > Printers and Other Hardware > Printers and Faxes**.
 2. Right-click the **Canon XXX series FAX** icon (where "XXX" is the model name) and select **Printing Preferences**.

5. Click **Display Address Book...** in **Set Recipient** in the **Send FAX** dialog box.

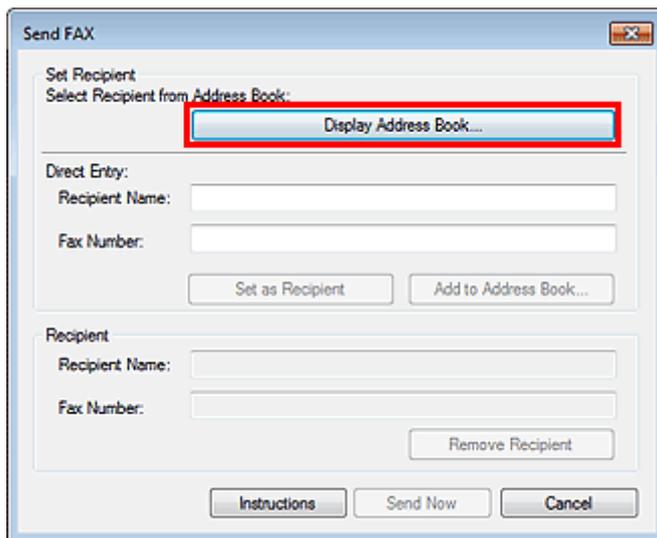

6. Select a recipient from **Recipient Name** in the **Select Recipient from Address Book** dialog box, then click **Set as Recipient**.

The selected recipient is reflected in **Recipient** in the **Send FAX** dialog box.

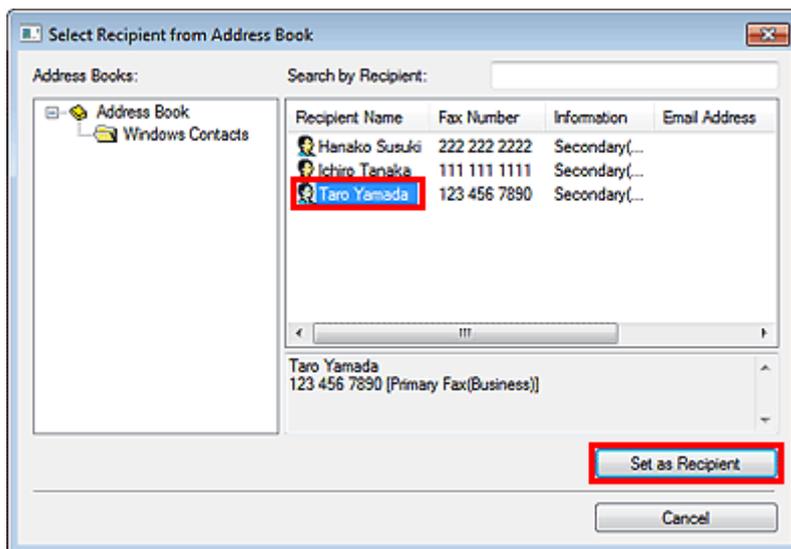

►►► Important

- You cannot specify a recipient if there is no recipient registered in the address book. Register the recipient in the address book and reopen the address book. For details on how to register recipients in the address book, see "[Creating an Address Book \(Fax Driver\)](#)."
- If the recipient's fax/telephone number is entered incorrectly or the registered fax/telephone number is incorrect, the fax may be sent to an unexpected recipient. When sending an important fax, it is recommended that you send it after confirming the entered information and recipient's status.


►►► Note

- You can also specify **Recipient** by entering a recipient as follows:
Enter the **Recipient Name** and **Fax Number** in **Direct Entry** in the **Send FAX** dialog box, then click **Set as Recipient**.
 - For details on valid characters, see "[General Notes \(Fax Driver\)](#)."
 - You can send faxes even if only the **Fax Number** is entered.
 - You can register the recipient you entered to the address book by clicking **Add to Address Book...**
For details on how to register recipients in the address book, see "[Creating an Address Book \(Fax Driver\)](#)."
- Add the outside line access number before the fax number as needed.

(Example: When the outside line access number is "0" and the fax number is "XXX-XXXX", enter "0XXX-XXXX".)

7. Click **Send Now**.

When a confirmation message is displayed, click **OK**.

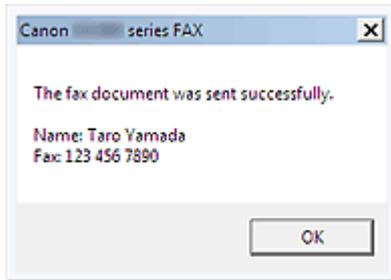


►►► Important

- If you cannot send a fax due to line failure, etc., see "[Troubleshooting Problems Sending Faxes \(Fax Driver\)](#)."

Canceling Transmission

If you click **Send Now** in the **Send FAX** dialog box, the printer icon is displayed in the taskbar. Double-click this icon to display the list of fax jobs awaiting transmission or being sent.

Right-clicking a job and selecting **Cancel** stops transmission.

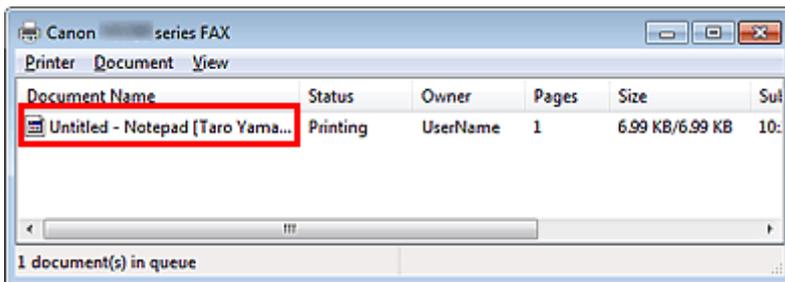

Creating an Address Book (Fax Driver)

By using the address book, you can send a fax by simply specifying a recipient from it. You can register the recipient's name, fax number and other information in the address book.

Registering a recipient (WAB contact) in the address book

You can register an individual recipient (Contact) in the address book.

1. From the **Start** menu, navigate as follows:

- **Windows 7:**

From the **Start** menu, select **Control Panel > Hardware and Sound > Devices and Printers**.

- **Windows Vista:**

From the **Start** menu, select **Control Panel > Hardware and Sound > Printers**.

- **Windows XP:**

From the **Start** menu, select **Control Panel > Printers and Other Hardware > Printers and Faxes**.

2. Open the setting screen of the FAX driver.


- **Windows 7:**

Right-click the **Canon XXX series Printer** icon and select **Printing Preferences**, then **Canon XXX series FAX**. Or right-click the **Canon XXX series FAX** icon and select **Printing Preferences**. (Where "XXX" is the model name.)

- **Windows Vista/Windows XP:**


Right-click the **Canon XXX series FAX** icon (where "XXX" is the model name) and select **Printing Preferences**.

3. Click **Address Book...** in the displayed dialog box.

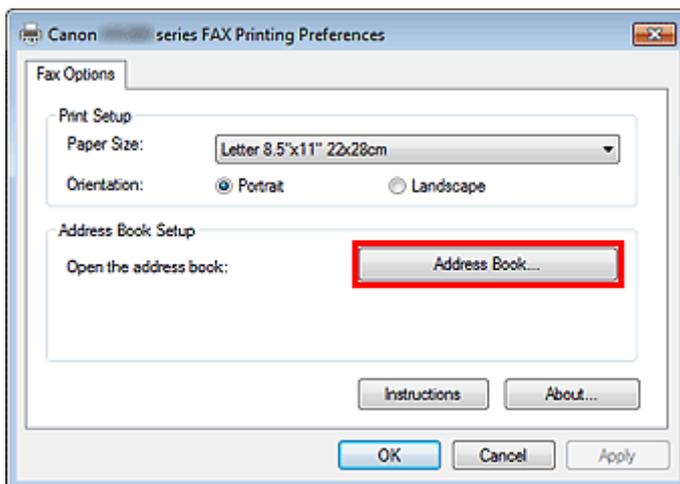

Opening the Address Book for the First Time (Windows XP)

In Windows XP, when you open the address book for the first time, the **Setup Windows Address Book** dialog box will be displayed.

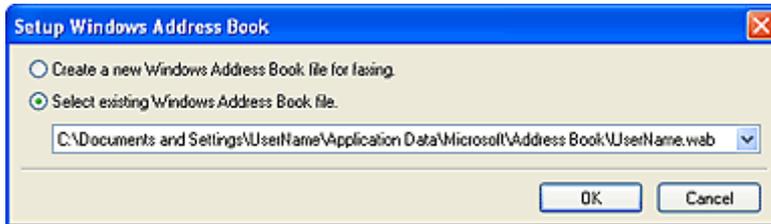

Creating a New Windows Address Book (WAB File) Exclusively for Faxing

Select **Create a new Windows Address Book file for faxing.**, then click **OK**.

You can also change the setting later so as to be able to use another address book.

Using an Existing Windows Address Book

Click **Select existing Windows Address Book file.**, select an address book file from the list, then click **OK**.


Using an existing Windows Address Book enables you to share it with other applications that use Windows Address Books.

This option cannot be selected if there is no Windows Address Book file created.


►► Note

- In Windows 7/Windows Vista, you can register an individual recipient (Contact) in the address book folder (Windows Contacts) as an address book file (.contact file) which can be used in multiple applications. However, you cannot change the address book you use, as only one address book can be created per user.
To open Windows Contacts, select **XXXX (user name)** from the **Start** menu, then double-click **Contacts**.
- For details on how to open the Windows Address Book (the default address book of the operating system), see the help or guide for the applications that use Windows Address Book.
- In Windows XP, you can import the entries from one Windows Address Book file into another, combining both sets of Address Book entries.
To import fax recipient contacts in an Address Book file to an existing Address Book file, follow the steps below.
 1. From the **Start** menu, select **Search**.
 2. Click **All files and folders**.
 3. In the file name box, enter ".wab".
 4. Select the **Search hidden files and folders** checkbox in **More advanced options**, then click **Search**.
 5. From the found Windows Address Book files, double-click an existing Windows Address Book file.
The existing Windows Address Book opens.
 6. In the **File** menu, in **import**, select **Address Book (WAB)...**
 7. Select the Windows Address Book containing fax recipient contacts, then click **Open**.
When a completion message appears, click **OK**.

4. In the **Address Book** dialog box, click **New**.

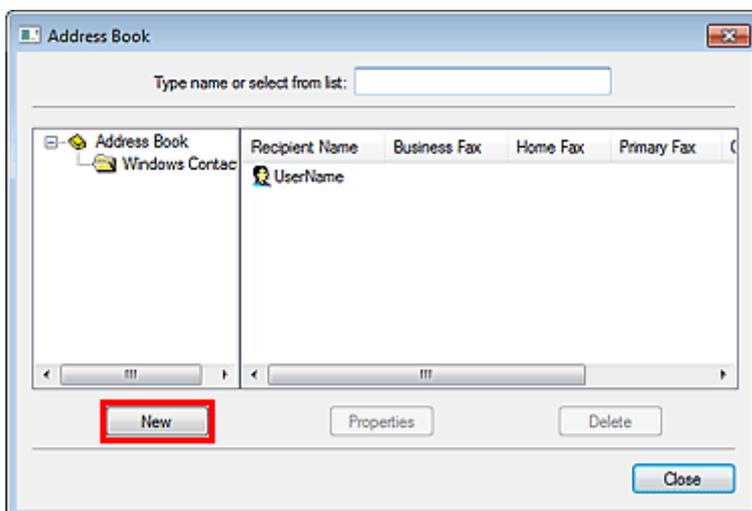

5. Click **Contact** in the **New Entry** dialog box, then click **OK**.

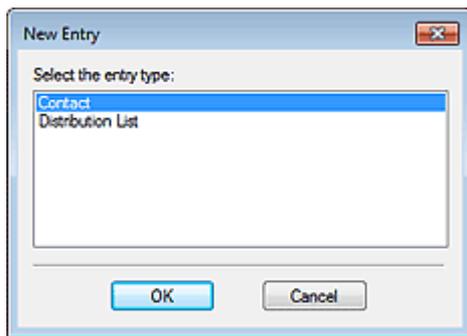


➤➤➤ **Note**

- For faxing, you can only specify the **Contact** (one recipient). You cannot specify a **Distribution List**.

6. Enter the **First**, **Middle**, and **Last** of the contact in the **Name and E-mail** tab (Name tab when using Windows XP) on the **Properties** dialog box.

The recipient's name will be printed at the top of the fax received by the recipient.

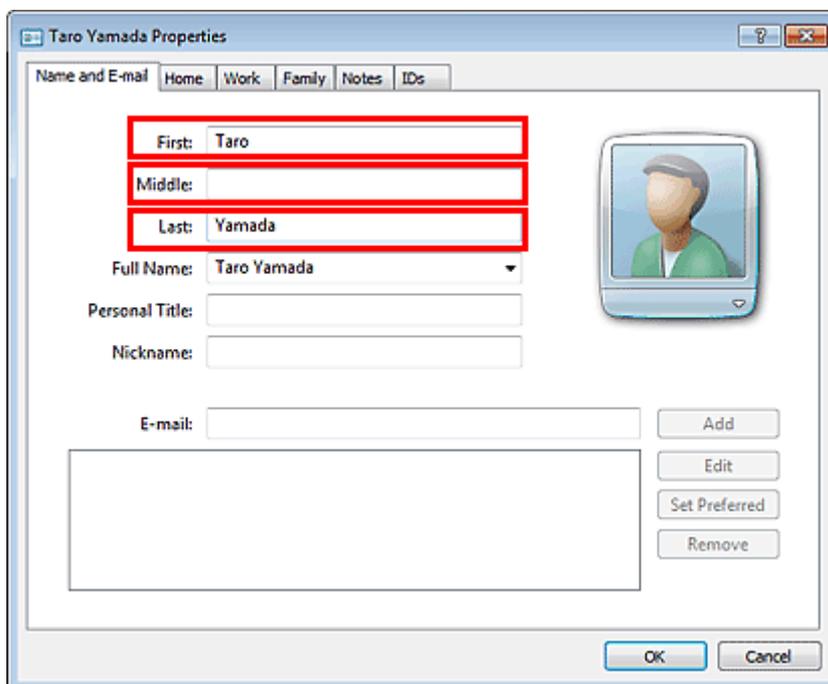


7. Enter the fax number on the **Home** or **Work** tab, then click **OK**.

An individual recipient (Contact) is registered in the address book.

➤➤➤ **Note**

- You can also register a recipient by clicking the **Add to Address Book...** button on the **Send FAX** dialog box after entering the recipient.

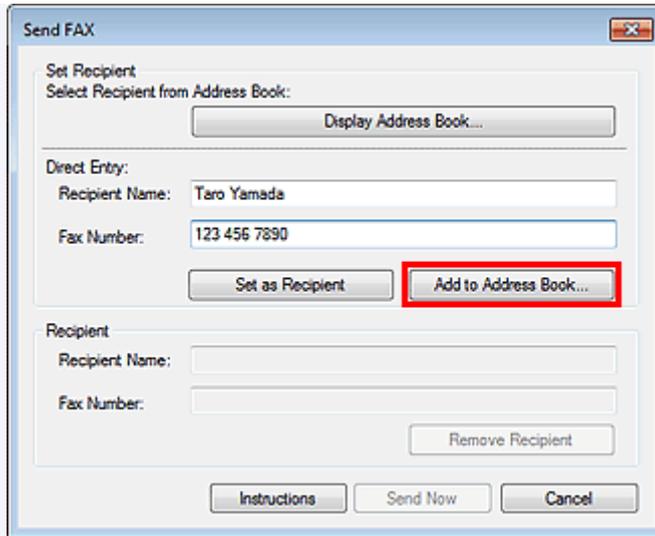

- If you upgrade from Windows XP to Windows Vista, the address book you created in Windows XP may not be reflected in Windows Vista. In this case, open the address book in the following procedure and reflect the information to a new address book.
 1. From the **Start** menu, select **Control Panel > Appearance and Personalization > Folder Options**.
 2. Click the **View** tab of the **Folder Options** dialog box, select **Show hidden files and folders** in **Advanced settings**, then click **OK**.
 3. From the **Start** menu, select **XXXX (user name)**, then double-click **AppData > Roaming > Canon > MP5** to open the folder.
 4. Double-click the ".wab" file.
The address book will be reflected in Windows Vista automatically.
- Add the outside line access number before the fax number as needed.
(Example: When the outside line access number is "0" and the fax number is "XXX-XXXX", enter "0XXX-XXXX".)

Related Topic

- [Edit or Remove a Recipient from an Address Book \(Fax Driver\)](#)
- [Search for a Recipient in an Address Book \(Fax Driver\)](#)

Edit or Remove a Recipient from an Address Book (Fax Driver)

You can change the recipients' names, fax numbers and other information, or delete recipients registered in the address book.

Editing Recipients in an address book

You can edit the contacts registered in the address book.

1. From the **Start** menu, navigate as follows:

- **Windows 7:**

From the **Start** menu, select **Control Panel > Hardware and Sound > Devices and Printers**.

- **Windows Vista:**

From the **Start** menu, select **Control Panel > Hardware and Sound > Printers**.

- **Windows XP:**

From the **Start** menu, select **Control Panel > Printers and Other Hardware > Printers and Faxes**.

2. Open the setting screen of the FAX driver.


- **Windows 7:**

Right-click the **Canon XXX series Printer** icon and select **Printing Preferences**, then **Canon XXX series FAX**. Or right-click the **Canon XXX series FAX** icon and select **Printing Preferences**. (Where "XXX" is the model name.)


- **Windows Vista/Windows XP:**

Right-click the **Canon XXX series FAX** icon (where "XXX" is the model name) and select **Printing Preferences**.


3. Click **Address Book...** in the displayed dialog box.

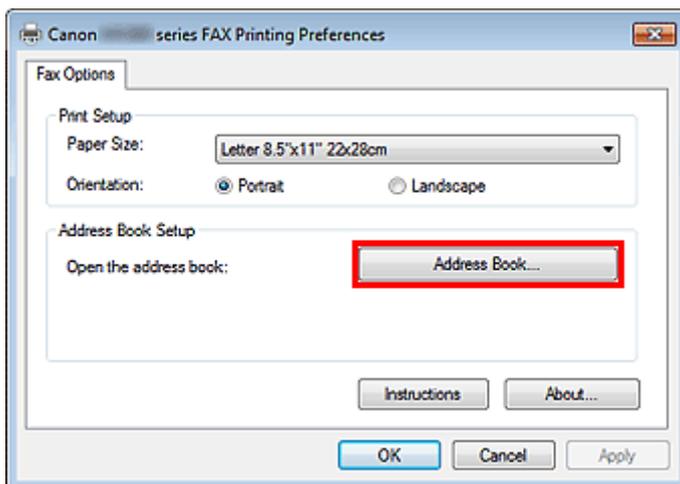

4. Select the recipient you want to edit from the **Address Book** dialog box, then click **Properties**.

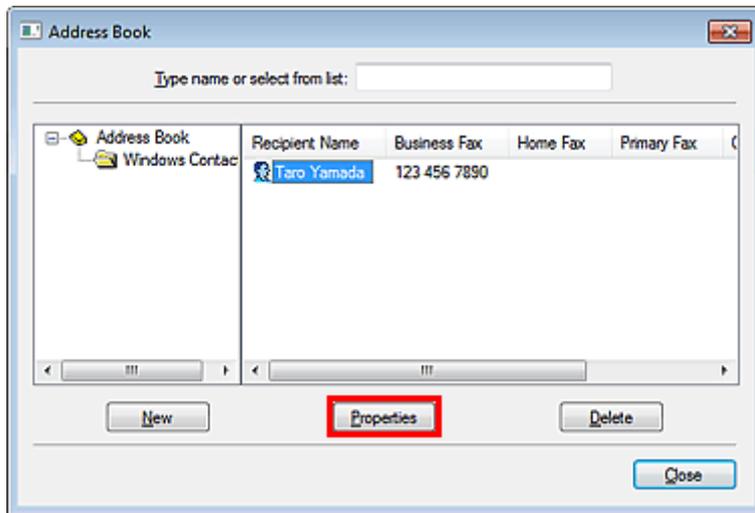

5. Change information as needed on the **Properties** dialog box, then click **OK**.

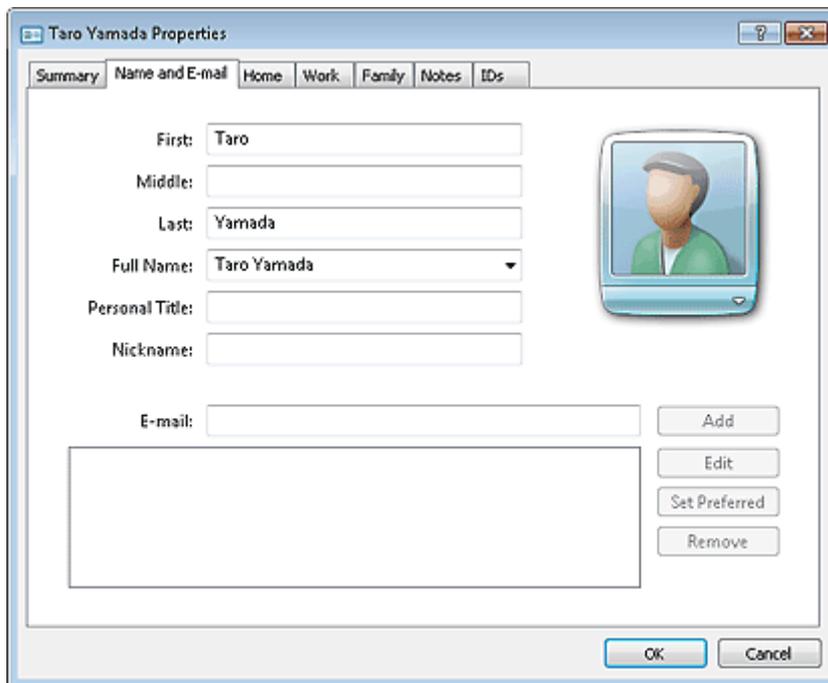

Removing Recipients from an address book

You can delete the contacts registered in the address book.

1. From the **Start** menu, navigate as follows:

- **Windows 7:**

From the **Start** menu, select **Control Panel > Hardware and Sound > Devices and Printers**.

- **Windows Vista:**

From the **Start** menu, select **Control Panel > Hardware and Sound > Printers**.

- **Windows XP:**

From the **Start** menu, select **Control Panel > Printers and Other Hardware > Printers and Faxes**.

2. Open the setting screen of the FAX driver.


- **Windows 7:**

Right-click the **Canon XXX series Printer** icon and select **Printing Preferences**, then **Canon XXX series FAX**. Or right-click the **Canon XXX series FAX** icon and select **Printing Preferences**. (Where "XXX" is the model name.)

- **Windows Vista/Windows XP:**

Right-click the **Canon XXX series FAX** icon (where "XXX" is the model name) and select **Printing Preferences**.

3. Click **Address Book...** in the displayed dialog box.

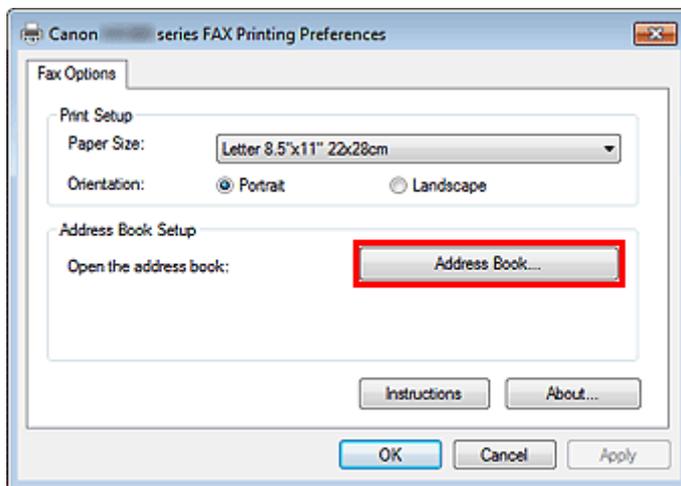

4. Select the recipient you want to delete from the **Address Book** dialog box, then click **Delete**.




5. When a confirmation message is displayed, click **Yes**.

Search for a Recipient in an Address Book (Fax Driver)


You can search for recipients registered in the address book by name.

1. Open the document you want to fax with an application (such as Notepad), and then click the Print command. (The command is **Print...** on the **File** menu.)
2. In **Select Printer** or **Name** in the **Print** dialog box, select **Canon XXX series FAX** (where "XXX" is the model name).
3. Click **Print** or **OK**.

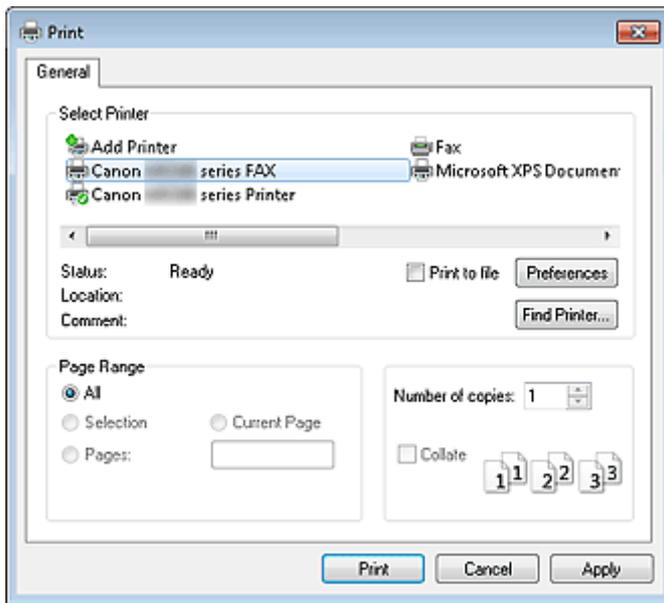


* **Print** dialog box in Notepad

4. Click **Display Address Book...** in **Set Recipient** in the **Send FAX** dialog box.

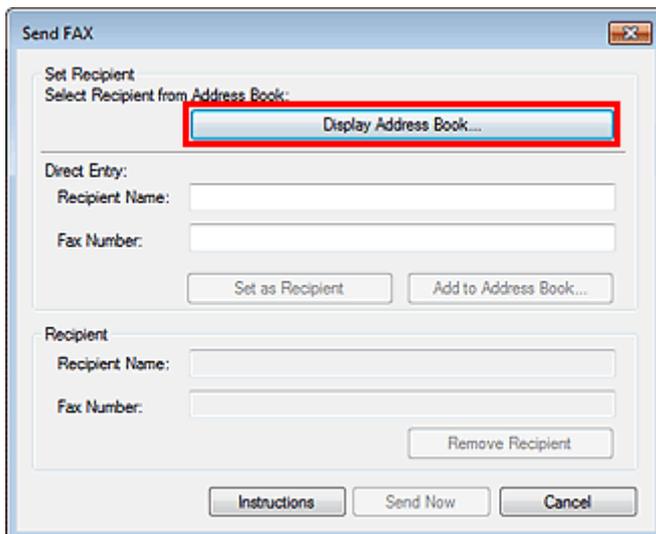

5. Enter the name of the recipient you want to search for in **Search by Recipient** in the **Select Recipient from Address Book** dialog box.
If the entered name is found, the recipient will be displayed in the contact list with its name selected.

While the name is selected, click **Set as Recipient** to enter it as the recipient.

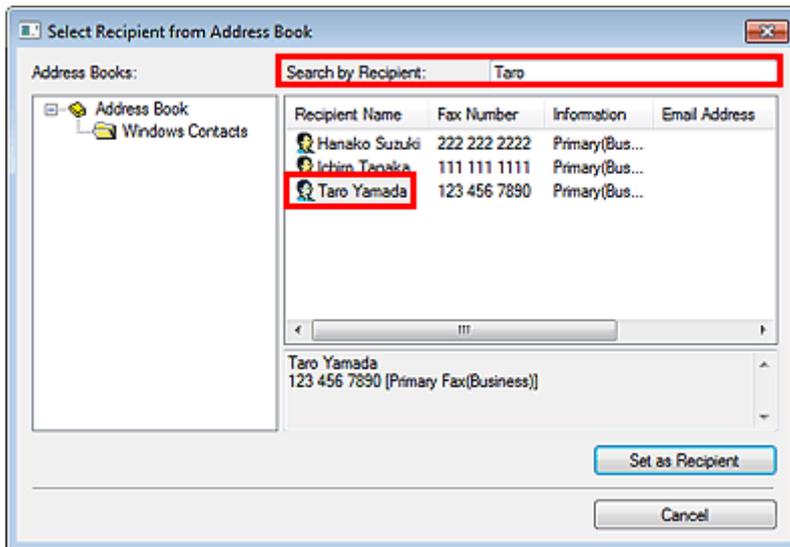

»»» Important

- You cannot search by criteria other than name.

Troubleshooting Problems Sending Faxes (Fax Driver)

Check 1: Is the power turned on?

- You cannot send faxes if the power is turned off. Press the ON button to turn the power on.
- If you disconnected the power cord without turning off the power (one of the buttons on the operation panel is lit), reconnecting it turns on the power automatically.
- If you disconnected the power cord after pressing the ON button to turn off the power (no buttons on the operation panel are lit), reconnect it, then press the ON button to turn on the power.
- If the power was turned off due to power failure, etc., the power is automatically turned on when the power failure is resolved.

▶▶▶ Important

- Confirm that all lamps on the operation panel are off before unplugging the power cord, then unplug the power cord.
If a power failure occurs or you unplug the power cord, all faxes stored in the machine's memory are deleted.

▶▶▶ Note

- If the faxes stored in the machine's memory are deleted by a power failure or unplugging the power cord, the list of the faxes deleted from the machine's memory will be printed after turning the machine on.

Check 2: Is a document being sent from memory or a fax being received into memory?

When the message for the transmission/reception is displayed on the machine's LCD (Liquid Crystal Display), a fax is being sent from/received into machine's memory.

Check 3: Is the telephone line type set correctly?

Check the telephone line type setting and change it as necessary.

Check 4: Is Dial tone detect set to ON?

Resend the fax after a while.

If you still cannot send the fax, select **OFF** for **Dial tone detect** in **Advanced FAX settings** under **FAX settings**.

Check 5: Is the recipient's fax number correct?

Check the recipient's fax number, then send the document again.

➔ [Sending a FAX \(Fax Driver\)](#)

▶▶▶ Note

- For details on how to change the recipients registered in the address book, see "[Edit or Remove a Recipient from an Address Book \(Fax Driver\)](#)."

Check 6: Does an error occur during transmission?

- Check if a message is displayed in the computer screen.
- If displayed, check the message, then resolve the error.

Check 7: Does a printer error occur?

Check if a message is displayed on the LCD.

If a support code is displayed, see "Support Code List" for your model from Home of the *Online manual*.

If no support code is displayed, see "A Message Is Displayed" for your model from Home of the *Online manual*.

If you are in a hurry, press the Stop button to close the message, then send the fax.

Check 8: Is the telephone line connected correctly?

Reconnect the telephone line cable to the telephone line jack.

If the telephone line is connected correctly, then there is a problem with your telephone line. Contact your telephone company and the manufacturer of your terminal adapter or telephone adapter.

General Notes (Fax Driver)

This fax driver is subject to the following restrictions. Keep the following points in mind when using the fax driver.

- **The fax driver may not work correctly when sending a Microsoft Excel 2002 document as a fax with the Allow A4/Letter Paper Resizing option checked in Microsoft Excel 2002. Follow the instructions below to solve the problem:**
 1. Click **Options...** from the **Tools** menu.
 2. Uncheck the **Allow A4/Letter Paper Resizing** option on the **International** tab.
- **When using a network compatible printer, you cannot send faxes from multiple computers at the same time. If you try to send a fax from a computer while a fax is being sent from another computer, a message appears and your fax cannot be sent.**

Make sure that a fax is not being sent from another computer.
- **If you assign the fax driver to the Bluetooth port, you cannot send a fax from the computer.**
- **You can use the following characters for Fax Number:**

Character	Explanation
0 - 9 * #	For use in telephone and fax numbers.
, p	To place a pause between numbers.
P	To place a pause at the end of a sequence of numbers.
T	Numbers after the T will be sent as a tone signal.
+ - (), space	To make the number easier to read. You cannot insert a space at the front of a number.

*You cannot use ".", "R", "M", or "E".

- **You can enter the following number of characters in Recipient Name and Fax Number.**

Recipient Name: Up to 16 characters
Fax Number: Up to 60 characters
* The number of characters you can enter differs in some regions.
- **The fax driver does not work correctly if you uncheck the Enable printer pooling option on the Ports tab of the Canon XXX series FAX Properties dialog box (where "XXX" is the model name).**

Check that the option is checked by following the instructions below:

- Windows 7:

 1. From the **Start** menu, select **Control Panel > Hardware and Sound > Devices and Printers**.
 2. Right-click the **Canon XXX series Printer** icon and select **Printer Properties**, then **Canon XXX series FAX**. Or right-click the **Canon XXX series FAX** icon and select **Printer Properties**. (Where "XXX" is the model name.)

The **Canon XXX series FAX Properties** dialog box (where XXX is the model name) appears.

 3. Click the **Ports** tab.

Check that the **Enable printer pooling** option is checked.

- Windows Vista:

 1. From the **Start** menu, select **Control Panel > Hardware and Sound > Printers**.
 2. Right-click the **Canon XXX series FAX** icon (where "XXX" is the model name) and select **Properties**. The **Canon XXX series FAX Properties** dialog box (where XXX is the model name) appears.
 3. Click the **Ports** tab.

Check that the **Enable printer pooling** option is checked.

- Windows XP:

 1. From the **Start** menu, select **Control Panel > Printers and Other Hardware > Printers and Faxes**.
 2. Right-click the **Canon XXX series FAX** icon (where "XXX" is the model name) and select **Properties**. The **Canon XXX series FAX Properties** dialog box (where XXX is the model name) appears.
 3. Click the **Ports** tab.

Check that the **Enable printer pooling** option is checked.