

# Canon

# EOS 6D

## EOS 6D (WG)

**Wi-Fi Function Basic Instruction Manual**

**GPS Function Instruction Manual**

For Wi-Fi functions, basic operation procedures for easy-to-use “Transferring Images between Cameras” and “Connecting to a smartphone” are explained.

For detailed explanation about Wi-Fi functions, refer to “Wi-Fi Function Instruction Manual” included in the Camera Instruction Manual CD-ROM.  
For GPS functions, operation procedures for all functions are explained.



**Canon**


**EOS 6D**

**EOS 6D (WG)**

**Wi-Fi Function Basic Instruction Manual**

## What You Can Do Using the Wireless LAN Functions ■

This camera's wireless LAN functions let you perform a range of tasks wirelessly, from sending images to Web services and other cameras to controlling the camera remotely, simply by connecting to a Wi-Fi network or other device supporting this camera's wireless LAN functions.

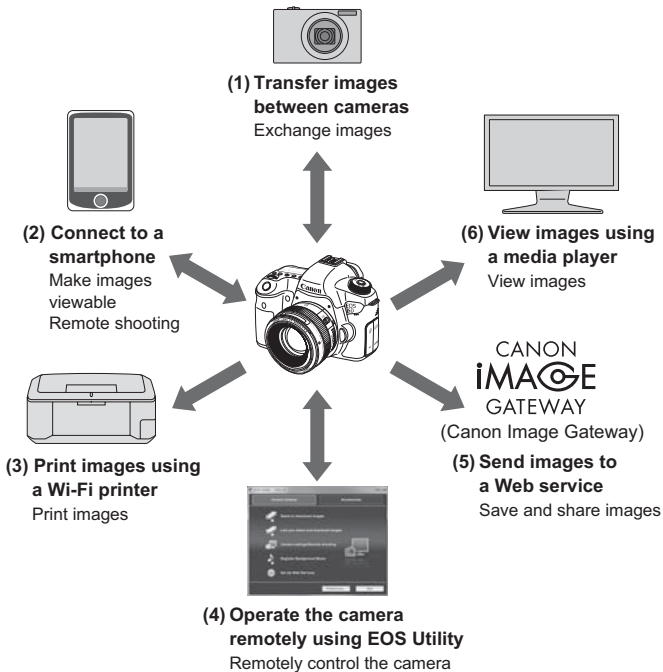

\* To use function (2) via an access point, refer to the "Wi-Fi Function Instruction Manual" PDF file included in the Camera Instruction Manual CD-ROM.

\* For the procedure to use functions (3) to (6), refer to the "Wi-Fi Function Instruction Manual" PDF file included in the Camera Instruction Manual CD-ROM.

**(1)  Transfer images between cameras (p.W-13)**

Transfer images between this camera and other Canon cameras with built-in wireless LAN functions.

**(2)  Connect to a smartphone (p.W-21)**

View saved images or operate the camera from your smartphone. You must install the dedicated application “EOS Remote” on your smartphone to use these functions.

**(3)  Print images using a Wi-Fi printer**

Connect the camera to a wireless LAN compatible printer supporting PictBridge (Wireless LAN) to print images wirelessly.

**(4)  Operate the camera remotely using EOS Utility**

Use EOS Utility via a wireless LAN instead of an interface cable, and operate your camera from computer wirelessly.

**(5)  Send images to a Web service**

Upload your images to CANON iMAGE GATEWAY, an online photo service for Canon users (free registration required), to share them with family and friends.

**(6)  View images using a media player**

Display images on the camera’s memory card on your TV set, by using a media player supporting DLNA\* via a wireless LAN.

\* Digital Living Network Alliance

## Conventions Used in This Manual

- In this manual, the term “wireless LAN” is used as a general term for Wi-Fi and Canon’s original wireless communication functions.
- The \*\* (numbers) for “(p.\*\*)” in this manual indicate reference page numbers for more information.
- Sections of this manual labeled with the following symbols contain particular types of information as described below.



Warnings to prevent potential problems during operation.



Supplemental information to basic operation.

- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- Wi-Fi is a registered trademark of the Wi-Fi Alliance.
- Wi-Fi Certified, WPA, WPA2, and the Wi-Fi Certified logo are trademarks of the Wi-Fi Alliance.
- WPS used on camera settings screens and in this manual stands for Wi-Fi Protected Setup.
- UPnP is a trademark of the UPnP Implementers Corporation.
- All other trademarks are the property of their respective owners.

Note that Canon cannot be held liable for any loss or damage from erroneous wireless LAN settings for using the camera. In addition, Canon cannot be held liable for any other loss or damage caused by use of the camera.

# Contents

## Introduction

What You Can Do Using the Wireless LAN Functions .....	W-2
Conventions Used in This Manual .....	W-4
[Wi-Fi] Settings and Connection Status .....	W-6

## 1 Basic Settings for Wireless LAN Functions W-7

Registering a Nickname .....	W-8
Basic Operation and Settings .....	W-11

## 2 Transferring Images Between Cameras W-13

Selecting the Connection Destination .....	W-14
Sending Images .....	W-16
Reconnecting .....	W-19

## 3 Connecting to a Smartphone W-21

Preparation .....	W-22
Using Camera Access Point Mode to Establish a Connection ..	W-23
Operating the Camera Using a Smartphone .....	W-26
Reconnecting .....	W-28

Wi-Fi (Wireless LAN) Precautions .....	G-20
--	------

## [Wi-Fi] Settings and Connection Status

Settings and connection status for **[Wi-Fi]** under the [**3**] tab can be checked on the camera's LCD panel and LCD monitor.



Wi-Fi connection status



Wi-Fi function

	When [ <b>3</b> : Wi-Fi] is set to <b>[Disable]</b>
	When [ <b>3</b> : Wi-Fi] is set to <b>[Enable]</b> but there is no connection
	Connected
	Data is being transmitted
	Connection error
	Waiting for connection Waiting for reconnection

(Off)	Not connected
	Connected Data is being transmitted
	Waiting for connection Waiting for reconnection
	Connection error

# 1

## **Basic Settings for Wireless LAN Functions**

---


This chapter describes settings necessary for using the camera's wireless LAN functions.



# Registering a Nickname


First, set the camera's nickname.

When the camera is connected to another device via a wireless LAN, the nickname will be displayed on the device. Be sure to set a nickname for your camera.

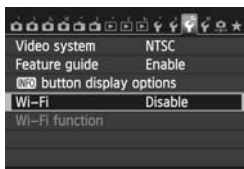


## 1 Select [Wi-Fi].

- Under the [**3**] tab, select [**Wi-Fi**], then press <SET>.

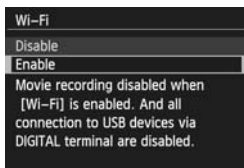

## 2 Select [Enable].


- Press the <▲▼> key to select [**Enable**], then press <SET>.
- ▶ [**Wi-Fi function**] is now selectable.

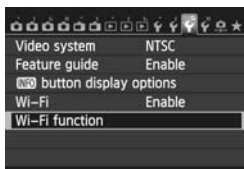

## 3 Select [Wi-Fi function].


- Under the [**3**] tab, select [**Wi-Fi function**], then press <SET>.
- ▶ When this setting is selected for the first time, a screen to register a nickname is displayed. Select [**OK**] and proceed on to step 4.



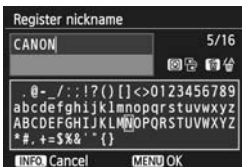

## 4 Enter a nickname.

- For instructions on entering characters, see “Virtual Keyboard Operation” on the next page.
- Up to 16 characters can be entered.

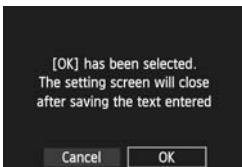


## 5 Finish.

- When you are finished, press the <MENU> button.
- Select [OK] on the confirmation screen, then press <SET>. The nickname is registered, and [Wi-Fi function] screen will appear.



- To change the nickname, press the <INFO.> button on the screen above, then select [Edit nickname] on the screen displayed.



## Virtual Keyboard Operation



- **Switching to other input areas**  
To switch between top and bottom input areas, press the <[Q]> button.
- **Moving the cursor**  
To move the cursor, press the <◀▶> key in the top area.

- **Entering text**

In the bottom input area, press the <▲▼> or <◀▶> key to select characters and press <[SET]> to enter them.

You can check how many characters you have entered, and how many more can be entered, by referring to [\*/\*] on the upper right of the screen.

- **Deleting text**

If you make a mistake, press the <[W]> button to erase it.

- **Finishing text entry**

Press the <[MENU]> button to confirm what you have entered and exit. If a confirmation screen is displayed, select [OK] to exit.

- **Canceling text entry**

Press the <[INFO.]> button to cancel text entry and exit. If a confirmation screen is displayed, select [OK] to exit.

# Basic Operation and Settings

## Using the Camera While Wireless LAN Functions Are Active


- When you want to prioritize wireless LAN functions, do not operate the shutter button, Mode Dial, or playback button. Otherwise, shooting or playback operation may be prioritized and wireless LAN functions may be ended during the process.
- When **[Wi-Fi]** is set to **[Enable]**, movie shooting is disabled. Even if the camera is connected to a computer, printer, GPS receiver, or other devices via an interface cable, they cannot be used (p.W-12).

## Auto Power Off



- Under the **[F2]** tab, set **[Auto power off]** to **[Disable]** if necessary.
- If the camera's auto power off is activated during the wireless LAN connection, the wireless LAN function will turn off. Wireless LAN connection is restored when the camera wakes up from auto power off.

## [Wi-Fi] Under the [F3] Tab

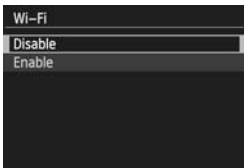

- If the use of electronic devices and wireless device is prohibited on board airplanes or in hospitals, set **[Wi-Fi]** under the **[F3]** tab to **[Disable]**.

### **Connecting with an Interface Cable**

- When **[Wi-Fi]** under the **[43]** tab is set to **[Enable]**, interface cable connection is disabled. Set it to **[Disable]** to connect the interface cable.
- When the camera is connected to a computer, printer, GPS receiver, or any other devices via an interface cable, the settings for **[Wi-Fi]** cannot be changed. Disconnect the interface cable and then configure settings.

### **Using an Eye-Fi card**

- When **[Wi-Fi]** under the **[43]** tab is set to **[Enable]**, image transfer using an Eye-Fi card is disabled.

# 2

## Transferring Images Between Cameras


Images can be transferred between Canon cameras via the built-in wireless LAN functions.



- Wireless connection is possible for Canon cameras with built-in wireless LAN functions marketed in 2012 or later. Note that the camera cannot be connected to Canon camcorders, even if they have built-in wireless LAN functions.
- The camera cannot be connected to Canon cameras without built-in wireless LAN functions, even if they support Eye-Fi cards.
- Still photos can be transferred only if their file format is JPEG.
- Although movies can be transferred, some target cameras may not be able to play them back depending on their functionality.


# Selecting the Connection Destination

Register the target camera to connect to via a wireless LAN.  
The camera can be connected to only one camera at a time.

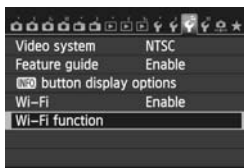


## 1 Select [Wi-Fi function].

- Under the [**F3**] tab, set [**Wi-Fi**] to [**Enable**], then select [**Wi-Fi function**].

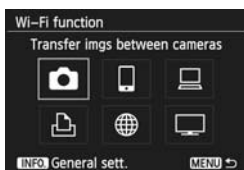

## 2 Select [**📷**].

- Press the <**▲▼**> or <**◀▶**> key to select [**📷**] (Transfer imgs between cameras), then press <**SET**>.

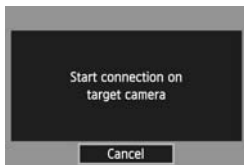

## 3 Start the connection on the target camera.

- When the screen on the left is displayed, start the connection on the target camera as well. For the operation procedure, refer to the instruction manual of the target camera.
- When a connection is established, the settings are automatically saved and the images on the card are displayed.



## 4 Select the images to send.

- Select images on the camera sending the images (p.W-16).
- Do not operate the camera receiving the images.



Note that GPS information is not displayed on the camera's playback screen even if GPS information is appended to the received image. Shooting locations can be viewed on a virtual map, using the Map Utility software.



- The connection settings are automatically saved/registered with the nickname of the camera to which a connection was established.
- Auto power off does not function when the camera is connected to another camera.



# Sending Images

## Sending Images One by One

Selected images are sent one by one.



### 1 Select an image to send.

- Press the <◀▶> key to select an image to send, then press <SET>.
- Press the <Q> button and turn the <☀> dial to the left to select an image on the index display. To return to the single-image display, turn the <☀> dial to the right.



### 2 Select [Send img shown].

- To select the size of the image to send, press the <◀▶> key and select [Resize image].
- Press the <◀▶> key to select [Send img shown], then press <SET>.
- ▶ The transfer progress screen is displayed.
- To send another image, repeat steps 1 and 2.



### 3 Terminate connection.

- Press the <MENU> button to display the confirmation screen. Press the <◀▶> key to select [OK], then press <SET> to terminate the connection.
- ▶ The [Wi-Fi function] setting screen will reappear.

⚠ If playback or shooting operation is started during the connection, the connection will be terminated.

📄 RAW images cannot be sent.

## Sending Selected Images

Multiple images (up to 50 files) can be selected and sent.



1 Press **<SET>**.



2 Select **[Send selected]**.


- To select the size of the image to send, press the **<◀▶>** key and select **[Resize image]**.
- Press the **<◀▶>** key to select **[Send selected]**, then press **<SET>**.



3 Select the images to send.


- Press the **<◀▶>** key to select the images to send, then press **<SET>**.
  - <✓>** is displayed on the upper left of the image to send.
- Press the **<Q>** button and turn the **<◀▶>** dial to the left to select an image on the three-image display. To return to the single-image display, turn the **<◀▶>** dial to the right.
- After selecting the images to send, press the **<Q>** button.



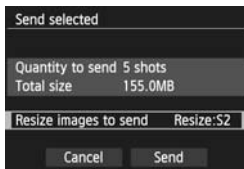

#### 4 Reduce the image size.

- Set it if necessary.

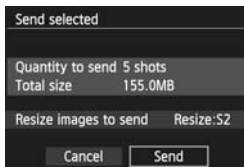

#### 5 Send the images.

- Press the <▲▼> key to select [**Send**], then press <SET> to send the images.
- ▶ The transfer progress screen is displayed.
- To transfer other images, repeat steps 1 to 5.



#### 6 Terminate connection.


- Press the <MENU> button to display the confirmation screen. Press the <◀▶> key to select [**OK**], then press <SET> to terminate the connection.
- ▶ The [**Wi-Fi function**] setting screen will reappear.

- If playback or shooting operation is started during the connection, the connection will be terminated. Operations such as shooting cannot be performed when data is being sent or received. When [**Cancel**] is selected on the camera being used to send images, image transfer is stopped so that shooting and other operations can be performed.
- When sending large files, make sure that the battery is adequately charged so it does not run out during the process.

- RAW images cannot be sent.
- You can send up to 50 files.


# Reconnecting

The camera can reconnect to another camera for which connection settings have been registered.

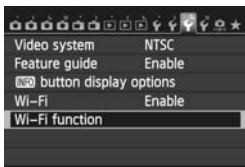


## 1 Select [Wi-Fi function].

- Under the [**F3**] tab, set [**Wi-Fi**] to [**Enable**], then select [**Wi-Fi function**].

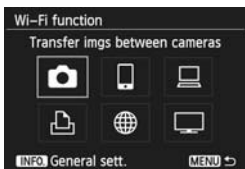

## 2 Select [**📷**].

- Select [**📷**] (Transfer imgs between cameras) and press < **SET** >.

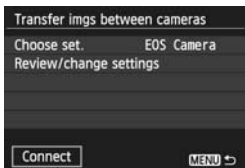

## 3 Establish a connection.

- Select [**Connect**] and press < **SET** >.
- On the confirmation screen, select [**OK**].
- Perform the reconnection procedure on the target camera as well.
- ▶ The images on the card are displayed and the images to send can be selected.
- When settings for multiple connection destinations are registered, select [**Choose set.**], select the connection destination, then connect to the destination.
- By default, settings are named after the nickname of the camera that was connected to.



# 3

## Connecting to a Smartphone

---

Connecting the camera to a smartphone lets you use the smartphone to view, manage, and receive images stored in the camera. You can also use the smartphone to perform remote shooting.

# Preparation

## EOS Remote Installation Required

To communicate with a smartphone, the camera needs to be connected to the smartphone using the dedicated application EOS Remote.


- EOS Remote can be downloaded from the App Store or Google Play. Install EOS Remote on the smartphone and then perform the procedures to establish the connection.
- To use EOS Remote, a smartphone on which iOS or Android installed is necessary. For information on supported operating system, refer to the download site of EOS Remote software.

## Using Camera Access Point Mode to Establish a Connection ■

The camera and smartphone can be directly connected via a wireless LAN.

Because the camera acts as an access point, no other access point is necessary, so you can establish communications easily even when you are out.

To establish connection, operations on the smartphone are required. For details, refer to the smartphone instruction manual.

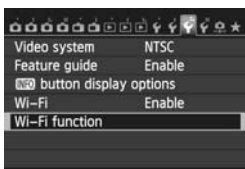


### 1 Select [Wi-Fi function].

- Under the [**F3**] tab, set [**Wi-Fi**] to [**Enable**], then select [**Wi-Fi function**].




### 2 Select [**☎**].

- Select [**☎**] (Connect to smartphone) and press <[**SET**]>.

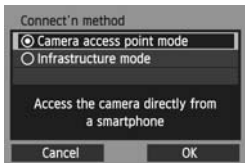

### 3 Select [**Camera access point mode**].


- Press the <[**▲▼**]> key to select [**Camera access point mode**], then press <[**SET**]>.
- Select [**OK**] and press <[**SET**]> to go to the next screen.

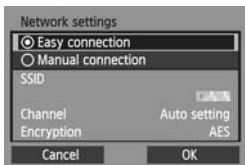

### 4 Select [**Easy connection**].


- Press the <[**▲▼**]> key to select [**Easy connection**], then press <[**SET**]>.
- Select [**OK**] and press <[**SET**]> to go to the next screen.



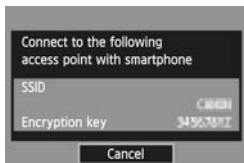

## 5 Connect the smartphone to the camera.

- On the Wi-Fi settings menu of the smartphone, select the SSID (network name) displayed on the camera's LCD monitor.
- For the password, enter the encryption key displayed on the camera's LCD monitor.
- ▶ The next screen may be automatically displayed even when the operation on the smartphone is not completed.

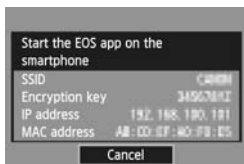


## 6 Start EOS Remote on the smartphone.

- When the Wi-Fi settings are completed, start EOS Remote on the smartphone.



## 7 Select [Camera Connection] on the smartphone.

- Select [Camera Connection] on EOS Remote.

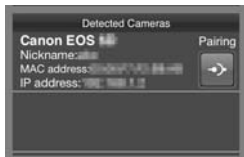

## 8 Select the target camera on the smartphone.

- Select the camera to connect to from the [Detected Cameras] on EOS Remote.
- ▶ Pairing starts.



A character other than in ASCII format is displayed as □.

## 9 Connect to the camera.

- When pairing is completed, the screen on the left is displayed. Press the <◀▶> key to select [OK], then press <SET>.



## 10 Perform further settings.

- To finish settings in this stage, press the <▲▼> key to select [OK], then press <SET> to go to step 11.
- To change the name of the settings, select [Settings name] and press <SET>.
- ▶ The virtual keyboard is displayed (p.W-10). Up to 30 characters can be entered for a settings name.



## 11 Save the settings.

- Select [OK] and press <SET> to save the settings.
- ▶ The [□ Connection] screen will be displayed.



The settings for communicating with a smartphone are now complete.

# Operating the Camera Using a Smartphone

You can use a smartphone with EOS Remote installed to view images stored on the camera and shoot remotely.

## EOS Remote Main Screen



The main functions of EOS Remote are described below. Touch the screen to learn the operation procedures.

### [Camera Image Viewing]

- Images stored in the camera can be viewed.
- Images stored in the camera can be saved on a smartphone.
- Operations such as deletion can be performed on images stored in the camera.

### [Remote Shooting]

- The camera's Live View image can be viewed using a smartphone.
- Camera settings can be changed.
- You can shoot using remote operation.

### ⚙️ (Settings button)

- Use this button to access various settings for EOS Remote.

## Terminating the Connection



### 1 Select [Exit].

- If the screen on the left is not displayed, select **[Wi-Fi function]** under the [**3**] tab on the camera's menu screen.
- Select **[Exit]** and press < (SET) >.



### 2 Select [OK].


- Press the < ◀▶ > key to select **[OK]**, then press < (SET) > to terminate the connection.



- Images are saved in S2 size JPEG format on smartphones. RAW images are also saved as S2 size JPEG images.
- Although movies are included in the list, they cannot be saved.
- If the camera's auto power off is activated during the wireless LAN connection, the wireless LAN function will turn off. Wireless LAN connection is restored when the camera wakes up from auto power off.

# Reconnecting

The camera can reconnect to a smartphone for which connection settings have been registered.

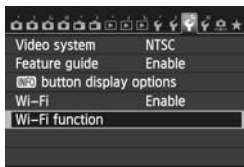


## 1 Select [Wi-Fi function].

- Under the [**3**] tab, set [**Wi-Fi**] to [**Enable**], then select [**Wi-Fi function**].



## 2 Select [**☐**].

- Select [**☐**] (Connect to smartphone) and press < **SET** >.

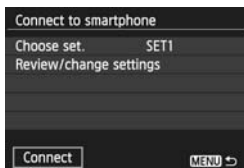

## 3 Establish a connection.

- Select [**Connect**] and press < **SET** >.
- On the confirmation screen, select [**OK**].
- ▶ The camera will reconnect to the smartphone.
- When settings for multiple connection destinations are registered, select [**Choose set.**], select the connection destination, then connect to the destination.

**Canon**


**EOS 6** 

**EOS 6D (WG)**

**GPS Function Instruction Manual** 

# Features

## Geotagging Images

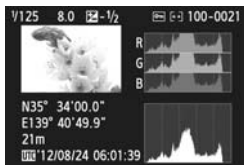

- Location information\*<sup>1</sup> (latitude, longitude, elevation, and coordinated universal time\*<sup>2</sup>) can be added to images.
- Shooting locations of geotagged images can be viewed on a virtual map on a computer.

\*1: Certain travel conditions or GPS settings may cause inaccurate location information to be added to images. The digital compass function is not incorporated.

\*2: Coordinated Universal Time, abbreviated UTC, is essentially the same as Greenwich Mean Time.

## Logging the Route Traveled

- Using the GPS logging function, location information for the route the camera traveled can be recorded. This route can be viewed on a virtual map.
- \* Certain traveling conditions, locations, or GPS settings may cause inaccurate location information to be added to images.

## Setting the Camera Time

- The camera time can be set using GPS signals.

## Viewing Images and Information on a Virtual Map

- Shooting locations and the route traveled can be viewed on a virtual map, using the Map Utility (EOS software) (p.G-18).





Map data ©2012 ZENRIN -



# Conventions Used in this Manual

## Meaning of Symbols

-  : Warning to prevent shooting problems.
-  : Supplemental information.
- (p.\*\*): Reference page numbers for further information.

The icons and markings indicating the camera's controls and settings used in the manual correspond to the icons and marking on the camera.

## Basic Assumptions

- All operation procedures in this manual assume that the camera power switch is set to <ON>.

## Trademarks

- Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- Google™, Google Maps™, and Google Earth™ are trademarks of Google Inc.
- Map Utility uses Google Maps™ to display images and routes traveled on a map.
- All other trademarks are the property of their respective owners.


# Table of Contents

---

Features .....	G-2
Conventions Used in this Manual.....	G-4
Acquiring GPS Signals .....	G-6
Setting the Positioning Interval .....	G-11
Setting Time from GPS on the Camera .....	G-12
Logging the Route Traveled.....	G-13
GPS Precautions .....	G-17
Map Utility .....	G-18
Specifications .....	G-19


# Acquiring GPS Signals

To acquire GPS signals, bring the camera outdoors where the sky is unobstructed and aim it upwards. Keep your hands and other objects off the top of the camera.

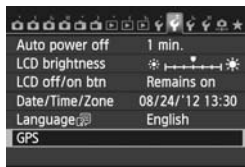

## 1 Select [GPS].

- On the [**1**] tab, select [**GPS**] and press <SET>.



## 2 Set [Select GPS device] to [Internal GPS].

## 3 Exit the menu.

- Press the <MENU> button.

## Battery Consumption

When [**Select GPS device**] is set to [**Internal GPS**], the camera will continue to receive GPS signals at set intervals even while the camera's power is switched off. This will drain the battery faster, reducing the number of shots that can be taken.

Additionally, when [**Log GPS position**] (p.G-13, G-14) is set to [**Enable**], shorter update intervals will drain the battery more quickly.

When you will not use GPS function, when you are not traveling, or when GPS signals are weak, setting [**Select GPS device**] to [**Disable**] is recommended.

## GPS Acquisition Status



LCD panel



LCD monitor

GPS signal status is indicated by the < **GPS** > icon on the camera's LCD panel and LCD monitor.

- Constant < **GPS** > : **Signal acquired**
- Blinking < **GPS** > : **Signal not acquired yet**



- When you shoot while the < **GPS** > mark is lit, the image will be geotagged.
- When [**Internal GPS**] is selected, the < **GPS** > mark is displayed on the camera's LCD panel even when the camera's power is turned off because signals from satellites are constantly received.
- Status details can be checked as described in "Viewing GPS Information" (p.G-9).



- Under favorable conditions, signal acquisition takes approx. 30-60 seconds after turning on the camera if radiowave conditions are good.
- The antenna of the internal GPS is located at the front of the hot shoe. GPS signals can be received even when an external flash is attached. However, acquisition will slightly be weakened.
- GPS signals can be received even when shooting with the camera positioned vertically.
- When traveling long distance, inaccurate information may be recorded.



### **Poor GPS Coverage**

Location information may not be recorded, or inaccurate information may be recorded where GPS signal coverage is poor, such as in the following locations.

- Indoors, underground, in tunnels or forests, near buildings or in valleys.
- Near high-voltage power lines or mobile phones operating on the 1.5 GHz band.
- When traveling through different environments.
- Even in other locations, satellite movement may interfere with geotagging and cause missing or inaccurate location information. The information may also indicate that the camera has been used in a different location, even if you are shooting at the same place.

## Viewing GPS Information



### 1 Select [GPS].

- On the [**Y**2] tab, select [**GPS**] and press <SET>.




### 2 Set [Select GPS device] to [Internal GPS].

- When using the GPS Receiver GP-E2 (sold separately), select [**External GPS**].



### 3 Select [Set up].

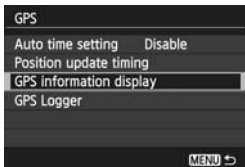

### 4 Select [GPS information display].

- ▶ Detailed GPS information is displayed.

GPS information display	
Latitude	N30°30'30.0"
Longitude	W30°30'30.0"
Elevation	50m
UTC	08/24/2012 13:30:00
Satellite reception	 3D


- [**UTC**] (Coordinated Universal Time) in this sample screenshot is essentially the same as Greenwich Mean Time. The icon <img alt="satellite reception icon" data-bbox="775 758 805 775"/> indicates signal conditions. When <3D> is displayed, elevation can also be recorded. However, elevation cannot be recorded when <2D> is displayed. Generally, elevation is not as accurate as latitude and longitude due to the characteristic of GPS.

## 5 Take a picture.

- ▶ Shots taken after GPS signal acquisition are geotagged.

### Geotagging Information

The screen below is displayed when pressing the <INFO.> button several times during image playback.

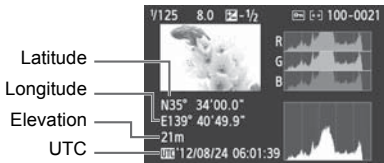

### Connecting External GPS

It is recommended to attach an external GPS to the hot shoe. When **[Wi-Fi]** on the **[f3]** tab is set to **[Enable]**, interface cable connection to the external GPS is disabled.

- Note that if you play back an image with GPS information shot with another EOS 6D (WG) camera, GPS information is not displayed on the camera's playback screen. Shooting locations can be viewed on a virtual map, using the Map Utility software.

- During movie shooting, information at the start of shooting is recorded. Note that signal reception conditions are not recorded.

# Setting the Positioning Interval

The interval (time) to update the location information can be set. Shorter positioning intervals yield more accurate location information for your images. However, fewer shots can be taken per charge.



## 1 Select [GPS].


- On the [**2**] tab, select [**GPS**] and press < **SET** >.



## 2 Set [Select GPS device] to [Internal GPS].



## 3 Select [Set up].



## 4 Select [Position update timing].



## 5 Select the time.




- The number of possible shots is less when signal conditions are unfavorable.
- The nature of GPS may cause some inconsistency in positioning intervals.




# Setting Time from GPS on the Camera

The camera time can be set using GPS signals.

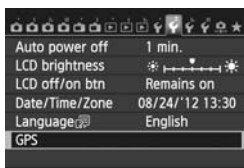

## 1 Select [GPS].


- On the [**2**] tab, select [**GPS**] and press < **SET** >.



## 2 Set [Select GPS device] to [Internal GPS].



## 3 Select [Set up].

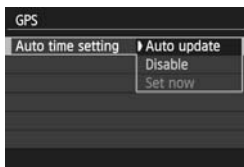

## 4 Select [Auto time setting].

- Select an option and press < **SET** >.
- [**Auto update**] updates the time after the camera is turned on and a GPS signal is received.

- If the GPS signal cannot be received from five or more satellites, time setting is not possible. [**Set now**] will be unavailable.
- Even if [**Set now**] is selected, auto time adjustment may not be possible, depending on the timing of GPS signal acquisition.
- When [**Auto time setting**] is set to [**Auto update**], the date or time cannot be manually set from [**Date/Time**] setting on the [**2**] tab.

# Logging the Route Traveled



Map data ©2012 ZENRIN -

Using the GPS logging function, the location information of the route the camera traveled can be automatically recorded on the camera's internal memory. When you shoot while using the GPS logging function, images will be geotagged. The recorded location information can be viewed on a virtual map on a computer using the Map Utility (EOS software) (p.G-18). The GPS logging function is enabled even during auto power off and when the power is turned <OFF>.



## 1 Select [GPS].


- On the [**1**] tab, select [**GPS**] and press <[**SET**]>.




## 2 Set [Select GPS device] to [Internal GPS].




## 3 Select [Set up].

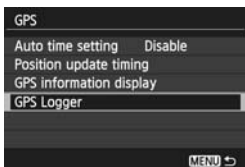

## 4 Select [GPS Logger].

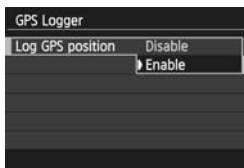

## 5 Set [Log GPS position] to [Enable].

 When the GPS logging function is enabled, the <LOG> icon is displayed on the camera LCD panel and LCD monitor.

## Location Information Logs

Location information is recorded at regular intervals along the route the camera traveled, as shown in **[Position update timing]** in the table below. Daily logs are saved on the camera's internal memory. The number of days for which you can store logs depends on the positioning interval you specify in **[Position update timing]** (p.G-11).

### Log File Capacity, by Positioning Interval

Position update timing	Log Files (Approx.)	Position update timing	Log Files (Approx.)
Every 1 sec.	4.4 days	Every 30 sec.	100 days
Every 5 sec.	22 days	Every 1 min.	100 days
Every 10 sec.	44 days	Every 2 min.	100 days
Every 15 sec.	67 days	Every 5 min.	100 days

\* Capacity when logging eight hours per day

- Log file names consist of date and number (e.g.12103100). Files are created per day. When the time zone is changed, a different file is created.
- Log files stored on the internal memory can be transferred to a card (p.G-15).
- When the camera's internal memory becomes full, the oldest log files are overwritten with new information, one by one.


## Importing log files to a computer

You can import log files to a computer using the EOS Utility (EOS software), or by transferring the log data to a card at first. Routes travelled will be displayed on a virtual map when you open the log files imported to the computer with the Map Utility software (p.G-18).

### Importing using EOS software


Log files can be imported to a computer using the EOS Utility (EOS software), via the provided interface cable connecting the camera and the computer. For details, refer to the EOS Utility Instruction Manual (CD-ROM).

### Importing by transferring the log data to a card

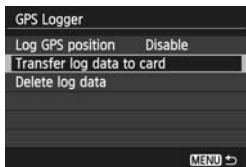

- Set **[GPS logger]** to **[Transfer log data to card]** to transfer the log files stored on the internal memory to a card. After the data is transferred to the card, log files on the internal memory are deleted.
- The log files imported to the card will be stored in the "GPS" folder in the "MISC" folder. The extension is ".LOG".
- Set **[GPS logger]** to **[Delete log data]** to completely delete the log data stored on the internal memory. Deleting data may take approx. one minute.

- When carrying the camera in a bag or suitcase as you travel, make sure the camera faces upward and nothing is on top of it.
- Set the camera time and date as accurately as possible. Also, set appropriate time zone and daylight saving time for the shooting location.
- Since location information, date, and time are constantly recorded, the battery is consumed even when the camera is turned off. Therefore, the battery level may already be low when the camera is used. Charge the battery when necessary or prepare a charged spare battery (sold separately).

 When you shoot while using the GPS logging function, images taken will be geotagged. The recorded location information can be viewed on a virtual map on a computer using the Map Utility (EOS software).

## GPS Precautions

### ■ Countries and Regions Permitting GPS Function Use

Use of GPS function is restricted in some countries and regions, and illegal use may be punishable under national or local regulations. To avoid violating GPS function regulations, visit the Canon Web site to check where use is allowed.

Note that Canon cannot be held liable for any problems arising from GPS function use in other countries and regions.

### ■ Model Number

EOS 6D (WG) : DS126401 (including WLAN module model: ZC-ST)  
(including GPS module model: CH9-1242)

- In certain countries and regions, the use of GPS function may be restricted. Therefore, be sure to use GPS function in accordance with the laws and regulations of your country or region. Be particularly careful when using GPS function outside your home country.
- Be careful about using GPS function where the operation of electronic devices is restricted.
- Others may be able to locate or identify you by using location data in your geotagged pictures or movies. Be careful when sharing these geotagged images, movies or GPS log files with others, such as when posting them online where many people can view them.
- GPS signal reception may take a longer time in some cases.

Hereby, Canon Inc., declares that this ZC-ST, CH9-1242 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Please contact the following address for the original Declaration of Conformity:

**CANON EUROPA N.V.**

Bovenkerkerweg 59, 1185 XB Amstelveen, The Netherlands

**CANON INC.**

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan



## Map Utility



Shooting locations or route traveled can be displayed on a virtual map on a computer using location information recorded on the camera.

- Map Utility software and its Instruction Manual are included in EOS DIGITAL Solution Disk.
- Internet access is necessary to install Map Utility.
- For the installation procedure, refer to the Camera Instruction Manual.
- Internet access is necessary to use Map Utility as well. For details, refer to the Map Utility Instruction Manual.

# Specifications

Geotagging Images:	Latitude, longitude, elevation, time (UTC) and signal acquisition
Reception frequency:	1575.42 MHz (L1 band)
Positioning Interval:	1, 5, 10, 15, or 30 seconds, or 1, 2, or 5 minutes
Time adjustment:	Camera time is set from GPS time data.
Log data:	NMEA-0183 format One file per day * When the time zone is changed, a different file is created. * Log files stored on the internal memory can be transferred to a card/computer. * When the camera's internal memory becomes full, the oldest log files are overwritten with new information, one by one.
Deleting log data:	Supported

- All information in this manual is based on Canon testing standards.
- Product specifications and the exterior are subject to change without notice.



# Wi-Fi (Wireless LAN) Precautions

## ■ Countries and Regions Permitting Wireless LAN Use

Use of wireless LAN is restricted in some countries and regions, and illegal use may be punishable under national or local regulations. To avoid violating wireless LAN regulations, visit the Canon Web site to check where use is allowed.

Note that Canon cannot be held liable for any problems arising from wireless LAN use in other countries and regions.

## ■ Model Number

EOS 6D (WG) : DS126401 (including WLAN module model: ZC-ST)  
(including GPS module model: CH9-1242)

Complies with  
IDA Standards  
DB00671

This product is installed with the WLAN Module which is certified to standards set by IDA Singapore.

## FCC/IC NOTICE

**Model: DS126401 (including WLAN Module Model ZC-ST, FCC ID: AZD220 / IC:498J-220)**

This device complies with Part 15 of FCC Rules and Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter except Canon accessories supplied or designated for this product.

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. This model has been tested and found to comply with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules.

Hereby, Canon Inc., declares that this ZC-ST, CH9-1242 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Please contact the following address for the original Declaration of Conformity:

**CANON EUROPA N.V.**

Bovenkerkerweg 59, 1185 XB Amstelveen, The Netherlands

**CANON INC.**

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan



**Canon**