



# Canon PIXMA MG2900 series

## Getting Started 2

You can connect the machine to a PC/smartphone/tablet and install software.

Windows PC  
Mac (Mac OS)

### 1. Download the setup file


1 Access the following URL from your web browser.

<http://canon.com/ijsetup>

2 Select the region where you purchased the product.



3 Select your product.  
4 Click **Click here to set up**.

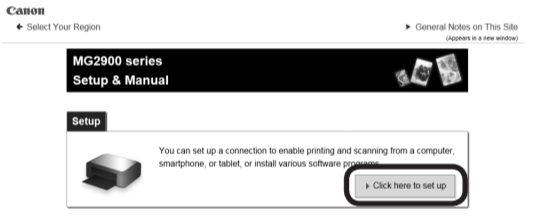


5 Select your operating system.  
6 Click **Download** to download the setup file.  
\* If your computer displays an alert screen for downloads, allow the browser block to continue downloading.

7 Run the downloaded file, then click **Next**.



### 2. Select a connection method

Select the machine connection method, then click **Next**.

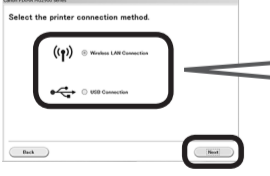

Hereafter, follow the on-screen instructions to connect the machine to your computer.

### 3. Install the software

When the following screen appears, select the software you want to install, then click **Next**.



Hereafter, follow the on-screen instructions to proceed with the software installation. If a test page is successfully printed, the setup is complete.

Windows users can also use the setup CD-ROM.



Running the CD-ROM, the screen in 7 appears. The following steps are the same as the website.

**(W) Wireless LAN Connection**  
If you want to connect the machine to your computer without any cables, select this connection.

**(U) USB Connection**  
If you want to connect the machine to your computer with a USB cable, select this connection. The connection is an easier way to connect the machine. Only one machine can be connected to your computer.  
\* A USB cable is not supplied.

Have you finished all the steps in the **Getting Started 1**? Please read this manual after completing the machine setup in the **Getting Started 1**.


### Connect Machine to



### iPhone/iPad/iPod touch (iOS) Smartphone/Tablet (Android)

#### 1. Install the PIXMA Printing Solutions application

1 Access the download page for your OS by scanning the QR code below.

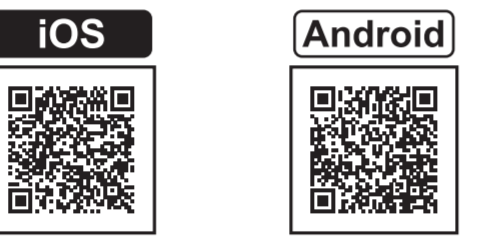

2 Install PIXMA Printing Solutions.



\* These steps are based on PIXMA Printing Solutions 1.5.0. In newer versions, follow the application instructions to finish the installation.

#### 2. Set up the machine connection using PIXMA Printing Solutions

Using a wireless router	Not using/having a wireless router (Connecting the machine directly)
<b>iOS → A</b>	<b>iOS → B</b> <sup>*1</sup>
<b>Android → C</b>	<b>Android → D</b> <sup>*2</sup>

Turn on Wi-Fi on your smartphone or tablet before you begin.  
<sup>\*1</sup> If you connect your iOS device to the Internet during connecting the machine to the device directly, you may be charged for a connection fee depending on your contract.  
<sup>\*2</sup> You cannot connect your Android device to the Internet when connected directly to the machine.

#### Use Google Cloud Print

To use Google Cloud Print, proceed with the following steps.

- Press the **Stop** button on the machine.
- Connect the machine to a network.



3 Register the machine with Google Cloud Print.



Online Manual <http://canon.com/ijsetup>

### iOS - A

- Tap the **Settings** icon on the home screen.
- Tap **Wi-Fi**, then tap **Canon\_ij\_Setup** from the list.
- Tap the **Inkjet Print** icon to open PIXMA Printing Solutions on the home screen.
- Tap the machine icon.

If **Canon\_ij\_Setup** does not appear on the list, set the machine by referring to NOTE, and wait until it appears.

- Tap **Printer Setup**.
- Tap **Access Point Connection (recommended)**.
- Tap **Cableless Setup**.
- Tap **OK**.

Select the printer connection method. If you have an access point (wireless LAN router), select **Access Point Connection (recommended)**. If you do not have an access point, select **Direct Connection**.

To connect the printer and access point via cableless setup, start **Cableless Setup** on the printer, then select the button below. Refer to the Setup Guide for operations on the printer.

Enable Wi-Fi in the mobile device's settings, then select the printer SSID shown below from the detected SSIDs. After connecting to the printer SSID, select **OK** below.

- Check your router SSID.
- If the password entry screen appears, enter your router password, then tap **OK**.
- The setup completion message will appear after a while, then tap **OK**.
- Tap **Detect Printer**, then wait for a while.

If the machine is not detected, and the machine's **Alarm** lamp is lit, press the **Color** or **Black** button, and then to redo from 1.

- Tap **Canon MG2900 series**.
- When the device displays a message asking you to permit sending machine information, read the message and tap **Agree** to accept the agreement. Next, tap **OK** on the confirmation screen.
- If your machine information appears, the setup is complete.

### iOS - B

- Tap the **Settings** icon on the home screen.
- Tap **Wi-Fi**, then tap **Canon\_ij\_Setup** from the list.
- Tap the **Inkjet Print** icon to open PIXMA Printing Solutions on the home screen.
- Tap the machine icon.

If **Canon\_ij\_Setup** does not appear on the list, set the machine by referring to NOTE, and wait until it appears.

- Tap **Printer Setup**.
- Tap **Direct Connection**.
- Tap **Direct Setup**.
- Tap **OK**.

Select the printer connection method. If you have an access point (wireless LAN router), select **Access Point Connection (recommended)**. If you do not have an access point, select **Direct Connection**.

If access point mode cannot be set on the printer, start **Cableless Setup** on the printer, then select **Direct Setup** below. Refer to the Setup Guide for operations on the printer.

Enable Wi-Fi in the mobile device's settings, then select the printer SSID shown below from the detected SSIDs. After connecting to the printer SSID, select **OK** below.

- Check your SSID, then tap **Copy Password**.
- Tap the **Settings** icon on the home screen.
- Tap **Wi-Fi**, then select the SSID shown on 9 from the list.
- Paste the password, then tap **Join**.
- Tap the **Inkjet Print** icon to return to PIXMA Printing Solutions, then tap **Done**.

In the mobile device's settings, connect to the SSID shown below.

- Tap **Detect Printer**, then wait for a while.
- Tap **Canon MG2900 series**.
- When the device displays a message asking you to permit sending machine information, read the message and tap **Agree** to accept the agreement. Next, tap **OK** on the confirmation screen.
- If your machine information appears, the setup is complete.

If the device displays an error message that the machine is not detected, tap **Back** to close the message, then tap **Detect Printer** again.

### Android - C

- Tap the **Inkjet Print** icon to open PIXMA Printing Solutions. The license agreement screen appears at the initial setup.
- When the following message appears, tap **Cancel**.
- Tap the machine icon.
- Tap **Printer Setup**.

Confirm Printer Settings  
Printer is not set. Make printer settings.

- Tap **Access Point Connection (recommended)**.
- Tap **Cableless Setup**.
- Select your router SSID.
- If the password entry screen appears, enter your router password, then tap **OK**.

Select the printer connection method. If you have an access point (wireless LAN router), select **Access Point Connection (recommended)**. If you do not have an access point, select **Direct Connection**.

To connect the printer and access point via cableless setup, start **Cableless Setup** on the printer, then select the button below. Refer to the Setup Guide for operations on the printer.

Select the access point to which you want to connect the printer. If you cannot find the access point to which you want to connect, select "Search Again".

If the following screen does not appear, set the machine by referring to NOTE, then redo from 6.

- Tap **OK**.
- Tap **Detect Printer**, then wait for a while.
- Tap **OK**.
- Tap **MG2900 series**.

Starting printer search. Check that the printer is on.

- When the device displays a message asking you to permit sending machine information, read the message and tap **Agree** to accept the agreement.
- Tap **OK** on the confirmation screen.
- If your machine information appears, the setup is complete.

### Android - D

- Tap the **Inkjet Print** icon to open PIXMA Printing Solutions. The license agreement screen appears at the initial setup.
- When the following message appears, tap **Cancel**.
- Tap the machine icon.
- Tap **Printer Setup**.

Confirm Printer Settings  
Printer is not set. Make printer settings.

- Tap **Direct Connection**.
- Tap **Direct Setup**.
- When the following message appears, tap **OK**.
- Wait for detecting the machine.

Select the printer connection method. If you have an access point (wireless LAN router), select **Access Point Connection (recommended)**. If you do not have an access point, select **Direct Connection**.

Access point mode cannot be set on the printer, start **Cableless Setup** on the printer, then select **Direct Setup** below. Refer to the Setup Guide for operations on the printer.

If the following screen does not appear, set the machine by referring to NOTE, then redo from 6.

- Tap **MG2900 series**.
- When the device displays a message asking you to permit sending machine information, read the message and tap **Agree** if you agree it.
- Tap **OK** on the confirmation screen.
- If your machine information appears, the setup is complete.

### NOTE

If you encounter the following problems during setup, follow these steps to make the machine ready.


**iOS** **Canon\_ij\_Setup** is not listed  
**Android** The wireless router SSID is not shown

- Hold down the **Wi-Fi** button (A) on the machine until the **Alarm** lamp (B) flashes 2 times, then release the **Wi-Fi** button after the second flash.
- Make sure that the **Wi-Fi** lamp (C) flashes quickly and the **ON** lamp (D) is lit.

# Guía de inicio 2

¿Ha finalizado todos los pasos de la **Guía de inicio 1**? Lea este manual después de completar la instalación de la máquina de acuerdo con la **Guía de inicio 1**.

## Conecte la máquina a

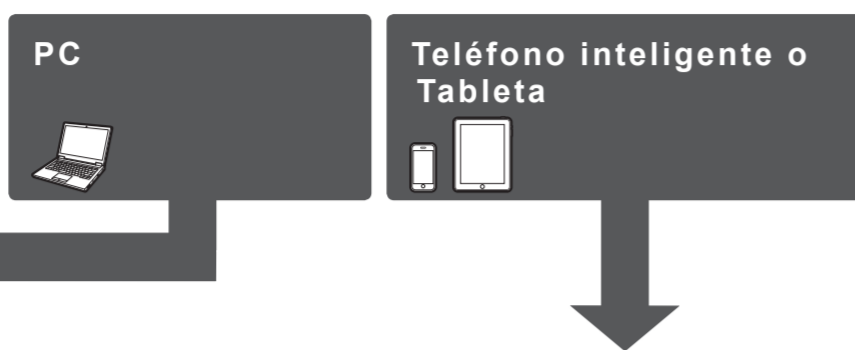

Puede conectar la máquina a un PC/teléfono inteligente/tableta e instalar el software.

### Windows PC / Mac (Mac OS)

#### 1. Descargue el archivo de instalación

1 Acceda a la URL siguiente desde su navegador web.


<http://canon.com/ijsetup>

2 Seleccione la región en la que haya adquirido el producto.



3 Seleccione su producto.

4 Haga clic en **Haga clic aquí para configurar (Click here to set up)**.

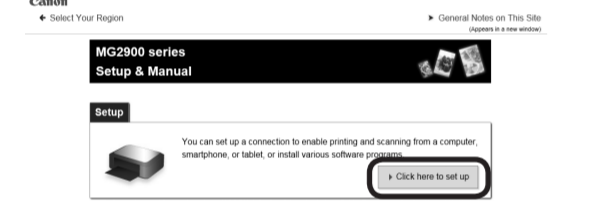

5 Seleccione su sistema operativo.

6 Haga clic en **Descargar (Download)** para descargar el archivo de instalación.


\* Si ordenador visualiza una pantalla de alerta para las descargas, permita que el bloqueo del navegador continúe la descarga.

7 Ejecute el archivo descargado, y después haga clic en **Siguiente (Next)**.



#### 2. Seleccione un método de conexión

Seleccione un método de conexión de la máquina, y después haga clic en **Siguiente (Next)**.

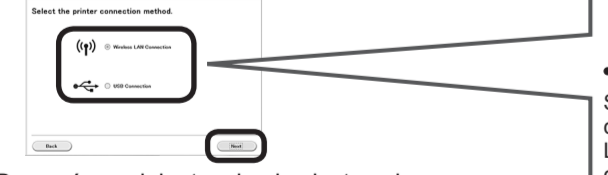

De aquí en adelante, siga las instrucciones que aparecen en pantalla para conectar la máquina a su ordenador.


#### 3. Instale el software

Cuando aparezca la pantalla siguiente, seleccione el software que desee instalar, y después haga clic en **Siguiente (Next)**.



De aquí en adelante, siga las instrucciones que aparecen en pantalla para seguir con la instalación del software. Si se imprime satisfactoriamente una página de prueba, la instalación habrá finalizado.

Los usuarios de Windows también pueden utilizar el CD-ROM de instalación.

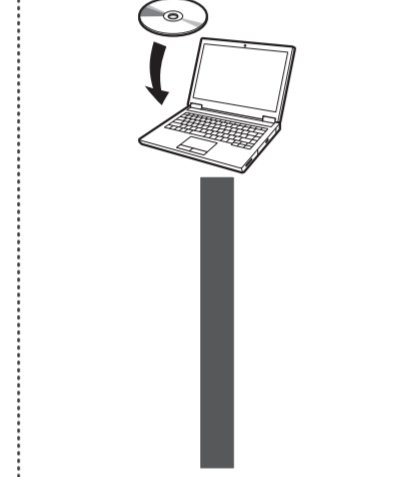

Ejecutar el CD-ROM, aparece la pantalla de 7. Los pasos siguientes son los mismos que en el sitio web.

### iPhone/iPad/iPod touch (iOS) / Teléfono inteligente/Tableta (Android)

#### 1. Instale la aplicación PIXMA Printing Solutions

1 Acceda a la página de descarga de su sistema operativo escaneando el código QR de abajo.



2 Instale PIXMA Printing Solutions.



\* Estos pasos se basan en PIXMA Printing Solutions 1.5.0. En versiones más recientes, siga las instrucciones de la aplicación para finalizar la instalación.

#### 2. Configure la conexión de la máquina utilizando PIXMA Printing Solutions

<p>Utilizando un enrutador inalámbrico</p>	<p>Sin utilizar o cuando no tenga enrutador inalámbrico (Conexión directa de la máquina)</p>
<p><b>iOS</b> → <b>A</b></p>	<p><b>iOS</b> → <b>B</b>*1</p>
<p><b>Android</b> → <b>C</b></p>	<p><b>Android</b> → <b>D</b>*2</p>

Active Wi-Fi en su teléfono inteligente o tableta antes de comenzar.

\*1 Si conecta su dispositivo iOS a Internet durante la conexión directa de la máquina al dispositivo, es posible que se le cobre una tarifa de conexión dependiendo de su contrato.

\*2 No puede conectar su dispositivo Android a Internet cuando haya conectado directamente a la máquina.

#### Utilización de Google Cloud Print

Para utilizar Google Cloud Print, realice los pasos siguientes.

- 1 Pulse el botón **Parar (Stop)** de la máquina.
- 2 Conecte la máquina a una red.



3 Registre la máquina con Google Cloud Print.



Manual en línea <http://canon.com/ijsetup>

### iOS - A

- 1 Toque el icono de **Ajustes (Settings)** en la pantalla de inicio.
- 2 Toque **Wi-Fi**, y después toque **Canon\_ij\_Setup** de la lista.
- 3 Toque el icono de **Inkjet Print** para abrir PIXMA Printing Solutions en la pantalla de inicio.
- 4 Toque el icono de la máquina.

- 5 Toque **Preparar impresora (Printer Setup)**.
- 6 Toque **Conexión mediante punto de acceso (Access Point Connection)** (recomendada).
- 7 Toque **Conf. sin cables (Cableless Setup)**.
- 8 Toque **Aceptar (OK)**.

- 9 Seleccione el SSID de su enrutador.
- 10 Si aparece la pantalla de introducción de contraseña, introduzca su contraseña, y después toque **Aceptar (OK)**.
- 11 Después de un mensaje de introducción de contraseña, introduzca su contraseña, y después toque **Aceptar (OK)**.
- 12 Toque **Detectar impr. (Detect Printer)**, y después espere un poco.

- 13 Toque **Canon MG2900 series**.
- 14 Cuando el dispositivo visualice un mensaje solicitándole que permita enviar información de la máquina, lea el mensaje y toque **Aceptar (Agree)** para aceptar el acuerdo. Después, toque **Aceptar (OK)** en la pantalla de confirmación.
- 15 Si aparece la información de la máquina, la instalación habrá finalizado.

### iOS - B

- 1 Toque el icono de **Ajustes (Settings)** en la pantalla de inicio.
- 2 Toque **Wi-Fi**, y después toque **Canon\_ij\_Setup** de la lista.
- 3 Toque el icono de **Inkjet Print** para abrir PIXMA Printing Solutions en la pantalla de inicio.
- 4 Toque el icono de la máquina.

- 5 Toque **Preparar impresora (Printer Setup)**.
- 6 Toque **Conexión directa (Direct Connection)**.
- 7 Toque **Config. Directa (Direct Setup)**.
- 8 Toque **Aceptar (OK)**.

- 9 Compruebe su SSID, y después toque **Copiar cont. (Copy Password)**.
- 10 Toque el icono de **Ajustes (Settings)** en la pantalla de inicio.
- 11 Toque **Wi-Fi**, y después seleccione el SSID mostrado en 9 de la lista.
- 12 Pegue la contraseña, y después toque **Conectarse (Join)**.
- 13 Toque el icono de **Inkjet Print** para volver a PIXMA Printing Solutions, y después toque **Hecho (Done)**.

- 14 Toque **Detectar impr. (Detect Printer)**, y después espere un poco.
- 15 Toque **Canon MG2900 series**.
- 16 Cuando el dispositivo visualice un mensaje solicitándole que permita enviar información de la máquina, lea el mensaje y toque **Aceptar (Agree)** para aceptar el acuerdo. Después, toque **Aceptar (OK)** en la pantalla de confirmación.
- 17 Si aparece la información de la máquina, la instalación habrá finalizado.

### Android - C

- 1 Toque el icono de **Inkjet Print** para abrir PIXMA Printing Solutions. La pantalla del acuerdo de licencia aparece en la instalación inicial.
- 2 Cuando aparezca el mensaje siguiente, toque **Cancelar (Cancel)**.
- 3 Toque el icono de la máquina.
- 4 Toque **Preparar impresora (Printer Setup)**.

- 5 Toque **Conexión mediante punto de acceso (Access Point Connection)** (recomendada).
- 6 Toque **Conf. sin cables (Cableless Setup)**.
- 7 Seleccione el SSID de su enrutador.
- 8 Si aparece la pantalla de introducción de contraseña, introduzca su contraseña, y después toque **Aceptar (OK)**.

- 9 Toque **Aceptar (OK)**.
- 10 Toque **Detectar impr. (Detect Printer)**, y después espere un poco.
- 11 Toque **Aceptar (OK)**.
- 12 Toque **MG2900 series**.

- 13 Cuando el dispositivo visualice un mensaje solicitándole que permita enviar información de la máquina, lea el mensaje y toque **Aceptar (Agree)** para aceptar el acuerdo.
- 14 Toque **Aceptar (OK)** en la pantalla de confirmación.
- 15 Si aparece la información de la máquina, la instalación habrá finalizado.

### Android - D

- 1 Toque el icono de **Inkjet Print** para abrir PIXMA Printing Solutions. La pantalla del acuerdo de licencia aparece en la instalación inicial.
- 2 Cuando aparezca el mensaje siguiente, toque **Cancelar (Cancel)**.
- 3 Toque el icono de la máquina.
- 4 Toque **Preparar impresora (Printer Setup)**.

- 5 Toque **Conexión directa (Direct Connection)**.
- 6 Toque **Config. Directa (Direct Setup)**.
- 7 Cuando aparezca el mensaje siguiente, toque **Aceptar (OK)**.
- 8 Espere por la detección de la máquina.

- 9 Toque **MG2900 series**.
- 10 Cuando el dispositivo visualice un mensaje solicitándole que permita enviar información de la máquina, lea el mensaje y toque **Aceptar (Agree)** para aceptar el acuerdo.
- 11 Toque **Aceptar (OK)** en la pantalla de confirmación.
- 12 Si aparece la información de la máquina, la instalación habrá finalizado.

**NOTA** Si se encuentra con los problemas siguientes durante la instalación, siga estos pasos para dejar la máquina preparada.

- iOS** **Canon\_ij\_Setup** no está en la lista
- Android** El SSID del enrutador inalámbrico no se muestra

- 1 Mantenga pulsado el botón **Wi-Fi (A)** de la máquina hasta que la lámpara **Alarma (Alarm) (B)** parpadee 2 veces, y después del segundo parpadeo, suelte el botón **Wi-Fi**.
- 2 Asegúrese de que la lámpara **Wi-Fi (C)** parpadee rápidamente y la lámpara **ACTIVADO (ON) (D)** se encienda.

