



PCL Driver Guide

PCL5c/PCL5e Driver Ver. 8.20

PCL6 Driver Ver. 6.20

Please read this guide before operating this product.
After you finish reading this guide, store it in a safe place for future reference.

ENG

PCL Driver Guide



How This Manual Is Organized

Chapter 1 Before You Start

Chapter 2 Getting Started

Chapter 3 Basic Print Options

Chapter 4 Special Print Options

Chapter 5 Appendix

Includes additional information about the printer drivers and the index.

Contents

Preface	vii
How to Use This Manual	vii
Symbols Used in This Manual	vii
Keys and Buttons Used in This Manual	vii
Displays Used in This Manual	viii
Abbreviations Used in This Manual	ix
Legal Notices	x
Trademarks	x
Copyright	x
Disclaimers	x

Chapter 1 Before You Start

Introduction	1-2
System Requirements	1-3
Where to Find Help	1-4

Chapter 2 Getting Started

Installing the Software	2-2
Installing the Printer Driver	2-2
Standard Installation	2-3
Dynamic Installation	2-13
Alternate Printer Driver (Windows 2000/XP/Server 2003)	2-21
Using the Add Printer Wizard	2-22
USB Connection Installation	2-26
USB Standard Installation	2-26
Plug and Play Installation (Windows 2000)	2-28
Plug and Play Installation (Windows XP/Server 2003)	2-30
Plug and Play Installation (Windows Vista)	2-31
Plug and Play Installation for Network Printers (Windows Vista)	2-34
Installing the Canon Driver Information Assist Service	2-37
Updating the Existing Printer Drivers	2-41
Using the Installer	2-41
Using the Add Printer Wizard	2-43
Updating the Alternate Printer Driver (Windows 2000/XP/Server 2003)	2-46
Uninstalling the Printer Driver	2-47
Setting Up the Printer Configuration	2-50
Configuring Automatically	2-50
Configuring Manually	2-53
Configuring the Device Function Settings	2-55
Configuring the Controller Version	2-55
Configuring the Device Functions	2-58
Printing a Document	2-60

Chapter 3 Basic Print Options

Accessing the Printer Properties Dialog Box	3-2
Accessing the Printer Properties Dialog Box from Application Software	3-2
Accessing the Printing Preferences Dialog Box from the Printers Folder	3-3

Accessing the Printer Properties Dialog Box from the Printers Folder	3-4
Using Profiles for Printing	3-5
What Is a Profile?	3-5
Selecting a Profile for Printing	3-5
Adding or Editing Profiles	3-6
Adding or Editing Profiles in the Profile Sheet	3-7
Scaling a Document	3-10
Scaling a Document Automatically	3-10
Scaling a Document Manually	3-11
Printing Multiple Pages on One Sheet.	3-13
Two-Sided Printing	3-15
Specifying the Finishing Options	3-17
Selecting a Finishing Option	3-17
Selecting the Output Option	3-17
Booklet Printing	3-21
Using Creep Correction for Booklet Printing	3-23
Perfect Binding	3-25
Printing with Mixed Paper Sizes	3-28
Specifying the Paper Source	3-31
Printing All the Pages from the Same Paper Source	3-32
Printing the First, Body, and Last Pages from Different Paper Sources	3-33
Printing the First, Second, Body, and Last Pages from Different Paper Sources	3-34
Printing the Cover and Body Pages of a Booklet from Different Paper Sources	3-35
Printing on Transparencies	3-37
Using Cover or Sheet Insertion Options	3-38
Adding Front or Back Covers to the Document	3-38
Inserting Sheets into the Document	3-42
Inserting Tab Paper	3-47
Creating Tabs	3-51
Printing on Custom Paper	3-54
Registering Custom Paper	3-54
Printing on Custom Paper	3-56
Printing on Local Standard Paper	3-57
Specifying the Paper Source for Local Standard Paper	3-57
Printing a Banner Page with a Print Job	3-60

Chapter 4 Special Print Options

Overlay Printing	4-2
What Is Overlay Printing?	4-2
Overlay Printing Using a Form File on Host	4-3
Creating a Form File	4-3
Printing with an Overlay	4-6
Overlay Printing Using a Form File on Device	4-9
Creating a Form File	4-10
Printing with an Overlay Using a Form File Stored in the Printer	4-12
Printing with an Overlay Using a NetSpot Resource Downloader Form File	4-15
Specifying the Print Quality	4-19
What Is an Objective?	4-19
Selecting and Editing an Objective	4-20
Selecting an Objective	4-20
Editing the Objective Settings	4-21
Sending Document Data to a User Inbox or Mail Box	4-23
Getting User Inbox or Mail Box Names	4-23

For the iR2000/1600, iR2010/1610, iR400, GP405/GP300, GP605/GP605P/GP555, and LBP-2000	4-23
For Printers Other Than the Above	4-23
Sending a Document to a User Inbox or Mail Box	4-24
Registering a Document as an Image Form	4-27
Secured Printing	4-30
Editing Multiple Print Documents Together	4-33
Promoting a Print Job	4-35
Storing a Document Temporarily in a Hold Queue	4-37
Job Accounting Feature	4-39
Job Accounting Overview	4-39
Specifying the ID and Password	4-40
Printing with Job Accounting	4-42
With Allow Password Setting Selected	4-42
With Allow Password Setting Not Selected	4-42
Specifying the Color and Grayscale Settings	4-44
About the Color and Grayscale Settings	4-44
Color Printing	4-45
Grayscale Printing	4-48

Chapter 5 Appendix

Operational Requirements and Restrictions in the Microsoft Cluster Server Environment	5-2
When Installing the Printer Driver	5-2
When Installing the Canon Driver Information Assist Service	5-2
PCL Driver Functions List	5-6
Local Standard Paper Sizes List	5-7
Index	5-14

Preface

Thank you for purchasing this Canon product. Please read this manual thoroughly before operating the product to familiarize yourself with its capabilities, and to make the most of its many functions. After reading this manual, store it in a safe place for future reference.

How to Use This Manual

Symbols Used in This Manual

The following symbols are used in this manual to explain procedures, restrictions, handling precautions, and instructions that should be observed for safety.



IMPORTANT

Indicates operational requirements and restrictions. Be sure to read these items carefully to operate the product correctly, and avoid damage to the product.




NOTE

Indicates a clarification of an operation, or contains additional explanations for a procedure. Reading these notes is highly recommended.

Keys and Buttons Used in This Manual

The following symbols and key/button names are a few examples of how keys and buttons to be clicked or pressed are expressed in this manual:

- Control Panel Keys: Key Icon (Key Name)

Example: 

- Touch Panel Display Keys: [Key Name]

Examples: [PCL]

[Yes]


- Buttons on Computer Operation Screens: [Button Name]

Examples: [OK]


[Next]

Displays Used in This Manual

Screen shots of computer operation screens used in this manual may differ from the ones you actually see, depending on the operating system and the model or options that come with your machine.

The keys or buttons which you should click or press are marked with a , as shown below.

When multiple keys or buttons can be clicked or pressed, they are highlighted and mentioned in the order in which they should be clicked or pressed.

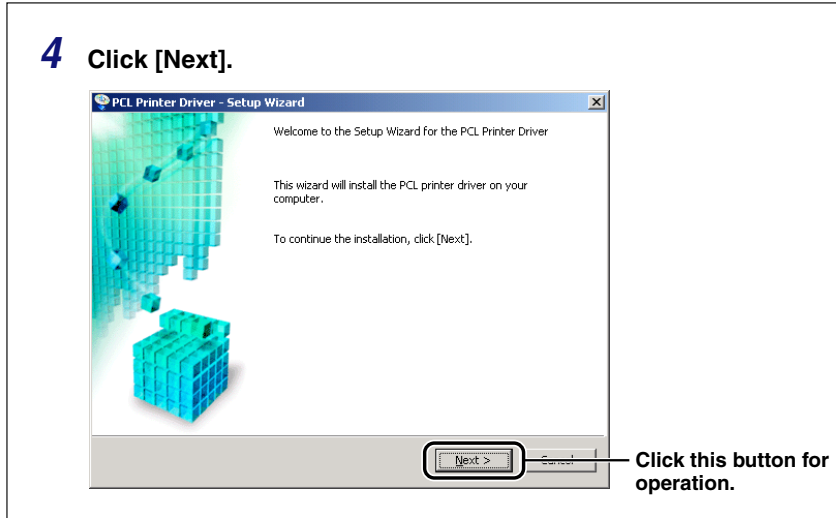

Abbreviations Used in This Manual

In this manual, product names and model names are abbreviated as follows:

Microsoft Windows 2000:	Windows 2000
Microsoft Windows XP:	Windows XP
Microsoft Windows Server 2003:	Windows Server 2003
Microsoft Windows Vista operating system:	Windows Vista
Novell NetWare:	NetWare
PostScript 3 emulation:	PS

Legal Notices

Trademarks

Citrix, MetaFrame, and MetaFrame XP are trademarks of Citrix Systems, Inc. in the United States and other countries.

PCL and HP-GL are trademarks of Hewlett-Packard Company.

Windows, Windows logo, Windows Vista, and Windows Vista logo are trademarks of Microsoft Corporation in the United States and other countries.

Other product and company names herein may be the trademarks of their respective owners.

Copyright

Copyright 2007 by Canon Inc. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage or retrieval system without the prior written permission of Canon Inc.

UFST: Copyright 1989-2003 Monotype Imaging, Inc.

Disclaimers

The information in this document is subject to change without notice.

CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR AGAINST INFRINGEMENT OF ANY PATENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

1

CHAPTER

Before You Start

This chapter describes the system environments required for using the PCL5c, PCL5e, and PCL6 printer drivers. It also describes where to find help and information regarding the installation and use of these drivers.

Introduction	1-2
System Requirements	1-3
Where to Find Help	1-4

Introduction

The Canon PCL5c, PCL5e, and PCL6 printer drivers enable users of Microsoft Windows 2000, Windows XP, Windows Server 2003, or Windows Vista to print from any Windows application and make full use of their Canon printers. (Although the machines supported by these printer drivers have multiple functions, they will be referred to as "printers" in this guide.)

Canon provides you with three types of printer drivers: Adobe Systems' PS (PostScript) 3 emulation printer driver, Hewlett-Packard's PCL (Printer Control Language) printer driver, which includes the PCL5c, PCL5e, and PCL6 printer drivers, and Canon's UFR II (Ultra Fast Rendering II) printer driver.

■ PS

The PS printer driver is well-suited for printing from Adobe Systems software, and offers superior performance for printing high-quality text and graphics.

■ PCL

The PCL5c, PCL5e, and PCL6 printer drivers can be used with most kinds of business application software. The PCL5c printer driver is for color printers, the PCL5e printer driver is for black-and-white printers, and the PCL6 printer driver is for both color and black-and-white printers. PCL 6 is an advanced version of PCL5c and PCL5e, and offers superior printing quality and speed. The PCL5e printer driver is provided as standard with black-and-white printers.

■ UFR II

Using the UFR II printer driver, the various data processing tasks conventionally executed within the printer are appropriately divided between the host PC and the printer to greatly reduce the overall printing time. The workload can be delegated to match the output data, thus realizing a significant increase in speed through optimization.



IMPORTANT

- *The available printer drivers may vary, depending on the machine and the version of Windows that you are using.*
- *For information on the machines supported by the PCL5c, PCL5e, and PCL6 printer drivers, see Canon Products Supported by PCL Driver.*

System Requirements

The printer drivers can be used in the following system environments:

■ Operating System Software

- Microsoft Windows 2000
- Microsoft Windows XP
- Microsoft Windows Server 2003
- Microsoft Windows Vista

■ With a Server-Based Computing Environment

- Compatible Windows Terminal Server (Service)
 - Microsoft Windows 2000 Server
 - Microsoft Windows Server 2003
- Compatible Software
 - Citrix MetaFrame XP
 - Citrix MetaFrame 1.8
 - Citrix MetaFrame Presentation Server 3.0
 - Citrix Presentation Server 4.0
 - Citrix Presentation Server 4.5
- Compatible Microsoft Cluster Server (MSCS)
 - Microsoft Windows 2000 Advanced Server
 - Microsoft Windows Server 2003 Enterprise Edition

■ Computer

Any computer which runs the above operating system software properly



Where to Find Help

Here is where to get immediate help if you are having problems installing or using the printer drivers.

■ README.TXT file

Any hints, enhancements, limitations, and restrictions you need to be aware of when installing and using your printer drivers are included in the README.TXT file provided with the drivers. The README.TXT file is located in the following folder: \PCL\uk_eng\32BIT.

■ Online Help

You can locate additional help for questions you may have regarding your printer in the Online Help provided with the driver. In the printer properties dialog box, you can click [Help] to display additional information about every feature and option in the PCL5c, PCL5e, and PCL6 printer drivers. See the Online Help for the detailed information on specifying PCL options.

■ Canon Authorized Dealers or Service Providers

If the Online Help does not provide the information you need, contact your local authorized Canon dealer or service provider.

2

CHAPTER

Getting Started

This chapter describes instructions for installing the PCL5c, PCL5e, and PCL6 printer drivers, setting the system configuration, and printing a document.

Installing the Software	2-2
Installing the Printer Driver	2-2
USB Connection Installation	2-26
Plug and Play Installation for Network Printers (Windows Vista)	2-34
Installing the Canon Driver Information Assist Service	2-37
Updating the Existing Printer Drivers	2-41
Updating the Alternate Printer Driver (Windows 2000/XP/Server 2003)	2-46
Uninstalling the Printer Driver	2-47
Setting Up the Printer Configuration	2-50
Configuring Automatically	2-50
Configuring Manually	2-53
Configuring the Device Function Settings	2-55
Configuring the Controller Version	2-55
Configuring the Device Functions	2-58
Printing a Document	2-60


Installing the Software

This section describes instructions for installing the printer driver and the Canon Driver Information Assist Service, and for uninstalling the printer driver.

Installing the Printer Driver

Before using the printer, you must install the PCL5c, PCL5e, or PCL6 printer drivers for it. For color printers, install the PCL5c printer driver, and for black-and-white printers, install either the PCL5e or the PCL6 printer driver. The installation procedures for all of the printer drivers are the same.

Refer to the figure below in order to decide which procedure is necessary and read the corresponding pages in this manual.

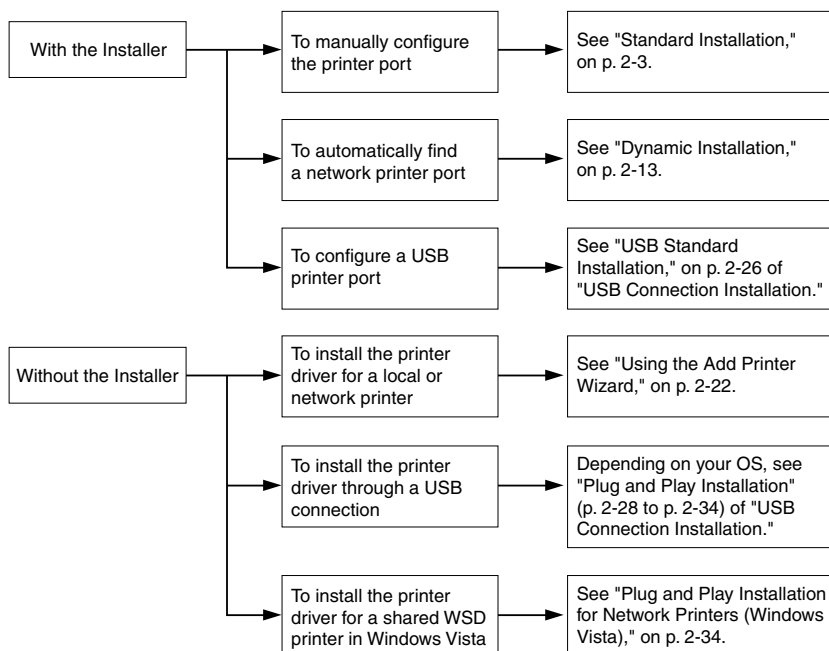

IMPORTANT

- For Windows 2000/XP/Server 2003, log on as the Administrator when you install the driver.
- If the [User Account Control] dialog box appears in Windows Vista, perform the following operations.
 - For Administrator users, click [Allow] or [Continue].
 - For Standard users, enter the required Administrator password → click [OK].
- If the [Windows Security] dialog box appears in Windows Vista, click [Install this driver software anyway].
- If you use the Installer, you can also update existing drivers simultaneously installing a new driver, or update existing drivers without installing a new driver. Canon machines whose printer drivers can be updated are listed in Canon Products Supported by PCL Driver.
- Although the installation process described in this manual refers to the [PCL] folder on the CD-ROM, the CD-ROM you have been supplied with may not have this folder, depending on the printer you are using.
- If you are using the iR1023/1022/1018 and FAX-L3000 series, the installation procedure differs from that describe in this guide. Refer to the appropriate printer guide for installation.

Standard Installation

Standard installation is when you select an existing printer port manually.

You can also install a network printer or set up a shared printer by following the procedure below.

NOTE

- If you are using a printer connected to a network using TCP/IP protocol, you can automatically search for a port to install the printer driver. For instructions, see "Dynamic Installation," on p. 2-13.
- Dynamic installation is not available for the iR C2880-J1, iR C3080-J1, iR C3380-J1, iR C3580-J1, iR C5870-G1, iR 5870C-G1, iR C5880-G1, iR 5880C-G1, iR C6870-G1, iR 6870C-G1, iR C6880-G1, or iR 6880C-G1. For these printers, follow the procedure below to install the printer driver.

1 Insert the Software CD-ROM into the CD-ROM drive → wait for the installation process to start.

For Windows 2000/XP/Server 2003:

If nothing happens, double-click the [My Computer] icon → the CD-ROM drive icon → the [MInst.exe] icon to start the installation process.

For Windows Vista:

If the [AutoPlay] dialog box appears, click [Run MInst.exe].

If Windows Explorer opens, double-click the [MInst.exe] icon.

If nothing happens, on the [Start] (Start) menu, click [Computer] → double-click the CD-ROM drive icon.


If you cannot find the [MInst.exe] icon on your CD-ROM:

1. Double-click the following folders: [PCL] → [uk_eng] → [32BIT].
2. Double-click the [Setup.exe] icon to start the installation process → proceed to step 4.


 NOTE

Depending on the software or the operating system you are using, a screen for selecting the language to be used for the installer may be displayed before installing.

2 On the CD-ROM Setup screen, click [Installation].

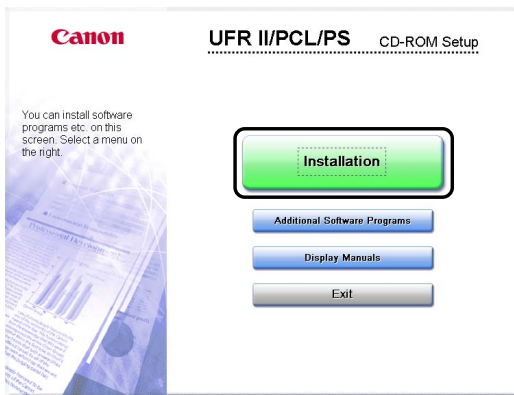

3 Select the PCL Printer Driver from the list → click [Install].

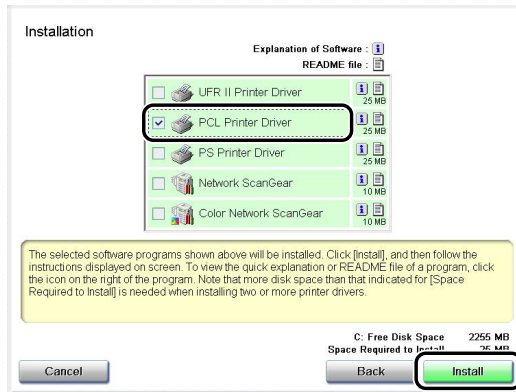


If you select multiple drivers to be installed, the drivers are installed in sequence.



NOTE


- Depending on the printer model you are installing, the options displayed in this screen may vary.
- Depending on the printer model you are installing, the license agreement screen may be displayed after step 3. If so, proceed to step 5 → step 4 → step 6.

4 Click [Next].

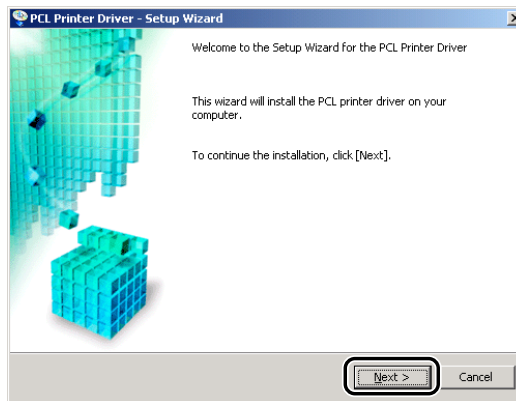

5 Read the license agreement carefully. If you agree to the terms, click [Yes].


6 Select [Manually Set Port to Install] → click [Next].

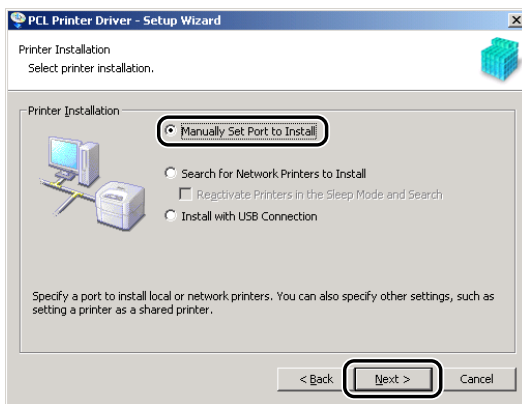


 **NOTE**

If you have installed Canon Driver Information Assist Service and are using an operating system equipped with Windows Firewall, when the following message box is displayed, click [Yes] or [No].


- *If you select [Yes], Windows Firewall will be configured to unblock the connection for Canon Driver Information Assist Service, so that you can set up the printer configuration automatically or use the Job Accounting feature.*
- *If you select [No], you cannot use Canon Driver Information Assist Service.*

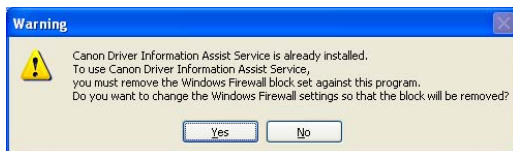

7 Click [Next].

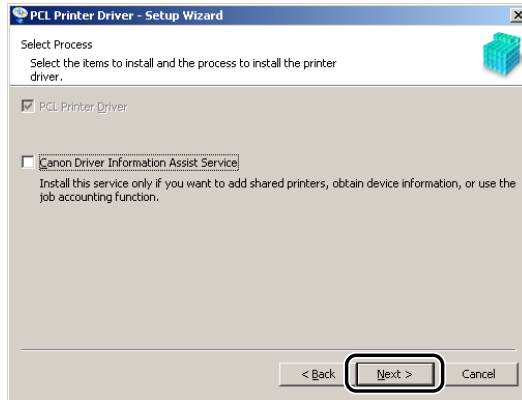

If the required drivers have already been installed using the installer, the following screen is displayed. Select an option under [Process to Install Printer Driver] → click [Next].

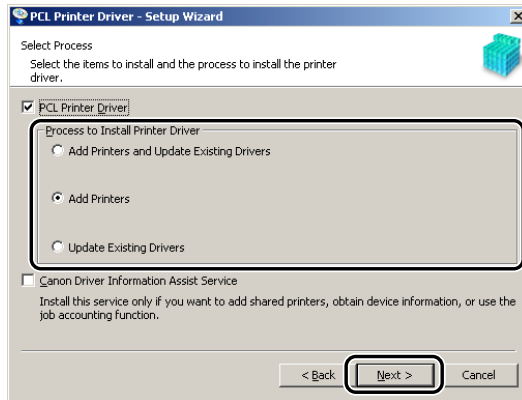


[Process to Install Printer Driver]

- [Add Printers and Update Existing Drivers]: You can install a new driver and update existing drivers simultaneously.
- [Add Printers]: You can add a new driver without affecting existing drivers.
- [Update Existing Drivers]: You can update the existing drivers already installed without having to add a new one. To do this, see "Updating the Existing Printer Drivers," on p. 2-41.


If you want to install the Canon Driver Information Assist Service together with the printer driver, also select [Canon Driver Information Assist Service].

NOTE

- If you are using a shared printer in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC in order to set up the printer configuration automatically or to use the Job Accounting feature.
- If the Canon Driver Information Assist Service is already installed on your computer, [Canon Driver Information Assist Service] does not display.
- If you are using an operating system equipped with Windows Firewall, when the following message box is displayed, click [Yes] or [No].
 - If you select [Yes], Windows Firewall will be configured to unblock the connection for Canon Driver Information Assist Service, so that you can set up the printer configuration automatically or use the Job Accounting feature.
 - If you select [No], you cannot use Canon Driver Information Assist Service.

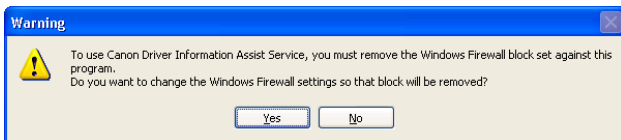

8 Select the printer driver(s) you want to install from [Printer List] → click [Add].

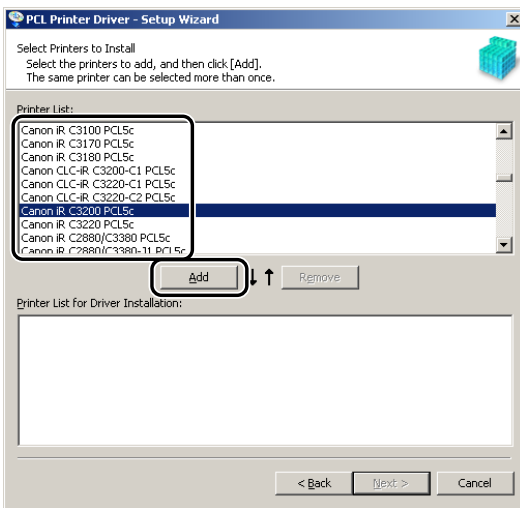


The printer driver(s) you selected is added to [Printer List for Driver Installation].


 **NOTE**

- You can also add a printer driver to [Printer List for Driver Installation] by double-clicking the printer driver under [Printer List].
- To delete a printer driver that you do not want to install from [Printer List for Driver Installation], select the appropriate printer driver → click [Remove].

9 Check that the printer driver(s) you want to install is selected in [Printer List for Driver Installation] → click [Next].

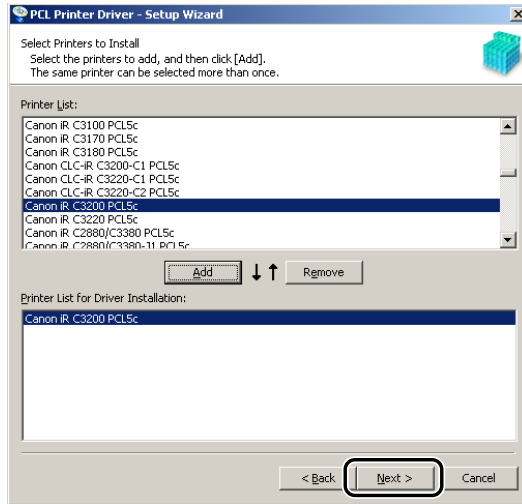


10 Select a port.

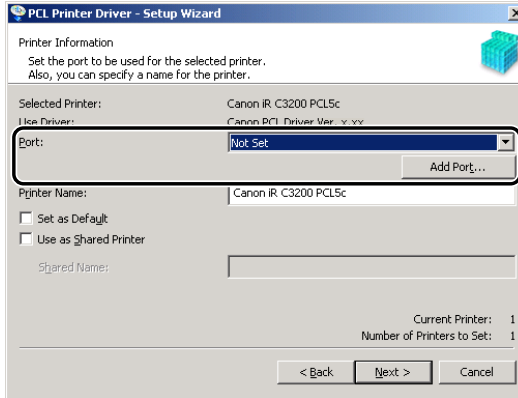

NOTE


If more than one printer driver is selected, this dialog box will reappear to enable selection of different ports for other printer drivers.

- **If you want to set a standard port:**
 - Select the printer port you want to use from [Port].
- **If you want to set a port for a network printer:**
 - Click [Add Port].
 - Select [Network] from [Add Port] dialog box → click [OK].
 - Select the network printer → click [OK].

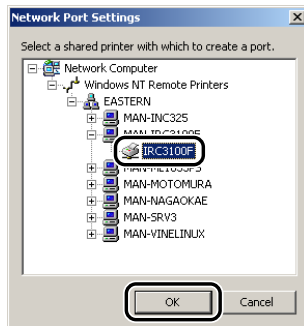

● **If you want to add a port:**


- Click [Add Port].
- Select the printer port you want to add from [Add Port] dialog box → click [OK].

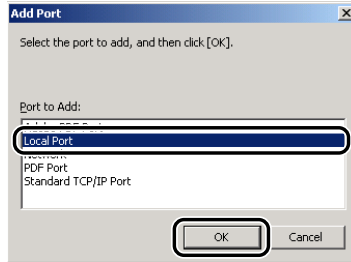

Ports displayed in the [Add Port] dialog box vary depending on the operating system you are using.

- Specify the settings for the port you want to add in the dialog box displayed → click [OK].
The dialog box that is displayed varies according to the port being added.


11 Enter a printer name in [Printer Name] if necessary → select [Set as Default] if you want to set the printer as the default printer → click [Next].

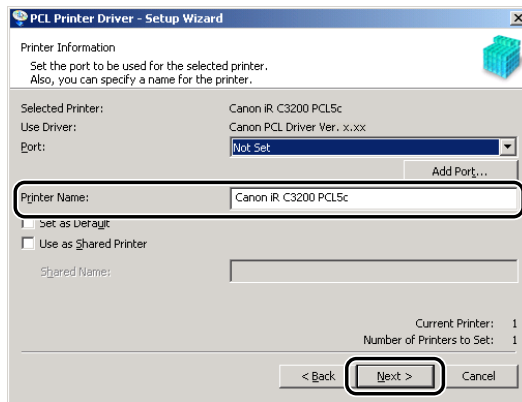

 NOTE


- If you want to specify shared printer settings, or are installing an alternate driver in Windows 2000/XP/Server 2003, select [Use as Shared Printer]. For instructions on how to specify detailed settings for a shared printer, see step 2 of "Alternate Printer Driver (Windows 2000/XP/Server 2003)," on p. 2-21.
- If you have selected [Network] in the [Add Port] dialog box, you cannot set [Printer Name] and [Use as Shared Printer].

12 Verify the installation settings → click [Start].

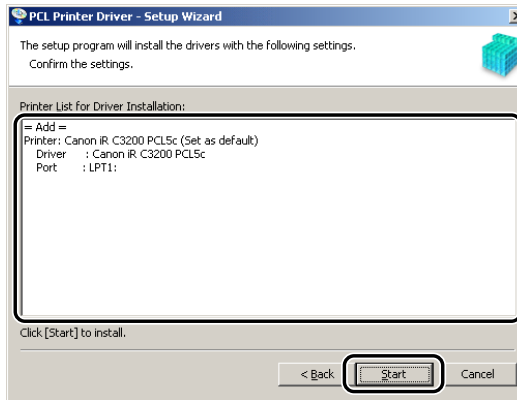

The information shown in the window may differ according to your system parameters.

13 After the files are copied, click [Next].

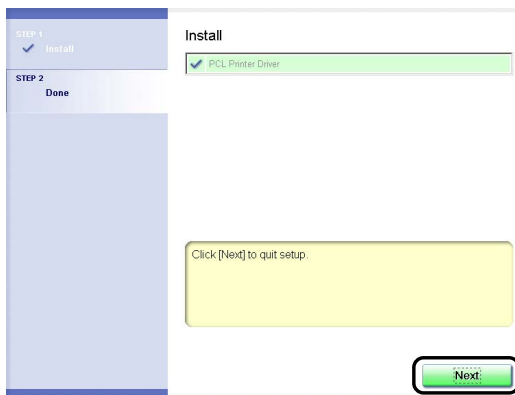

Depending on the printer model you are installing, this screen may not be displayed. If so, proceed to step 14.

14 Click [Restart] or [Exit] to finish the installation.

The printer icon is displayed in the [Printers] folder. The driver is now installed.

Dynamic Installation

If you are using a printer connected to a network using TCP/IP protocol, you can automatically search for its printer port. To install the printer driver by dynamic installation, follow the procedure below.



IMPORTANT

- You can search only for printers in the same subnet as your computer.
- Dynamic installation is not available for the iR C2880-J1, iR C3080-J1, iR C3380-J1, iR C3580-J1, iR C5870-G1, iR 5870C-G1, iR C5880-G1, iR 5880C-G1, iR C6870-G1, iR 6870C-G1, iR C6880-G1, or iR 6880C-G1. Refer to "Standard Installation," on p. 2-3, to install the printer driver.



NOTE

If you are using a local printer or a printer connected to a network using a protocol other than TCP/IP, see "Standard Installation," on p. 2-3.

1 Insert the Software CD-ROM into the CD-ROM drive → wait for the installation process to start.


For Windows 2000/XP/Server 2003:

If nothing happens, double-click the [My Computer] icon → the CD-ROM drive icon → the [MInst.exe] icon to start the installation process.

For Windows Vista:

If the [AutoPlay] dialog box appears, click [Run MInst.exe].

If Windows Explorer opens, double-click the [MInst.exe] icon.

If nothing happens, on the  (Start) menu, click [Computer] → double-click the CD-ROM drive icon.

If you cannot find the [MInst.exe] icon on your CD-ROM:


1. Double-click the following folders: [PCL] → [uk_eng] → [32BIT].
2. Double-click the [Setup.exe] icon to start the installation process → proceed to step 4.




NOTE

Depending on the software or the operating system you are using, a screen for selecting the language to be used for the installer may be displayed before installing.

2 On the CD-ROM Setup screen, click [Installation].

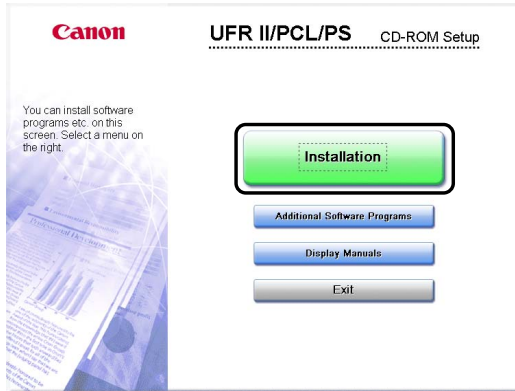

3 Select the PCL Printer Driver from the list → click [Install].

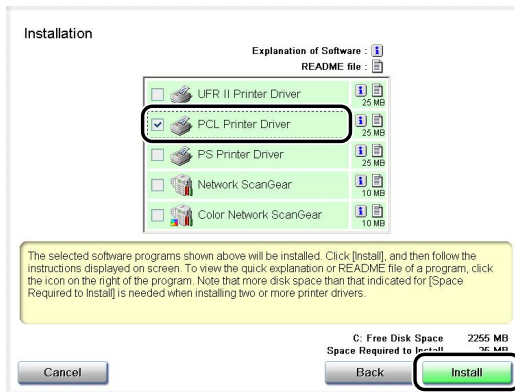


If you select multiple drivers to be installed, the drivers are installed in sequence.

NOTE


- Depending on the printer model you are installing, the options displayed in this screen may vary.
- Depending on the printer model you are installing, the license agreement screen may be displayed after step 3. If so, proceed to step 5 → step 4 → step 6.

4 Click [Next].

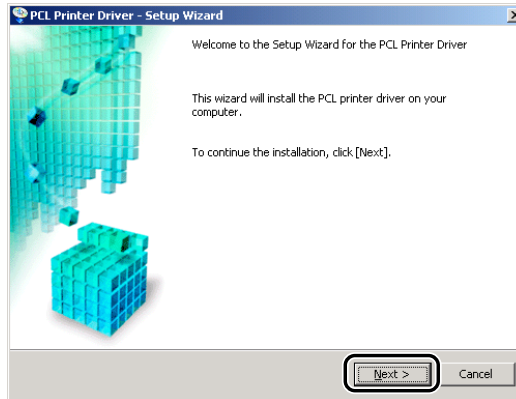



5 Read the license agreement carefully. If you agree to the terms, click [Yes].

6 Select [Search for Network Printers to Install] → click [Next].

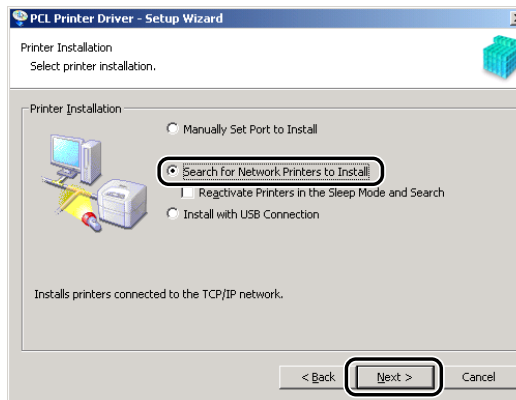


 NOTE

- To search for printers in sleep mode on the network, select [Reactivate Printers in the Sleep Mode and Search].
- If you have installed Canon Driver Information Assist Service and are using an operating system equipped with Windows Firewall, when the following message box is displayed, click [Yes] or [No].
 - If you select [Yes], Windows Firewall will be configured to unblock the connection for Canon Driver Information Assist Service, so that you can set up the printer configuration automatically or use the Job Accounting feature.
 - If you select [No], you cannot use Canon Driver Information Assist Service.

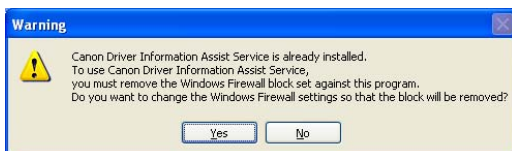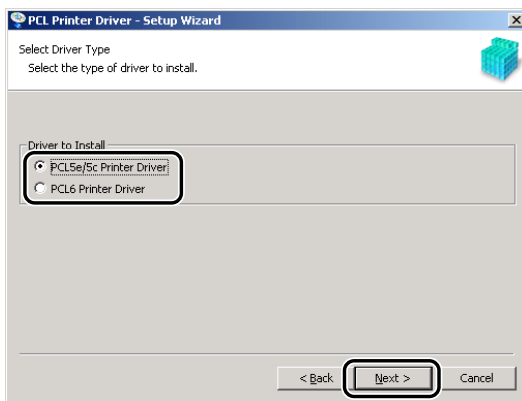
**7** Select [PCL5e/5c Printer Driver] or [PCL6 Printer Driver] → click [Next]. NOTE

Depending on the printer you are using, this dialog box is not displayed. In this case, proceed to step 8.

8 Click [Next].

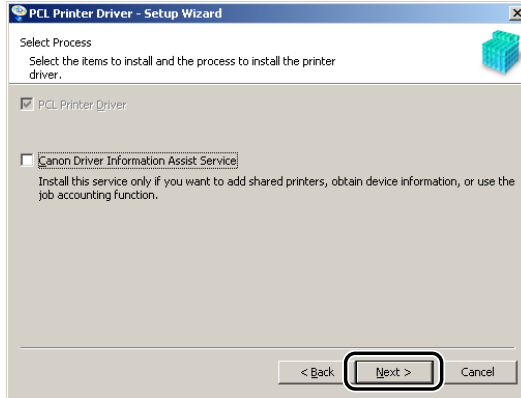

If the required drivers have already been installed using the installer, the following screen is displayed. Select an option under [Process to Install Printer Driver] → click [Next].

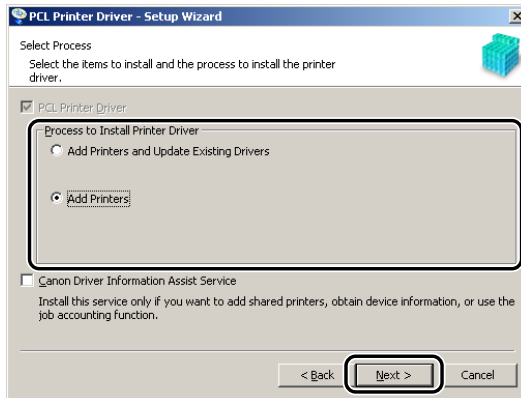


[Process to Install Printer Driver]

- [Add Printers and Update Existing Drivers]: You can install a new driver and update existing drivers simultaneously.
- [Add Printers]: You can add a new driver without affecting existing drivers.


If you want to install the Canon Driver Information Assist Service together with the printer driver, also select [Canon Driver Information Assist Service].

 **NOTE**

- If you are using a shared printer in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC in order to set up the printer configuration automatically or to use the Job Accounting feature.
- If the Canon Driver Information Assist Service is already installed on your computer, [Canon Driver Information Assist Service] does not display.
- If you are using an operating system equipped with Windows Firewall, when the following message box is displayed, click [Yes] or [No].
 - If you select [Yes], Windows Firewall will be configured to unblock the connection for Canon Driver Information Assist Service, so that you can set up the printer configuration automatically or use the Job Accounting feature.
 - If you select [No], you cannot use Canon Driver Information Assist Service.

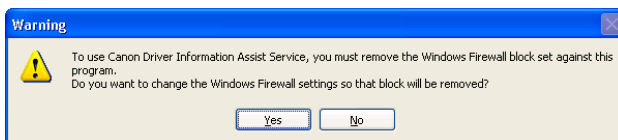

9 Select the printer driver(s) you want to install from [Printer List] → click [Add].

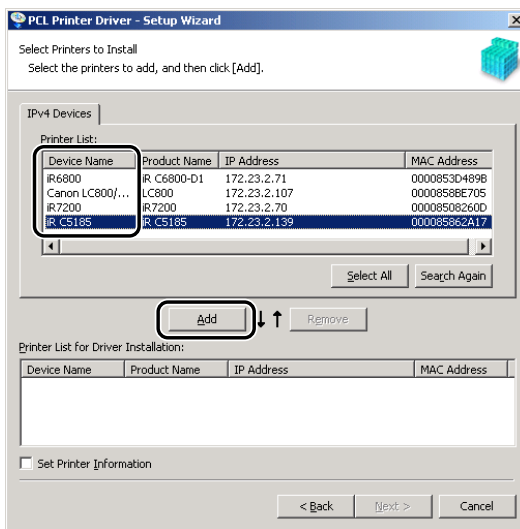

If you want to select all the printer drivers found, click [Select All].


The printer driver(s) you selected is added to [Printer List for Driver Installation].

 **NOTE**

- If you are using Windows Vista, you can switch between tabs for displaying IPv4 and IPv6 devices.
- You can also add a printer driver to [Printer List for Driver Installation] by double-clicking the printer driver under [Printer List].
- To delete a printer driver that you do not want to install from [Printer List for Driver Installation], select the printer driver → click [Remove].


10 Check that the printer driver(s) you want to install is selected in [Printer List for Driver Installation].

11 If you want to change the printer name, or set the printer as the default printer, select [Set Printer Information] → click [Next].

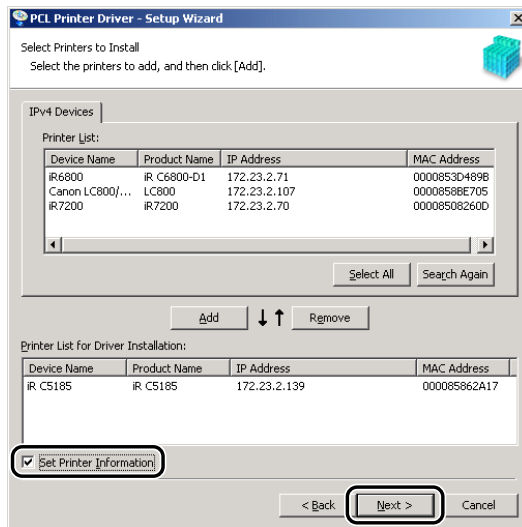

If you do not want to change these settings, click [Next] → skip to step 13.


12 Enter a printer name in [Printer Name], or select [Set as Default] → click [Next].

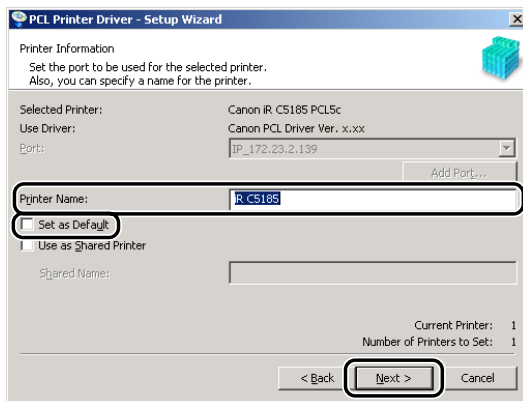

NOTE


If you want to specify shared printer settings, or are installing an alternate driver in Windows 2000/XP/Server 2003, select [Use as Shared Printer]. For instructions on how to specify detailed settings for a shared printer, see step 2 of "Alternate Printer Driver (Windows 2000/XP/Server 2003)," on p. 2-21.

13 Verify the installation settings → click [Start].

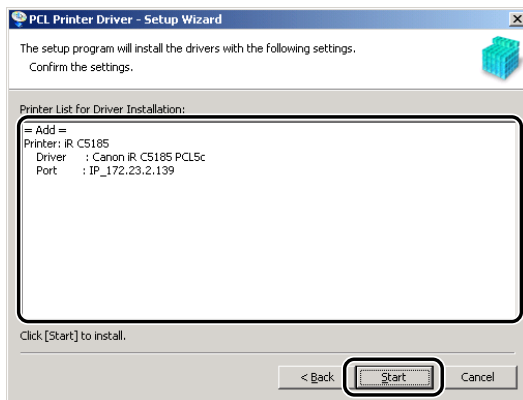

The information shown in the window may differ according to your system parameters.

14 After the files are copied, click [Next].

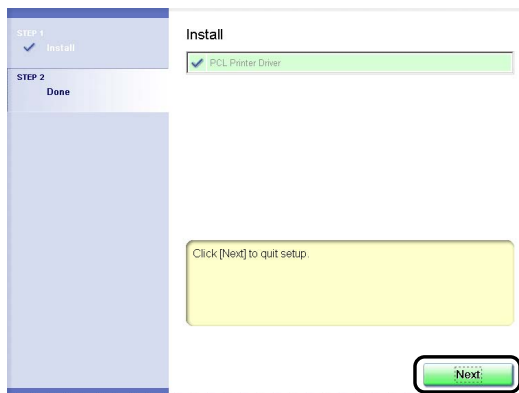

Depending on the printer model you are installing, this screen may not be displayed. If so, proceed to step 15.

15 Click [Restart] or [Exit] to finish the installation.

The printer icon is displayed in the [Printers] folder. The driver is now installed.

Alternate Printer Driver (Windows 2000/XP/Server 2003)


If you are using one or more shared printers in Windows 2000/XP/Server 2003, you can install an alternate printer driver. Installing an alternate printer driver enables you to install a printer driver on a client PC via a network.

To specify settings for the shared printer, follow the procedure below.

1 Start the Installer → follow the instructions in the dialog boxes.

See steps 1 to 10 of "Standard Installation," on p. 2-3.

2 Select [Use as Shared Printer] → enter a share name → click [Next].

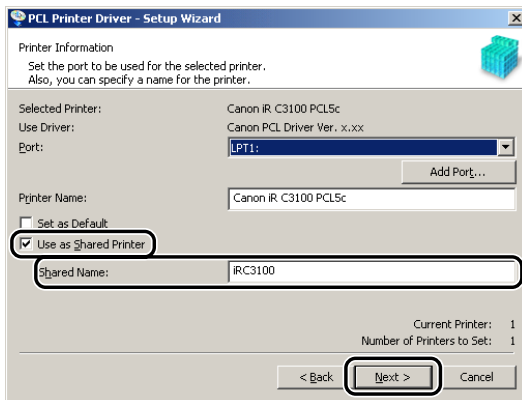

3 Follow the instructions in the dialog or message boxes to complete the installation.

See steps 12 and 14 of "Standard Installation," on p. 2-3.



IMPORTANT

To use the printer driver on the client PC, double-click the shared printer icon for the alternate printer driver on the server PC.

Using the Add Printer Wizard

To install a printer driver from the [Printers] folder in the Windows Control Panel, follow the procedure below.

1 On the [Start] menu, point to [Settings] → click [Printers].



NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the [Start] menu, click [Control Panel] → [Printers].

2 In the [Printers] folder, double-click the [Add Printer] icon (Windows 2000/XP/Server 2003) or click [Add a printer] (Windows Vista) to start the Add Printer Wizard → follow the instructions on the screen to continue the installation.

If you are using the imagePRESS C1, iR C2380, iR C2550, iR C2880, iR C3080, iR C3380, iR C3580, iR C4080, iR C4580, iR C5180, iR C5185, iR C2580, iR C3180, iR 3180C, iR C5880, iR 5880C, iR C6880, iR 6880C, iR5050, iR5055, iR5065, iR5075, iR7105/7095/7086 or LBP5970/LBP5975 as WSD printer, you can install the printer driver in Windows Vista via a network by the procedure below.

● To search for printers in the same subnet as your computer:

- Click [Add a network, wireless or Bluetooth printer] → select the printer you want to install.
- Click [Finish] to finish the installation.

● To search for a printer by IP address:


- Click [Add a local printer].
- Select [Create a new port] → select [Standard TCP/IP Port] from [Type of port].
- Select [Autodetect] or [Web Services Device] from [Device type] → enter the IP address of your printer in [Hostname or IP address] → click [Next].
- Click [Finish] to finish the installation.

NOTE


If you cannot find the WSD printer with the above procedure, it might be recognized as Unknown Device by Windows Vista. In this case, follow the steps below.

1. Open the [Device Manager] tool from [Control Panel].
2. Select [Unknown Device] under [Other Devices] → click [Update Driver Software] from the [Action] menu to start the Update Driver Software Wizard.
3. Click [Browse my computer for driver software] → proceed to step 4.

3 Insert the Software CD-ROM into the CD-ROM drive → click [Have Disk].

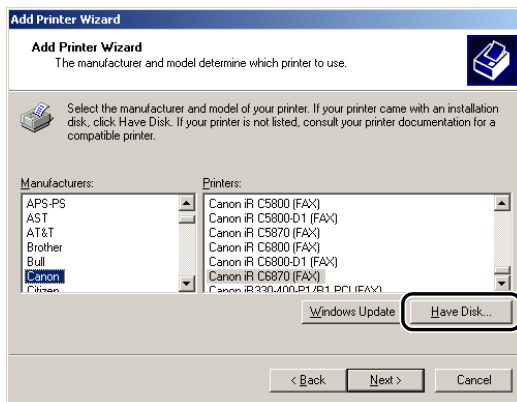

4 Click [Browse] to select the folder of the driver you want to install → click [OK].

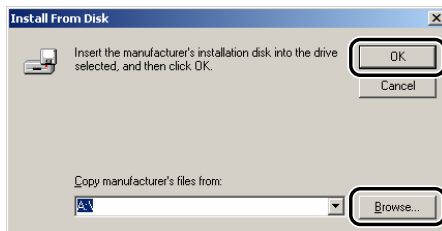


You can select the driver from the following folders on the CD-ROM:

PCL5c/PCL5e: \PCL\uk_eng\32BIT\win2k_vista\pcl5e_5c

PCL6: \PCL\uk_eng\32BIT\win2k_vista\pcl6

5 Select your printer model from [Printers] → click [Next].

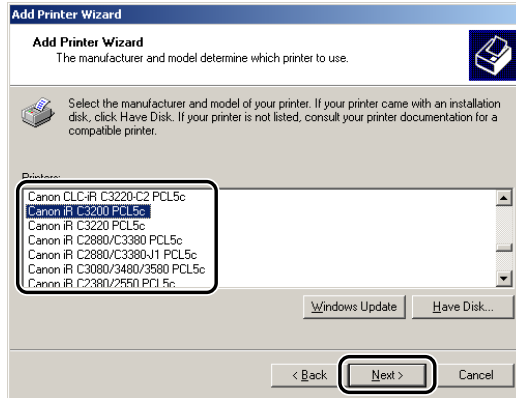

6 Follow the instructions on the screen to continue → click [Finish] to start copying the files.

The printer icon is displayed in the [Printers] folder. The driver is now installed.

USB Connection Installation

To install the printer driver through a USB connection, follow the procedure below.

NOTE

If you use the BIJ1350, BIJ1350D, BIJ2350, imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, iR C2380, iR C2550, iR C2620, iR C2880, iR C3080, iR C3200, iR C3220, iR C3380, iR C3580, iR C4080, iR C4580, iR C5180, iR C5185, iR C2570, iR 2570C, iR C2580, iR C3100, iR 3100C, iR C3170, iR 3170C, iR C3180, iR 3180C, iR C5800, iR 5800C, iR C5870, iR 5870C, iR C5880, iR 5880C, iR C6800, iR 6800C, iR C6870, iR 6870C, iR C6880, iR 6880C, iR105+, iR1023/1022/1018, iR2000/1600, iR2010/1610, iR2016, iR2018, iR2020, iR2030/2025/2022, iR2230, iR2830, iR2870/2270, iR3025, iR3030, iR3035, iR3045, iR3530, iR4530, iR4570/3570, iR5050, iR5050-S2, iR5055, iR5065, iR5075, iR6570/5570, iR7105/7095/7086, iR8070, iR85+, iR9070, FAX-L2000 series, FAX-L3000 series, LBP-2000, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, LBP5970/LBP5975, or MF7170i, you can print in a USB environment.

USB Standard Installation


IMPORTANT

- Before installing a printer driver through a USB connection, turn the printer OFF. Turn the power back ON only if the instruction to do so appears on the screen during installation.
- In a USB environment, you cannot set up the printer configuration automatically or use the Job Accounting feature.
- To print with the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, iR C2380, iR C2550, iR C2620, iR C2880, iR C3080, iR C3200, iR C3220, iR C3380, iR C3580, iR C4080, iR C4580, iR C5180, iR C5185, iR C2570, iR 2570C, iR C2580, iR C3100, iR 3100C, iR C3170, iR 3170C, iR C3180, iR 3180C, iR C5800, iR 5800C, iR C5870, iR 5870C, iR C5880, iR 5880C, iR C6800, iR 6800C, iR C6870, iR 6870C, iR C6880, iR 6880C, or LBP5970/LBP5975 with a USB connection, the USB interface board (optional) is required.


1 Start the Installer → follow the instructions in the dialog boxes.

See steps 1 to 5 of "Standard Installation," on p. 2-3.

2 Select [Install with USB Connection] → click [Next].

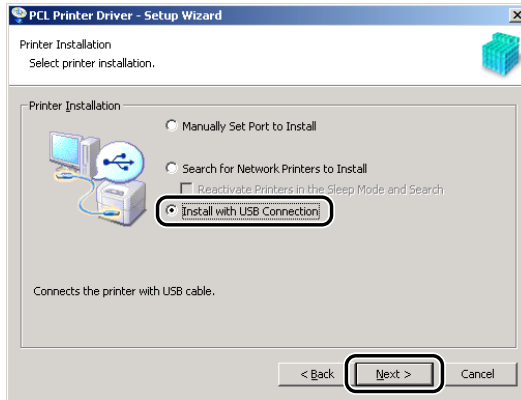

3 Select either [PCL5e/5c Printer Driver] or [PCL6 Printer Driver] → click [Next].

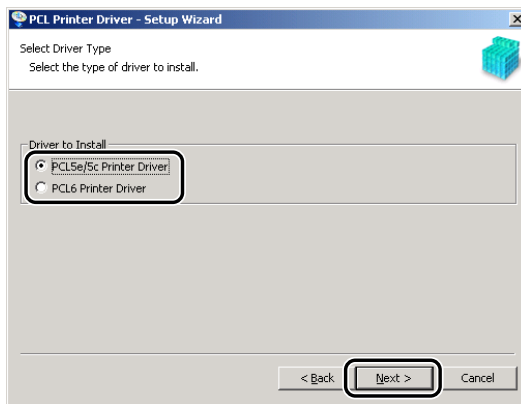


NOTE

Depending on the printer you are using, this dialog box is not displayed. In this case, proceed to step 4.

4 Click [Yes] in the message box to proceed.

File copying starts.

- 5** When the message box below appears after the files are copied, connect the USB cable, and then turn the printer ON.

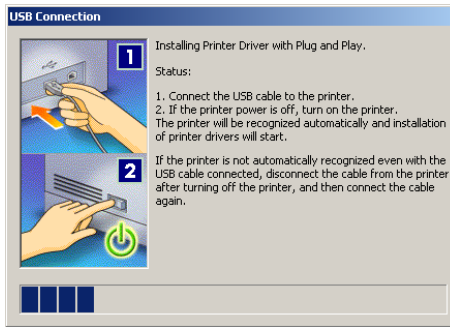

 **NOTE**

If you are using Windows XP, select [Install Software Automatically (Recommended)] in the dialog box displayed next → click [Next].


- 6** Click [Exit] to finish the installation.

The printer icon is displayed in the [Printers] folder. The driver is now installed.


Plug and Play Installation (Windows 2000)

- 1** Connect the cable from the printer's USB port to the PC's USB port, and then turn the printer ON.
- 2** Start Windows, and then insert the Software CD-ROM into the CD-ROM drive.
The Found New Hardware Wizard starts.
- 3** In the first dialog box of the Found New Hardware Wizard, click [Next].

4 Select [Search for a suitable driver for my device (recommended)] → click [Next].

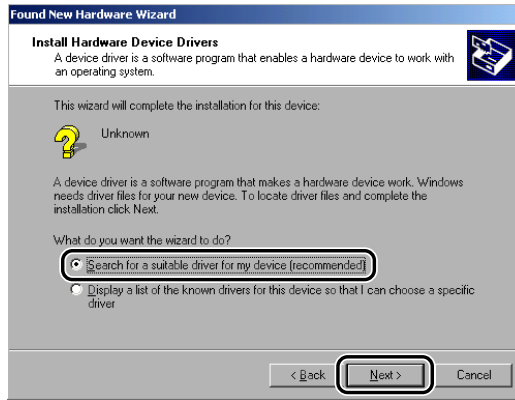

5 Select [Specify a location] → click [Next].

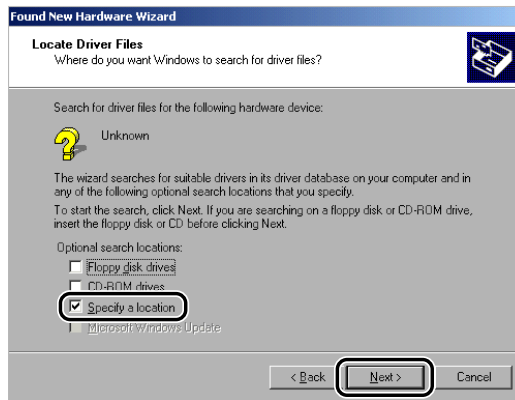

- 6 Click **[Browse]** to select the folder containing the driver you want to install → click **[OK]**.



You can select the driver from the following folders on the CD-ROM:

PCL5c/PCL5e: \PCL\uk_eng\32BIT\win2k_vista\pcl5e_5c

PCL6: \PCL\uk_eng\32BIT\win2k_vista\pcl6

- 7 Follow the instructions on the screen → click **[Finish]** after the files are copied.


The USB driver and the printer driver are now installed.

Plug and Play Installation (Windows XP/Server 2003)

- 1 Connect the cable from the printer's USB port to the PC's USB port, and then turn the printer ON.
- 2 Start Windows, and then insert the Software CD-ROM into the CD-ROM drive.

The Found New Hardware Wizard starts.

- 3 Confirm that [Install the software automatically (Recommended)] is selected → click [Next].

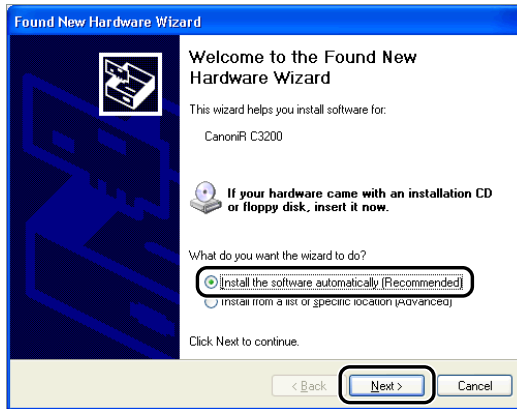

Windows searches for the driver automatically, and then starts the installation.

- 4 Click [Finish] after the files are copied.

The USB driver and the printer driver are now installed.

Plug and Play Installation (Windows Vista)



IMPORTANT

If the [User Account Control] dialog box appears during installation, perform the following operations.


- For Administrator users, click [Allow] or [Continue].
- For Standard users, enter the required Administrator password → click [OK].

- 1 Connect the cable from the printer's USB port to the PC's USB port, and then turn the printer ON.

- 2 Start Windows.


The Found New Hardware Wizard starts.

3 Click [Locate and install driver software (recommended)].

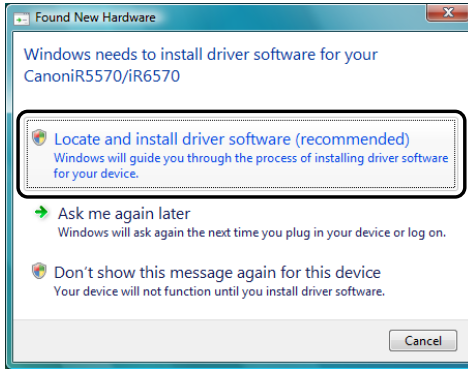


NOTE

If the following screen appears, click [Don't search online].

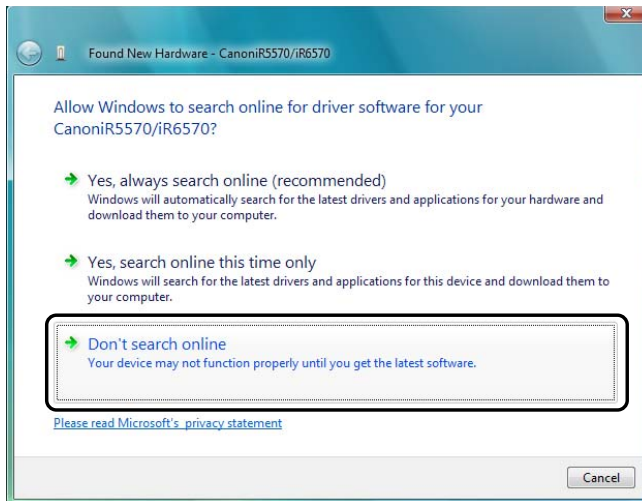


4 Insert the Software CD-ROM into the CD-ROM drive.

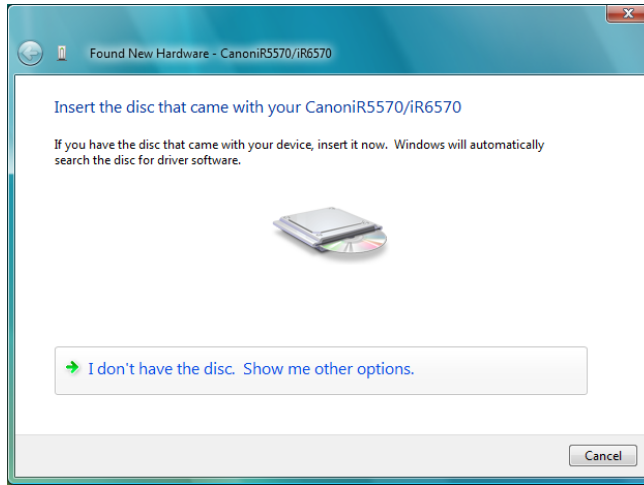

Windows searches for the driver automatically.

5 Select the printer driver you want to install → click [Next].

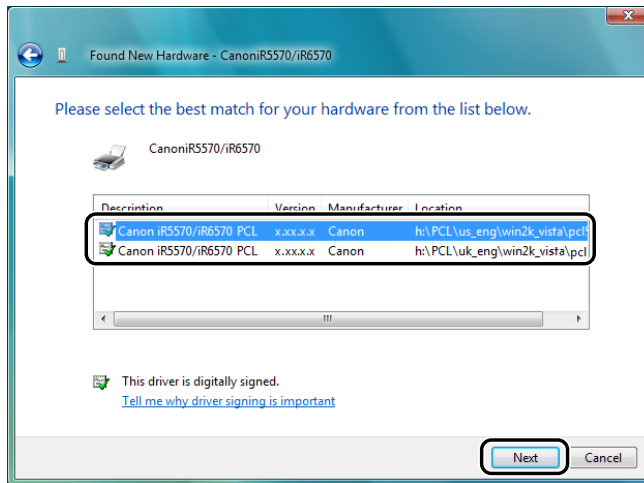

You can select the driver from the following folders on the CD-ROM:

PCL5c/PCL5e: \PCL\uk_eng\32BIT\win2k_vista\pcl5e_5c

PCL6: \PCL\uk_eng\32BIT\win2k_vista\pcl6

 **NOTE**

If the [Windows Security] dialog box appears, click [Install this driver software anyway].

6 Click [Close].

The USB driver and the printer driver are now installed.


Plug and Play Installation for Network Printers (Windows Vista)

You can easily discover a shared WSD printer and install the printer driver for it from the Network Explorer in Windows Vista.


 **IMPORTANT**

- If you use the imagePRESS C1, iR C2380, iR C2550, iR C2880, iR C3080, iR C3380, iR C3580, iR C4080, iR C4580, iR C5180, iR C5185, iR C2580, iR C3180, iR 3180C, iR C5880, iR 5880C, iR C6880, iR 6880C, iR5050, iR5055, iR5065, iR5075, iR7105/7095/7086, or LBP5970/LBP5975, you can use WSD (Web Services for Devices) as the print application.
- [PDL Selection (PnP)] must be set to [PCL] from the printer's control panel or the Remote UI. For more information on the PDL Selection (PnP) settings, see the Reference Guide or the Remote UI Guide.
- You cannot install multiple printer drivers for the same printer using WSD. Uninstall the existing printer driver from the [Printers] folder first, then install the new printer driver. If you want to install multiple drivers for the same printer, use a standard TCP/IP port.
- If the [User Account Control] dialog box appears during installation, perform the following operations.
 - For Administrator users, click [Allow] or [Continue].
 - For Standard users, enter the required Administrator password → click [OK].

1 On the [Windows logo] (Start) menu, click [Network].

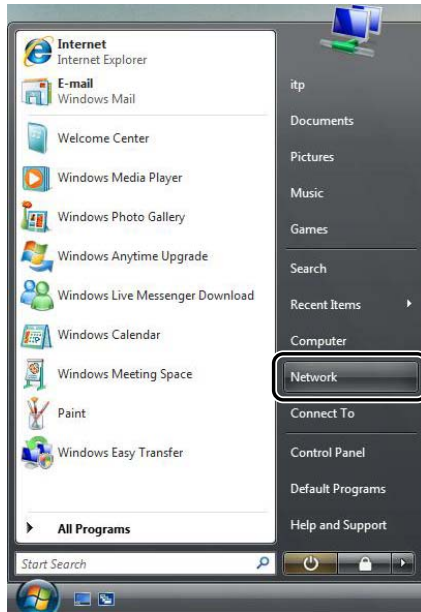

2 In the [Network] folder, right-click the printer icon for your printer → click [Install].

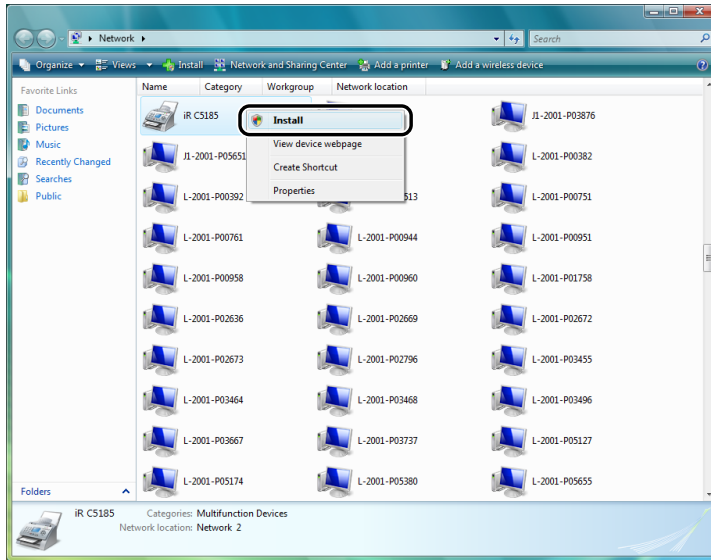

The printer icon is displayed in the [Printers] folder. The driver is now installed.

NOTE

If the printer driver was not found on the server PC, the Found New Hardware wizard starts. In this case, follow the steps below.

1. Click [Locate and install driver software (recommended)].
2. Click [Don't search online].
3. Click [I don't have the disc. Show me other options.].
4. Click [Browse my computer for driver software (advanced)].
5. Insert the Software CD-ROM into the CD-ROM drive → click [Browse] to select the driver from the following folders on the CD-ROM → click [Next].
 - PCL5c/PCL5e: \PCL\uk_eng\32BIT\win2k_vista\pcl5e_5c
 - PCL6: \PCL\uk_eng\32BIT\win2k_vista\pcl6
6. If the [Windows Security] dialog box appears, click [Install this driver software anyway].
7. Click [Close] to finish the installation.

Installing the Canon Driver Information Assist Service

After installing the printer driver, you can set up the printer configuration automatically and use the Job Accounting feature. If you are using a shared printer in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC.

If the software is not installed in your computer, follow the procedure below to install it.

1 Insert the Software CD-ROM into the CD-ROM drive → wait for the installation process to start.


For Windows 2000/XP/Server 2003:

If nothing happens, double-click the [My Computer] icon → the CD-ROM drive icon → the [MInst.exe] icon to start the installation process.

For Windows Vista:

If the [AutoPlay] dialog box appears, click [Run MInst.exe].

If Windows Explorer opens, double-click the [MInst.exe] icon.

If nothing happens, on the  (Start) menu, click [Computer] → double-click the CD-ROM drive icon.

If you cannot find the [MInst.exe] icon on your CD-ROM:


1. Double-click the following folders: [PCL] → [uk_eng] → [32BIT].
2. Double-click the [Setup.exe] icon to start the installation process → proceed to step 4.




NOTE

Depending on the software or the operating system you are using, a screen for selecting the language to be used for the installer may be displayed before installing.

2 On the CD-ROM Setup screen, click [Installation].

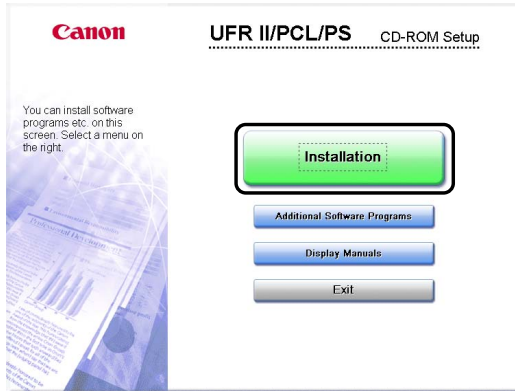

3 Select the PCL Printer Driver from the list → click [Install].

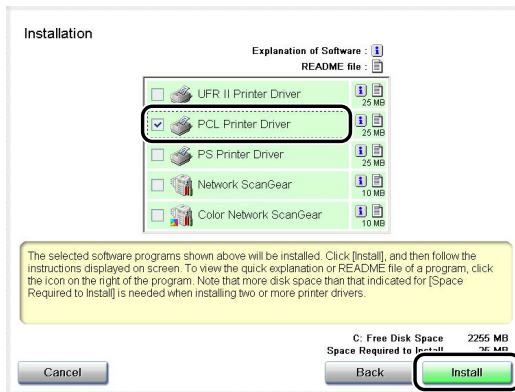

If you select multiple drivers to be installed, the drivers are installed in sequence.

NOTE


- Depending on the printer model you are installing, the options displayed in this screen may vary.
- Depending on the printer model you are installing, the license agreement screen may be displayed after step 3. If so, proceed to step 5 → step 4 → step 6.

4 Click [Next].




5 Read the license agreement carefully. If you agree to the terms, click [Yes].

6 Select [Manually Set Port to Install] → click [Next].

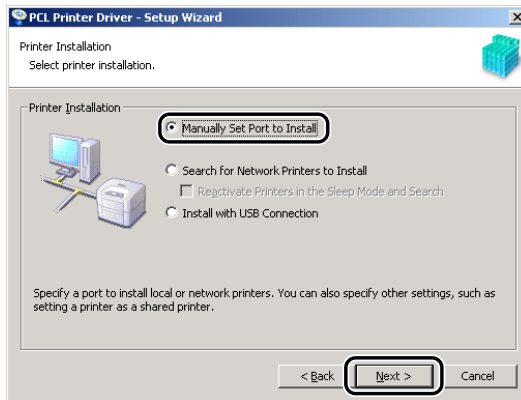


7 Select [Canon Driver Information Assist Service] → click [Next].

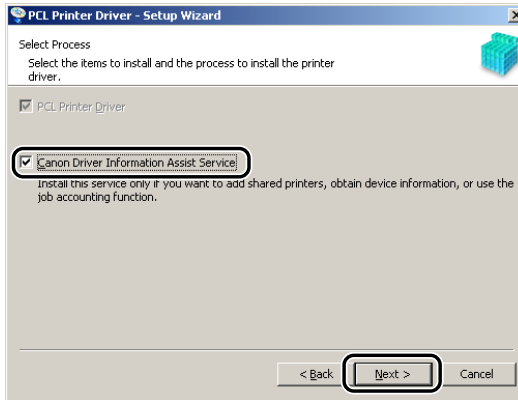


NOTE

If you are using an operating system equipped with Windows Firewall, when the following message box is displayed, click [Yes] or [No].

- *If you select [Yes], Windows Firewall will be configured to unblock the connection for Canon Driver Information Assist Service, so that you can set up the printer configuration automatically or use the Job Accounting feature.*
- *If you select [No], you cannot use Canon Driver Information Assist Service.*

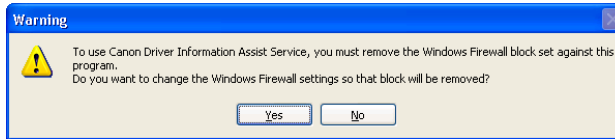

8 After the files are copied, click [Next].

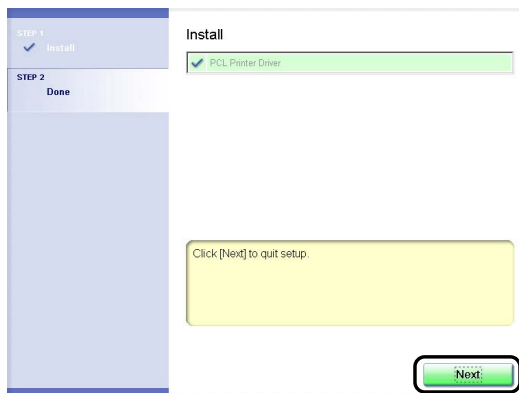

Depending on the printer model you are installing, this screen may not be displayed. If so, proceed to step 9.

9 Click [Restart] or [Exit] to finish the installation.

The Canon Driver Information Assist Service is now installed.

Updating the Existing Printer Drivers

IMPORTANT

- Canon machines whose printer drivers can be updated using this version of the driver are listed in *Canon Products Supported by PCL Driver*.
- If you are using the previous version of the PCL5c/PCL5e printer driver v8.15 or PCL6 printer driver v6.15 for the iR C2880-J1, iR C3380-J1, iR C5870-G1, iR 5870C-G1, iR C6870-G1, or iR 6870C-G1, updating is not available. Uninstall the older version of the printer driver as described in "Uninstalling the Printer Driver," on p. 2-47, and install the new printer driver as described in "Standard Installation," on p. 2-3.

Using the Installer

If you use the Installer to install new printer drivers, the Installer updates the existing ones at the same time that the new drivers are installed.

You can also update the existing drivers already installed without having to add a new driver by following the procedure below.


 NOTE

You can also update an old version of the alternate printer driver simultaneously.


1 Start the Installer → follow the instructions in the dialog boxes.

See steps 1 to 6 of "Standard Installation," on p. 2-3.

2 Select [PCL Printer Driver] → select [Update Existing Drivers] → click [Next].

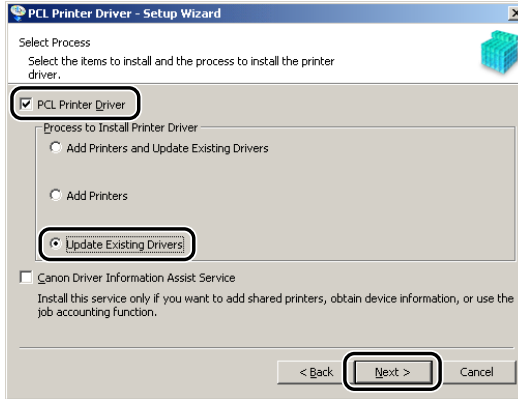

3 Verify the installation settings → click [Start].

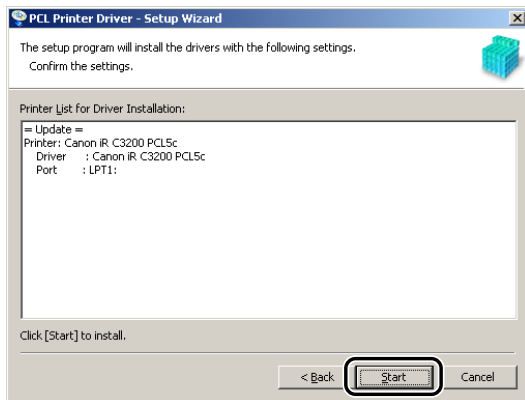

4 After the files are copied, click [Exit] to finish the installation.

Restart your computer when a message is displayed prompting you to do so.

The printer drivers already installed are now updated.



IMPORTANT

To use the updated alternate printer driver on the client PC, first uninstall the current printer driver → double-click the shared printer icon for the updated alternate printer driver on the server PC.

Using the Add Printer Wizard

1 Insert the Software CD-ROM into the CD-ROM drive.


2 On the [Start] menu, point to [Settings] → click [Printers].




NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the [Start] menu, click [Control Panel] → [Printers].

- 3** In the [Printers] folder, right-click the printer icon for your printer → click [Properties].
- 4** Click the [Advanced] tab.
- 5** Click [New Driver] → follow the instructions on the screen.

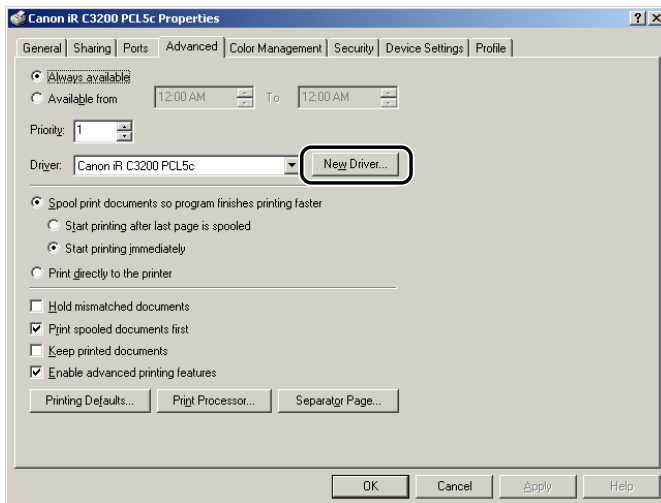

- 6 Click [Have Disk] to specify the driver path on the CD-ROM → follow the instructions on the screen.

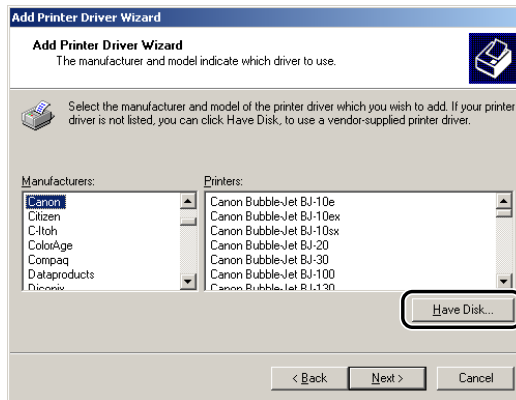

- 7 Repeat steps 1 to 6 for all other existing drivers.
- 8 Restart the computer.
- 9 Check the printer configuration settings in the [Device Settings] sheet, and then reconfigure them if they have been changed.

**NOTE**

If you are using a shared printer in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC in order to use the Job Accounting feature. For instructions on how to install the Canon Driver Information Assist Service, see "Installing the Canon Driver Information Assist Service," on p. 2-37.

Updating the Alternate Printer Driver (Windows 2000/XP/ Server 2003)

If you use a shared printer on a network, and an alternate printer driver is installed on the server, the alternate printer driver is updated simultaneously when you install a new driver with the Installer. To update the alternate printer driver manually without using the Installer, follow the procedure below.

2


1 On the [Start] menu, point to [Settings] → click [Printers].

 **NOTE**

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].

2 Click the [Server Properties] on the [File] menu to open the [Print Server Properties] dialog box → click the [Drivers] tab.

3 Select the alternate printer driver you want to update → click [Update] (Windows 2000), [Replace] (Windows XP), or [Reinstall] (Windows Server 2003).

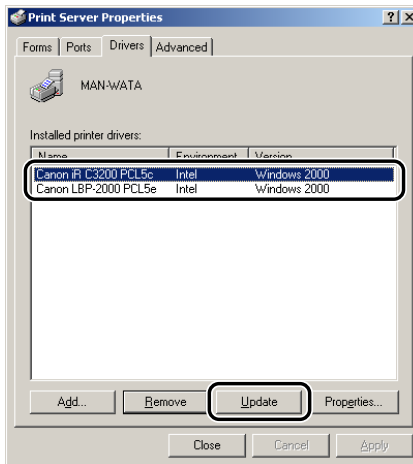

4 When a message appears prompting you to insert the CD-ROM, insert the Software CD-ROM into the CD-ROM drive → click [OK].

5 Click [Browse] to specify the driver path on the CD-ROM → click [OK].

The alternate printer driver is updated.



IMPORTANT

To use the updated printer driver on the client PC, first uninstall the current printer driver → double-click the shared printer icon for the updated alternate printer driver on the server PC.

Uninstalling the Printer Driver

It is recommended that you use the Uninstaller to uninstall an unnecessary driver.




NOTE

To uninstall a driver for a WSD printer, delete it from the [Printers] folder.

1 On the [Start] menu, point to [Programs] (Windows 2000/XP/Server 2003) or [All Programs] (Windows Vista) → [Canon Printer Uninstaller] → click [PCL Printer Driver Uninstaller].


- 2** In the [Delete Printer] dialog box, select the printer driver you want to delete.

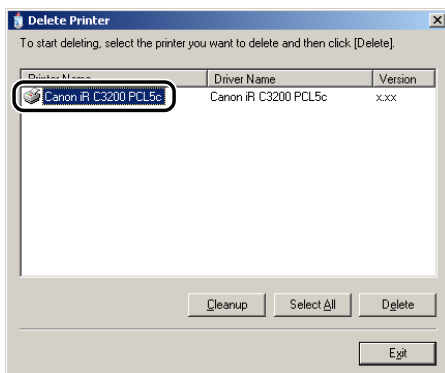


 **NOTE**

If you click [Cleanup], all the files and registry information related to the selected driver are deleted. Click [Delete] to perform a normal uninstallation of the driver.

- 3** Click [Delete].
- 4** Click [Yes] to confirm the deletion.

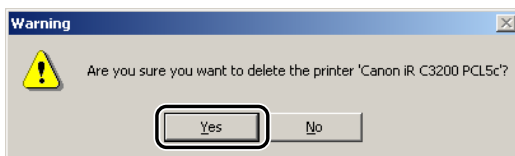

5 Click [Exit] in the [Delete Printer] dialog box.

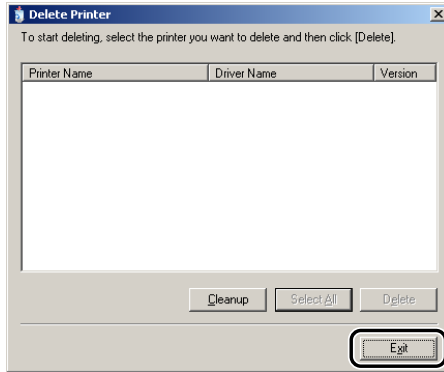

NOTE

You can also start the Uninstaller from the Software CD-ROM. To do so, double-click the [Uninstal.exe] icon in the following folder: \PCL\uk_eng\32BIT\misc.

Setting Up the Printer Configuration

In order to use the functions of an optional unit attached to the printer, you need to specify the paper source options, output options, and other options in the printer driver, by setting up the printer configuration.

The printer configuration can be set up automatically while installing the driver, depending on the port selected for the machine. If the machine cannot be configured during the installation, follow the procedure below. There are two methods for setting up the printer configuration: automatic and manual.



IMPORTANT

For the iR400, GP405/GP300, and GP605/GP605P/GP555, the printer configuration cannot be set up automatically while installing the driver. Follow the procedure below to set up the printer configuration after the installation.

Configuring Automatically

If your printer is connected to a network, you can set up the printer configuration automatically.



IMPORTANT

- *If you are using a shared printer in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC in order to set up the printer configuration automatically. (See "Installing the Canon Driver Information Assist Service," on p. 2-37.)*
- *If you are using a local printer (connected to an LPT port, USB port, etc.), you cannot set up the printer configuration automatically.*
- *For the iR400, GP405/GP300, and GP605/GP605P/GP555, one of the following environments is required:*
 - *Novell NetWare IPX/SPX Client Software needs to be installed in your PC to use IPX/SPX as the protocol.*
 - *TCP/IP Protocol provided by Windows needs to be installed in your PC to use TCP/IP as the protocol.*


1 On the [Start] menu, point to [Settings] → click [Printers].



NOTE


- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the [Start] menu, click [Control Panel] → [Printers].

2 In the [Printers] folder, right-click the printer icon for your printer → click [Properties].

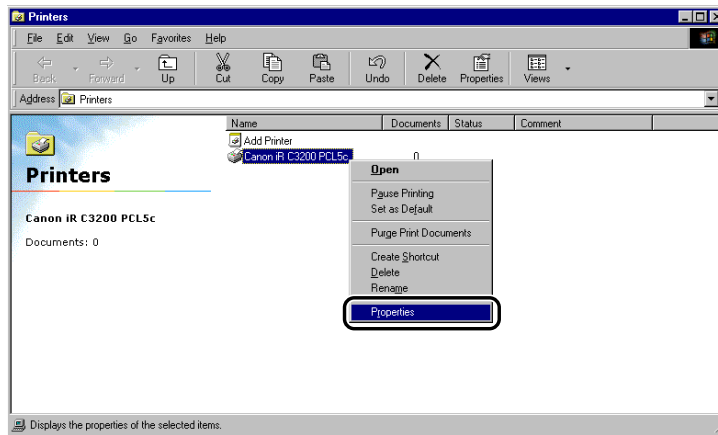

3 In the printer properties dialog box, click the [Device Settings] tab.

The [Device Settings] sheet is displayed.

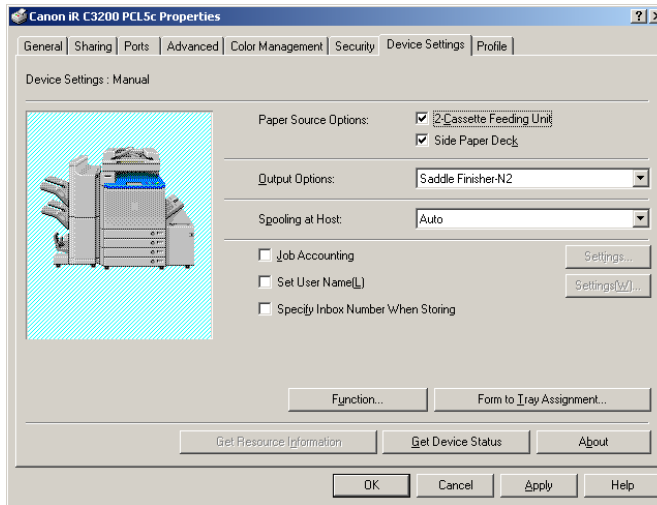

4 Click [Get Device Status].

The detected information is displayed in the [Device Settings] sheet.

5 Click [Yes] in the message box.

6 Click [OK].

If no information is detected, proceed to "Configuring Manually."


Configuring Manually

If you cannot set up the configuration automatically, specify the options manually in the [Device Settings] sheet.


1 On the [Start] menu, point to [Settings] → click [Printers].



NOTE


- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the  (Start) menu, click [Control Panel] → [Printers].

2 In the [Printers] folder, right-click the printer icon for your printer → click [Properties].

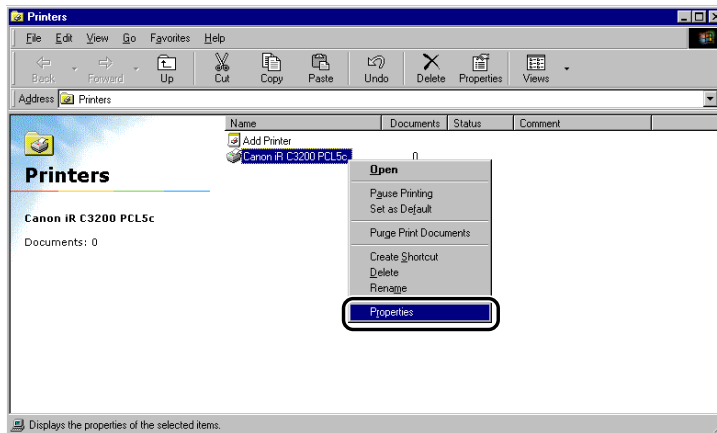

3 In the printer properties dialog box, click the [Device Settings] tab.

The [Device Settings] sheet is displayed.

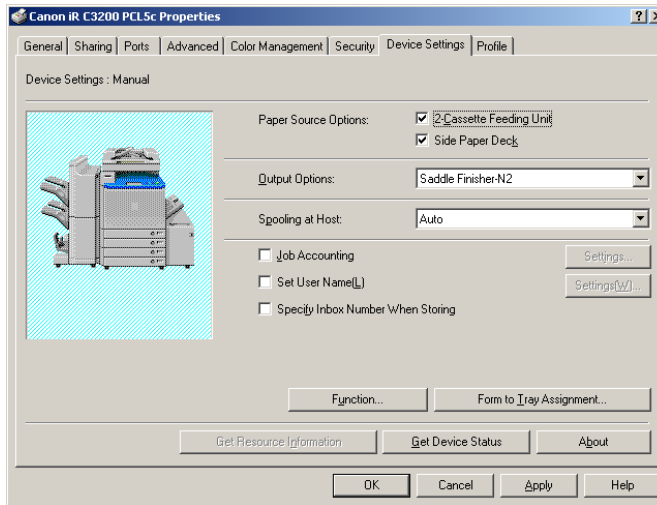

4 Specify the paper source, output, and other options installed in the printer manually.

5 Click [OK].

Configuring the Device Function Settings


If you cannot set up the printer configuration automatically (see "Setting Up the Printer Configuration," on p. 2-50), you need to specify the device functions manually.

Configuring the Controller Version

NOTE

For the imagePRESS C1, imagePRESS C7000VP, iR C2620, iR C2880, iR C3200, iR C3200-C1, iR C3220, iR C3380, iR C4080, iR C4080-H1, CLC4040-H1, iR C4580, iR C4580-H1, iR C5180, iR C5180-H1, CLC5151-H1, iR C5185-H1, iR C2570, iR 2570C, iR C3100, iR 3100C, iR C3170, iR 3170C, iR C5800, iR 5800C, iR C6800, iR 6800C, iR105, iR105-M1, iR105-M2, iR105+, iR2230, iR2830, iR2870/2270, iR3300/2800/2200, iR3300i/2200i, iR3530, iR4530, iR4570/3570, iR6000i/5000i, iR5055, iR5055-S2, iR5065, iR5065-S2, iR5075, iR5075-S2, iR7105/7095/7086, iR7105/7095/7086-S1, iR7105/7095/7086-S2, iR7200, iR7200-M1, iR7200-M2, iR8070, iR85, iR85-M1, iR85-M2, iR85+, iR8500, iR8500-M1, iR8500-M2, and iR9070, the available functions vary depending on the version of the controller for your printer. The controller version must be configured in order to use the supported functions.

1 Print the Configuration Page.

- On the printer control panel, press .
- Press [Report Settings] → [Printer] under <Print List>.
- Press [PCL] → [Configuration Page] → [Yes].


NOTE

- The procedure of printing the Configuration Page differs depending on the model of the printer you are using.
- The Controller Function ID and Function Version may not print out depending on the model of the printer you are using.

2 Confirm the Controller Function ID and Function Version printed on the Configuration Page.

3 On the [Start] menu, point to [Settings] → click [Printers].

NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the  (Start) menu, click [Control Panel] → [Printers].


4 In the [Printers] folder, right-click the printer icon for your printer → click [Properties].

5 In the printer properties dialog box, click the [Device Settings] tab.

6 Click [Function].


The [Device Function Settings] dialog box opens.

7 Specify the Function Version confirmed in step 2.

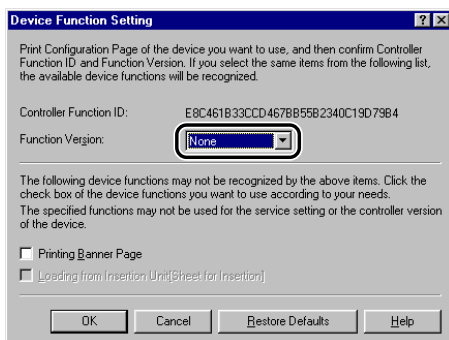

If the Controller Function ID and Function Version are not printed on the Configuration Page, select [None] from [Function Version].

8 Select the functions you want to use.

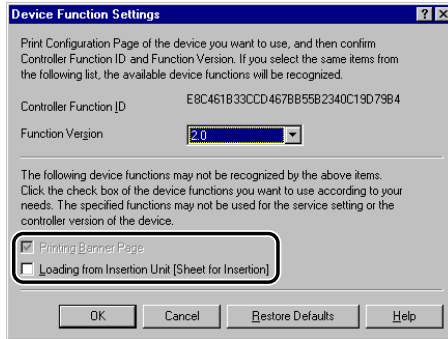

NOTE

Depending on the corresponding function settings and controller version of your printer, some functions may not be available.

9 Click [OK].

The [Device Function Settings] dialog box closes.

10 Click [OK].

The functions you selected in step 8 become available in the printer properties dialog box.

Configuring the Device Functions


NOTE

For the imagePRESS C6000, imagePRESS C6000VP, iR105+ -M3, iR5050, iR5050-S2, iR8070-M3, iR8070-S1, iR85+ -M3, and iR9070-M3, you can enable the device functions manually, according to your needs. To perform this operation, the corresponding function settings must be enabled on the printer.

2

1 On the [Start] menu, point to [Settings] → click [Printers].

NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the  (Start) menu, click [Control Panel] → [Printers].


2 In the [Printers] folder, right-click the printer icon for your printer → click [Properties].

3 In the printer properties dialog box, click the [Device Settings] tab.

4 Click [Function].

The [Device Function Settings] dialog box opens.

5 Select the functions you want to use.

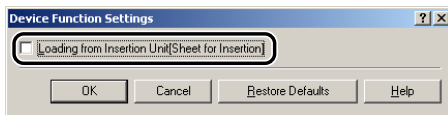

6 Click [OK].


The [Device Function Settings] dialog box closes.

7 Click [OK].

The functions you selected in step 5 become available in the printer properties dialog box.

Printing a Document

To print a document, follow the procedure below.

- 1** In the application software, with the document open, select [Print] to print your document.
 - 2** In the [Print] dialog box, select your printer from [Name] → click [Properties].
The printer properties dialog box opens.
 - 3** Specify the various print settings in the printer properties dialog box. To switch between sheets, click the tabs for the [Page Setup], [Finishing], [Paper Source], and [Quality] sheets.
You can also specify the various print settings by selecting a profile.
-  **NOTE**
For more information on using the print options, see Chapter 3, "Basic Print Options," or the Online Help.
- 4** After all the print settings are specified, click [OK] in the printer properties dialog box.
 - 5** Click [OK] in the [Print] dialog box.
The document is printed with the settings you specified.

3

CHAPTER

Basic Print Options

This chapter describes instructions for specifying the various basic settings for printing a document. Note that, depending on your printer model, some print options may be unavailable.

Accessing the Printer Properties Dialog Box	3-2
Accessing the Printer Properties Dialog Box from Application Software	3-2
Accessing the Printing Preferences Dialog Box from the Printers Folder	3-3
Accessing the Printer Properties Dialog Box from the Printers Folder	3-4
Using Profiles for Printing	3-5
What Is a Profile?	3-5
Selecting a Profile for Printing	3-5
Adding or Editing Profiles	3-6
Adding or Editing Profiles in the Profile Sheet	3-7
Scaling a Document	3-10
Scaling a Document Automatically	3-10
Scaling a Document Manually	3-11
Printing Multiple Pages on One Sheet	3-13
Two-Sided Printing	3-15
Specifying the Finishing Options	3-17
Selecting a Finishing Option	3-17
Booklet Printing	3-21
Using Creep Correction for Booklet Printing	3-23
Perfect Binding	3-25
Printing with Mixed Paper Sizes	3-28
Specifying the Paper Source	3-31
Printing All the Pages from the Same Paper Source	3-32
Printing the First, Body, and Last Pages from Different Paper Sources	3-33
Printing the First, Second, Body, and Last Pages from Different Paper Sources	3-34
Printing the Cover and Body Pages of a Booklet from Different Paper Sources	3-35
Printing on Transparencies	3-37
Using Cover or Sheet Insertion Options	3-38
Adding Front or Back Covers to the Document	3-38
Inserting Sheets into the Document	3-42
Inserting Tab Paper	3-47
Creating Tabs	3-51
Printing on Custom Paper	3-54
Registering Custom Paper	3-54
Printing on Custom Paper	3-56
Printing on Local Standard Paper	3-57
Printing a Banner Page with a Print Job	3-60


Accessing the Printer Properties Dialog Box

In the printer properties dialog box and the printing preferences dialog box, you can specify the printer driver settings and set up the printer configuration. The available settings vary depending on how you access the printer properties dialog box. To access the printer properties dialog box, follow the procedure below.

Accessing the Printer Properties Dialog Box from Application Software

If you access the printer properties dialog box from application software, the specified settings are available for the current print job.

- 1** In the application software, select [Print] to display the [Print] dialog box.
- 2** Select your printer name from the drop-down list box → click [Properties].

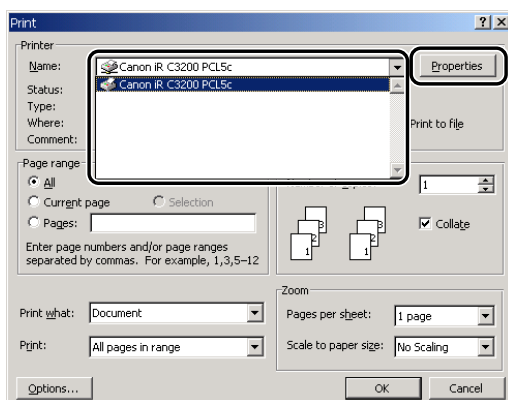

Accessing the Printing Preferences Dialog Box from the Printers Folder


If you access the printing preferences dialog box from the [Printers] folder, you can specify the default printer driver settings for every print job.

NOTE


To access the printing preferences dialog box from the [Printers] folder, you need to be assigned Full Control Permission for the printer.

1 On the [Start] menu, point to [Settings] → click [Printers].

NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the  (Start) menu, click [Control Panel] → [Printers].

2 In the [Printers] folder, right-click the printer icon for your printer → click [Printing Preferences] (Windows 2000/XP/Server 2003).

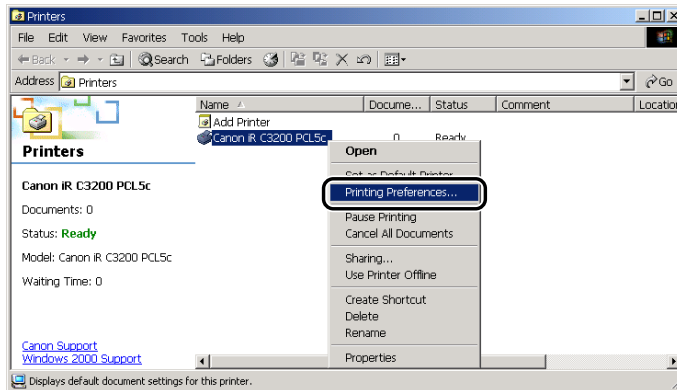


Accessing the Printer Properties Dialog Box from the Printers Folder

You can set up the printer configuration in the printer properties dialog box.


There are additional options (reflected in additional tabs/sheets) if you are accessing the printer properties dialog box from the [Printers] folder. This method should be used when setting the configuration for the first time.

1 On the [Start] menu, point to [Settings] → click [Printers].

NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the  (Start) menu, click [Control Panel] → [Printers].

2 In the [Printers] folder, right-click the printer icon for your printer → click [Properties].

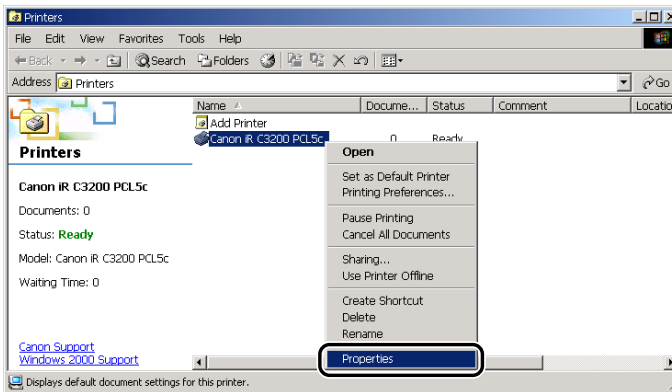

Using Profiles for Printing

This section describes what a profile is, how to select a profile, and how to add or edit profiles.

What Is a Profile?

Various printer driver settings are saved as profiles. You can also save printer driver settings that you frequently use as profiles. If you select a profile, the document is printed with the saved settings.

Selecting a Profile for Printing

If you select a profile, the document is printed with the settings of the selected profile.



NOTE

You can select a profile only if [Allow Profile Selection] is selected in the [Profile] sheet in the printer properties dialog box.

- 1** From the printer properties dialog box, display either the [Page Setup], [Finishing], [Paper Source], or [Quality] sheet.
- 2** Select the profile you want from [Profile].
- 3** Click [OK].



Adding or Editing Profiles

You can add your own profiles, or edit the names, icons, or comments of the customized profiles. To add or edit profiles, follow the procedure below.




NOTE

This option is available if [Allow Setting Edition] is selected in the [Profile] sheet in the printer properties dialog box.

- 1** From the printer properties dialog box, specify the printer driver settings for the customized profile in the [Page Setup], [Finishing], [Paper Source], and [Quality] sheets.
- 2** Click [] (Add Profile) or [] (Edit Profile) at the right of [Profile].

The [Add Profile] or [Edit Profile] dialog box opens.

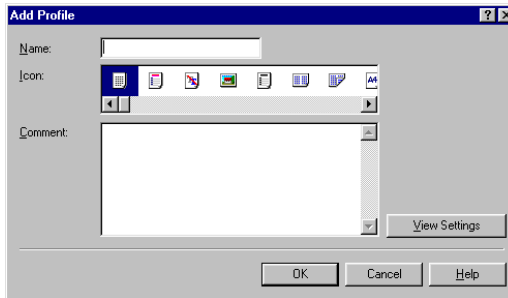

- 3** Specify the name, icon, and a comment of the profile → click [OK].


Adding or Editing Profiles in the Profile Sheet

Profiles specified in the printer properties dialog box that is opened from the [Printers] folder can be accessed and used by all the clients connected to the server.

1 On the [Start] menu, point to [Settings] → click [Printers].




NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the  (Start) menu, click [Control Panel] → [Printers].

2 In the [Printers] folder, right-click the printer icon for your printer → click [Properties].


3 In the printer properties dialog box, click the [Profile] tab.

The [Profile] sheet is displayed.

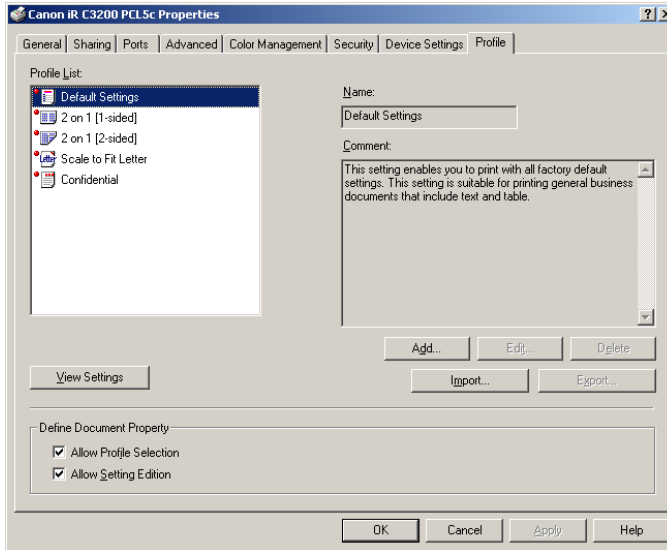

4 Click [Add] or [Edit].

The [Add/Edit Profile] dialog box opens.

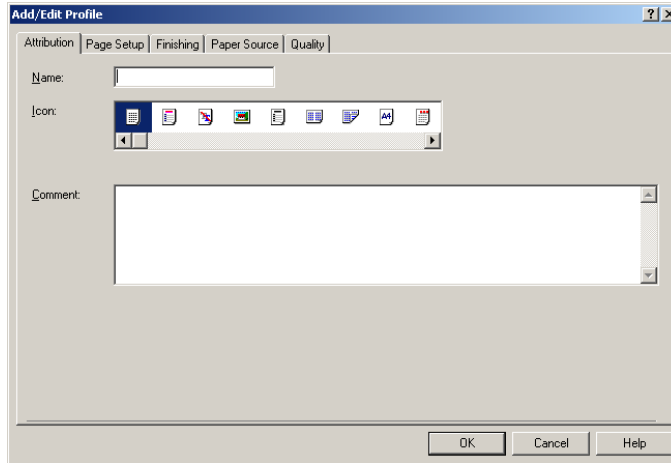

5 Specify the settings for the profile in the [Page Setup], [Finishing], [Paper Source], and [Quality] sheets.

6 Display the [Attribution] sheet.

7 Specify the name, icon, and a comment of the profile → click [OK].

Scaling a Document


There are two methods for scaling a document: select the output size of the document to scale it automatically, or specify the scaling value manually.

Scaling a Document Automatically

3

Basic Print Options

- 1 From the printer properties dialog box, display the [Page Setup] sheet.

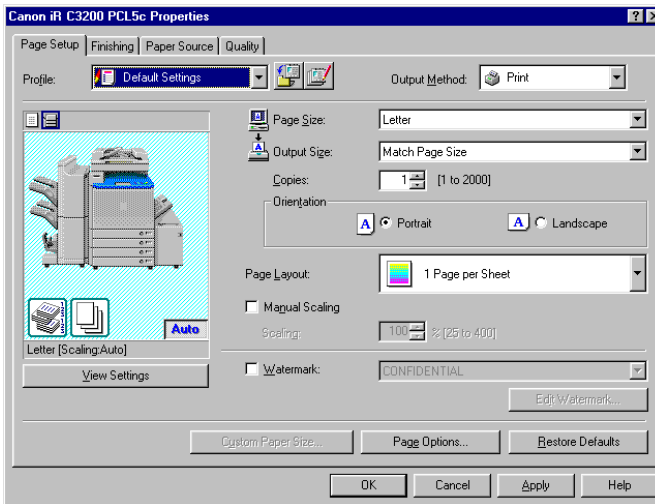

- 2 Select the page size from [Page Size].
If this driver setting is inaccessible from the application software, click [Printer Settings] or [Page Settings] (depending on the application software) on the [File] menu to specify the page size.
- 3 Select the actual paper size to print on from [Output Size].

4 Click [OK].


The scaling is set automatically according to the sizes specified in [Page Size] and [Output Size].

NOTE

If the value is less than 25% or more than 400%, the document is printed without scaling on the paper specified in [Output Size].

Scaling a Document Manually

1 From the printer properties dialog box, display the [Page Setup] sheet.

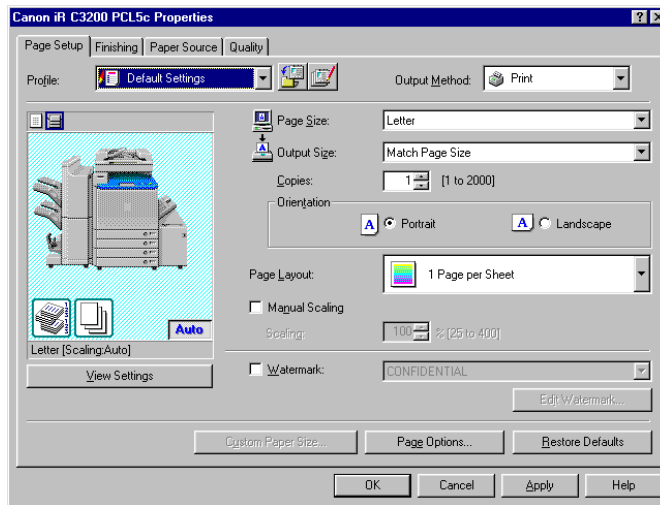

2 Select the page size from [Page Size].

If this driver setting is inaccessible from the application software, click [Printer Settings] or [Page Settings] (depending on the application software) on the [File] menu to specify the page size.


3 Select the actual paper size to print on from [Output Size].

- 4** Select [Manual Scaling] → specify the desired scaling value from 25% to 400%.
- 5** Click [OK].

Printing Multiple Pages on One Sheet


Multiple pages can be printed on one sheet of paper. The number of document pages which can be printed on one sheet of paper is 2, 4, 6, 8, 9, or 16.

- 1 From the printer properties dialog box, display the [Page Setup] sheet.

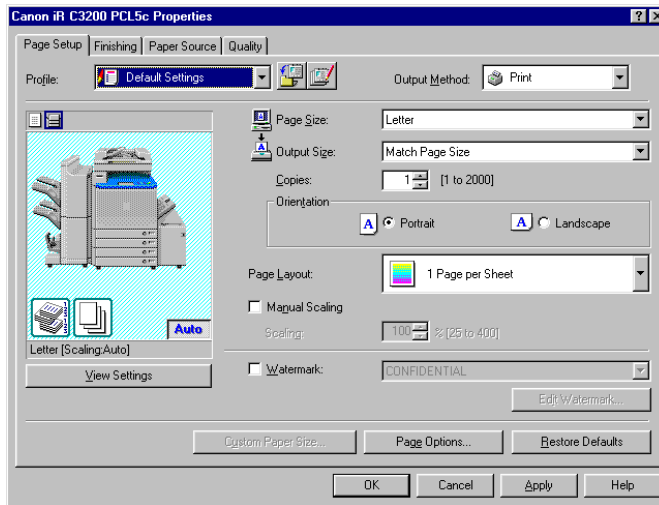

- 2 Select the required page layout from [Page Layout].

3 Select the required page order layout from [Page Order].

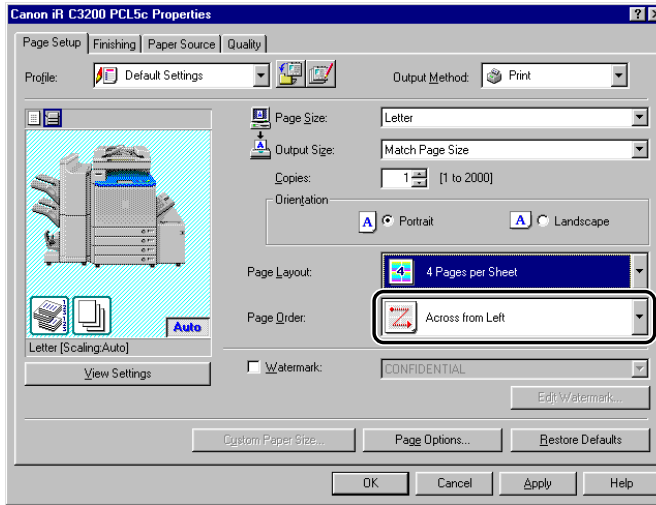

4 Click [OK].


Two-Sided Printing

Two-sided printing prints a document on both sides of the paper.

NOTE

- Two-sided printing is not available for the BIJ1350, BIJ2350, iR2000/1600, iR2010/1610, and LBP-2000.
- For the iR C2000 series, iR2016, iR2018, iR2020, and iR2030/2025/2022, two-sided printing is available only when a Duplexing Unit or a Duplex Unit is attached to the printer.

1 From the printer properties dialog box, click the [Finishing] tab.

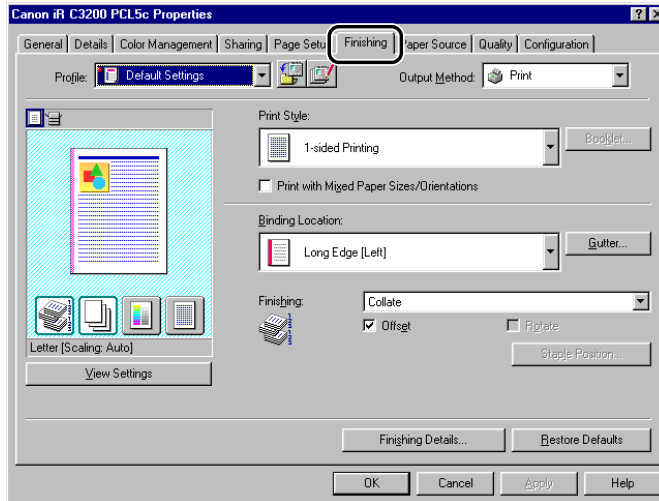


2 Select [2-sided Printing] from [Print Style].

3 Select the required binding edge for the paper printout from [Binding Location].

If the [Binding Location] option is selected, the document and margins are positioned correctly on the pages for two-sided printing.

- 4 If you want to set the gutter width, click [Gutter] to open the [Gutter Settings] dialog box → specify the value in [Gutter] → click [OK].

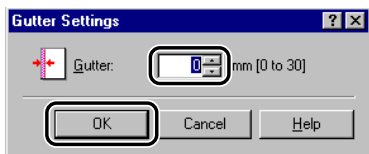

If you do not set the gutter width, proceed to step 5.

- 5 Click [OK] in the [Finishing] sheet.

Specifying the Finishing Options

This section describes how to select a finishing option and how to use Booklet Printing.

Selecting a Finishing Option

The various options in the [Finishing] sheet enable you to select the most appropriate tray output method for each document.

Selecting the Output Option


The available output options are:

Collate	Outputs sorted copies of the document in correct binding order into the output tray.
Group	Outputs document pages in groups into the output tray.
Staple & Collate	Outputs sorted and stapled copies of the document into the output tray.
Staple & Group	Outputs document pages in stapled batches into the output tray.

NOTE


- *The available finishing options vary, depending on the printer model you use or output options attached to the printer.*
- *If you print multiple sets of documents using the Collate option for the FAX-L2000 series, installation of optional memory (for a total of 32 MB or more) is recommended for proper spooling to ensure that all sets of the documents are printed out.*
- *When a collate option is available in the [Print] dialog box of the application software, the Collate option setting of the printer driver has priority, regardless of the same setting in the application software. However, in some application software, output is collated when the collate option is selected in the application software even if the Collate option is not selected in the printer driver.*
- *To output document pages using the Group option, you must select [Group] in the printer driver, regardless of a group option setting in the [Print] dialog box of the application software.*

- 1 From the printer properties dialog box, display the [Page Setup] sheet.

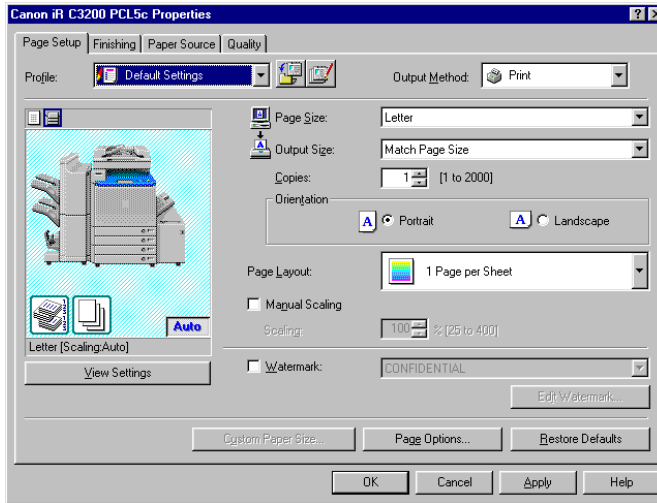


- 2 Specify the number of copies to print in [Copies].

3 Click the [Finishing] tab.

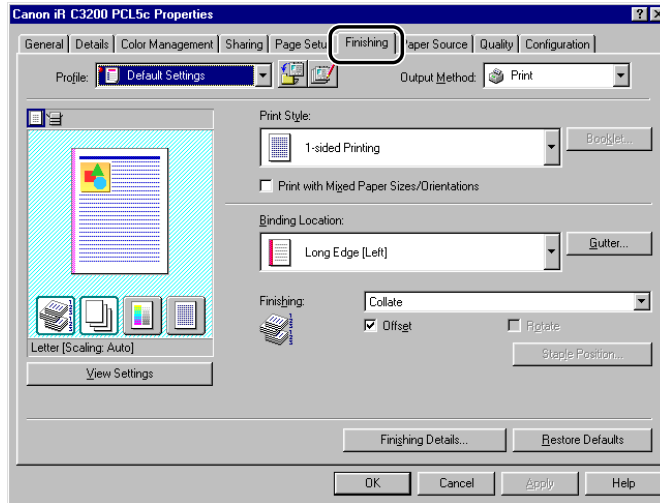

4 Select a finishing option, such as [Collate], [Group], [Staple & Collate], or [Staple & Group], under [Finishing] sheet.

5 If you selected [Staple & Collate] or [Staple & Group], click [Staple Position] → specify the position to staple in the [Staple Position] dialog box → click [OK].

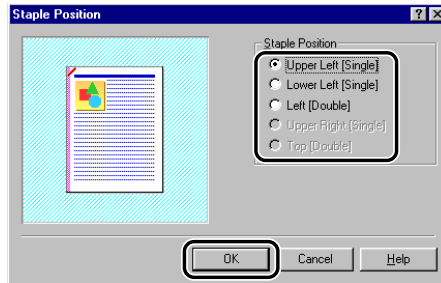

If you did not select [Staple & Collate] or [Staple & Group], proceed to step 6.

NOTE

Depending on the printer you are using, the staple position cannot be specified.


6 Specify a finishing mode if you want to use the offset, rotate, hole punch, Z-fold, or C-fold option.

If you do not use this option, proceed to step 7.


- For the iR5050, iR5050-S2, iR5055, iR5055-S2, iR5065, iR5065-S2, iR5075, and iR5075-S2:

- Click [Misc. Finishing Modes].

The [Miscellaneous Finishing Modes] dialog box opens.

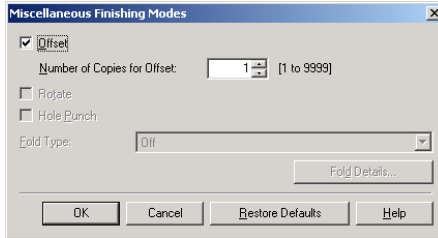

- Select a finishing mode, such as [Offset], [Rotate], [Hole Punch], [Z-fold], or [C-fold].
- If you select [C-fold], click [Fold Details] → select the C-fold pattern you want in the [Fold Details] dialog box → click [OK].

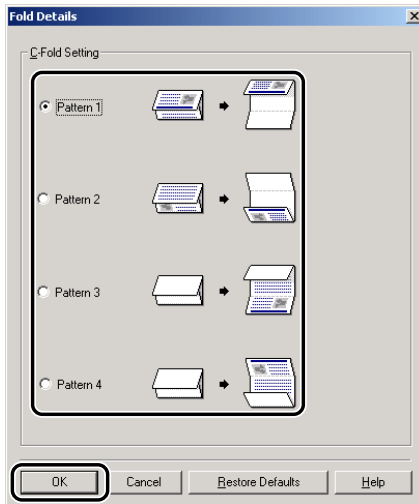

- Click [OK].

● **For printers other than the above:**

- Select a finishing mode, such as [Offset], [Rotate], [Hole Punch], or [Z-fold].

7 Click [OK] in the [Finishing] sheet.


Booklet Printing

Booklet Printing enables you to print the pages of a document as a booklet.

 **NOTE**

- For the BIJ1350D, iR C2620, iR C2620-C1, iR C2620-C2, iR C3200, iR C3200-C1, iR C3220, iR C3220-C1, iR C3220-C2, iR C3100, iR 3100C, iR C3100-E1, iR 3100C-E1, iR C5800, iR 5800C, iR C5800-D1, iR 5800C-D1, iR C6800, iR 6800C, iR C6800-D1, iR 6800C-D1, iR1023/1022/1018, iR2016, iR2018, iR2020, iR2030/2025/2022, iR2230, iR2830, iR3530, iR4530, FAX-L2000 series, FAX-L3000 series, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, LBP5970/LBP5975, and MF7170i, Booklet Printing is not available if [Disabled] is selected for [Spooling at Host] in the [Device Settings] sheet.
- Booklet Printing is not available for the BIJ1350, BIJ2350, iR2000/1600, iR2010/1610, and LBP-2000.

1 From the printer properties dialog box, click the [Finishing] tab.

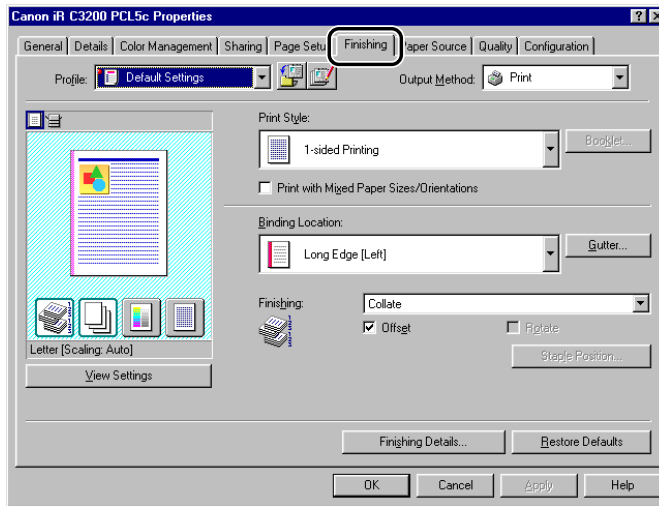

2 Select [Booklet Printing] from [Print Style].

3 Select [Saddle Stitch] if you want to saddle stitch the booklet.


If you do not use this option, proceed to step 4.

NOTE

- Saddle stitching is the process of folding several sheets in half and stapling them at the spine to form a multi-paged booklet or publication.
- Saddle stitch printing is available only if a saddle finisher is attached to the printer.
- Saddle stitch printing is not available for the iR1023/1022/1018, iR2016, iR2018, iR2020, iR2030/2025/2022, iR2230, iR2830, iR3530, iR4530, FAX-L2000 series, FAX-L3000 series, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, LBP5970/LBP5975, and MF7170i.

4 Click [Booklet].

The [Detailed Settings for Booklet] dialog box opens.

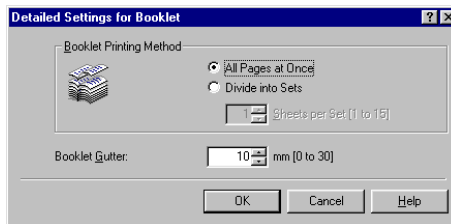

5 Specify the detailed settings → click [OK].

6 Click [OK] in the [Finishing] sheet.

NOTE

You can use different paper for the cover page of the booklet. Select [Different for Cover and Others] under [Paper Selection] in the [Paper Source] sheet → specify the paper source for the cover page and body pages of the document. (See "Printing the Cover and Body Pages of a Booklet from Different Paper Sources," on p. 3-35.)

Using Creep Correction for Booklet Printing

You can set Creep Correction when booklet printing. Creep correction is used to adjust the margins so that the printing position displacement of the outer and inner pages due to the thickness of the bound sheets does not occur. This ensures that the margins on all pages are in alignment after the page edges are cut by the trimmer.


NOTE

This option is available for the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, imagePRESS Server T1, iR C2880, iR C2880-J1, iR C3080, iR C3080-J1, iR C3380, iR C3380-J1, iR C3580, iR C3580-J1, iR C4080, iR C4080-H1, CLC4040-H1, iR C4580, iR C4580-H1, iR C5180, iR C5180-H1, CLC5151-H1, iR C5185, iR C5185-H1, iR C2580, iR C3180, iR 3180C, iR C5880, iR 5880C, iR C6880, iR 6880C, iR5050, iR5050-S2, iR5055, iR5055-S2, iR5065, iR5065-S2, iR5075, iR5075-S2, iR7105/7095/7086, iR7105/7095/7086-S1, and iR7105/7095/7086-S2.

3

Basic Print Options

- 1 From the printer properties dialog box, click the [Finishing] tab.

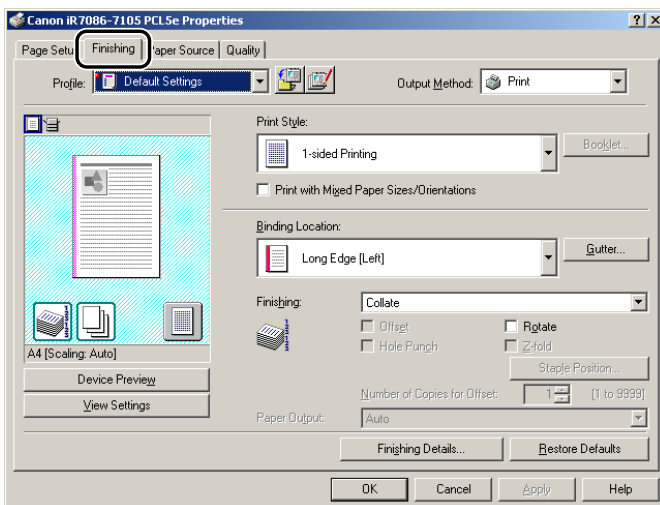


- 2 Select [Booklet Printing] for [Print Style].

3 Click [Booklet].

The [Detailed Settings for Booklet] dialog box opens.

4 Select [With Device Settings] for [Booklet Printing Process].

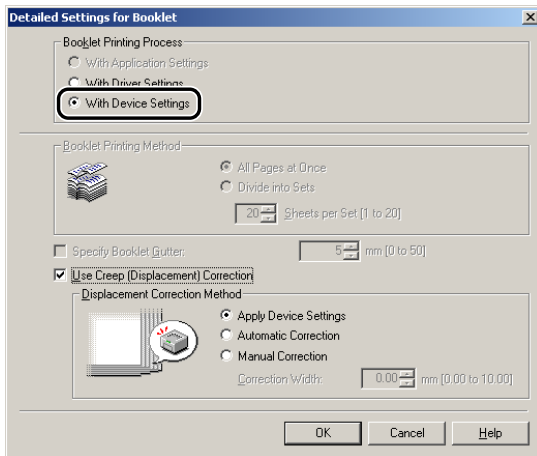

5 Select [Use Creep (Displacement) Correction] → set how the printing position shift amount is to be adjusted under [Displacement Correction Method] → click [OK].

6 Click [OK] in the [Finishing] sheet.


Perfect Binding

You can perform Perfect Binding in addition to normal booklet printing. Perfect Binding is a function that glues the binding sides of the content pages of a document to a cover that encloses them, to produce a booklet.

NOTE

- This option is available for the imagePRESS C6000 and imagePRESS C6000VP, and, depending on the printer controller version, imagePRESS C7000VP, iR7105/7095/7086, iR7105/7095/7086-S1, and iR7105/7095/7086-S2.
- Perfect Binding is available only if a perfect binder is attached to the printer.


- 1** From the printer properties dialog box, click the [Finishing] tab.
- 2** Select [Perfect Binding [1-sided]] or [Perfect Binding [2-sided]] from [Print Style].

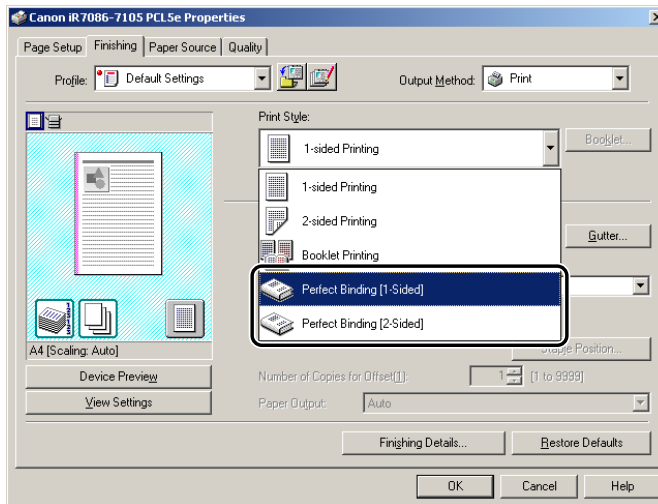

If you want to print on one side of each page only, select [Perfect Binding [1-sided]]. If you want to print on both sides of each page, select [Perfect Binding [2-sided]].

- 3** Set the paper size, paper source, print style, and front/back cover print side, under [Perfect Bound Cover Settings].
- 4** Select the paper size for content pages from [Content Page Size].
- 5** Select the final finished size of the booklet from [Finishing Size].
- 6** Click [Finishing Adjustment].

The [Finishing Adjustment] dialog box opens.

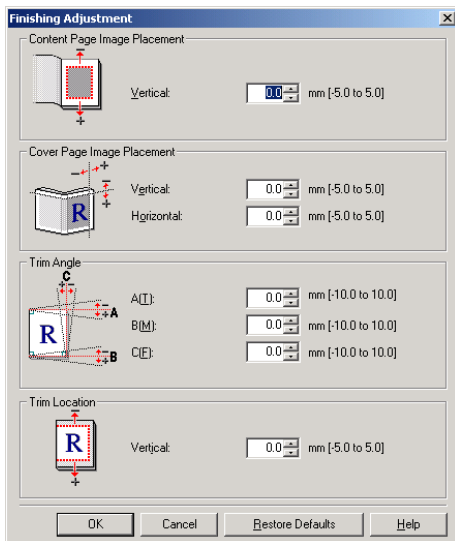

- 7** Adjust the content/cover page image placement, trim angle, and trim location → click [OK].

8 Click [OK] in the [Finishing] sheet.



NOTE

Refer to the figure below to confirm the front/back cover print side settings.



Printing with Mixed Paper Sizes


You can print a document correctly oriented for stapling consisting of mixed paper sizes, such as A4 and A3, or Letter and 11x17.

NOTE

Printing with mixed paper sizes is not available for the BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR1023/1022/1018, iR2000/1600, iR2010/1610, iR400, FAX-L2000 series, GP405/GP300, GP605/GP605P/GP555, FAX-L3000 series, LBP-2000, LBP3360, LBP3370, LBP3460, LBP5360, and LBP5960.


3

- 1 From the printer properties dialog box, display the [Page Setup] sheet.

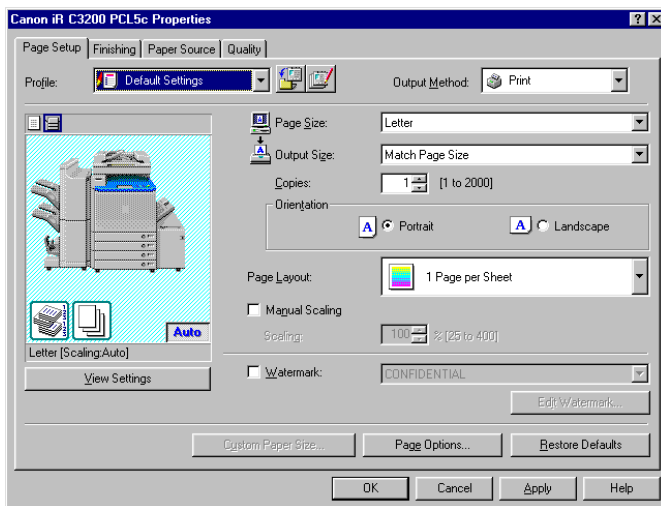


- 2 Specify the page size of the first page of the document from [Page Size].

3 Click the [Finishing] tab → select [Print with Mixed Paper Sizes/Orientations].

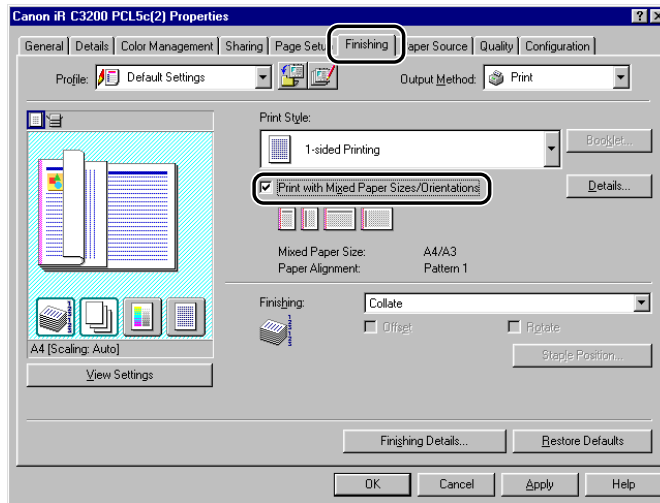

4 Click [Details].

The [Detailed Settings] dialog box opens.

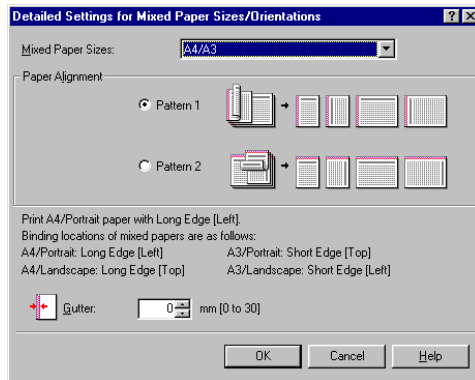

5 Select the combination of mixed paper sizes from [Mixed Paper Sizes].

A list of paper size combinations based on the paper size specified in [Page Size] in the [Page Setup] sheet is displayed in the drop-down list box.

6 Select the pattern of the print orientation and binding location for the combined paper sizes under [Paper Alignment].

7 Specify the gutter width in [Gutter].

8 Click [OK].

The [Detailed Settings] dialog box closes.

9 Select the required options such as [Staple & Collate] or [Offset], under [Finishing] in the [Finishing] sheet.

10 Click [OK].

Specifying the Paper Source

The [Paper Source] sheet enables you to specify the settings for the paper source.

The type of paper and loading method can be set under [Paper Selection].


Use the Paper Selection setting to specify whether to print all the pages from one paper source or to print the pages from different paper sources.

NOTE

- For printers other than the BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR2000/1600, iR2010/1610, iR400, FAX-L2000 series, GP405/GP300, GP605/GP605P/GP555, LBP-2000, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, and LBP5970/LBP5975, you can also specify whether the paper loading method is according to paper source or paper type. To specify the paper loading method, select [Paper Source] or [Paper Type] under [Select by] in the [Paper Source] sheet.
- For the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, imagePRESS Server T1, iR C2380, iR C2550, iR C3080, iR C3580, iR C5185, iR C2580, iR C3180, iR 3180C, iR C5880, iR 5880C, iR C6880, iR 6880C, iR3025, iR3030, iR3035, iR3045, iR5050, iR5050-S2, and depending on the printer controller version, iR C2880, iR C3380, iR C4080, iR C4080-H1, CLC4040-H1, iR C4580, iR C4580-H1, iR C5180, iR C5180-H1, CLC5151-H1, iR C5185-H1, iR5055, iR5055-S2, iR5065, iR5065-S2, iR5075, iR5075-S2, iR7105/7095/7086, iR7105/7095/7086-S2, you can also specify the paper source and print documents using various paper types registered in the printer. For detailed instruction on how to specify and use custom paper types, see the Online Help.

Printing All the Pages from the Same Paper Source


- 1 From the printer properties dialog box, click the [Paper Source] tab.
- 2 Select [Same Paper for All Pages] from [Paper Selection].

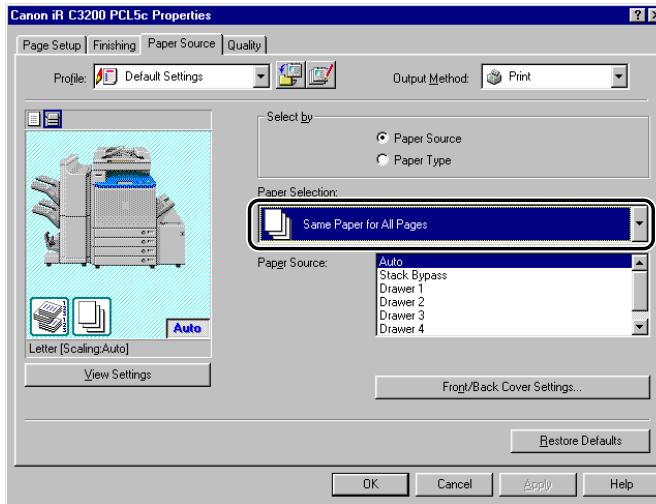

- 3 Select the paper source required from [Paper Source].
- 4 Click [OK].

Printing the First, Body, and Last Pages from Different Paper Sources


- 1 From the printer properties dialog box, click the [Paper Source] tab.
- 2 Select [Different for First, Others, and Last] from [Paper Selection].

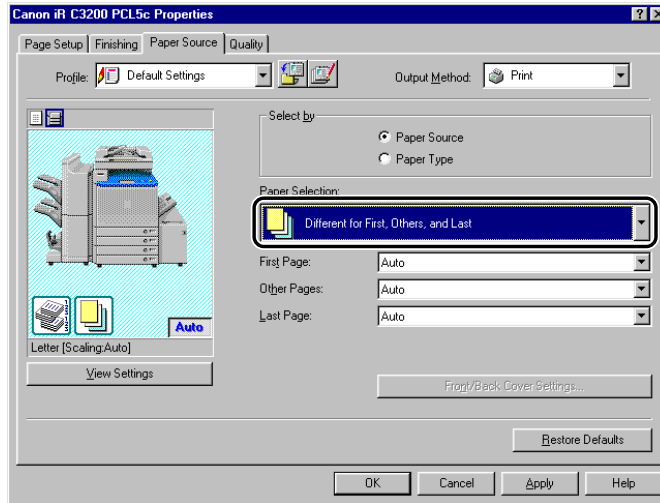

- 3 Select the paper sources required for the first, body, and last pages from [First Page], [Other Pages], and [Last Page].
- 4 Click [OK].

Printing the First, Second, Body, and Last Pages from Different Paper Sources


- 1 From the printer properties dialog box, click the [Paper Source] tab.
- 2 Select [Different for First, Second, Others, and Last] from [Paper Selection].

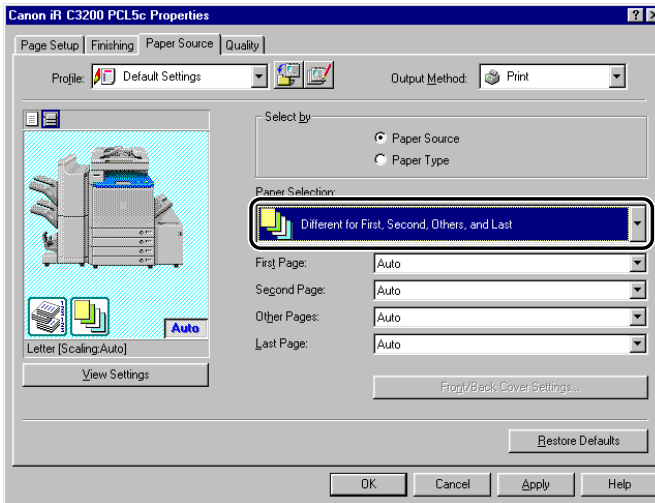


- 3 Select the paper sources required for the first, second, body, and last pages from [First Page], [Second Page], [Other Pages], and [Last Page].
- 4 Click [OK].

Printing the Cover and Body Pages of a Booklet from Different Paper Sources

- 1 From the printer properties dialog box, click the [Finishing] tab.
- 2 Select [Booklet Printing] from [Print Style].

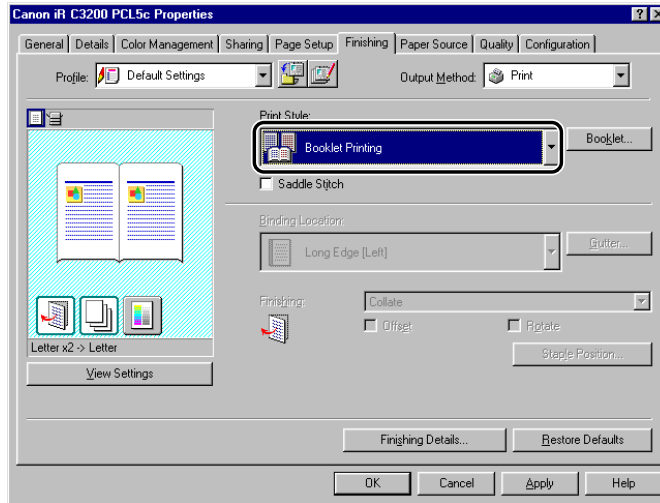


- 3 Click the [Paper Source] tab → select [Different for Cover and Others] from [Paper Selection].

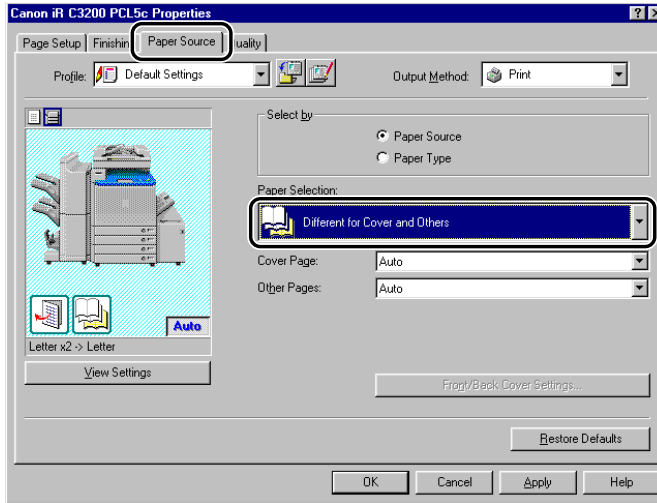

- 4 Select the paper sources required for the cover and body pages from [Cover Page] and [Other Pages].
- 5 Click [OK].

Printing on Transparencies

- 1 From the printer properties dialog box, click the [Paper Source] tab.
- 2 Select [Transparency Interleaving] from [Paper Selection].

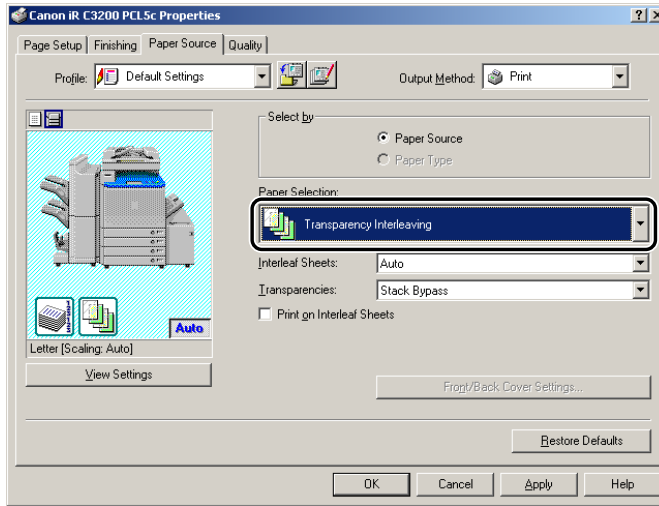

- 3 Select the paper source required for the transparencies and interleaf sheets from [Transparencies] and [Interleaf Sheets].
- 4 Select [Print on Interleaf Sheets] if you want to print the same data on the interleaving and transparencies.
- 5 Click [OK].

Using Cover or Sheet Insertion Options

You can add front and back covers, sheet insertions, or chapter pages to the document using a paper source different from that used for body pages. You can also insert tab paper into the document.



NOTE

To use these options, you need to specify the printer controller version. (See "Configuring the Device Function Settings," on p. 2-55.)

Adding Front or Back Covers to the Document

You can add front and back covers to documents when printing. Also, you can specify on which side of the front or back cover to print, separately.




NOTE

- Depending on the controller version of the printer you are using, this option may not be available.
- This option is not available for the BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR1023/1022/1018, iR2000/1600, iR2010/1610, iR2016, iR2018, iR2020, iR2030/2025/2022, iR400, FAX-L2000 series, GP405/GP300, GP605/GP605P/GP555, FAX-L3000 series, LBP-2000, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, LBP5970/LBP5975, and MF7170i.
- If [Group] or [Rotate] is selected for [Finishing] in the [Finishing] sheet, or [Disabled] is selected for [Spooling at Host] in the [Device Settings] sheet, this option is not available.
- If [Store] is selected for [Output Method], this option may not be available depending on the printer model or the controller version of the printer.

- 1** From the printer properties dialog box, click the [Paper Source] tab.


2 Specify the paper source or paper type for the body pages of the document.

- If you want to use the same type of paper for all body pages:
 - Select [Same Paper for All Pages] from [Paper Selection].
 - Select the paper source from [Paper Source] or [Paper Type].

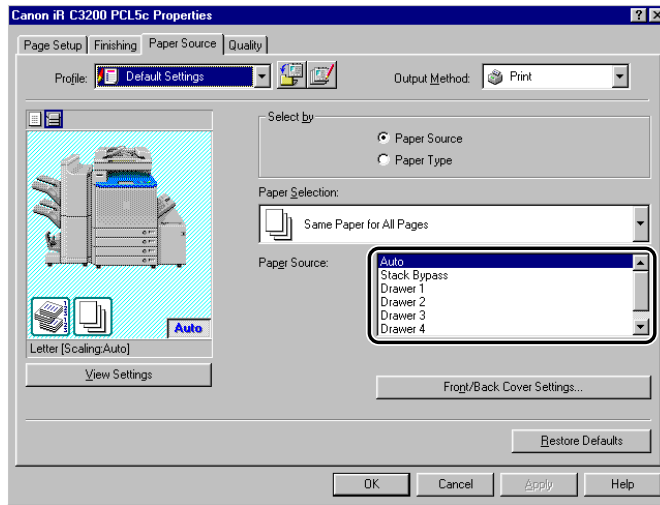

- If you want to insert sheets into body pages for separation:

- Select [Inserting Sheet] from [Paper Selection].
- Select the paper source from [Original Paper Source] or [Original Paper Type].

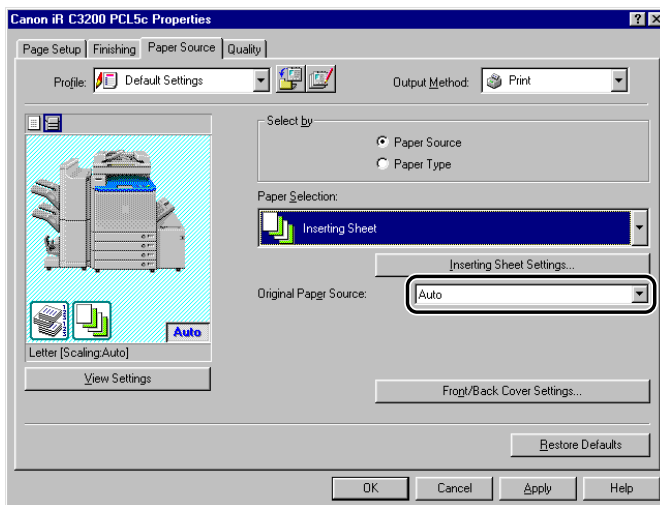

3 Click [Front/Back Cover Settings].


The [Front/Back Cover Settings] dialog box opens.

The settings in the dialog box vary according to the operating system or the printer model.


4 Specify the front/back cover settings.

- For the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, iR C2380, iR C2550, iR C2880, iR C3080, iR C3380, iR C3580, iR C4080, iR C4080-H1, CLC4040-H1, iR C4580, iR C4580-H1, iR C5180, iR C5180-H1, CLC5151-H1, iR C5185, iR C5185-H1, iR C2580, iR C3180, iR 3180C, iR C5880, iR 5880C, iR C6880, iR 6880C, iR5050, iR5050-S2, iR5055, iR5055-S2, iR5065, iR5065-S2, iR5075, iR5075-S2, iR7105/7095/7086, and iR7105/7095/7086-S2:

- Select [Only Front Cover], [Only Back Cover], or [Front and Back Covers] from [Cover Settings].

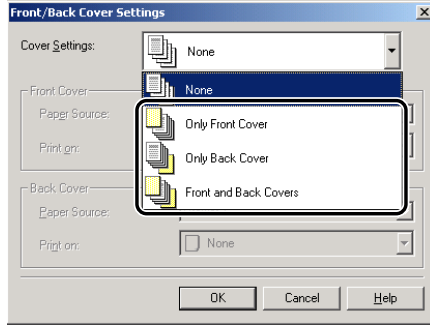

- Select the paper source for front and back covers for [Paper Source].
- Select which side of paper to print on from [Print on].
- **For printers other than the above:**
 - Select [Set Front Cover] and [Set Back Cover] to add front and back covers.

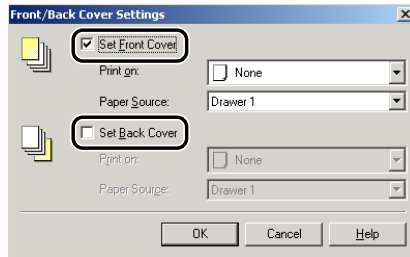

You can select either or both.

- Select which side of paper to print on from [Print on].
- Select the paper source for front and back covers from [Paper Source].

5 Click [OK].

The [Front/Back Cover Settings] dialog box closes.

6 Click [OK].

Inserting Sheets into the Document


You can insert blank sheets into documents for clearer distinction among sections, or insert sheets to use as chapter pages, which are useful to separate the document into chapters. You can also print on the inserted sheets.

NOTE

- Depending on the controller version of the printer you are using, this option may not be available.
- This option is not available for the BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR1023/1022/1018, iR2000/1600, iR2010/1610, iR2016, iR2018, iR2020, iR2030/2025/2022, iR400, FAX-L2000 series, GP405/GP300, GP605/GP605P/GP555, FAX-L3000 series, LBP-2000, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, LBP5970/LBP5975, and MF7170i.
- Depending on the printer and operating system you are using, up to 20 or 100 inserted sheets or chapter pages can be inserted into one document.
- If [Group] or [Rotate] is selected for [Finishing] in the [Finishing] sheet, or [Disabled] is selected for [Spooling at Host] in the [Device Settings] sheet, this option is not available.
- If [Store] is selected for [Output Method], this option may not be available depending on the printer model or the controller version of the printer.

1 From the printer properties dialog box, click the [Paper Source] tab.

2 Select [Inserting Sheet] from [Paper Selection].

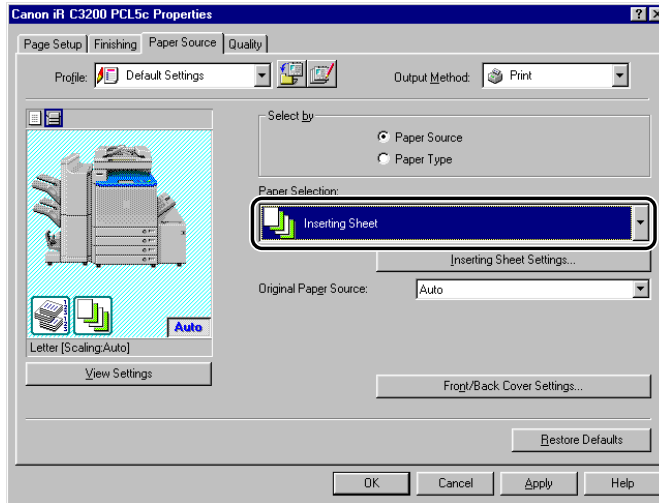

3 Select the paper source or paper type for the body pages of the document from [Original Paper Source] or [Original Paper Type].


4 Click [Inserting Sheet Settings].

The [Inserting Sheet Settings] dialog box opens.

The settings in the dialog box vary according to the operating system or the printer model.

5 Specify the inserting sheet settings.


- For the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, imagePRESS Server T1, iR C2380, iR C2550, iR C2880, iR C3080, iR C3380, iR C3580, iR C4080, iR C4080-H1, CLC4040-H1, iR C4580, iR C4580-H1, iR C5180, iR C5180-H1, CLC5151-H1, iR C5185, iR C5185-H1, iR C2580, iR C3180, iR 3180C, iR C5880, iR 5880C, iR C6880, iR 6880C, iR5050, iR5050-S2, iR5055, iR5055-S2, iR5065, iR5065-S2, iR5075, iR5075-S2, iR7105/7095/7086, and iR7105/7095/7086-S2:
 - Select either [Inserted Sheet] or [Chapter Page] for [Sheet for Insertion].

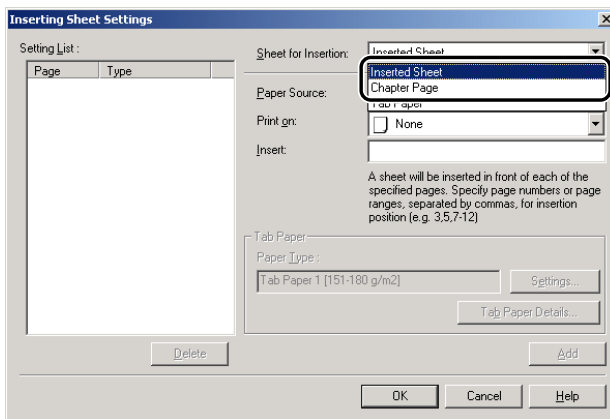

- Select the paper source for inserted sheets or chapter pages from [Paper Source].
- Select which side of paper to print on from [Print on].
Chapter pages can be printed only on the front side of the page. Blank sheets cannot be inserted as chapter pages.
- Enter the page number where the inserted sheets or chapter pages are to be inserted in the document in [Insert].
The inserted sheets or chapter pages are inserted before the specified pages.
If sheets are to be inserted in multiple locations, separate the locations using commas.

● **For printers other than the above:**

- Select either [Inserted Sheet] or [Chapter Page] for [Sheet for Insertion] to specify the type of inserted sheets.

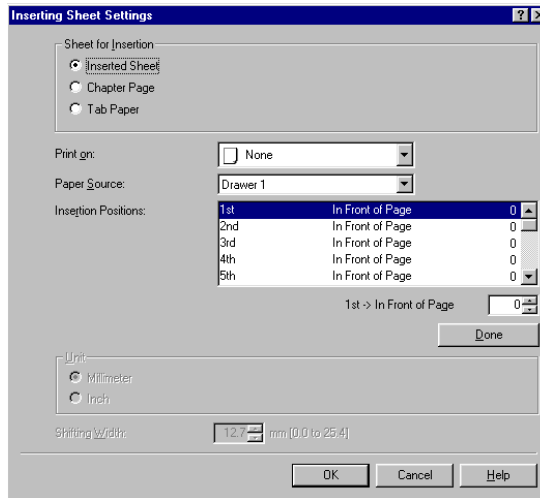

- Select which side of paper to print on from [Print on].
Chapter pages can be printed only on the front side of the page. Blank sheets cannot be inserted as chapter pages.
- Select the paper source for inserted sheets or chapter pages from [Paper Source].
- Select [1st] from [Insertion Positions] → specify the page number to determine where the first inserted sheet or chapter page is to be placed in the document → click [Done].
- In the same way, specify the settings for subsequent inserted sheets or chapter pages.
If the sequence number of the inserted sheets or chapter pages differs from that of the insertion positions, an ascending sequence is applied after clicking [Done].
The available range for the insertion position is from pages 2 to 999.

6 Click [OK].

The [Inserting Sheet Settings] dialog box closes.

7 Click [OK].

NOTE


For example, making the following settings for a nine page document results in the output shown below:

- Front cover page is printed on the front side
- Pages 5 and 8 are specified as chapter pages
- [2-sided Printing] is specified for body pages

Nine Page Document



Output Result

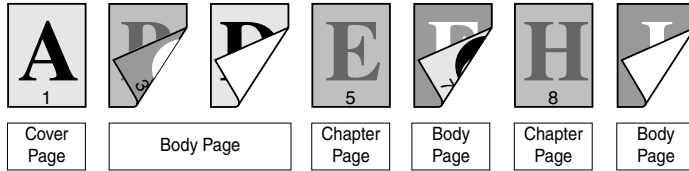

Inserting Tab Paper


You can print on the tab part of tab paper. You can also insert tab paper into a document.

NOTE

- This option is available for the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, imagePRESS Server T1, iR C2620, iR C2620-C1, iR C2620-C2, iR C3200, iR C3200-C1, iR C3220, iR C3220-C1, iR C3220-C2, iR C4080, iR C4080-H1, CLC4040-H1, iR C4580, iR C4580-H1, iR C5180, iR C5180-H1, CLC5151-H1, iR C5185, iR C5185-H1, iR C2580, iR C3180, iR 3180C, iR C5800, iR 5800C, iR C5800-D1, iR 5800C-D1, iR C5870, iR 5870C, iR C5870-G1, iR 5870C-G1, iR C5880, iR 5880C, iR C5880-G1, iR 5880C-G1, iR C6800, iR 6800C, iR C6800-D1, iR 6800C-D1, iR C6870, iR 6870C, iR C6870-G1, iR 6870C-G1, iR C6880, iR 6880C, iR C6880-G1, iR 6880C-G1, iR105, iR105-M1, iR105-M2, iR105+, iR105+ -M3, iR5050, iR5050-S2, iR5055, iR5055-S2, iR5065, iR5065-S2, iR5070-S1, iR5075, iR5075-S2, iR5570-S1, iR6570/5570, iR6570/5570-M3, iR6570-S1, iR7105/7095/7086, iR7105/7095/7086-S1, iR7105/7095/7086-S2, iR7200, iR7200-M1, iR7200-M2, iR8070, iR8070-M3, iR8070-S1, iR85, iR85-M1, iR85-M2, iR85+, iR85+ -M3, iR8500, iR8500-M1, iR8500-M2, iR9070, and iR9070-M3. However, depending on the controller version of the printer you are using, this option may not be available.
- Depending on the printer and operating system you are using, up to 20 or 100 sheets of tab paper can be inserted into one document.
- If [Group] or [Rotate] is selected for [Finishing] in the [Finishing] sheet, or [Disabled] is selected for [Spooling at Host] in the [Device Settings] sheet, this option is not available.
- If [Store] is selected for [Output Method], this option may not be available depending on the controller version of the printer.

1 From the printer properties dialog box, click the [Paper Source] tab.

2 Select [Inserting Sheet] from [Paper Selection].

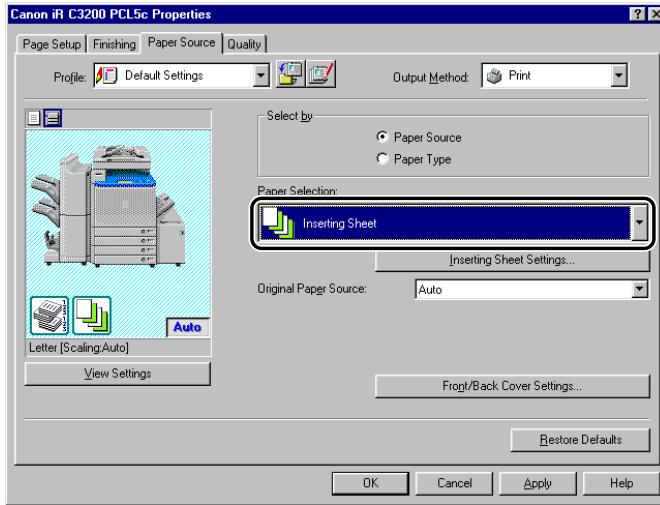

3 Select the paper source or paper type for the body pages of the document from [Original Paper Source] or [Original Paper Type].


4 Click [Inserting Sheet Settings].

The [Inserting Sheet Settings] dialog box opens.

The settings in the dialog box vary according to the operating system or the printer model.

5 Specify the inserting sheet settings.

- For the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, imagePRESS Server T1, iR C4080, iR C4080-H1, CLC4040-H1, iR C4580, iR C4580-H1, iR C5180, iR C5180-H1, CLC5151-H1, iR C5185, iR C5185-H1, iR C2580, iR C3180, iR 3180C, iR C5880, iR 5880C, iR C6880, iR 6880C, iR5050, iR5050-S2, iR5055, iR5055-S2, iR5065, iR5065-S2, iR5075, iR5075-S2, iR7105/7095/7086, and iR7105/7095/7086-S2:
 - Select [Tab Paper] from [Sheets for Insertion].

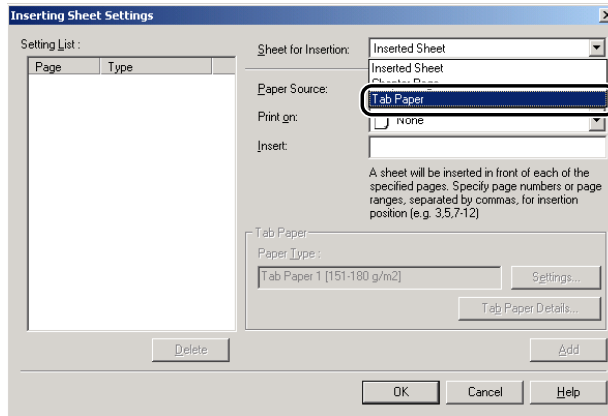


- Select the paper source for the tab paper from [Paper Source].
- Enter the page number where the tab paper sheets are to be inserted in the document in [Insert].

The tab paper sheets are inserted before the specified pages.

If tab paper sheets are to be inserted in multiple locations, separate the location using commas.
- Click [Settings].
- Select the type of tab paper from the [Paper Type Settings] dialog box → click [OK].
- Click [Tab Paper Details].
- Specify the width to shift the image to be printed on the tab part of the paper in [Shifting Width] from the [Tab Paper Details] dialog box → click [OK].

- For printers other than the above:
 - Select [Tab Paper] from [Sheet for Insertion].

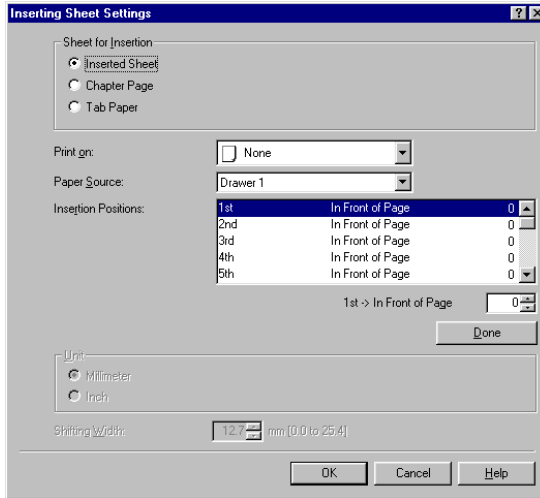

Depending on the printer you are using, you can also select the type of tab paper from the list box to the right of [Sheet for Insertion].

- Select the paper source for the tab paper from [Paper Source].
- Select [1st] from [Insertion Positions] → specify the page number to determine where the first tab paper sheet is to be placed in the document → click [Done].
- In the same way, specify the settings for subsequent tab paper sheets.

If the sequence number of the tab paper differs from that of the insertion positions, ascending sequence is applied after clicking [Done].

The available range for the insertion position is from pages 1 to 999.
- Specify the width to shift the image to be printed on the tab part of the paper in [Shifting Width].

You can change the unit used to specify the shift width (millimeters or inches).

6 Click [OK].

The [Inserting Sheet Settings] dialog box closes.

7 Click [OK].


Creating Tabs

NOTE

- This option is available for the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, imagePRESS Server T1, iR C2620, iR C2620-C1, iR C2620-C2, iR C3200, iR C3200-C1, iR C3220, iR C3220-C1, iR C3220-C2, iR C4080, iR C4080-H1, CLC4040-H1, iR C4580, iR C4580-H1, iR C5180, iR C5180-H1, CLC5151-H1, iR C5185, iR C5185-H1, iR C2580, iR C3180, iR 3180C, iR C5800, iR 5800C, iR C5800-D1, iR 5800C-D1, iR C5870, iR 5870C, iR C5870-G1, iR 5870C-G1, iR C5880, iR 5880C, iR C5880-G1, iR 5880C-G1, iR C6800, iR 6800C, iR C6800-D1, iR 6800C-D1, iR C6870, iR 6870C, iR C6870-G1, iR 6870C-G1, iR C6880, iR 6880C, iR C6880-G1, iR 6880C-G1, iR105, iR105-M1, iR105-M2, iR105+, iR105+ -M3, iR5050, iR5050-S2, iR5055, iR5055-S2, iR5065, iR5065-S2, iR5070-S1, iR5075, iR5075-S2, iR5570-S1, iR6570/5570, iR6570/5570-M3, iR6570-S1, iR7105/7095/7086, iR7105/7095/7086-S1, iR7105/7095/7086-S2, iR7200, iR7200-M1, iR7200-M2, iR8070, iR8070-M3, iR8070-S1, iR85, iR85-M1, iR85-M2, iR85+, iR85+ -M3, iR8500, iR8500-M1, iR8500-M2, iR9070, and iR9070-M3.
- If [Group] or [Rotate] is selected for [Finishing] in the [Finishing] sheet, this option is not available.
- If [Store] is selected for [Output Method], this option may not be available depending on the controller version of the printer.
- Before creating tab paper, open the printer properties dialog box from the [Printers] folder → click [Form to Tray Assignment] on the [Device Settings] sheet → select [Tab Paper] from [Paper Type] in the [Form to Tray Assignment] dialog box.



1 From the printer properties dialog box, click the [Paper Source] tab.

- 2** Select [Paper Type] from [Select by] → select [Tab Paper] from [Paper Type].

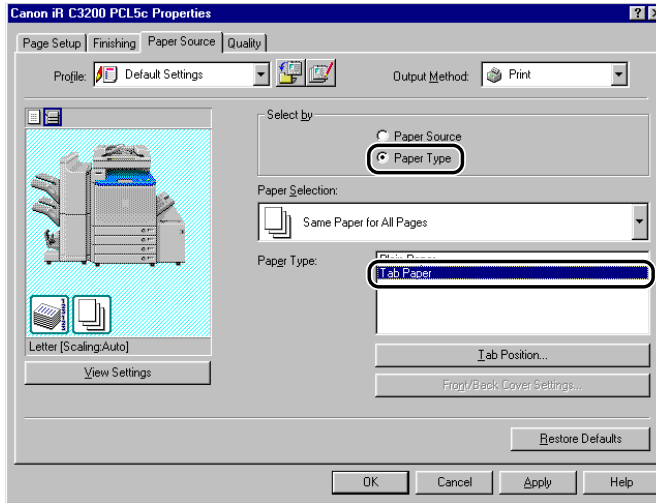

- 3** Click [Tab Position] or [Tab Paper Details].

The [Tab Position Settings] or [Tab Paper Details] dialog box opens.

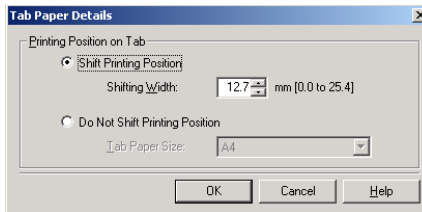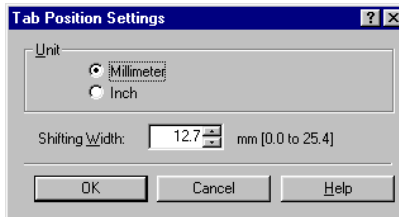

4 Specify the tab position settings.

- **To adjust the printing position when printing on tab paper:**

- Specify [Shifting Width] (Tab Position Settings dialog box), or select [Shift Printing Position] and specify [Shifting Width] (Tab Paper Details dialog box) to specify the width to shift the image to be printed on the tab part of the paper → click [OK].

- **To print on tab paper without adjusting the printing position:**

- Select [Do Not Shift Printing Position] → select the tab paper size from [Tab Paper Size] → click [OK].



NOTE

You can change the unit used to specify the shifting width (millimeters or inches), depending on the printer model or the printer controller version.

5 Click [OK].

The [Tab Position Settings] or [Tab Paper Details] dialog box closes.

6 Click [OK].

Printing on Custom Paper

This section describes how to print on nonstandard paper. If you register a paper size as a custom paper size, you will be able to select the registered custom paper size from [Page Size] or [Output Size] in the [Page Setup] sheet when printing a document.



IMPORTANT

Before printing on local standard paper, make sure the printer is set to print on the paper size you want.

3


Basic Print Options

Registering Custom Paper

1 On the [Start] menu, point to [Settings] → click [Printers].




NOTE


- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the  (Start) menu, click [Control Panel] → [Printers].

2 In the [Printers] folder, right-click the printer icon for your printer → click [Printing Preferences].

- 3** In the printer properties dialog box, click the [Page Setup] tab → click [Custom Paper Size].

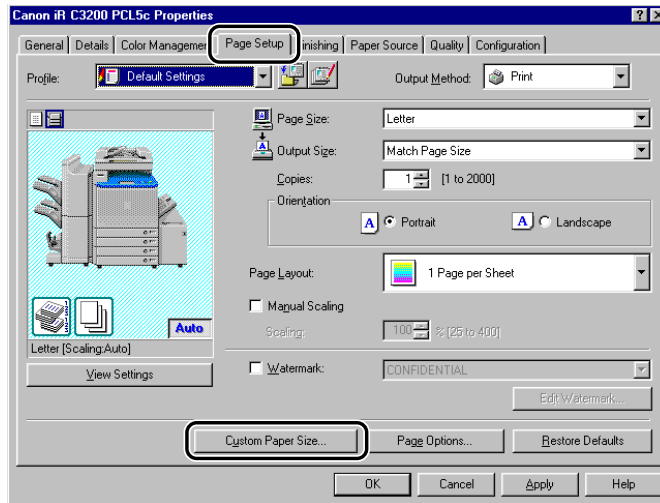

- 4** Enter a custom paper name in [Name of Custom Paper Size].

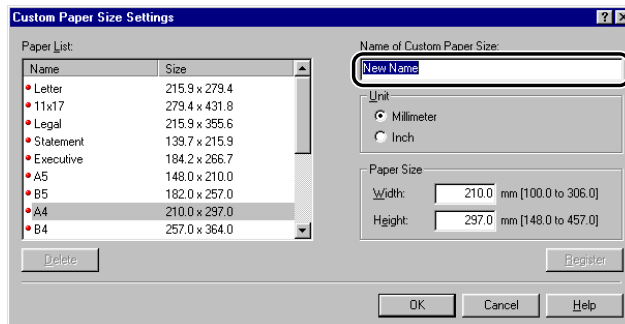

- 5** Select the unit of measurement to specify the paper size for [Unit] → specify the height and width for [Height] and [Width].



NOTE

Enter the values for the height and width of the paper size in portrait orientation, where the height should be longer than the width.


- 6 Click [Register] → click [OK] in the [Custom Paper Size Settings] dialog box.
- 7 Click [OK] in the printer properties dialog box.

 NOTE

The custom paper sizes can be used with all printers installed on the computer you are using.

Printing on Custom Paper

- 1 From the printer properties dialog box, click the [Page Setup] tab.
- 2 Select the custom paper name you specified from [Page Size] and [Output Size].

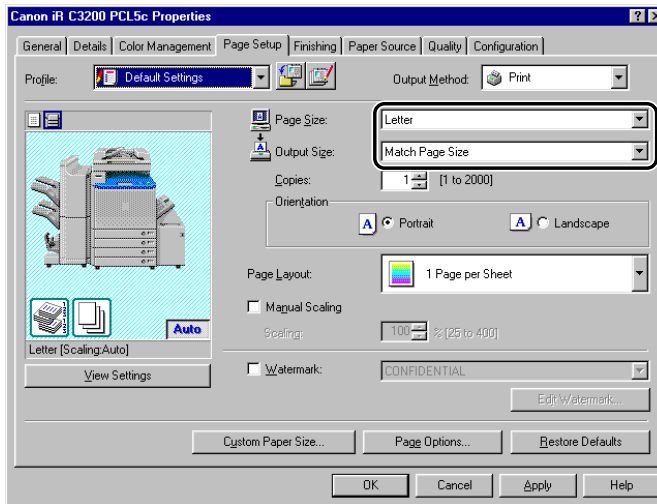

- 3 Click [OK].

Printing on Local Standard Paper

You can use local standard paper, such as oficio or government letter paper, to print documents. In order to print on local standard paper, you need to specify the paper source for local standard paper in advance. Also, you need to register the local standard paper as custom paper. (See "Registering Custom Paper," on p. 3-54, and "Printing on Custom Paper," on p. 3-56.)

Specifying the Paper Source for Local Standard Paper

If the printer configuration has been set up automatically, the paper source for local standard paper has already been specified automatically.


If the printer configuration has not been set up automatically, follow the procedure below to specify the paper source for local standard paper.

NOTE

For the size and type of local standard paper supported by the printer you are using, see "Local Standard Paper Sizes List," on p. 5-7.


1 On the [Start] menu, point to [Settings] → click [Printers].

NOTE


- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the  (Start) menu, click [Control Panel] → [Printers].

2 In the [Printers] folder, right-click the printer icon for your printer → click [Properties].

- 3** In the printer properties dialog box, click the [Device Settings] tab → [Form to Tray Assignment].

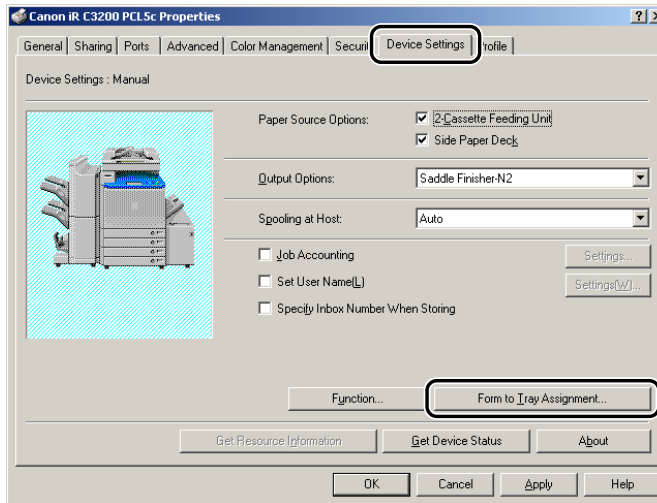

- 4** From [Paper Source Information], select the paper source in which the local standard paper is loaded → select [Local Standard] from [Paper Size].

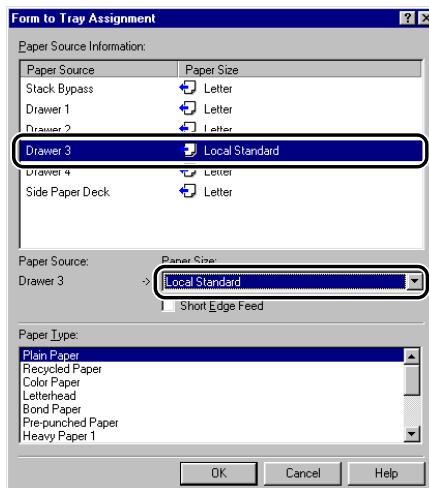

- 5** Click [OK] in the [Form to Tray Assignment] dialog box.
- 6** Click [OK] in the printer properties dialog box.


Printing a Banner Page with a Print Job

You can add a banner page to your document when it is printed. The banner page shows the user's login name, the time at which the job was printed, and the document file name.

NOTE


This option is available for the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, iR C2380, iR C2550, iR C2620, iR C2880, iR C3080, iR C3200, iR C3220, iR C3380, iR C3580, iR C4080, iR C4580, iR C5180, iR C5185, iR C2570, iR 2570C, iR C2580, iR C3100, iR 3100C, iR C3170, iR 3170C, iR C3180, iR 3180C, iR C5800, iR 5800C, iR C5870, iR 5870C, iR C5880, iR 5880C, iR C6800, iR 6800C, iR C6870, iR 6870C, iR C6880, iR 6880C, iR105, iR105+, iR1023/1022/1018, iR2016, iR2018, iR2020, iR2030/2025/2022, iR2230, iR2830, iR2870/2270, iR3025, iR3030, iR3035, iR3045, iR3300/2800/2200, iR3300i/2200i, iR3320i/2220i, iR3320N/2220N, iR3530, iR4530, iR4570/3570, iR5050, iR5055, iR5065, iR5075, iR6000/5000, iR6000i/5000i, iR6020i/5020i, iR6020N/5020N, iR6570/5570, iR7105/7095/7086, iR7200, iR8070, iR85, iR85+, iR8500, iR9070, FAX-L3000 series, and MF7170i.

1 From the printer properties dialog box, click the [Finishing] tab.

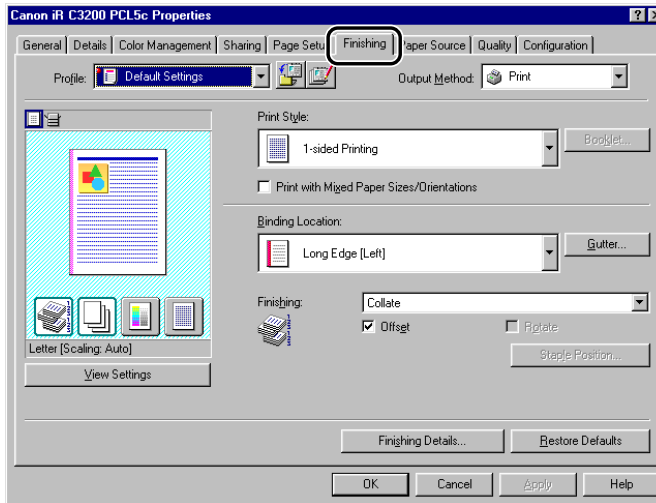

2 Click [Finishing Details].

The [Finishing Details] dialog box opens.

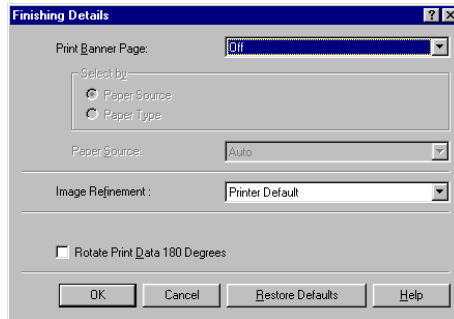

3 Select [Auto] for [Print Banner Page].

4 Select either [Paper Source] or [Paper Type] from [Select by], according to the paper supply method you want to use.

5 Specify the paper source or paper type to be used for the banner page → click [OK].



NOTE

Paper types that support banner page printing are Plain Paper, Recycled Paper, and Color Paper.

6 Click [OK] in the [Finishing] sheet.



NOTE

- A banner page will not be printed with Secured Printing, Storing or Holding a document, Overlay Printing, Perfect Binding, Saddle Stitching, or C-fold Printing.
- Regardless of the number of copies that you are printing, only one banner page is output for each print job.
- A banner page is output together with the other pages of a print job to the same destination, but it will not be stapled even if the print job uses these options.
- If [Disabled] is selected for [Spooling at Host] in the [Device Settings] sheet, this option is not available.

4

CHAPTER

Special Print Options

This chapter describes instructions for specifying the various special settings for printing a document.

Overlay Printing	4-2
What Is Overlay Printing?	4-2
Overlay Printing Using a Form File on Host	4-3
Overlay Printing Using a Form File on Device	4-9
Specifying the Print Quality	4-19
What Is an Objective?	4-19
Selecting and Editing an Objective	4-20
Sending Document Data to a User Inbox or Mail Box	4-23
Getting User Inbox or Mail Box Names	4-23
Sending a Document to a User Inbox or Mail Box	4-24
Registering a Document as an Image Form	4-27
Secured Printing	4-30
Editing Multiple Print Documents Together	4-33
Promoting a Print Job	4-35
Storing a Document Temporarily in a Hold Queue	4-37
Job Accounting Feature	4-39
Job Accounting Overview	4-39
Specifying the ID and Password	4-40
Printing with Job Accounting	4-42
Specifying the Color and Grayscale Settings	4-44
About the Color and Grayscale Settings	4-44
Color Printing	4-45
Grayscale Printing	4-48

Overlay Printing

This section describes what Overlay Printing is, how to create a form file, and how to print with an Overlay.

What Is Overlay Printing?

Overlay Printing overlays text data onto a form file.

For example, if the format of a report or bill is created in application software as a form file, you can create a perfectly formatted document by overlaying a text data document onto the form file.

To perform Overlay Printing, form files are required. You can use the following as form files:

- Files created in application software and then stored in your computer or your printer as form files
- Image data files for Form Composition stored in the printer
- Files downloaded to your printer with the Canon NetSpot Resource Downloader



IMPORTANT

- For the *BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR1023/1022/1018, iR2016, iR2018, iR2020, iR2030/2025/2022, FAX-L2000 series, FAX-L3000 series, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, and MF7170i*, you can use only form files created in applications on your computer.
- For the *iR C2620, iR C2620-C1, iR C2620-C2, iR C3200, iR C3200-C1, iR C3220, iR C3220-C1, iR C3220-C2, iR C3100, iR 3100C, iR C3100-E1, iR 3100C-E1, iR C5800, iR 5800C, iR C5800-D1, iR 5800C-D1, iR C6800, iR 6800C, iR C6800-D1, iR 6800C-D1, iR2000/1600, iR2010/1610, iR2230, iR2830, iR400, GP405/GP300, iR3530, iR4530, GP605/GP605P/GP555, iR6000/5000, and LBP-2000*, you can use only form files created in applications on your computer and Canon NetSpot Resource Downloader form files.
- To use form files downloaded with the Canon NetSpot Resource Downloader, you need to install the NetSpot Resource Downloader Printer Driver Add-on Module. For instructions on how to use Canon NetSpot Resource Downloader, see the NetSpot Resource Downloader User's Guide.
- For Windows Vista, Canon NetSpot Resource Downloader is not supported.


Overlay Printing Using a Form File on Host

Creating a Form File

If forms created in application software are stored in your computer as form files, you can use the forms for Overlay Printing.

To store a form file in your computer, follow the procedure below.

- 1 Prepare a document in the application software.
- 2 In the application software, select [Print].
- 3 Click [Properties] in the [Print] dialog box.
- 4 Display the [Page Setup] sheet.

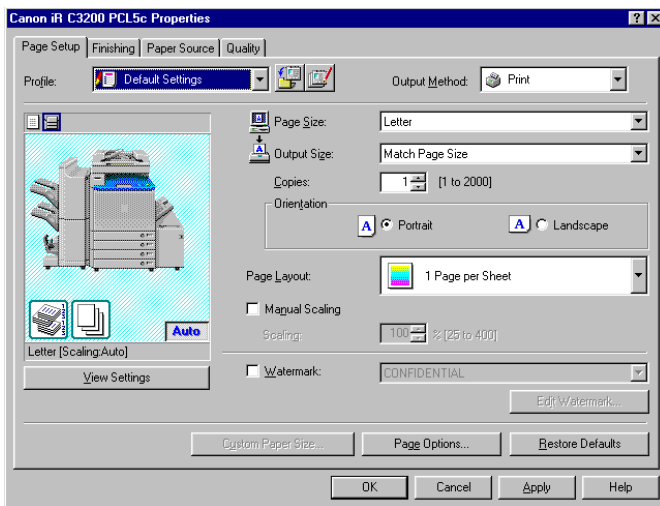


- 5 Click [Page Options].
The [Page Options] dialog box opens.

6 Click the [Overlay] tab.

7 Specify the overlay processing method.


- For the BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR C2620, iR C2620-C1, iR C2620-C2, iR C3200, iR C3200-C1, iR C3220, iR C3220-C1, iR C3220-C2, iR C3100, iR 3100C, iR C3100-E1, iR 3100C-E1, iR C5800, iR 5800C, iR C5800-D1, iR 5800C-D1, iR C6800, iR 6800C, iR C6800-D1, iR 6800C-D1, iR1023/1022/1018, iR2000/1600, iR2010/1610, iR2016, iR2018, iR2020, iR2030/2025/2022, iR2230, iR2830, iR400, GP405/GP300, iR3530, iR4530, GP605/GP605P/GP555, iR6000/5000, iR6570/5570, FAX-L2000 series, FAX-L3000 series, LBP-2000, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, LBP5970/LBP5975, and MF7170i:

Select [Create a Form File] under [Processing Method].

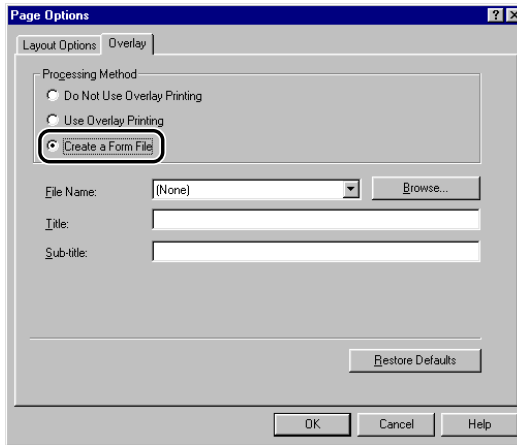

● **For printers other than the above:**

- Select [Create a Form File] under [Processing Method] → select [Stored in Host].

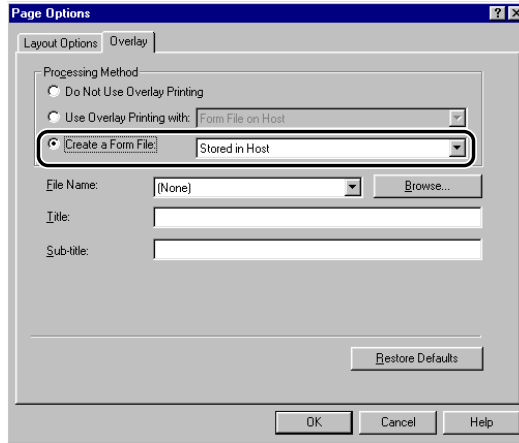

8 Click [Browse] → specify the file name → click [Save].

9 Enter a title, or a subtitle if necessary → click [OK].

10 Click [OK] in the [Page Setup] sheet.

11 Click [OK] in the [Print] dialog box.

The document is now registered as a form file in the folder you specified.




NOTE

The document is not printed out when creating a form file.

Printing with an Overlay

To perform Overlay Printing using a form file stored in your computer, follow the procedure below.


- 1** In the application software, select [Print].
- 2** Click [Properties] in the [Print] dialog box.
- 3** Display the [Page Setup] sheet.

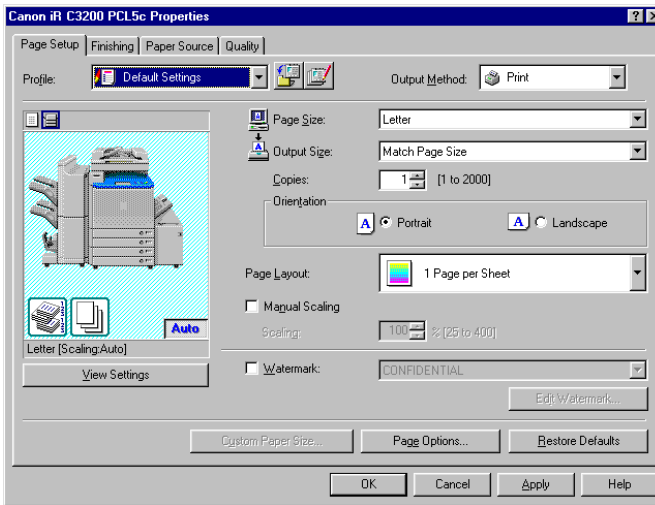

- 4** Click [Page Options].
The [Page Options] dialog box opens.
- 5** Click the [Overlay] tab.
- 6** Specify the overlay processing method.


- For the BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR1023/1022/1018, iR2016, iR2018, iR2020, iR2030/2025/2022, FAX-L2000 series, FAX-L3000 series, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, MF7170i, with the PCL5c, PCL5e, and PCL6 printer drivers, and for the iR2000/1600, iR2010/1610, iR2230, iR2830, iR3530, iR6000/5000-L1, LBP5970/LBP5975, with the PCL6 printer driver:

- Select [Use Overlay Printing] under [Processing Method].

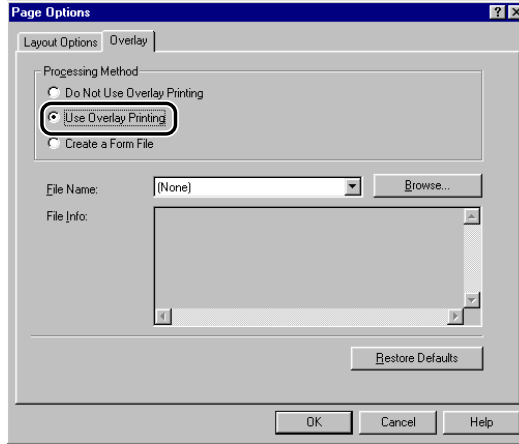

● **For printers other than the above:**

- Select [Use Overlay Printing] under [Processing Method] → select [Form File on Host].

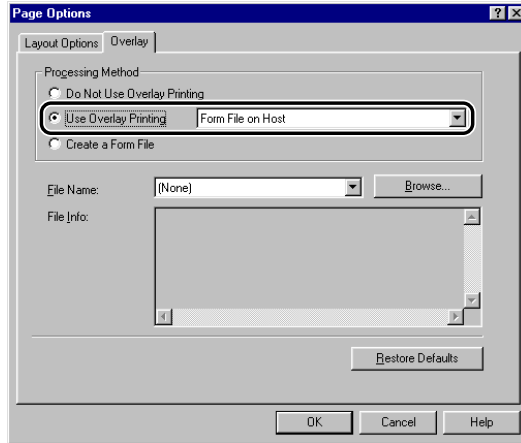

7 Click [Browse] → select the file name that you want to use as a form file → click [Save].

8 Click [OK] in the [Page Options] dialog box.

9 Click [OK] in the [Page Setup] sheet.

10 Click [OK] in the [Print] dialog box.

The document is printed with the selected form file overlaid.

Overlay Printing Using a Form File on Device

To perform Overlay Printing using form files stored in your printer, you can use the following as form files:

- Files created in application software and then stored in your printer as form files
- Image data files for Form Composition stored in the printer
- Files downloaded to your printer with the Canon NetSpot Resource Downloader



IMPORTANT

- *This option is not available for the BJJ1350, BJJ1350D, BJJ2350, iR C2000 series, iR1023/1022/1018, iR2016, iR2018, iR2020, iR2030/2025/2022, FAX-L2000 series, FAX-L3000 series, LBP3360, LBP3370, LBP3460, and MF7170i, and for the LBP5970/LBP5975 with the PCL6 printer driver.*
- *For the iR C2620, iR C2620-C1, iR C2620-C2, iR C3200, iR C3200-C1, iR C3220, iR C3220-C1, iR C3220-C2, iR C3100, iR 3100C, iR C3100-E1, iR 3100C-E1, iR C5800, iR 5800C, iR C5800-D1, iR 5800C-D1, iR C6800, iR 6800C, iR C6800-D1, iR 6800C-D1, iR2000/1600, iR2010/1610, iR2230, iR2830, iR400, GP405/GP300, iR3530, iR4530, GP605/GP605P/GP555, iR6000/5000, and LBP-2000, you can use only Canon NetSpot Resource Downloader form files.*
- *To use form files downloaded with the Canon NetSpot Resource Downloader, you need to install NetSpot Resource Downloader Printer Driver Add-on Module. For instructions on how to use the Canon NetSpot Resource Downloader, see the NetSpot Resource Downloader User's Guide.*
- *To use the iR6000i/5000i, select [iR5000i-6000i Series] from [Device] on the [Device Settings] sheet.*

Creating a Form File


Follow the procedure below to store an application created form file in the printer.

NOTE

- This option is not available for the BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR C2620, iR C2620-C1, iR C2620-C2, iR C3200, iR C3200-C1, iR C3220, iR C3220-C1, iR C3220-C2, iR C3100, iR 3100C, iR C3100-E1, iR 3100C-E1, iR C5800, iR 5800C, iR C5800-D1, iR 5800C-D1, iR C6800, iR 6800C, iR C6800-D1, iR 6800C-D1, iR1023/1022/1018, iR2000/1600, iR2010/1610, iR2016, iR2018, iR2020, iR2030/2025/2022, iR2230, iR2830, iR400, GP405/GP300, iR3530, iR4530, GP605/GP605P/GP555, iR6000/5000, FAX-L2000 series, FAX-L3000 series, LBP-2000, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, LBP5970/LBP5975, and MF7170i.
- Depending on the controller version of the printer you are using, this option may not be available.

4


- 1** In the application software, prepare a document that you want to store as a form file.
- 2** Select [Print] → click [Properties] in the [Print] dialog box.
- 3** Display the [Page Setup] sheet.

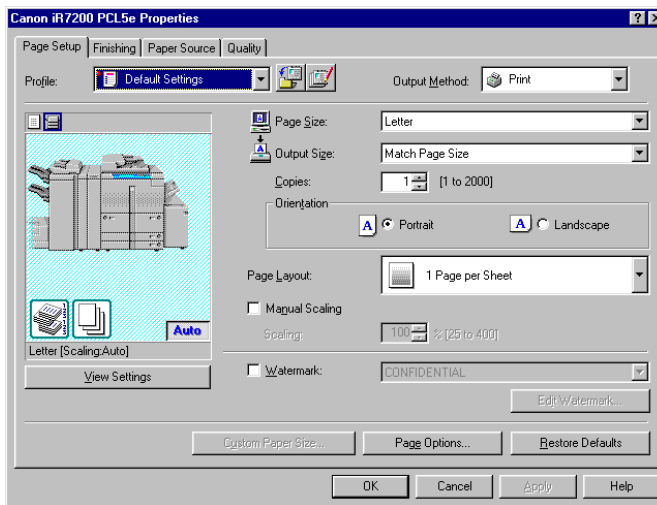

4 Click [Page Options].

The [Page Options] dialog box opens.

5 Click the [Overlay] tab → select [Create a Form File] under [Processing Method] → select [Stored in Device].

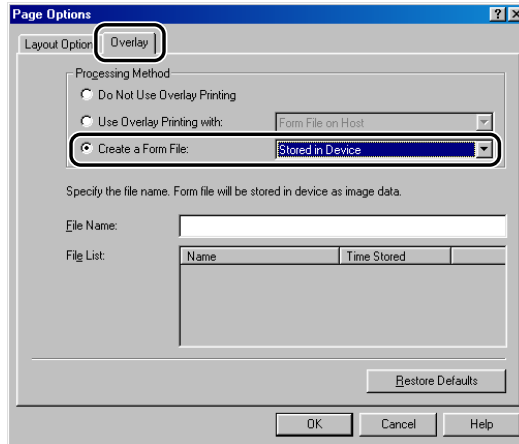

6 Enter a file name in [File Name] → click [OK].

7 Click [OK] in the [Page Setup] sheet.

8 Click [OK] in the [Print] dialog box.

The document is now stored as a form file in the printer.

The form file does not print out at creation.

Printing with an Overlay Using a Form File Stored in the Printer

You can use image data for Form Composition stored in the printer to perform Overlay Printing.


NOTE

- This option is not available for the BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR C2620, iR C2620-C1, iR C2620-C2, iR C3200, iR C3200-C1, iR C3220, iR C3220-C1, iR C3220-C2, iR C3100, iR 3100C, iR C3100-E1, iR 3100C-E1, iR C5800, iR 5800C, iR C5800-D1, iR 5800C-D1, iR C6800, iR 6800C, iR C6800-D1, iR 6800C-D1, iR1023/1022/1018, iR2000/1600, iR2010/1610, iR2016, iR2018, iR2020, iR2030/2025/2022, iR2230, iR2830, iR400, GP405/GP300, iR3530, iR4530, GP605/GP605P/GP555, iR6000/5000, FAX-L2000 series, FAX-L3000 series, LBP-2000, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, LBP5970/LBP5975, and MF7170i.
- Depending on the controller version of the printer you are using, this option may not be available.

1 In the application software, select [Print].

2 Click [Properties] in the [Print] dialog box.


3 Display the [Page Setup] sheet.

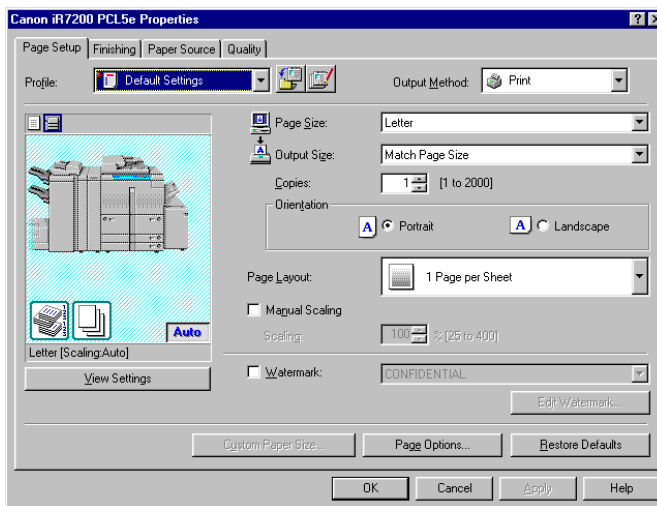

4 Click [Page Options].

The [Page Options] dialog box opens.


5 Click the [Overlay] tab → select [Use Overlay Printing with] under [Processing Method] → select [Form File (Image data) on Device].

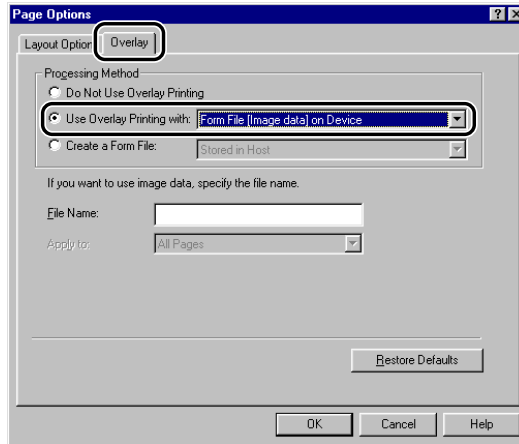

6 Specify the form file name.

- **If you acquire the printer status successfully:**
 - When the [File List] appears, select a form file.
- **If you cannot acquire the printer status:**
 - Enter a form file name in [File Name].

- 7** For 2-sided printing, select which pages of the document are to be overlaid with a form file from [Apply to] → click [OK].

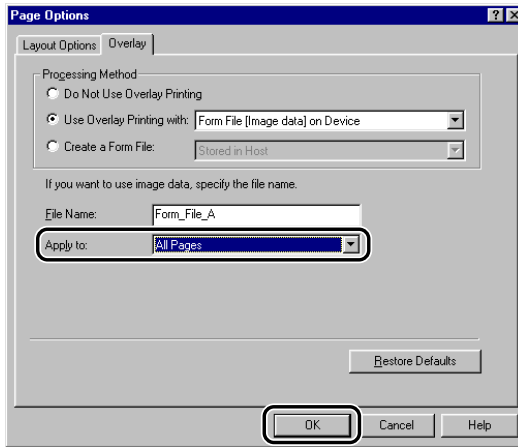

- 8** Click [OK] in the [Page Setup] sheet.

- 9** Click [OK] in the [Print] dialog box.

The document is printed with the selected form file overlaid.

Printing with an Overlay Using a NetSpot Resource Downloader Form File

With the PCL5c and PCL5e printer driver, you can use form data downloaded to your printer with the Canon NetSpot Resource Downloader as a form file when performing Overlay Printing.

IMPORTANT

To use form files downloaded with the Canon NetSpot Resource Downloader, you need to acquire the resource information beforehand by following the procedure below.

1. Display the [Device Settings] sheet.
2. Click [Get Resource Information].

[Get Resource Information] becomes available after installing the Canon NetSpot Resource Downloader Printer Driver Add-on Module.


NOTE

- This option is not available for the BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR1023/1022/1018, iR2016, iR2018, iR2020, iR2030/2025/2022, FAX-L2000 series, FAX-L3000 series, LBP3360, LBP3370, LBP3460, LBP5360, LBP5960, LBP5970/LBP5975, and MF7170i.
- For Windows Vista, Canon NetSpot Resource Downloader is not supported.

1 In the application software, select [Print].

2 Click [Properties] in the [Print] dialog box.

3 Display the [Page Setup] sheet.

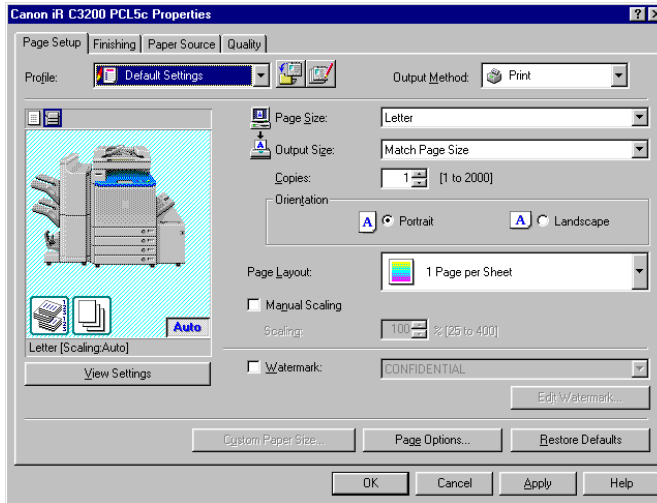

4

Special Print Options


4 Click [Page Options].

The [Page Options] dialog box opens.

5 Click the [Overlay] tab.


6 Specify the overlay processing method.

- For the iR C2620, iR C2620-C1, iR C2620-C2, iR C3200, iR C3200-C1, iR C3220, iR C3220-C1, iR C3220-C2, iR C3100, iR 3100C, iR C3100-E1, iR 3100C-E1, iR C5800, iR 5800C, iR C5800-D1, iR 5800C-D1, iR C6800, iR 6800C, iR C6800-D1, iR 6800C-D1, iR2000/1600, iR2010/1610, iR2230, iR2830, iR400, GP405/GP300, iR3530, iR4530, GP605/GP605P/GP555, iR6000/5000, and LBP-2000:
 - Select [Use Overlay Printing] under [Processing Method] → select [Form File on Device].

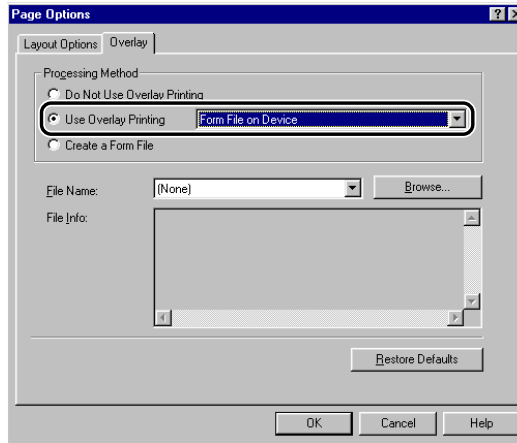

● For printers other than the above:

- Select [Use Overlay Printing with] under [Processing Method] → select [Form File (PDL data) on Device].

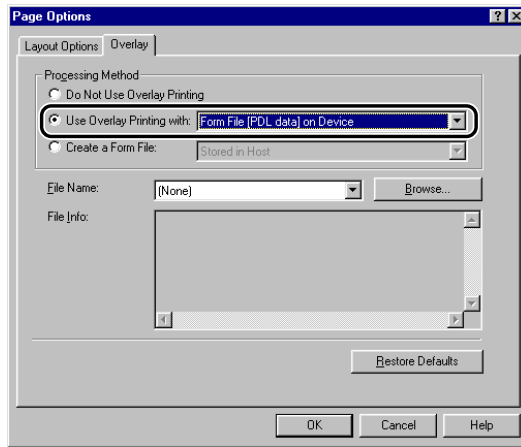

- 7** Click [Browse] → select the form file name in the [Browse] dialog box → click [Save].

NOTE

The form files downloaded to the printer are displayed in the [Browse] dialog box if you acquired the resource information successfully by clicking [Get Resource Information] in the [Device Settings] sheet.

- 8** Click [OK] in the [Page Options] dialog box.

- 9** Click [OK] in the [Page Setup] sheet.

- 10** Click [OK] in the [Print] dialog box.

The document is printed with the selected form file overlaid.

Specifying the Print Quality

The [Quality] sheet enables you to select print quality settings called Objectives.

What Is an Objective?

Objectives are print quality settings selected to give the best result for a particular type of print job.

The following Objectives are stored in the printer driver:

- General
- High Definition Text
- Text
- Text/Table
- Publications
- Graphics
- Photos
- Designs [CAD]
- CAD
- Toner Saver (available if the printer is equipped with the toner reduction feature)



NOTE


The available objectives differ depending on the printer model you are using.

Selecting and Editing an Objective

You can select the Objective most suitable for your type of print job. You can also edit the settings of an Objective.

Selecting an Objective

- 1 From the printer properties dialog box, click the [Quality] tab.

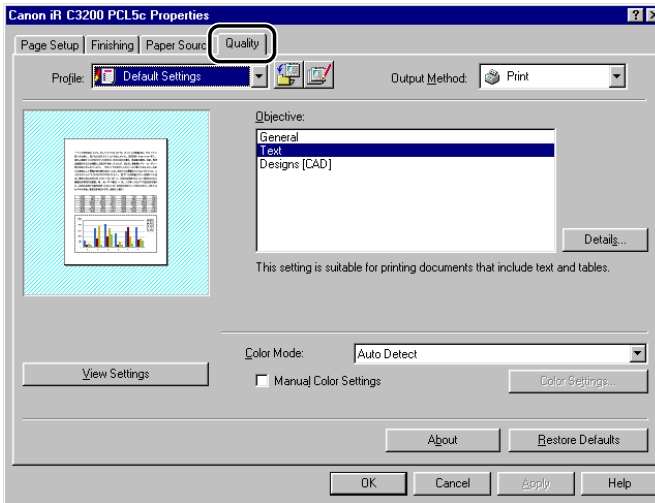


- 2 Click the required Objective from [Objective].



An explanation of the selected Objective is displayed below the [Objective] list box. Use the information to decide which Objective to use.

Editing the Objective Settings


- 1 From the printer properties dialog box, click the [Quality] tab.

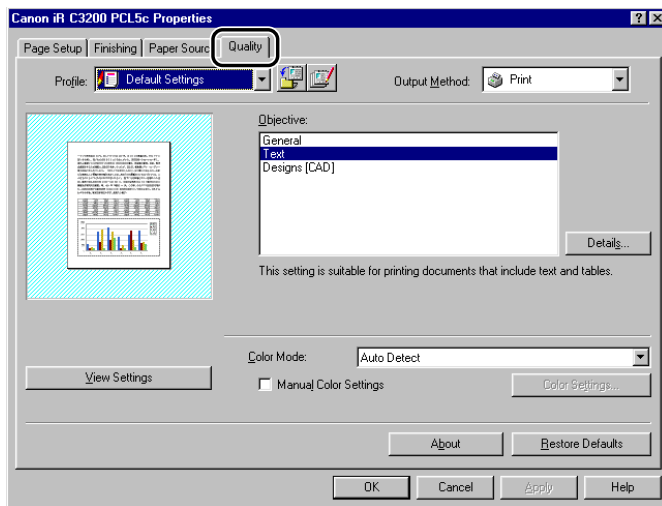

- 2 Select the [Objective] whose settings you want to change.

3 Click [Details].

The [Detailed Settings] dialog box opens.

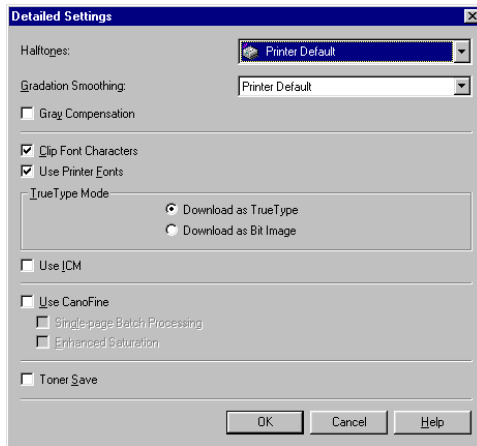

NOTE

The dialog box differs depending on the printer model you are using.

4 Specify the new settings → click [OK].

5 Click [OK] in the [Quality] sheet.

Sending Document Data to a User Inbox or Mail Box

Document data can be sent to a User Inbox or Mail Box on the machine. (Not available for the BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR1023/1022/1018, iR2016, iR2018, iR2020, iR2030/2025/2022, FAX-L2000 series, FAX-L3000 series, LBP3360, LBP3370, LBP3460, and MF7170i.)

Getting User Inbox or Mail Box Names

You can display User Inbox or Mail Box names registered in the machine.

To get User Inbox or Mail Box names automatically, follow the procedure below.

For the iR2000/1600, iR2010/1610, iR400, GP405/GP300, GP605/GP605P/GP555, and LBP-2000

1 Prepare the User Inbox or Mail Box name file.

For instructions on how to set the User Inbox or Mail Box name file, see the README.TXT file located in the following folder: \PCL\uk_eng\32BIT.

2 Click [Get Device Status] in the [Device Settings] sheet.

For instructions on how to get the device status, see "Setting Up the Printer Configuration," on p. 2-50.


3 Click [Yes] in the message box that asks whether you want to import User Inbox or Mail Box names, and then specify the location of the User Inbox or Mail Box name file you want to import.

For Printers Other Than the Above

1 Click [Get Device Status] in the [Device Settings] sheet.

For instructions on how to get the device status, see "Setting Up the Printer Configuration," on p. 2-50.

2 Click [Yes] in the [Confirmation] message box.

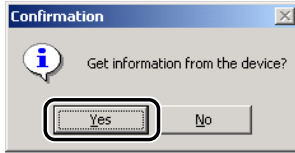

If this failed to get the device information, check the connections and settings.

Sending a Document to a User Inbox or Mail Box


After you have sent the document to a User Inbox or Mail Box, you can use the printer's control panel to output the document.

To send a document to a User Inbox or Mail Box, follow the procedure below.


NOTE

- For the iR2000/1600, iR2010/1610, LBP-2000, LBP5360, LBP5960, and LBP5970/LBP5975, this option is available only when an optional hard disk is installed in the printer.
- For the iR400 and GP405/GP300, this option is available only when an extended memory is installed in the printer.


- 1 From the printer properties dialog box, select [Store] from [Output Method] in the [Page Setup], [Finishing], [Paper Source], or [Quality] sheet.

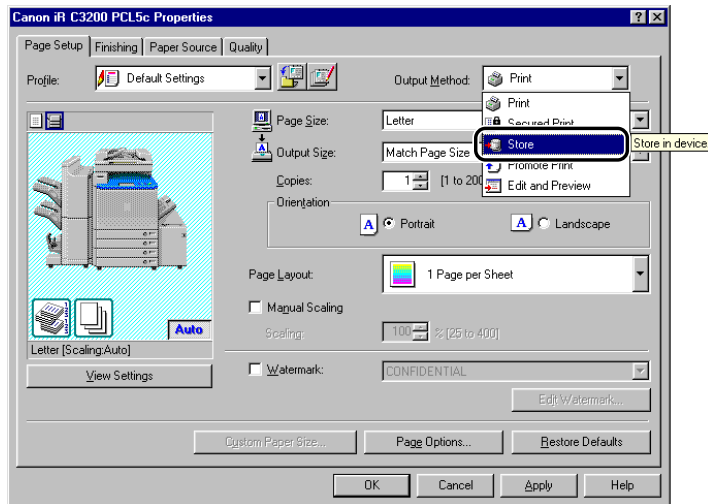

- 2 Click [Yes] in the message box.

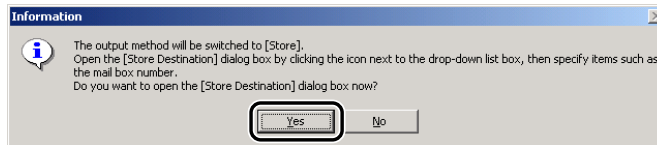

The [Store Destination] dialog box opens.

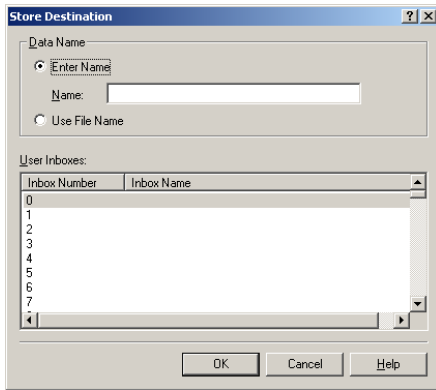

4

NOTE

- If you close the [Store Destination] dialog box before you complete the operation for this box, the [Store Destination] icon appears in the top right corner of the dialog box. You can reopen the [Store Destination] dialog box by clicking this icon, or by repeating steps 1 and 2.
- If you have already specified a box number of a User Inbox or Mail Box in the [Store Destination] dialog box, skip to step 4.

3 Specify the document name for the data to send to the User Inbox or Mail Box → specify a box number.

- If you want to save the data with a new name:
 - Select [Enter Name] → enter the name for [Name].
- If you want to save the data with the same name as the document:
 - Select [Use File Name].

NOTE

Depending on the printer you are using, you can send data to multiple mail boxes simultaneously.

4 Click [OK] in the [Store Destination] dialog box.

5 Click [OK] in the printer properties dialog box.

NOTE

If you select [Specify Inbox Number when Storing] in the [Device Settings] sheet, the [Store Destination] dialog box is displayed when you click [OK] in the [Print] dialog box, enabling you to set an Inbox Number.

Registering a Document as an Image Form


When copying a document, a registered Image Form can be overlaid onto a document.

To register a document as an Image Form, follow the procedure below.


NOTE

- Only the first page of the document is registered as an Image Form.
- This option is available only for the GP605/GP605P/GP555.


1 From the printer properties dialog box, select [Store] from [Output Method] in the [Page Setup], [Finishing], [Paper Source], or [Quality] sheets.

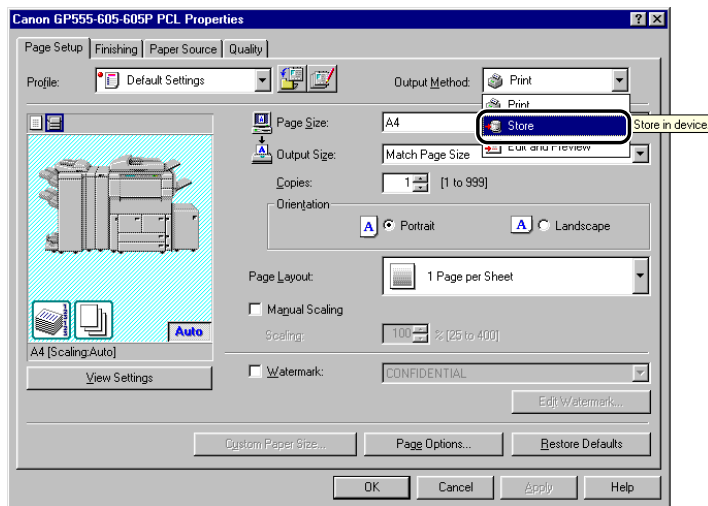

2 Click [Yes] in the message box.

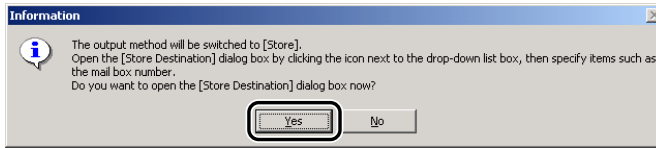

The [Store Destination] dialog box opens.

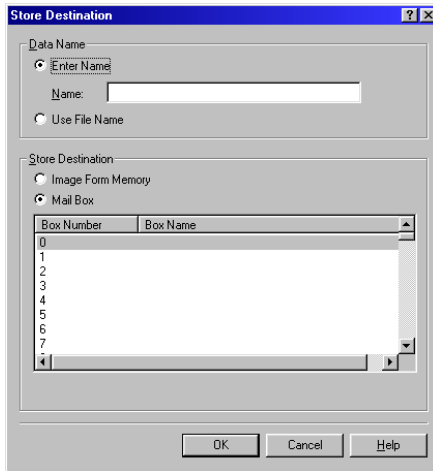

NOTE

- If you close the [Store Destination] dialog box before you complete the operation for this box, the [Store Destination] icon appears in the top right corner of the dialog box. You can re-open the [Store Destination] dialog box by clicking this icon, or by repeating steps 1 and 2.
- If you have already specified a box number of a Mail Box in the [Store Destination] dialog box, skip to step 4.

3 Specify the document name for the data to register as an image form→ select [Image Form Memory] from [Store Destination].

● If you want to save the data with a new name:

Select [Enter Name] → enter the name for [Name].

● If you want to save the data with the same name as the document:

Select [Use File Name].

4 Click [OK] in the [Store Destination] dialog box.

5 Click [OK] in the printer properties dialog box.

Secured Printing

Secured Printing saves a print job in the printer with a certain password and outputs it later only if the correct password is verified. This feature is useful when printing a confidential document.


NOTE

- For the iR2000/1600, iR2010/1610, LBP-2000, LBP5360, LBP5960, and LBP5970/LBP5975, this option is available only when an optional hard disk is installed in the printer.
- Secured Printing is not available for the BIJ1350, BIJ1350D, BIJ2350, iR1023/1022/1018, iR2016, iR2018, iR2020, iR2030/2025/2022, iR400, GP405/GP300, GP605/GP605P/GP555, FAX-L2000 series, FAX-L3000 series, LBP3360, LBP3370, LBP3460, and MF7170i.


4

Special Print Options


- 1 From the printer properties dialog box, select [Secured Print] from [Output Method] in the [Page Setup], [Finishing], [Paper Source], or [Quality] sheets.

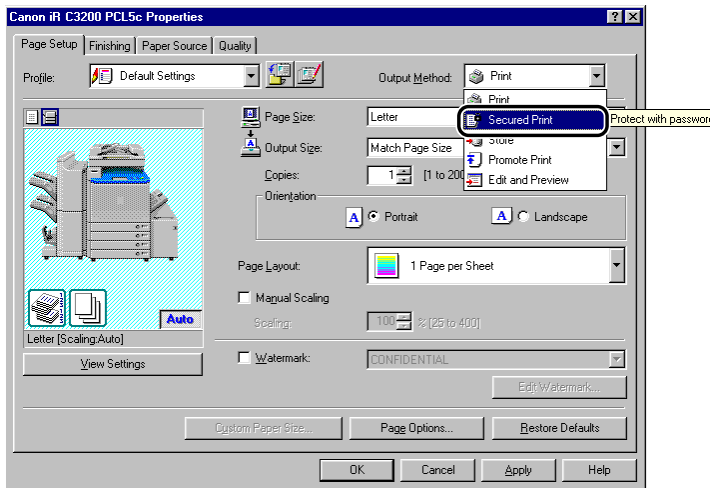

2 Click [OK] in the message box to switch to the Secured Print mode.

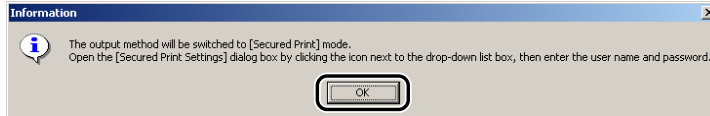

3 Click [] (Secured Print Settings) to open the [Secured Print Settings] dialog box → enter the user name and password for the current print job.

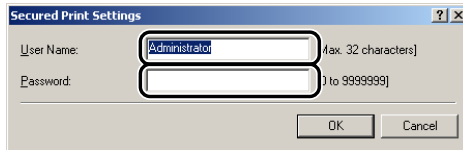

NOTE


- The user name set in the [User Name Settings] dialog box is displayed as the user name. To open the [User Name Settings] dialog box, select [Set User Name] and click [Settings] in the [Device Settings] sheet.
- If [Do Not Allow User Name Changes] is selected in the [User Name Settings] dialog box, you cannot change the user name.

4 Click [OK] in the [Secured Print Settings] dialog box.

5 Click [OK] to close the printer properties dialog box → click [OK] in the [Print] dialog box.

The [Confirm Password] dialog box opens.

- 6 **Confirm the document name, user name, and password → click [OK] in the [Confirm Password] dialog box.**

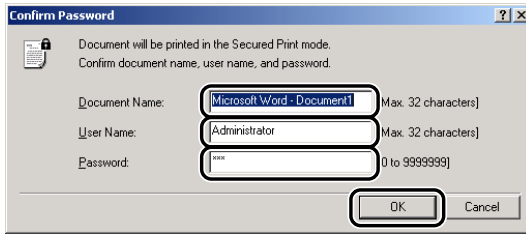

The print job is saved inside the printer under the specified user name and password.

 **NOTE**

If [Do Not Allow User Name Changes] is selected in the [User Name Settings] dialog box, you cannot change the user name.


- 7 **On the printer's control panel or Remote UI, select the print job you want to print → enter the password.**

The print job is output only if the correct password is entered.


Editing Multiple Print Documents Together

You can edit and print two or more documents created using different application software as a single document.

- 1 From the printer properties dialog box, select [Edit and Preview] from [Output Method] in the [Page Setup], [Finishing], [Paper Source], or [Quality] sheets.

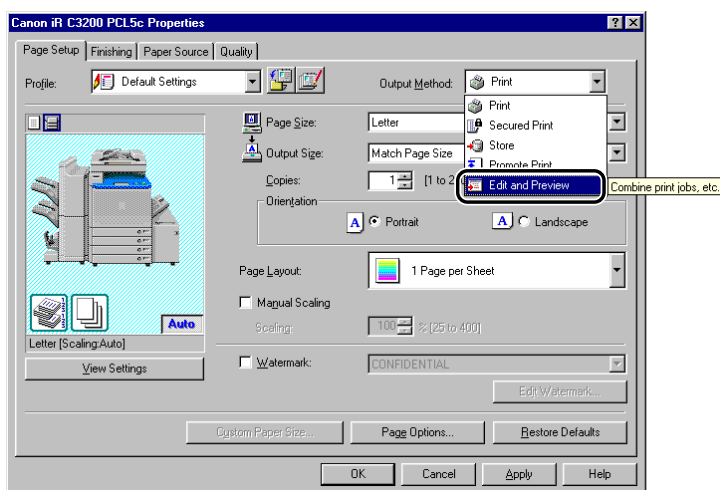


- 2 Click [OK] in the message box to switch to the Edit and Preview mode.

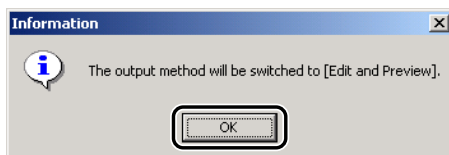

3 Click [OK] to close the printer properties dialog box → click [OK] in the [Print] dialog box.


If the Edit and Preview mode is selected when printing a document, Canon PageComposer starts instead of outputting printed pages.

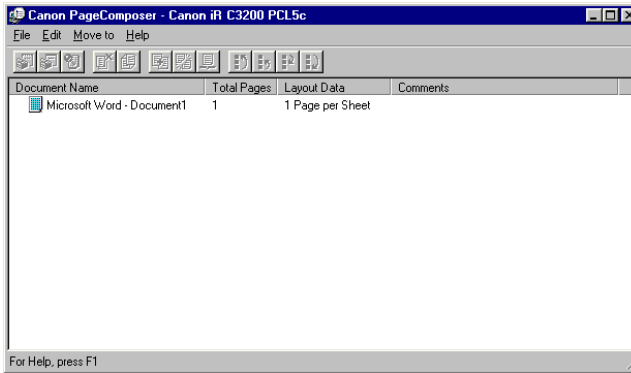

4 Repeat steps 1 to 3 for the other documents.

You can use Canon PageComposer to combine or change the order of two or more documents. For details about using Canon PageComposer, see the Canon PageComposer Help.

NOTE

If the printer properties dialog box is accessed from the [Printers] folder, you can click [] (Lock) at the right of the drop-down list box to start Canon PageComposer each time you print a document.


Promoting a Print Job

You can give the desired job top priority for printing over all other print jobs waiting in the print queue.

NOTE

This option is available for the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, iR C2380, iR C2550, iR C2620, iR C2880, iR C3080, iR C3200, iR C3220, iR C3380, iR C3580, iR C4080, iR C4580, iR C5180, iR C5185, iR C2570, iR 2570C, iR C2580, iR C3100, iR 3100C, iR C3170, iR 3170C, iR C3180, iR 3180C, iR C5800, iR 5800C, iR C5870, iR 5870C, iR C5880, iR 5880C, iR C6800, iR 6800C, iR C6870, iR 6870C, iR C6880, iR 6880C, iR105+, iR2230, iR2830, iR2870/2270, iR3025, iR3030, iR3035, iR3045, iR3530, iR4530, iR4570/3570, iR5050, iR5055, iR5065, iR5075, iR6570/5570, iR7105/7095/7086, iR8070, iR85+, and iR9070.

- 1** From the printer properties dialog box, select [Promote Print] from [Output Method] in the [Page Setup], [Finishing], [Paper Source], or [Quality] sheets.

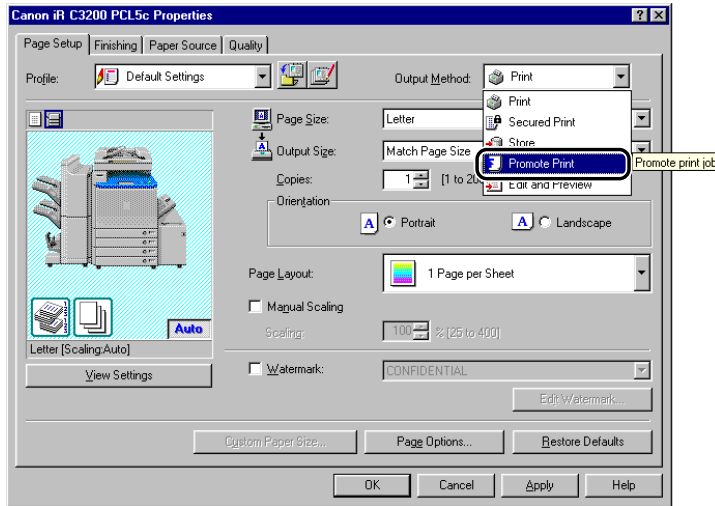

- 2 Click [OK] in the message box to switch to the Promote Print mode.



- 3 Click [OK] to close the printer properties dialog box → click [OK] in the [Print] dialog box.

Storing a Document Temporarily in a Hold Queue

You can temporarily store a document in a special box in the printer memory (hold queue).


The operator can change the settings for jobs in the hold queue, and the order in which they are printed. Jobs that are in a hold state can be printed by an output instruction.

To store a document in a hold queue, follow the procedure below.

NOTE

- This option is available for the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, iR C4080, iR C4580, iR C5180, iR C5185, and iR7105/7095/7086.
- Depending on the controller version of the printer you are using, this option may not be available.


- 1** From the printer properties dialog box, select [Hold] from [Output Method] in the [Page Setup], [Finishing], [Paper Source], or [Quality] sheets.

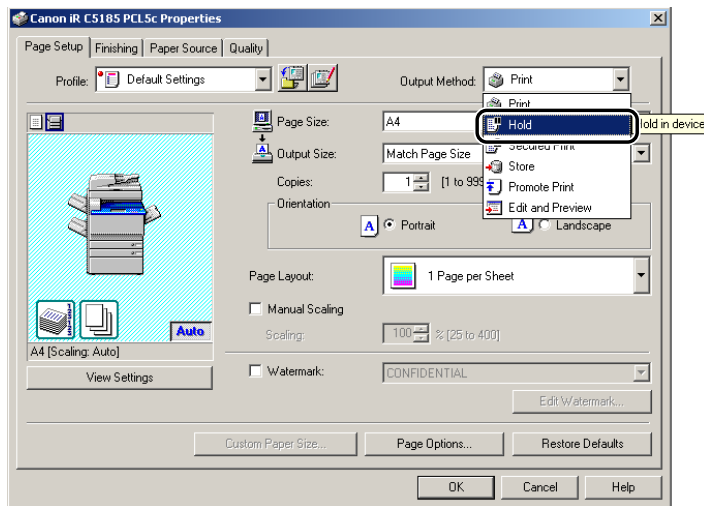

- 2 Click [OK] in the message box to switch to the Hold mode.



- 3 Click [Name Setting] (Name Setting) to open the [Name Setting] dialog box → specify the name of data to hold.

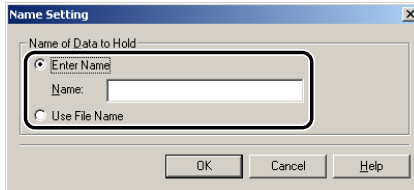


- 4 Click [OK] in the [Name Setting] dialog box.

- 5 Click [OK] to close the printer properties dialog box → click [OK] in the [Print] dialog box.

The [Name Setting] dialog box opens.

- 6 Confirm the name of data to hold → click [OK] in the [Name Setting] dialog box.

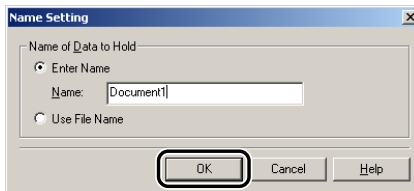

The print job is saved inside the printer under the specified name.

Job Accounting Feature

This section describes Job Accounting, how to specify the ID and password for Job Accounting, and how to print with Job Accounting.

Job Accounting Overview

When printing a document, Job Accounting enables you to sum print totals for each department or user for management purposes, under an ID and password assigned to each department or user.

A document will be printed only if the specified ID and password are verified as valid.



IMPORTANT


- *If you are using a shared printer in the Print Server (Point and Print) environment, it is necessary to install the Canon Driver Information Assist Service in the server PC in order to use the Job Accounting feature. (See "Installing the Canon Driver Information Assist Service," on p. 2-37.)*
- *If you are using a local printer (connected to an LPT port, USB port, etc.), you cannot use the Job Accounting feature.*
- *For the BIJ1350, BIJ1350D, BIJ2350, iR C2000 series, iR400, GP405/GP300, GP605/GP605P/GP555, FAX-L3000 series, LBP3360, LBP3370, LBP3460, LBP5360, and LBP5960, the Job Accounting feature is not available.*
- *For the imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, imagePRESS Server T1, iR C2380, iR C2550, iR C2620, iR C2620-C1, iR C2620-C2, iR C2880, iR C2880-J1, iR C3080, iR C3080-J1, iR C3220, iR C3220-C1, iR C3220-C2, iR C3380, iR C3380-J1, iR C3580, iR C3580-J1, iR C4080, iR C4080-H1, CLC4040-H1, iR C4580, iR C4580-H1, iR C5180, iR C5180-H1, CLC5151-H1, iR C5185, iR C5185-H1, iR C2570, iR 2570C, iR C2570-F1, iR 2570C-F1, iR C2580, iR C3170, iR 3170C, iR C3170-F1, iR 3170C-F1, iR C3180, iR 3180C, iR C5870, iR 5870C, iR C5870-G1, iR 5870C-G1, iR C5880, iR 5880C, iR C5880-G1, iR 5880C-G1, iR C6870, iR 6870C, iR C6870-G1, iR 6870C-G1, iR C6880, iR 6880C, iR C6880-G1, iR 6880C-G1, and LBP5970/LBP5975, while using Job Accounting, you can print grayscale documents without imposing Job Accounting by selecting the following:*
 - *[ON] for <Allow Black Printer Jobs> on the printer control panel.*
 - *[Do Not Use Job Accounting When B&W Printing] in the [ID/Password Settings] dialog box displayed by selecting [Job Accounting], and then clicking [Settings] in the [Device Settings] sheet of the printer driver.*
 - *[Black and White] for the [Color Mode] in the [Quality] sheet of the printer driver.*

Specifying the ID and Password

In order to print documents using the Job Accounting feature, follow the procedure below to specify the ID and password

1 On the [Start] menu, point to [Settings] → click [Printers].


 NOTE

- If you are using Windows XP Professional/Server 2003, on the [Start] menu, click [Printers and Faxes].
- If you are using Windows XP Home Edition, on the [Start] menu, click [Control Panel] → [Printers and Other Hardware] → [Printers and Faxes].
- If you are using Windows Vista, on the  (Start) menu, click [Control Panel] → [Printers].


2 In the [Printers] folder, right-click the printer icon for your printer → click [Properties].

3 In the printer properties dialog box, click the [Device Settings] tab.

- 4** Click [Get Device Status] to confirm that [Job Accounting] is selected, or manually select [Job Accounting].

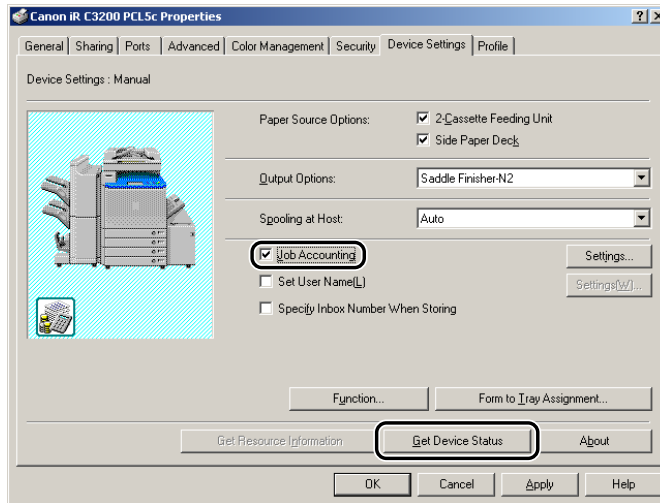

- 5** Click [Settings] to open the [ID/Password Settings] dialog box → enter the ID and password.

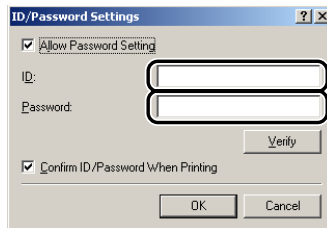

NOTE

- The ID and password can be changed when printing a document only if [Confirm ID/Password When Printing] is selected.
- You can specify the password in the [ID/Password Settings] dialog box only if [Allow Password Setting] is selected.
- You can leave the password blank.

- 6** Click [Verify] to confirm that the specified ID and password are valid.

7 Click [OK].

Printing with Job Accounting

The procedure for printing with Job Accounting differs depending on whether [Allow Password Setting] is selected in the [ID/Password Settings] dialog box displayed by selecting [Job Accounting], and then clicking [Settings] in the [Device Settings] sheet.

With Allow Password Setting Selected

The password for Job Accounting can be specified in advance in the [ID/Password Settings] dialog box.

- 1** In the application software, select [Print].
- 2** Click [Properties] in the [Print] dialog box.
- 3** Specify the various settings in the printer properties dialog box.
- 4** Click [OK] to close the printer properties dialog box → click [OK] in the [Print] dialog box.

The document is printed with the specified ID and password.

With Allow Password Setting Not Selected

The password for Job Accounting is not specified in the [ID/Password Settings] dialog box.

- 1** In the application software, select [Print].
- 2** Click [Properties] in the [Print] dialog box.
- 3** Specify the various settings in the printer properties dialog box.

4 Click [OK] to close the printer properties dialog box → click [OK] in the [Print] dialog box.

5 In the [Confirm ID/Password] dialog box, enter the password → change the ID if necessary.



NOTE

You can leave the password blank.

6 Click [OK].

The document is printed with the specified ID and password.

Specifying the Color and Grayscale Settings

Selecting an objective in the [Quality] sheet automatically sets the color or grayscale settings to suit the document that is to be printed. You can also set the desired color or grayscale settings manually.

This section describes the color and grayscale settings and how to specify the color and grayscale settings.

About the Color and Grayscale Settings

In the [Quality] sheet, selecting either [Color] or [Black and White] from [Color Mode] sets the desired color or grayscale settings for printing documents. To make the detailed color or grayscale settings, you can use the [Color Settings] or [Grayscale Settings] dialog box, containing the [Color Adjustment] or [Grayscale Adjustment], and [Matching] sheets.

The [Color Adjustment] or [Grayscale Adjustment] sheet enables you to specify the color intensity (for color printers), brightness, and contrast settings affecting a printed document. Use the grid on the right part of the sheet to make an adjustment. A default original image and an adjusted preview image are displayed on the left part of the sheet. Use them to check the result of the adjustment.

The [Matching] sheet enables you to specify the method of color matching or monitor profile when printing color documents.


Color Printing

You can specify the detailed color settings manually. For manual color settings, follow the procedure below.

 **NOTE**


This option is available only for the color printers.

- 1** From the printer properties dialog box, click the [Quality] tab.
- 2** Select [Color] from [Color Mode] → select [Manual Color Settings].

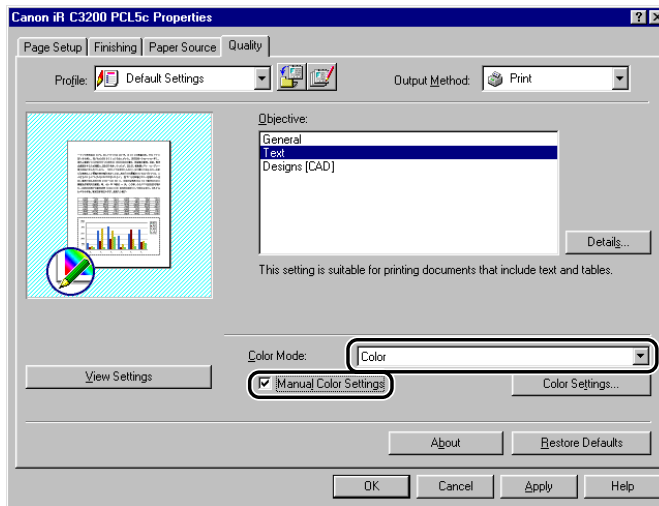

- 3** Click [Color Settings].
The [Color Settings] dialog box is displayed.


4 Display the [Color Adjustment] sheet.

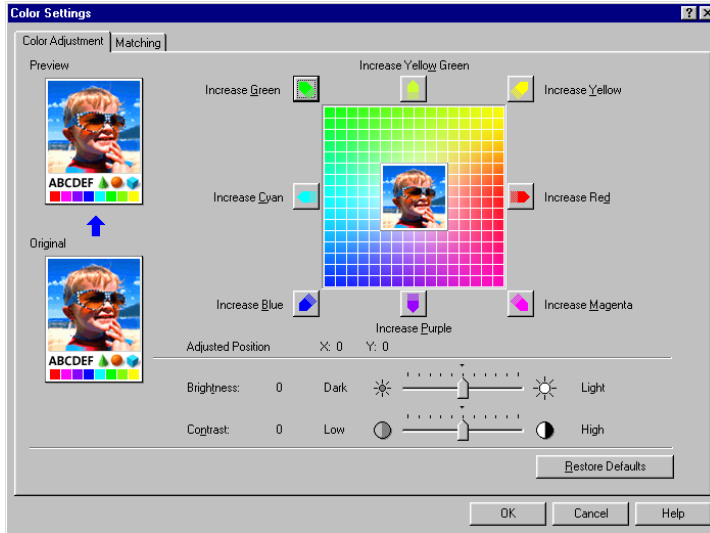

5 Adjust the color intensity, brightness, and contrast.

For detailed information about the [Color Adjustment] sheet, see the Online Help.

6 Click the [Matching] tab.

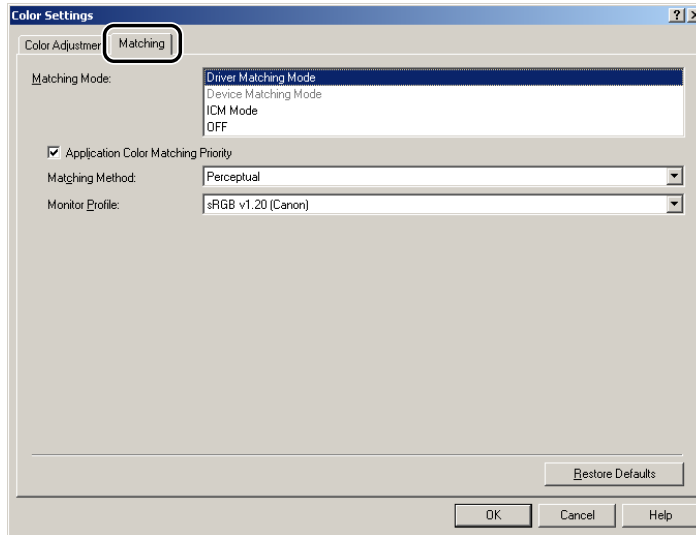

7 Specify the matching mode, the matching method, and the monitor profile.

For detailed information about the [Matching] sheet, see the Online Help.

8 Click [OK].

9 Click [OK] in the [Quality] sheet.


Grayscale Printing

You can specify the detailed grayscale settings manually when printing color documents in grayscale. For manual grayscale settings, follow the procedure below.

- 1 From the printer properties dialog box, click the [Quality] tab.
- 2 Display the [Color Adjustment] or [Grayscale Adjustment] sheet for manual grayscale setting.


● For color printers:

- Select [Black and White] from [Color Mode] → select [Manual Color Settings].

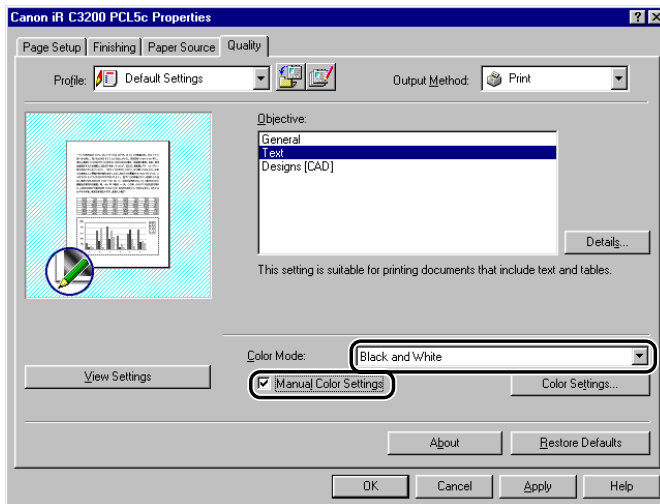


- ❑ Click [Color Settings].

The [Color Settings] dialog box is displayed.

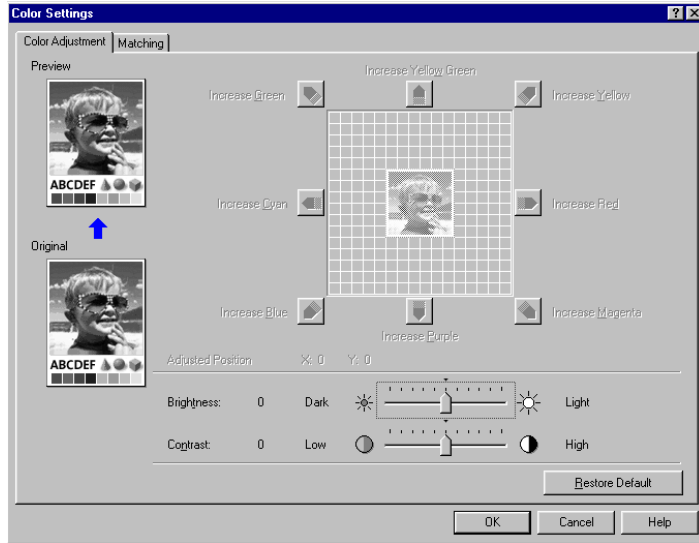

- For black-and-white printers:

- ❑ Select [Manual Grayscale Settings].

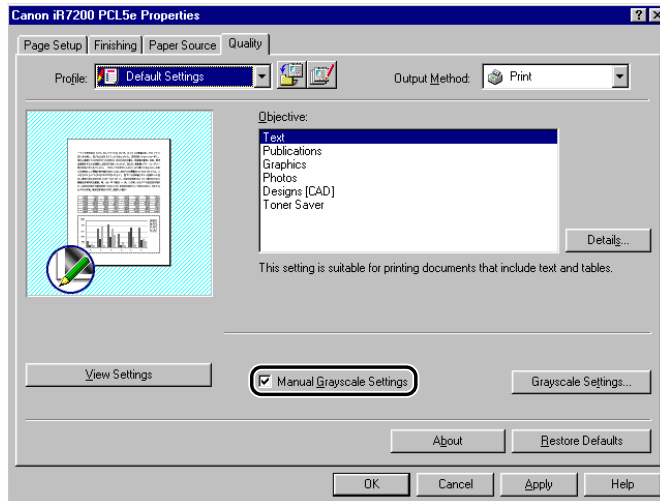

- ❑ Click [Grayscale Settings].

The [Grayscale Settings] dialog box is displayed.




4

Special Print Options

3 Adjust the brightness and contrast.

For detailed information about the [Color Adjustment] and [Grayscale Adjustment] sheets, see the Online Help.

4 Click the [Matching] tab.

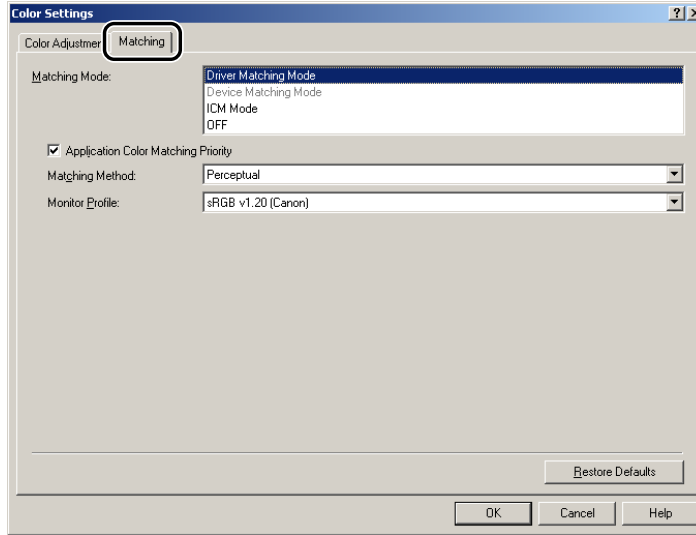

5 Specify the matching mode, the matching method, and the monitor profile.

For detailed information about the [Matching] sheet, see the Online Help.

6 Click [OK].

7 Click [OK] in the [Quality] sheet.

5

CHAPTER



Appendix

This chapter provides additional information about the printer drivers.

Operational Requirements and Restrictions in the Microsoft Cluster Server Environment	5-2
When Installing the Printer Driver	5-2
When Installing the Canon Driver Information Assist Service	5-2
PCL Driver Functions List	5-6
Local Standard Paper Sizes List	5-7
Index	5-14

Operational Requirements and Restrictions in the Microsoft Cluster Server Environment

This section describes operational requirements and restrictions for using a printer in the Microsoft Cluster Server environment.

When Installing the Printer Driver

Take notice of the following points when using a printer in the Microsoft Cluster Server environment:

- Only server cluster environments in Microsoft Cluster Server are guaranteed to work with the printer drivers.
- The printer driver supports a server cluster consisting of two nodes. A cluster of three or more nodes is not supported.
- There must be only one spooler resource in the server cluster. Multiple spooler resources are not available.
- Select a Standard TCP/IP port for the printer.
- The printer driver must be installed in each cluster node individually. Otherwise it might be impossible to add a new driver to the virtual server.

When Installing the Canon Driver Information Assist Service


In order to set up the printer configuration automatically or to use the Job Accounting feature, it is necessary to register the Canon Driver Information Assist Service as a cluster object in each node of the cluster server. To do this, after installing the Canon Driver Information Assist Service in each node, add it to the same group as the print cluster resources (Printer Spooler, IP Address, Network Name, and Physical Disk) in the Cluster Administrator.

1 Install the Canon Driver Information Assist Service in each node using the Installer.

NOTE

For instructions on how to install the Canon Driver Information Assist Service, see "Installing the Canon Driver Information Assist Service," on p. 2-37.

- 2** On the [Start] menu, click [Cluster Administrator] to start Cluster Administrator.
- 3** From the [File] menu, point to [File] → click [Open Connection].
- 4** Right-click the [Resources] folder icon in the left pane of Cluster Administrator → point to [New] → click [Resource].
The [New Resource] dialog box opens.
- 5** Enter the name and description of the new resource.

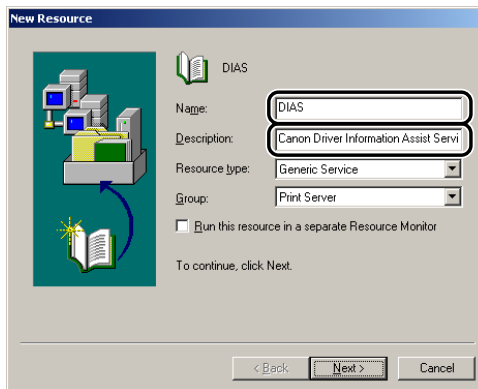


- 6** Select [Generic Service] for [Resource type] → select the same group as the print cluster resources for [Group] → click [Next].

 **NOTE**

If the group which includes the print cluster resources (Printer Spooler, IP Address, Network Name, and Physical Disk) does not exist, it is necessary to create a new group for the print cluster resources.

7 Select the nodes in which the Canon Driver Information Assist Service is installed from [Available nodes] → click [Add].


The nodes you selected are added to [Possible owners].

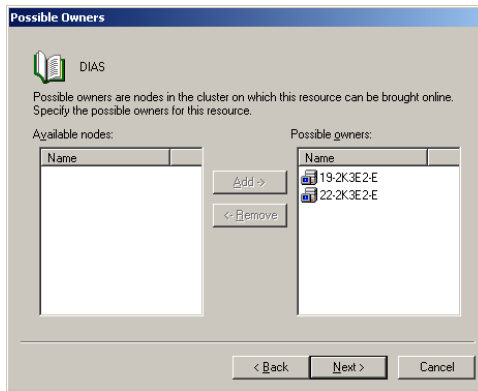

8 Click [Next].

9 Leave [Dependencies] blank in the next dialog box → click [Next].

10 Enter <Canon Driver Information Assist Service> in [Service name] → click [Next].

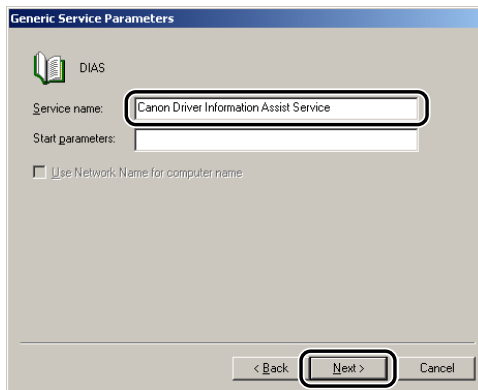

11 Make sure that [Registry Replication] is not selected → click [Finish].

The resource is created, and the Canon Driver Information Assist Service is registered as a cluster object.

PCL Driver Functions List

The available functions for the Canon PCL printer driver vary depending on the type of your driver (PCL5c, PCL5e, or PCL6).

For the functions available for your environment, refer to the following table:

✓: Available -: Unavailable

Sheet	Settings	PCL5c/5e	PCL6
[Finishing] sheet	EMF spooling	✓	✓
[Quality] sheet	Rendering Rate	Only PCL5e	✓
	Priority	-	-
	Banding	-	-
	Clip Font Character	✓	-
	Gray Compensation	Only PCL5c	✓*
	Use ICM	-	-
[Device Settings] sheet	Get Resource Information	✓	-
[Profile] sheet	All settings	✓	✓

* Only for color printers.

Local Standard Paper Sizes List

To Use Local Standard Paper, you need to register the paper size that you will be using as a custom paper size beforehand. For the sizes of Local Standard Papers available for your printer, see below:

iR C2620, iR C2620-C1, iR C2620-C2, iR C3200, iR C3200-C1, iR C3220, iR C3220-C1, iR C3220-C2, iR C2570-F1, iR 2570C-F1, iR C3100, iR 3100C, iR C3100-E1, iR 3100C-E1, iR C3170-F1, iR 3170C-F1, iR C5800, iR 5800C, iR C5800-D1, iR 5800C-D1, iR C5870, iR 5870C, iR C5870-G1, iR 5870C-G1, iR C6800, iR 6800C, iR C6800-D1, iR 6800C-D1, iR C6870, iR 6870C, iR C6870-G1, and iR 6870C-G1:

Paper Name	Width (mm)	Height (mm)
Oficio	216.0	317.0
Ecuadorian Oficio	220.0	320.0
Bolivian Oficio	216.0	355.0
Mexican Oficio	216.0	341.0
Argentine Oficio	220.0	340.0
Folio	210.0	330.0
Argentine Letter	220.0	280.0
Government Letter	203.0	267.0
Government Legal	203.0	330.0
Australian Foolscap	206.0	337.0
Foolscap	216.0	330.0

iR C2580, iR C3180, and iR 3180C:

Paper Name	Width (mm)	Height (mm)
Oficio	216.0	317.0
Ecuadorian Oficio	220.0	320.0
Bolivian Oficio	216.0	355.0
Mexican Oficio	216.0	341.0
Argentine Oficio	220.0	340.0
Folio	210.0	330.0
Argentine Letter	220.0	280.0
Government Letter	203.0	267.0
Government Legal	203.0	330.0
Australian Foolscap	206.0	337.0
Foolscap	216.0	330.0
Korean Government Legal	190.0	268.0
Chinese K8	270.0	390.0
Chinese K16	195.0	270.0

iR105, iR105+, iR105+ -M3, iR7200, iR8070, iR8070-M3, iR8070-S1, iR85, iR85+, iR85+ -M3, iR8500, iR9070, and iR9070-M3:

Paper Name	Width (mm)	Height (mm)
Oficio	216.0	317.0
Ecuadorian Oficio	220.0	320.0
Mexican Oficio	216.0	341.0
Argentine Oficio	220.0	340.0
Folio	210.0	330.0
Argentine Letter	220.0	280.0
Government Letter	203.0	267.0
Argentine Legal	220.0	340.0
Government Legal	203.0	330.0
Australian Foolscap	206.0	337.0
Foolscap	216.0	330.0
Korean Government Legal	190.0	268.0

iR1023/1022/1018 and FAX-L3000 series:

Paper Name	Width (mm)	Height (mm)
Oficio	216.0	317.0
Bolivian Oficio	216.0	355.0
Mexican Oficio	216.0	341.0
Folio	210.0	330.0
Government Letter	203.0	267.0
Government Legal	203.0	330.0
Foolscap	216.0	330.0
Chinese K16	195.0	270.0

iR C5880, iR 5880C, iR C5880-G1, iR 5880C-G1, iR C6880, iR 6880C, iR C6880-G1, iR 6880C-G1, iR2000/1600, iR2010/1610, iR3300/2800/2200, iR3300i/2200i, iR3320i/2220i, iR3320N/2220N, iR5070-S1, iR5570-S1, iR6000/5000, iR6000i/5000i, iR6000/5000-L1, iR6020i/5020i, iR6020N/5020N, iR6570/5570-M3, and iR6570-S1:

Paper Name	Width (mm)	Height (mm)
Oficio	216.0	317.0
Ecuadorian Oficio	220.0	320.0
Bolivian Oficio	216.0	355.0
Mexican Oficio	216.0	341.0
Argentine Oficio	220.0	340.0
Folio	210.0	330.0
Argentine Letter	220.0	280.0
Government Letter	203.0	267.0
Argentine Legal	220.0	340.0
Government Legal	203.0	330.0
Australian Foolscap	206.0	337.0
Foolscap	216.0	330.0
Korean Government Legal	190.0	268.0

imagePRESS C1, imagePRESS C6000, imagePRESS C6000VP, imagePRESS C7000VP, imagePRESS Server T1, iR C2380, iR C2550, iR C2880, iR C2880-J1, iR C3080, iR C3080-J1, iR C3380, iR C3380-J1, iR C3580, iR C3580-J1, iR C2570, iR 2570C, iR C3170, iR 3170C, iR2016, iR2018, iR2020, iR2030/2025/2022, iR2230, iR2830, iR2870/2270, iR3025, iR3030, iR3035, iR3045, iR3530, iR4530, iR4570/3570, and MF7170i:

Paper Name	Width (mm)	Height (mm)
Oficio	216.0	317.0
Ecuadorian Oficio	220.0	320.0
Bolivian Oficio	216.0	355.0
Mexican Oficio	216.0	341.0
Argentine Oficio	220.0	340.0
Folio	210.0	330.0
Argentine Letter	220.0	280.0
Government Letter	203.0	267.0
Government Legal	203.0	330.0
Australian Foolscap	206.0	337.0
Foolscap	216.0	330.0
Chinese K8	270.0	390.0
Chinese K16	195.0	270.0

iR C4080, iR C4080-H1, CLC4040-H1, iR C4580, iR C4580-H1, iR C5180, iR C5180-H1, CLC5151-H1, iR C5185, iR C5185-H1, iR5050, iR5050-S2, iR5055, iR5055-S2, iR5065, iR5065-S2, iR5075, iR5075-S2, and iR6570/5570:

Paper Name	Width (mm)	Height (mm)
Oficio	216.0	317.0
Ecuadorian Oficio	220.0	320.0
Bolivian Oficio	216.0	355.0
Mexican Oficio	216.0	341.0
Argentine Oficio	220.0	340.0
Folio	210.0	330.0
Argentine Letter	220.0	280.0
Government Letter	203.0	267.0
Argentine Legal	220.0	340.0
Government Legal	203.0	330.0
Australian Foolscap	206.0	337.0
Foolscap	216.0	330.0
Korean Government Legal	190.0	268.0
Chinese K8	270.0	390.0
Chinese K16	195.0	270.0

iR7105/7095/7086, iR7105/7095/7086-S1, and iR7105/7095/7086-S2:

Paper Name	Width (mm)	Height (mm)
Oficio	216.0	317.0
Ecuadorian Oficio	220.0	320.0
Mexican Oficio	216.0	341.0
Argentine Oficio	220.0	340.0
Folio	210.0	330.0
Argentine Letter	220.0	280.0
Government Letter	203.0	267.0
Argentine Legal	220.0	340.0
Government Legal	203.0	330.0
Australian Foolscap	206.0	337.0
Foolscap	216.0	330.0
Korean Government Legal	190.0	268.0
Chinese K8	270.0	390.0
Chinese K16	195.0	270.0

LBP3360 and LBP3370:

Paper Name	Width (mm)	Height (mm)
Chinese K16	195.0	270.0

LBP5360:

Paper Name	Width (mm)	Height (mm)
Foolscap	216.0	330.0
Chinese K16	195.0	270.0

LBP5960 and LBP5970/LBP5975:

Paper Name	Width (mm)	Height (mm)
Chinese K8	270.0	390.0
Chinese K16	195.0	270.0

A

- Accessing printer properties dialog box
 - From application software, 3-2
 - From printers folder, 3-4
- Accessing printing preferences dialog box
 - From printers folder, 3-3
- Add Printer Wizard, 2-22
- Add Profile, 3-6
- Alternate printer driver, 2-21

B

- Binding Location, 3-15
- Black and White, 4-44, 4-48
- Body page, 3-22
- Booklet, 3-17, 3-21
- Booklet printing, 3-21, 3-35

C

- Canon Driver Information Assist Service, 2-8, 2-17, 2-37, 2-50, 4-39, 5-2
- Canon NetSpot Resource Downloader, 4-2, 4-9
- Canon PageComposer, 4-34
- Collate, 3-17, 3-19
- Color, 4-44, 4-45
- Color printing, 4-45
- Color settings, specifying, 4-44
 - About color/grayscale settings, 4-44
 - Color printing, 4-45
- Color/Grayscale settings, specifying, 4-44
- Computer, 1-3
- Configuring device function settings, 2-55
 - Configuring controller version, 2-55
 - Configuring device functions, 2-58
- Cover Page, 3-36
- Cover/sheet insertion options, 3-38
 - Adding front/back covers, 3-38
 - Creating tabs, 3-51
 - Inserting sheets, 3-42
 - Inserting tab paper, 3-47

D

- Dynamic installation, 2-13

E

- Edit Profile, 3-6
- Editing multiple print documents together, 4-33

F

- Finishing, 3-15, 3-17, 3-19, 3-21, 3-29, 3-35
- Finishing options, specifying, 3-17
 - Booklet printing, 3-21, 3-35
 - Output option, 3-17
 - Printing with mixed paper sizes, 3-28
 - Selecting, 3-17
 - Using Creep Correction for Booklet Printing, 3-23
 - Perfect Binding, 3-25
- First Page, 3-33, 3-34
- Form file, 4-3, 4-9
- Full control permission, 3-3

G

- Grayscale printing, 4-48
- Grayscale settings, specifying, 4-44
 - About color/grayscale settings, 4-44
 - Grayscale printing, 4-48
- Group, 3-17, 3-19
- Gutter, 3-16, 3-30

H

- Hold queue, 4-37

I

- Image Form, 4-27
- Installing printer driver, 2-2
 - Alternate printer driver, 2-21
 - Dynamic installation, 2-13

- Standard installation, 2-3
- Using Add Printer Wizard, 2-22
- Installing software, 2-2
 - Canon Driver Information Assist Service, 2-8, 2-17, 2-37, 2-50, 4-39, 5-2
 - Printer driver, 2-2
 - Uninstalling printer driver, 2-47
 - Updating alternate printer driver, 2-46
 - Updating existing printer drivers, 2-41
 - USB Connection Installation , 2-26
- Interleaf Sheets, 3-37
- Introduction, 1-2

J

- Job Accounting, 2-8, 2-18, 2-37, 4-39, 4-42
- Job Accounting feature, 4-42
 - Overview, 4-39
 - Printing with Job Accounting, 4-42
 - Specifying ID and password, 4-40

L

- Last Page, 3-33
- License Agreement, 2-6, 2-15, 2-39
- Local Standard Paper, 5-7
- Log on, 2-3

M

- Mail Box, 4-23, 4-24
- Microsoft Cluster Server (MSCS), 1-3, 5-2
- Microsoft Windows 2000, 1-2, 1-3
- Microsoft Windows Server 2003, 1-2, 1-3
- Microsoft Windows Vista, 1-2, 1-3
- Microsoft Windows XP, 1-2, 1-3
- Mixed Paper Sizes, 3-29

O

- Objective, 4-19, 4-20, 4-21
 - Designs, 4-19
 - General, 4-19
 - Graphics, 4-19
 - High Definition Text, 4-19
 - Photo image, 4-19
 - Publications, 4-19
 - Text, 4-19
 - Toner saver, 4-19
- Online Help, 1-4, 4-46, 4-47, 4-50, 4-51
- Operating system software, 1-3

- Operational requirements and restrictions in Microsoft Cluster Server environment, 5-2
 - When installing Canon Driver Information Assist Service, 5-2
 - When installing printer driver, 5-2
- Other Pages, 3-33, 3-34, 3-36
- Output Option, 3-17
 - Collate, 3-17, 3-19
 - Group, 3-17, 3-19
 - Staple & Collate, 3-17, 3-19, 3-30
 - Staple & Group, 3-17, 3-19
- Overlay, 4-2, 4-4, 4-6, 4-9, 4-16
- Overlay Printing, 4-2, 4-9, 4-15
 - Creating form file (using form file on host), 4-3
 - Printing with overlay (using form file on host), 4-6
 - Printing with overlay (using NetSpot Resource Downloader form file), 4-15
 - What is overlay printing?, 4-2

P

- Page Layout, 3-13
- Page Options, 4-3, 4-6
- Page size, 3-10, 3-11
- Paper Selection, 3-32, 3-33, 3-34, 3-37
- Paper source, specifying, 3-31
 - Printing all pages from same paper source, 3-32
 - Printing cover and body pages of booklet from different paper sources, 3-35
 - Printing first, body, and last pages from different paper sources, 3-33
 - Printing first, second, body, and last pages from different paper sources, 3-34
 - Printing on transparencies, 3-37
- PCL, 1-2
- PCL Driver Functions List, 5-6
- Plug and play installation for network printers (Windows Vista), 2-34
- Port selection, 2-10
- Print quality, specifying, 4-19
 - Editing objective settings, 4-21
 - Selecting objective, 4-20
 - What is objective?, 4-19
- Printer configuration, 2-37, 3-4
- Printer properties dialog box, 3-2, 3-4
- Printing banner page with print job, 3-60
- Printing document, 2-60
- Printing multiple pages on one sheet, 3-13
- Printing on custom paper, 3-54
- Printing on local standard paper
 - Specifying as paper source, 3-57
- Printing preferences dialog box , 3-3
- Printing with Job Accounting, 4-42
 - With allow password, 4-42
 - Without allow password, 4-42

Profile, 3-5, 3-6, 3-7
Profiles for Printing, 3-5
 Adding/Editing, 3-6
 Adding/Editing Profiles in Profile Sheet, 3-7
 Selecting, 3-5
 What is profile?, 3-5
Promote Print, 4-35
Promoting print job, 4-35
PS (PostScript), 1-2

R

README. TXT file, 1-4

S

Saddle Stitch, 3-22
Scaling document, 3-10
 Automatically, 3-10
 Manually, 3-11
Second Page, 3-34
Secured printing, 4-30
Sending document data to User Inbox or Mail Box,
 4-23
 Getting User Inbox or Mail Box names, 4-23
 Sending document as Image Form, 4-27
 Sending document to User Inbox or Mail Box, 4-24
Setting up printer configuration, 2-50
 Automatically, 2-50
 Manually, 2-53
Standard installation, 2-3
Staple & Collate, 3-17, 3-19, 3-30
Staple & Group, 3-17, 3-19
Staple position, 3-19
Storing document temporarily in hold queue, 4-37
System requirements, 1-3
 Computer, 1-3
 Operating system software, 1-3
 With server-based Computing Environment, 1-3

T

TCP/IP, 2-13
Top priority for printing, 4-35
Transparencies, 3-37
Transparency Interleaving, 3-37
Two-sided printing, 3-15

U

UFR II, 1-2
Uninstaller, 2-47
Updating alternate printer driver, 2-46
Updating existing printer drivers, 2-41
 Using Add Printer Wizard, 2-43
 Using Installer, 2-41
USB connection, 2-26
USB Connection Installation, 2-26
 Plug and play installation (Windows 2000), 2-28
 Plug and play installation (Windows Vista), 2-31
 Plug and play installation (Windows XP/Server 2003),
 2-30
 USB standard installation, 2-26
User Inbox, 4-23, 4-24

W

Where to find Help, 1-4
 Canon authorized dealers, 1-4
 Online Help, 1-4, 4-46, 4-47, 4-50
 README. TXT file, 1-4



CANON INC.

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

CANON U.S.A., INC.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

CANON CANADA INC.

6390 Dixie Road Mississauga, Ontario L5T 1P7, Canada

CANON EUROPA N.V.

Bovenkerkerweg 59-61 1185 XB Amstelveen, The Netherlands

(See <http://www.canon-europe.com/> for details on your regional dealer)

CANON LATIN AMERICA, INC.

703 Waterford Way Suite 400 Miami, Florida 33126 U.S.A.

CANON AUSTRALIA PTY. LTD

1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia

CANON CHINA CO., LTD

15F Jinbao Building No.89 Jinbao Street, Dongcheng District, Beijing 100005, China

CANON SINGAPORE PTE. LTD.

1 HarbourFront Avenue #04-01 Keppel Bay Tower, Singapore 098632

CANON HONGKONG CO., LTD

19/F., The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong