Canon

imageCLASS D460/D440/D Starter Guide



Please read this guide before operating this product. After you finish reading this guide, store it in a safe place for future reference.

Overview of Machine Functions

Set Up the Machine to Suit Your Purposes

Set Up the Machine

Set Up Network Connection

Set Up Computers and Software

Appendix

420


ENG

Contents

| 1 Set Up the Machine to Suit Your Purposes 2 2 Set Up the Machine 3 Items Included with the Machine 3 D440 3 D440 3 D440 3 D440 3 D420 3 Items for All Models 4 Install tion Space 4 Manuals for the Machine 5 Install Toner Cartridge 5 Set Up Paper Cassette and Load Paper 8 For D440/420 10 Connect Power Cord and Turn On the Machine 12 3 Set Up Network Connection (D460 Only) 13 Connect the LAN Cable 13 Connect the Machine to Network 14 Automatic Setting 14 Automatic Setting 14 Automatic Setting 14 Manual Setting 15 4 Set Up Computers and Software 16 Types of Connection between Computers and the Machine 16 Network Connection 16 Network Connection 16 Network Connection 17 Network Connectio | | Overview of Machine Functions Available Features | |
|---|---|---|----|
| Items Included with the Machine 3 D440 3 D440 3 D420 3 Items for All Models 4 Installation Space 4 Manuals for the Machine 5 Install Toner Cartridge 5 Set Up Paper Cassette and Load Paper 8 For D440/420 10 Connect Power Cord and Turn On the Machine 12 3 Set Up Network Connection (D460 Only) 13 Connect the LAN Cable 13 Connect the Machine to Network 14 Specify the IP Address Settings 14 Automatic Setting 14 Automatic Setting 14 Manual Setting 15 4 Set Up Computers and Software 16 Types of Connection 16 Network Connection 16 Network Connection (D460 Only) 19 Manual Setting 14 Check IP Address Setting 14 Manual Setting 15 4 Set Up Computers and Software 16 Network Connection 16 Network | 1 | Set Up the Machine to Suit Your Purposes | 2 |
| Items Included with the Machine 3 D440 3 D420 3 D420 3 Items for All Models 4 Installation Space 4 Manuals for the Machine 5 Install Toner Cartridge 5 Set Up Paper Cassette and Load Paper 8 For D440/420 10 Connect Power Cord and Turn On the Machine 12 Set Up Network Connection (D460 Only) 13 Connect the LAN Cable 13 Connect the Machine to Network 14 Specify the IP Address Settings 14 Automatic Setting 14 Automatic Setting 14 Manual Setting 15 4 Set Up Computers and Software 16 Network Connection 16 Network Connection 16 Network Connection 17 Network Connection 16 Network Connection 16 Network Connection 16 Network Connection (D460 Only) 19 Manual Setting 14 Manual Setting | 2 | Set Up the Machine | 3 |
| D440. 3 D420. 3 Items for All Models 4 Installation Space. 4 Manuals for the Machine 5 Install Toner Cartridge. 5 Set Up Paper Cassette and Load Paper. 8 For D460. 8 For D440/420. 10 Connect Power Cord and Turn On the Machine. 12 3 Set Up Network Connection (D460 Only) 13 Connect the LAN Cable. 13 Connect the Vachine to Network. 14 Specify the IP Address Settings. 14 Automatic Setting. 14 Automatic Setting. 14 Manual Setting. 15 4 Set Up Computers and Software 16 Types of Connection between Computers and the Machine. 16 Network Connection. 16 Manual Setting. 17 Network Connection. 16 VpsB of Connection. 16 Network Connection. 16 Matual Setting. 17 Network Connection. 16 ME Drivers Installation. 21 | | Items Included with the Machine | 3 |
| D420 | | D460 | 3 |
| Items for All Models 4 Installation Space 4 Manuals for the Machine 5 Install Toner Cartridge 5 Set Up Paper Cassette and Load Paper 8 For D440/420 10 Connect Power Cord and Turn On the Machine 12 3 Set Up Network Connection (D460 Only) 13 Connect the LAN Cable 13 Connect the Machine to Network 14 Specify the IP Address Settings 14 Automatic Setting 14 Manual Setting 15 4 Set Up Computers and Software 16 Types of Connection between Computers and the Machine 16 Network Connection 16 VBB Connection 16 Net Drivers Installation 19 Color Network ScanGear Installation 21 Check Installation 21 Check Installation 22 MF Drivers & MF Toolbox Installation 23 User Manual CD-ROM (e-Manual) 28 System Requirements 28 | | - · · · | |
| Installation Space | | | |
| Manuals for the Machine. 5 Install Toner Cartridge. 5 Set Up Paper Cassette and Load Paper. 8 For D460. 8 For D440/420. 10 Connect Power Cord and Turn On the Machine. 12 3 Set Up Network Connection (D460 Only) 13 Connect the LAN Cable 13 Connect the Machine to Network. 14 Specify the IP Address Settings 14 Automatic Setting 14 Check IP Address Settings 14 Manual Setting 15 4 Set Up Computers and Software 16 Types of Connection between Computers and the Machine. 16 Network Connection 16 Manual Set Setting 17 Network Connection 16 Manual Set Setting 17 Network Connection 16 USB Connection 16 Network Connection 16 USB Connection 16 Network ScanGear Installation 21 Check Installation 23 USB Connection 24 MF Drivers & MF Toolbox Install | | | |
| Install Toner Cartridge | | | |
| Set Up Paper Cassette and Load Paper 8 For D460 8 For D440/420 10 Connect Power Cord and Turn On the Machine 12 3 Set Up Network Connection (D460 Only) 13 Connect the LAN Cable 13 Connect the Machine to Network 14 Specify the IP Address Settings 14 Automatic Setting. 14 Check IP Address Setting 14 Manual Setting. 15 4 Set Up Computers and Software 16 Types of Connection between Computers and the Machine 16 Network Connection 16 Maout User Software CD-ROM 17 Network Connection (D460 Only) 19 MF Drivers Installation 21 Color Network ScanGear Installation 23 USB Connection 24 MF Drivers & MF Toolbox Installation 24 | | | |
| For D460 8 For D440/420 10 Connect Power Cord and Turn On the Machine 12 3 Set Up Network Connection (D460 Only) 13 Connect the LAN Cable 13 Connect the Machine to Network 14 Specify the IP Address Settings 14 Automatic Setting 14 Automatic Setting 14 Manual Setting 15 4 Set Up Computers and Software 16 Types of Connection between Computers and the Machine 16 Network Connection 16 VBS Connection 16 Network Connection 16 VBS Connection 16 VBS Connection (D460 Only) 19 MF Drivers Installation 21 Color Network ScanGear Installation 21 Check Installation 23 USB Connection 24 MF Drivers & MF Toolbox Installation 24 Check Installation 24 MF Drivers & MF Toolbox Installation 24 System Requirements 28 System Requirements 28 <td></td> <td></td> <td></td> | | | |
| For D440/42010Connect Power Cord and Turn On the Machine123 Set Up Network Connection (D460 Only)13Connect the LAN Cable13Compatible LAN Cables13Compatible LAN Cables14Specify the IP Address Settings14Automatic Setting14Automatic Setting14Check IP Address Setting16Types of Connection between Computers and the Machine16Types of Connection16Network Connection16Network Connection16Out User Software CD-ROM17Network Connection (D460 Only)19Color Network ScanGear Installation21Check Installation23USB Connection24MF Drivers Installation24MF Drivers MF Toolbox Installation24MF Drivers MF Toolbox Installation27S Appendix28User Manual CD-ROM (e-Manual)28System Requirements28 | | | |
| Connect Power Cord and Turn On the Machine123 Set Up Network Connection (D460 Only)13Connect the LAN Cable13Connect the LAN Cables13Connect the Machine to Network14Specify the IP Address Settings14Automatic Setting14Check IP Address Setting14Manual Setting154 Set Up Computers and Software16Types of Connection between Computers and the Machine16Network Connection16USB Connection Lower CD-ROM17Network Connection19MF Drivers Installation21Color Network ScanGear Installation23USB Connection24MF Drivers & MF Toolbox Installation24MF Drivers & MF Toolbox Installation24MF Drivers & MF Toolbox Installation24MF Drivers & MF Toolbox Installation28System Requirements28System Requirements28 | | | |
| 3 Set Up Network Connection (D460 Only) 13 Connect the LAN Cable 13 Compatible LAN Cables 13 Connect the Machine to Network 14 Specify the IP Address Settings 14 Automatic Setting 14 Automatic Setting 14 Automatic Setting 14 Manual Setting 14 Manual Setting 15 4 Set Up Computers and Software 16 Types of Connection between Computers and the Machine 16 Network Connection 16 USB Connection 17 Network Connection (D460 Only) 19 MF Drivers Installation 21 Check Installation 21 Check Installation 23 USB Connection 24 MF Drivers MF Toolbox Installation 24 MF Drivers & MF Toolbox Installation 27 5 Appendix 28 System Requirements 28 | | | |
| Connect the LAN Cable13Compatible LAN Cables13Connect the Machine to Network14Specify the IP Address Settings14Automatic Setting14Check IP Address Setting14Manual Setting154 Set Up Computers and Software16Types of Connection between Computers and the Machine16Network Connection16Network Connection16WB Connection17Network Connection (D460 Only)19MF Drivers Installation21Check Installation23USB Connection24MF Drivers & MF Toolbox Installation275 Appendix27Ver Manual CD-ROM (e-Manual)28System Requirements28 | 2 | | |
| Compatible LAN Cables13Connect the Machine to Network14Specify the IP Address Settings14Automatic Setting.14Automatic Setting.14Manual Setting.154 Set Up Computers and Software16Types of Connection between Computers and the Machine.16Network Connection16USB Connection16About User Software CD-ROM17Network Connection (D460 Only)19MF Drivers Installation21Color Network ScanGear Installation23USB Connection24MF Drivers & MF Toolbox Installation275 Appendix27User Manual CD-ROM (e-Manual)28System Requirements28System Requirements28 | 3 | | |
| Connect the Machine to Network14Specify the IP Address Settings14Automatic Setting.14Check IP Address Setting14Manual Setting.154 Set Up Computers and Software16Types of Connection between Computers and the Machine.16Network Connection16USB Connection16About User Software CD-ROM.17Network Connection (D460 Only)19MF Drivers Installation21Check Installation21Check Installation23USB Connection24MF Drivers & MF Toolbox Installation275 Appendix.28User Manual CD-ROM (e-Manual)28System Requirements28 | | | |
| Specify the IP Address Settings 14 Automatic Setting 14 Check IP Address Setting 14 Manual Setting 15 4 Set Up Computers and Software 16 Types of Connection between Computers and the Machine 16 Network Connection 16 USB Connection 16 About User Software CD-ROM 17 Network Connection (D460 Only) 19 MF Drivers Installation 21 Color Network ScanGear Installation 23 USB Connection 24 MF Drivers & MF Toolbox Installation 27 5 Appendix 27 System Requirements 28 System Requirements 28 | | | |
| Áutomatic Setting | | | |
| Check IP Address Setting 14 Manual Setting. 15 4 Set Up Computers and Software 16 Types of Connection between Computers and the Machine. 16 Network Connection 16 USB Connection. 16 About User Software CD-ROM. 17 Network Connection (D460 Only) 19 MF Drivers Installation 19 Color Network ScanGear Installation. 21 Check Installation 23 USB Connection 24 MF Drivers & MF Toolbox Installation 24 MF Drivers & MF Toolbox Installation 27 5 Appendix. 28 User Manual CD-ROM (e-Manual) 28 System Requirements 28 | | | |
| Manual Setting | | | |
| 4 Set Up Computers and Software 16 Types of Connection between Computers and the Machine 16 Network Connection 16 USB Connection 16 About User Software CD-ROM 17 Network Connection (D460 Only) 19 MF Drivers Installation 19 Color Network ScanGear Installation 21 Check Installation 23 USB Connection 24 MF Drivers & MF Toolbox Installation 24 Check Installation 27 5 Appendix 28 User Manual CD-ROM (e-Manual) 28 System Requirements 28 | | | |
| Types of Connection between Computers and the Machine. 16 Network Connection 16 USB Connection. 16 About User Software CD-ROM. 17 Network Connection (D460 Only) 19 MF Drivers Installation 19 Color Network ScanGear Installation. 21 Check Installation 23 USB Connection 24 MF Drivers & MF Toolbox Installation 24 Check Installation 27 5 Appendix. 28 User Manual CD-ROM (e-Manual) 28 System Requirements 28 | | - | |
| Network Connection 16 USB Connection 16 About User Software CD-ROM 17 Network Connection (D460 Only) 19 MF Drivers Installation 19 Color Network ScanGear Installation 21 Check Installation 23 USB Connection 24 MF Drivers & MF Toolbox Installation 24 Check Installation 27 5 Appendix 28 User Manual CD-ROM (e-Manual) 28 System Requirements 28 | 4 | | |
| USB Connection | | Types of Connection between Computers and the Machine | 10 |
| About User Software CD-ROM | | | |
| Network Connection (D460 Only) 19 MF Drivers Installation 19 Color Network ScanGear Installation 21 Check Installation 23 USB Connection 24 MF Drivers & MF Toolbox Installation 24 Check Installation 24 Speendix 28 User Manual CD-ROM (e-Manual) 28 System Requirements 28 | | | |
| MF Drivers Installation | | | |
| Color Network ScanGear Installation 21 Check Installation 23 USB Connection 24 MF Drivers & MF Toolbox Installation 24 Check Installation 24 Spendix 27 5 Appendix 28 User Manual CD-ROM (e-Manual) 28 System Requirements 28 | | | |
| Check Installation | | | |
| USB Connection | | | |
| MF Drivers & MF Toolbox Installation | | | |
| Check Installation | | | |
| 5 Appendix | | | |
| User Manual CD-ROM (e-Manual) | 5 | | |
| System Requirements | 5 | | |
| | | | |
| | | | |

Overview of Machine Functions

This manual describes how to set the required settings to set up the machine and install the software. After you set up the machine, you can use the functions described in the illustration below. For the details of each function, refer to the Basic Operation Guide and e-Manual.

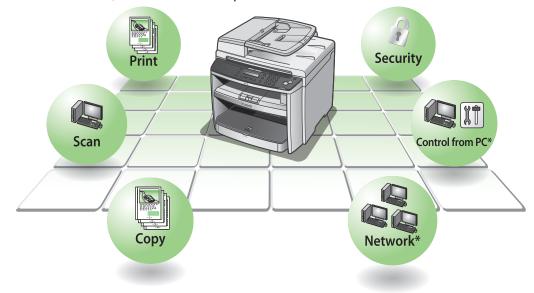

^{*} The network function is available only for the D460.

Illustrations used in this manual are the model D460. When there is any difference among D460, D440 and D420, it is clearly indicated in the text, e.g., "For D460."

For information on the standard features for each model, see "Available Features," shown below.

The display used in this manual is the factory preset display for the D460 in default setting. Depending on the system configuration and product purchased, the appearance of the display may differ.

Available Features

The table below shows the available features on a product basis.

🖌: available

—: not available

| | COPY | PRINT | SCAN | Remote UI (Network Board) | Simplex ADF | Duplex ADF |
|--------------------|------|-------|------|------------------------------|-------------|------------|
| imageCLASS D460 | ~ | V | ~ | ~ | _ | V |
| imageCLASS D440 | ~ | ~ | ~ | _ | V | _ |
| imageCLASS D420 | ~ | V | ~ | _ | _ | _ |


Set Up the Machine to Suit Your Purposes

Determine which machine functions (Copy, Print, PC Print, Scan, Remote UI) you intend to use, and make the settings according to the flowchart below.

For example, when you use copy function only, follow "Necessary Settings."

imageCLASS D460/D440/D420

STARTING UP THE MACHINE SETUP

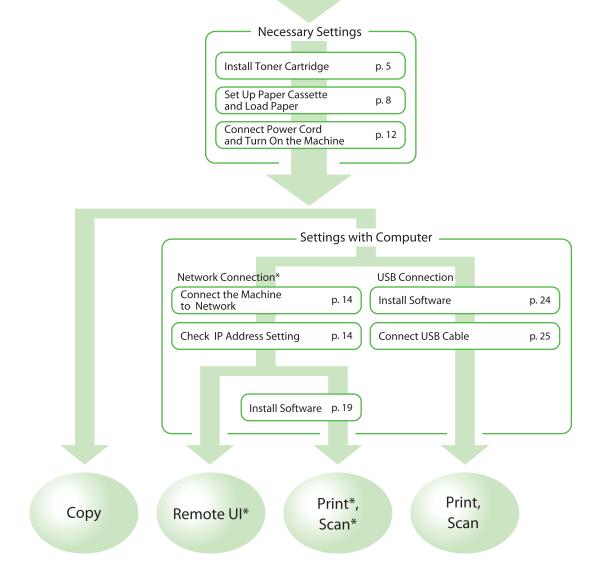

* The network function is available only for the D460.

2 Set Up the Machine

Items Included with the Machine

D460






Machine

D440





• Dust Cover (enclosed in the machine)



• Document Feeder Tray


Paper Cassette

Machine

D420





Machine

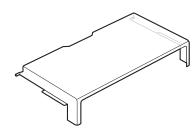


• Dust Cover (enclosed in the machine)

Items for All Models




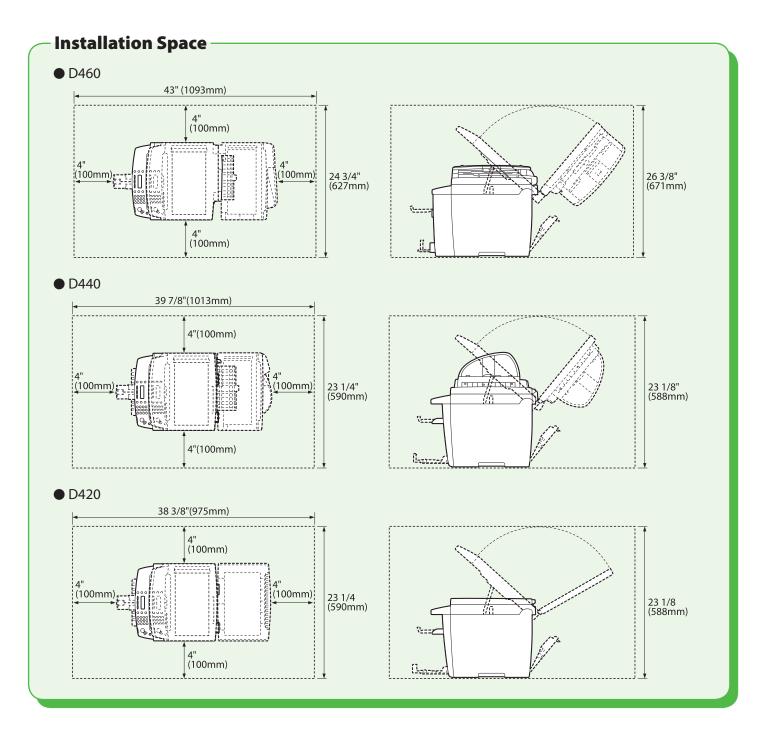

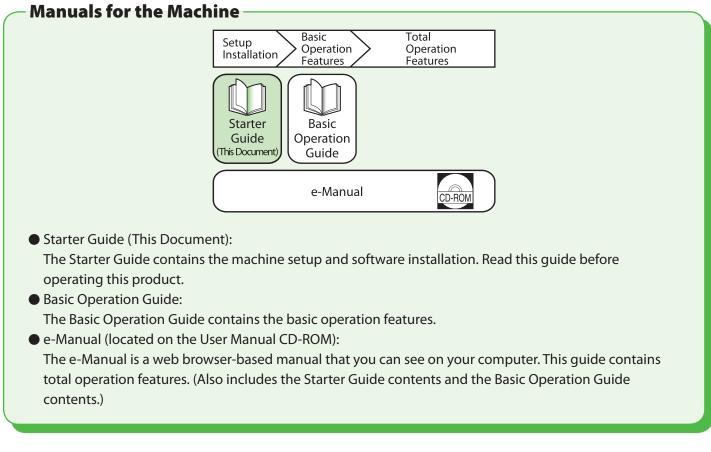

Install Toner Cartridge


This section describes the installation procedure for the toner cartridge.

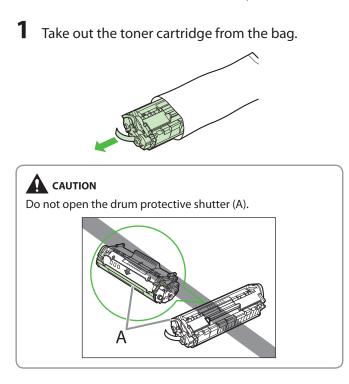

2 Gently rock the toner cartridge several times to evenly distribute the toner inside.




- 3
 - Place the toner cartridge on a flat surface and pull the seal completely out.

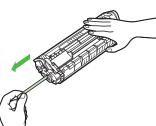


Do not pull the seal out at an angle.


- If toner is adhered on the removed seal, be careful that your hands or clothes do not get dirty from touching the toner.
- If your hands or clothes get dirty from touching the toner, wash them immediately in cold water. Do not use hot water. If you do, the toner may be set permanently.

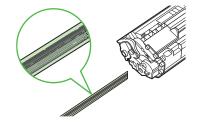

4 Hold the front side of the operation panel with your hands.

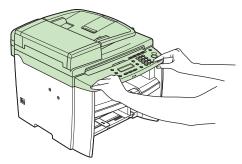


5 Lift the scanning platform (A) until it is locked. (You will hear an audible "click.")

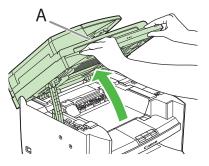




Hold the grip (A) on the right front side of the toner cover.

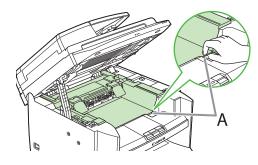


7 Open the toner cover.

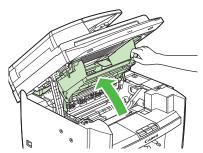





Hold the toner cartridge by its handle (A).

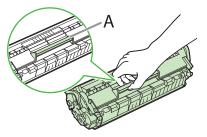


9 Insert the toner cartridge so that the protrusion on the right side of the toner cartridge (A) fits into the guide (B) located on the right side of the machine and slide it down parallel to the guide.

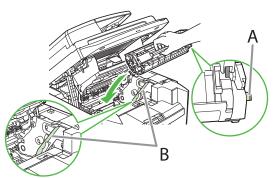


10 Push the toner cartridge to make sure it is properly set in the machine.

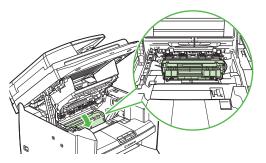


11 Hold the grip (A) on the right front side of the toner cover.

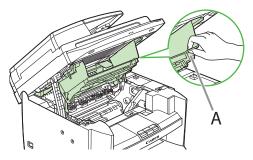

12 Close the toner cover.

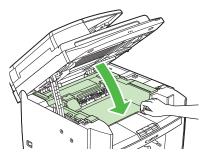

13 Lower the scanning platform.

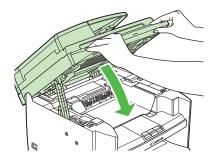


- Be careful not to get your fingers caught.
- If you cannot close the toner cover, do not force it to close. Open the cover and make sure the toner cartridge is properly set in the machine.

Set Up Paper Cassette and Load Paper

For D460


1 Align the guides (B) on the both edges of the paper cassette to the protrusions (A) inside the machine.

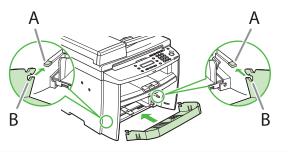

MOTE

Install the paper cassette with the front end tilted upwards.


2 Push the paper cassette down until the hooks (A) on both sides of the paper cassette engage the protrusions (B) inside the machine.

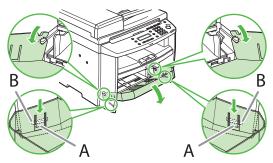


3 Open the front panel of the paper cassette.



4 Slide out the paper guide rail (A).

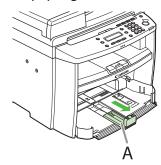


5 Slide the side paper guides (A) to match the size of paper.

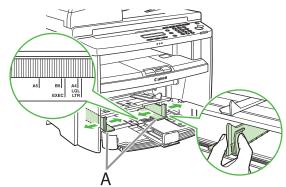


NOTE

If the paper guides do not fit the size of the paper, the printout may be skewed.



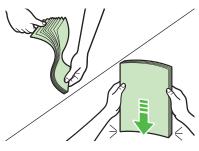


7 Load the paper into the paper cassette with the print side up. Make sure the paper stack sits below the small fin (A) on the side paper guide.

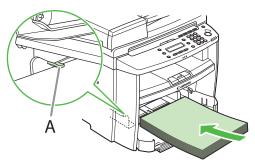


8 Adjust the paper guide rail to match the size of paper.




9 Close the front panel of the paper cassette.

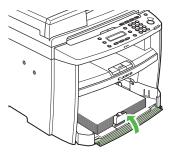


To load Legal-size paper, leave the front panel of paper cassette open and adjust the paper guide rail (A) for Legal-size paper.

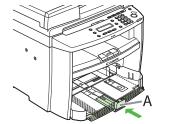

10 Match up the edge of the dust cover (A) and the edge of the paper cassette (B), and place the cover on top of the cassette.

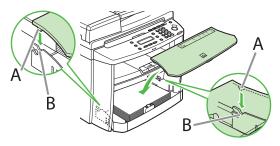

- The default paper size/type is set to <LTR> and <PLAIN PAPER> in the setting menu. When you load other size and/or type of paper, change the paper size/type setting by pressing O [Paper Settings]. For details, see "Introduction of the Machine," in the e-Manual.
- For loading paper in the multi-purpose tray, see "Introduction of the Machine," in the e-Manual.
- If a printout falls out of the output tray, extend the output tray extension on the front side of the machine and set the paper stopper upright.

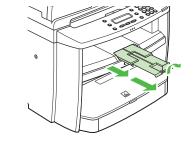


For D440/420

1 Open the paper feeding tray.




2 Take out the dust cover from inside the machine.

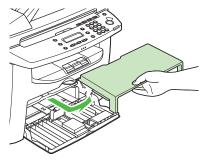

3 Slide out the paper guide rail (A).




4 Slide the side paper guides (A) to match the size of paper.

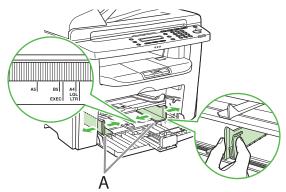


Ø NOTE

If the paper guides do not fit the size of the paper, the printout may be skewed.


5 Fan the paper stack and even the edges.

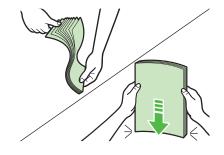


6 Load the paper into the paper feeding tray with the print side up. Make sure the paper stack sits below the hook (A) on the side paper guide.

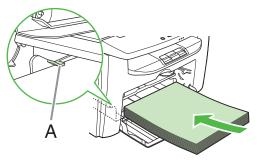

7 Adjust the paper guide rail to match the size of paper.

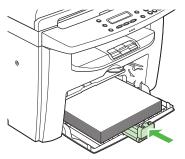


8 Aligning the protrusions (A) on the both sides of the dust cover to the guides (B) inside the machine, set the dust cover.

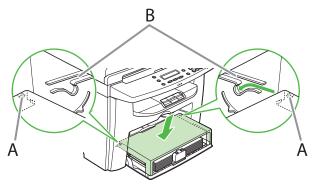


Ø NOTE

For D440, attach the document feeder tray on the document feeder.

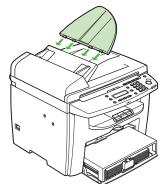


- The default paper size/type is set to <LTR> and <PLAIN PAPER> in the setting menu. When you load other size and/or type of paper, change the paper size/type setting by pressing
 [Paper Settings]. For details, see "Introduction of the Machine," in the e-Manual.
- For loading paper in the multi-purpose tray, see "Introduction of the Machine," in the e-Manual.
- If a printout falls out of the output tray, extend the output tray extension on the front side of the machine and set the paper stopper upright.

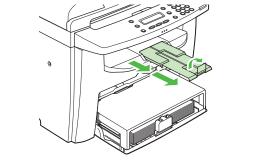

Connect Power Cord and Turn On the Machine

1 Connect the power cord into the rear socket on the back side of the machine and the wall outlet, and press the [I] side of the main power switch (A) to turn ON.

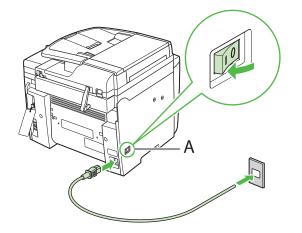

🥏 ΝΟΤΕ

Do not connect the machine and the computer with a USB cable at this time. Connect the machine and the computer with a USB cable only during the software installation procedure. (A USB cable is not used when the machine is used via a network connection.)

2 The machine enters the standby mode.



What if...

• The LCD display turned OFF: The machine may enter the Sleep mode while you are performing setup. Press

The machine may enter the Sleep mode while you are performing setup. Press [Energy Saver] to turn the display back ON and continue the setup.

 <SET PAPER AGAIN/SET TONER AGAIN> is displayed: Check the installation of the toner cartridge and the placement of the paper. (See "Install Toner Cartridge," on p. 5 and "Set Up Paper Cassette and Load Paper," on p. 8.)


```
    <CLOSE COVER/TONER COVER> is displayed:
Make sure that the toner cover and scanning platform are closed properly. (See
"Install Toner Cartridge," on p. 5.)
```

Set Up Network Connection (D460 Only)

If you are using the D440/D420, skip this chapter.


Connect the LAN Cable

Connect a LAN cable that is compatible with the LAN connector of this machine.

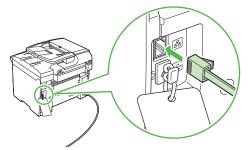

Compatible LAN Cables

A category 5 or greater twisted pair LAN cable is compatible with the machine. Connect one end to the 10Base-T/100Base-TX port on the back of the machine and the other end to a network router or a hub.

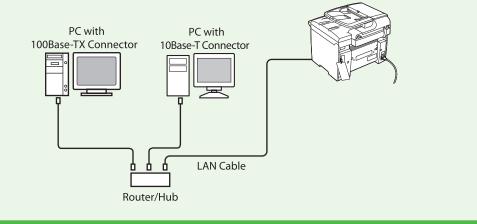

Ø NOTE

- A LAN cable is not included with the machine.
- If you use the machine as a local printer, connect the machine directly to a computer using a USB cable.

Connect the Machine to Network


To use the machine by connecting to the network, you must set up the IP address.

An IP (Internet Protocol) address is an identification number assigned to each individual computer connected to the Internet.

To use the following functions, you must set up the IP address in advance.

- Remote UI: Access and change the machine settings from browser on the computer by using the Remote UI software.
- PC print: Print the documents from the computer.
- Scan: Save scanned documents to the computer.

The following flow chart indicates the settings needed for each function.

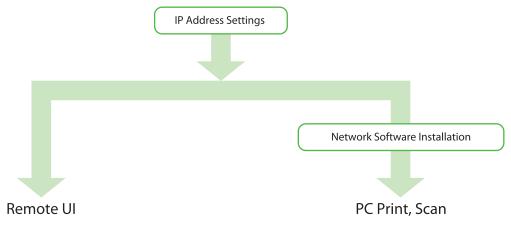

Specify the IP Address Settings


Automatic Setting

By default, the IP address is assigned to the machine automatically by the DHCP server. Therefore, all you need to do when using DHCP is just to connect the network cable. After connecting the LAN CABLE, wait for 30 seconds until the machine gets the IP address.

Check IP Address Setting

To make sure this machine is communicating to the network properly, follow the procedure on p. 15.

- It is recommended that the network administrator performs the procedure on p. 15.
- Before performing the procedure on p. 15, make sure that the machine is turned ON and connected to a network.

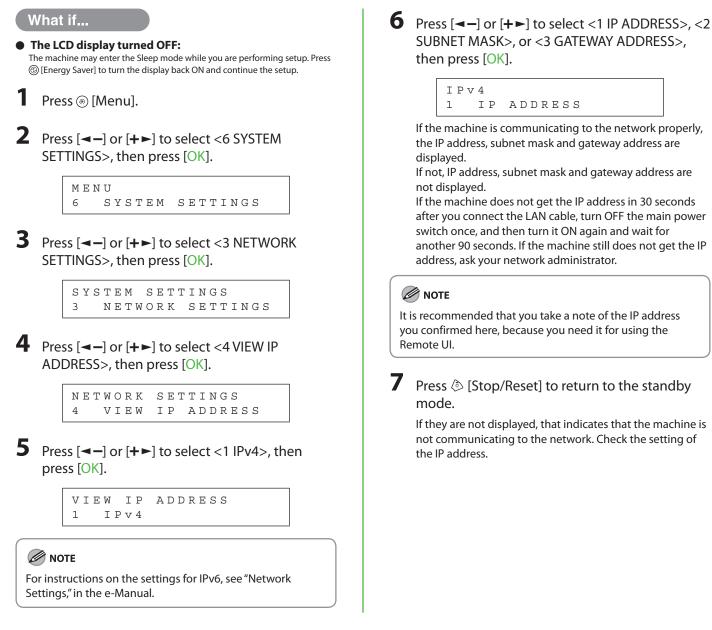

Manual Setting

This is the setting for the Static IP. If the machine obtains IP address automatically in "Automatic Setting", skip this setting.

In this setting, you enter the IP address, subnet mask, gateway address manually. (a) [Menu] \rightarrow <6 SYSTEM SETTINGS> \rightarrow <3 NETWORK SETTINGS> \rightarrow <1 TCP/IP SETTINGS> \rightarrow <1 IPv4 SETTINGS> \rightarrow <1 IP ADDRESS AUTO> \rightarrow <0FF> \rightarrow <2 IP ADDRESS> \rightarrow Enter the IP address \rightarrow <3 SUBNET MASK> \rightarrow Enter the subnet mask \rightarrow <4 GATEWAY ADDRESS> \rightarrow Enter the gateway address \rightarrow Press (b) [Stop/Reset] \rightarrow Turn OFF the main power \rightarrow Restart the machine.

For more information on this setting, see "Network Settings," in the e-Manual. Once you complete the setting, please proceed to "Check IP Address Setting," on p. 14.

Set Up Computers and Software

Types of Connection between Computers and the Machine

There are two ways to connect the machine and computers: USB connection and network connection. Network Connection is available only for D460.

Network Connection (For details about the set up, see p. 19.)


The following functions are available with Network Connection: PC Print, Remote UI, Scan

For more information on how to use each function with network connection, refer to the following:

- PC Print Remote UI
- → "Print," in the e-Manual
- → "Settings from a PC," in the e-Manual

Scan

 \rightarrow "Scan," in the e-Manual

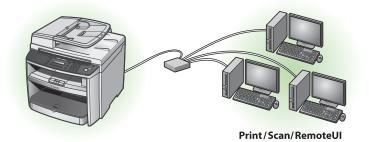

USB Connection (For details about the set up, see p. 24.)

The following functions are available with USB Connection: PC Print, Scan


For more information on how to use each function with USB Connection, refer to the following:

PC Print

 \rightarrow "Print," in the e-Manual

Scan

→ "Scan," in the e-Manual

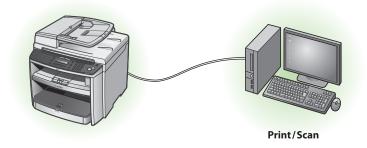

Ø NOTE

You can use the USB connection and network connection together.

System Requirement

Microsoft Windows 2000

CPU: Intel Pentium 133 MHz or faster Memory: 128 MB or more

Microsoft Windows XP

CPU: Intel Pentium/Celeron series 300 MHz or faster Memory: 128 MB or more

Microsoft Windows Server 2003* CPU: Intel Pentium/Celeron series 133 MHz or faster Memory: 128 MB or more *Network only

About User Software CD-ROM

<Drivers & Toolbox>

🎾 Printer Driver

Using the Printer Driver, the various data processing tasks conventionally executed within the printer are appropriately divided between the host PC and the printer to greatly reduce the overall printing time. The workload can be delegated to match the output data, thus realizing a significant increase in speed through optimization.

🧼 XPS Driver

The Canon XPS Printer Driver enables you to print documents in Windows Vista from applications that use the XPS format, utilizing the features and characteristics of the XPS format to the maximum extent. Microsoft Windows Vista CPU: Intel Pentium 800 MHz or faster

Memory: 512 MB or more

Microsoft Windows Server 2008* CPU: Intel processor 1 GHz (x86 processor), 1.4 GHz (x64 processor) or faster Memory: 512 MB or more *Network only

Microsoft Windows 7 CPU: 1 GHz (×86 processor, ×64 processor) or faster Memory: 1 GB (×86 processor), 2 GB (×64 processor) or more

USB Scanner Driver (ScanGear MF)

ScanGear MF enables computer to use the machine as a scanner.

MOTE

ScanGear MF is not supported on Windows Server 2003 and Windows Server 2008.

🕮 MF Toolbox

MF Toolbox is a program that allows you to easily import images scanned with a scanner into an application, attach them to e-mail messages, save them to hard disks, etc.

Ø NOTE

MF Toolbox is not supported on Windows Server 2003 and Windows Server 2008.

Network Scanner Driver (Color Network ScanGear)

Install this software to use the machine as a scanner on a network.

🥭 ΝΟΤΕ

- Color Network ScanGear is available only for D460.
- Color Network ScanGear is not supported on all of the 64bit operating systems.

<Bundled Programs>

Presto! PageManager

Presto! PageManager makes it easy to scan, share and organize photos and documents. For details, see the online manual and online help for this program.

🥭 ΝΟΤΕ

To install Presto! PageManager, load the User Software CD into a computer, click on the [Custom Installation] button on the CD-ROM Setup screen, click on the [Next] button for USB connection, then follow the instructions that appear on the screen.

MetSpot Device Installer (NSDI)

NetSpot Device Installer enables you to set up the machine for network operations. For details, see the Readme file and online help for this program.

Ø NOTE


NetSpot Device Installer (NSDI) is not supported on Windows Server 2008 (32bit) and all of the 64-bit operating systems.

Network Connection (D460 Only)

Before Installation

- The following procedures are explained using sample screens from Windows XP Professional.
- The screen may differ according to the operating system, as well as the type and version of the printer driver.
- Log on as an Administrator to install the software.
- Click on the circled button on each screen to proceed to the next step.
- Make sure the machine is turned ON. (See "Connect Power Cord and Turn On the Machine," on p. 12.)
- Make sure the network cable is connected to the machine. (See "Connect the LAN Cable," on p. 13.)
- Make sure an IP address is assigned to the machine. (See "Check IP Address Setting," on p. 14.)

MF Drivers Installation

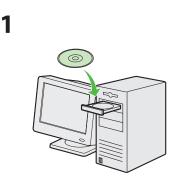

Insert the User Software CD-ROM.



If the CD-ROM Setup screen is not displayed, click [start] on the Windows task bar \rightarrow [My Computer].

Ø NOTE

To install the software programs individually, select [Custom Installation], then follow the onscreen instructions.

Windows Vista/7/Server 2008: click [Start] on the Windows task bar \rightarrow [Computer]. Windows Server 2003: click [Start] on the Windows task bar \rightarrow [My Computer]. Windows 2000: double-click [My

Computer] on the Windows desktop.

Right-click on the CD-ROM icon and select [Open], then double-click [MInst] ([MInst.exe]).


3



4






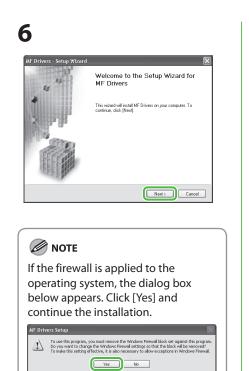

| Select Device Select a target device | to install the driver. |
|--|---|
| Select Device Select Driver Select Driver Port Settings Confirm Settings Install | If the target device is not listed below, click (Nest) without selecting a device. Then, you can manafy set the port to install. Device List: |
| 5. Install 6. Set Detsuit Printer 7. Print Test Page 8. Ewit | Carvon D400-450 0000165 0F-4016 152:163.055.08 Search by IP Addee Update Device Lat. |
| Search Option | (Bak Nest) Carcel |

 Select your machine on the list. Make sure that the machine name is highlighted.
 Click [Next>].


8

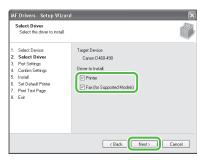

9 x F Drivers - Schup Wilzerd Confin Settinge Confin the following setting detait. Seted Device Seted Device Seted Device Seted Device Confinis Settinge Confinis Settinge Set Delault Thrite Print Fare Proge Set Delault Thrite Print Fare Proge Set Delault Thrite Print Pri 23:183:082:04 Diver: Control M60480 Printe Name Device 10 Prior 10 Printe Device School Thrite Device 10 Printe Device School Thrite Divers to Add. Cancel Cancel

When you share the printer with Windows 2000/XP/Server 2003/ Vista/7/Server 2008, select [Use as Shared Printer]. If necessary, you can change the name of shared printer. If you want to set the operating system on which driver will run, click [Drivers to add] to install an alternate driver so that the driver can be installed on a client PC via a network.


10

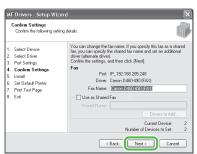

11

| MF Drivers - Setup Wizard | × |
|--|--|
| Confirm Settings The setup program will install I | he drivers with the following settings. |
| Select Device Select Driver Select Driver Select Driver Select Driver Confirm Settings Confirm Settings Set Default Printer Print Test Page Exit | Contin the estings, then cick (Start) to star installing Heres for Installands PostP 192 183 205 246 PostP 192 183 205 246 PostP 203 182 205 246 Differe Canno 04604 90 Differe Canno 04604 90 Differe Canno 04604 90 Differe Canno 04604 90 (PAN) |
| | K Back Start Cancel |


12

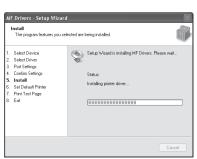

13



14

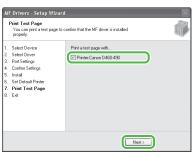


A printer test page is printed out from the machine.







18

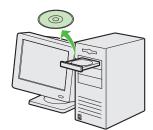

Remove the User Software CD-ROM. Installation is complete.


🥢 ΝΟΤΕ

If you have several computers that you want to connect to the machine through a network, repeat the procedure from step 1 for each computer.





Insert the User Software CD-ROM.

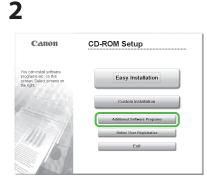

If the CD-ROM Setup screen is not displayed, click [start] on the Windows task bar \rightarrow [My Computer].

Windows Vista/7: click [Start] on the Windows task bar → [Computer]. Windows 2000: double-click [My Computer] on the Windows desktop.

Right-click on the CD-ROM icon and select [Open], then double-click [MInst] ([MInst.exe]).

To install the Color Network ScanGear on Windows Server 2008, click [Start] on the Windows task bar \rightarrow [Computer] \rightarrow right-click on the CD-ROM icon and select [Open] \rightarrow [Color_ Network_ScanGear] \rightarrow [Driver] \rightarrow double-click [SetUp] ([Setup.exe]), then proceed to step 4.

| Additional Softv | vare Programs | |
|--------------------|--|--|
| | | Explanation of Software |
| NetSpot Devi | ce Installer for TCP/IP | Start |
| Color Network | k ScanGear | Install |
| | | |
| Easy and Custom In | istallation, help you make the most of I | is, most of which may not be included in he many functions of this device, on on the right of each program to exec |


| Choose S | etup Language 🛛 🕅 |
|----------|---|
| Ł | Select the language for this installation from the choices below. |
| | English (United States) |
| | OK Cancel |


Select the same language as your operating system.


Ø NOTE


If you selected a language that is not same as your operating system, the characters may be garbled.

5

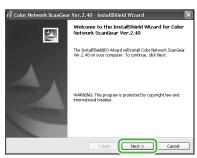

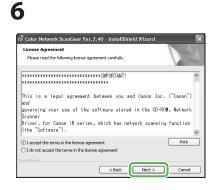

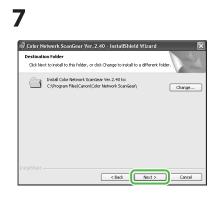


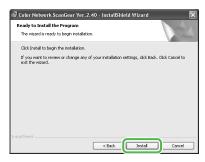




The Readme file opens. After reading it, close the window.

| NetSpot Device Installer for TCP/IP | Start |
|--|------------------------------------|
| Color Network ScanGear | Install |
| | |
| | |
| | |
| | |
| Easy and Custom Installation, help you make the most of | the many functions of this device. |
| Here you can start or install programs, etc. These programs Beey and Custom installation, help you make the most of Operations vary, depending on the program. Circk the but | the many functions of this device. |

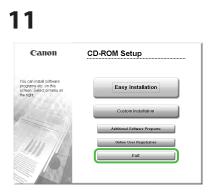

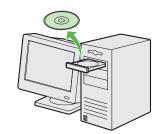

Remove the User Software CD-ROM. Installation is complete.

Check Installation

Verify that the driver has been installed successfully and that the machine has been set as the default printer.

Ø NOTE

If the name of the machine is selected on the [Printer] screen from an application, it is set as the default printer.

Open the [Printers and Faxes] folder (for Windows 2000: The [Printers] dialog box).

Windows XP/Server 2003: From the Windows task bar, click [start] \rightarrow select [Printers and Faxes]. Windows Server 2008: From the Windows task bar, click [Start] \rightarrow select [Control Panel] \rightarrow double-click [Printers]. Windows Vista: From the Windows task bar, click [Start] \rightarrow select [Control Panel] \rightarrow [Hardware and Sound] \rightarrow double-click [Printers]. Windows 2000: From the Windows task bar, click [Start] \rightarrow [Settings] \rightarrow [Control Panel] \rightarrow double-click [Printers]. Windows 7/Server 2008 R2: From the Windows task bar, click [Start] \rightarrow select [Devices and Printers].

Verify that the corresponding printer driver icon is displayed.

2 Set your machine as the default printer.

Select the printer icon for this machine, then select [Set as Default Printer] from the [File] menu.

3 Verify that [Color Network ScanGear] is displayed in the program list.

Windows XP/Server 2003: From the Windows task bar, click [start] on the Windows task bar \rightarrow select [All Programs]. Windows Vista/7/Server 2008: From the Windows task bar, click [Start] on the Windows task bar \rightarrow select [All Programs]. Windows 2000: From the Windows task bar, click [Start] \rightarrow [Programs].

Verify that the [Color Network ScanGear] is listed in [All Programs] (or [Programs]).


USB Connection

Before Installation

- Windows Server 2003 and Windows Server 2008 are not supported.
- The following procedures are explained using sample screens from Windows XP Professional.
- The screen may differ according to the operating system, as well as the type and version of the printer driver.
- Do not connect the USB cable before installing the software. If you connect the USB cable before installing the software and the [Found New Hardware Wizard] screen appears, click [Cancel].
- Log on as an Administrator to install the software.
- Make sure the machine is turned ON before connecting the USB cable.
- Click on the circled button on each screen to proceed to the next step.
- A USB cable is not included with the machine.

MF Drivers & MF Toolbox Installation

1

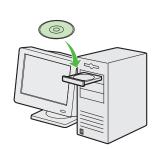

Insert the User Software CD-ROM.



If the CD-ROM Setup screen is not displayed, click [start] on the Windows task bar \rightarrow [My Computer].

Windows Vista/7: click [Start] on the Windows task bar → [Computer]. Windows 2000: double-click [My Computer] on the Windows desktop.


Right-click on the CD-ROM icon and select [Open], then double-click [MInst] ([MInst.exe]).

3






If the disk space is insufficient to install the software, an error message is displayed. Free the disk space, and then try again.

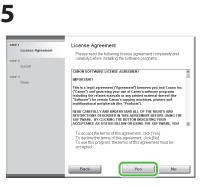



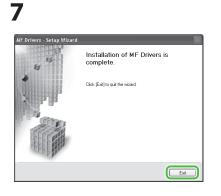




9



10

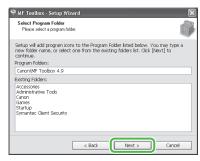

11



12




13

| STEP 1 License Agreement STEP 2 Jinstall | Install ME Toobox |
|---|-----------------------------|
| STEP 3 Done | |
| | Click [Next] to quit setup. |
| | Nox |

14




After checking [Restart Computer Now (Recommended)] button, you can restart your computer by clicking the [Restart] button. 15

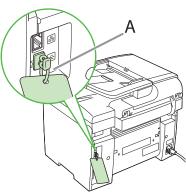

The machine has a cap (A) that covers the USB port on the back of the machine. Remove the cap (A) by pulling the string.

16

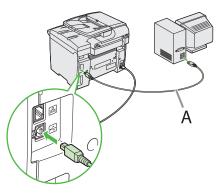

After restarting your computer, connect the machine and your computer with a USB cable (A).

Depending on the operating system you use, the dialog box to inform you that new hardware is detected may appear. Follow the on-screen instruction to complete the installation.



Remove the User Software CD-ROM. Installation is complete.

Check Installation

Verify that the driver has been installed successfully and that the machine has been set as the default printer.

If the name of the machine is selected on the [Printer] screen from an application, it is set as the default printer.

1 Open the [Printers and Faxes] folder (for Windows 2000: The [Printers] dialog box).

Windows XP: From the Windows task bar, click [start] \rightarrow select [Printers and Faxes]. Windows Vista: From the Windows task bar, click [Start] \rightarrow select [Control Panel] \rightarrow [Hardware and Sound] \rightarrow double-click [Printers]. Windows 7: From the Windows task bar, click [Start] \rightarrow select [Devices and Printers]. Windows 2000: From the Windows task bar, click [Start] \rightarrow [Settings] \rightarrow [Control Panel] \rightarrow double-click [Printers].

Verify that the corresponding printer driver icon is displayed.

2 Set your machine as the default printer.

Select the printer icon for this machine, then select [Set as Default Printer] from the [File] menu.

3 Open the [Scanners and Cameras] folder (for Windows 2000: The [Scanners and Cameras Properties] dialog box).

Windows XP: From the Windows task bar, click [start] \rightarrow select [Control Panel] \rightarrow [Printers and Other Hardware] \rightarrow [Scanners and Cameras₁.

Windows Vista: From the Windows task bar, click [Start] → select [Control Panel] → [Hardware and Sound] → double-click [Scanners and Cameras].

Windows 7: Enter "scanner" in [Search programs and files] under the [Start] menu \rightarrow click [View scanners and cameras]. Windows 2000: From the Windows task bar, click [Start] \rightarrow [Settings] \rightarrow [Control Panel] \rightarrow double-click [Scanners and Cameras].

Verify that the corresponding scanner driver icon is displayed.

4 Verify that there is the [Canon MF Toolbox 4.9] icon on the Windows desktop.

If the [Canon MF Toolbox 4.9] icon is displayed on the Windows desktop, installation of the MF Toolbox 4.9 was successful.

5 Appendix

User Manual CD-ROM (e-Manual)

The User Manual CD-ROM (e-Manual) is a software that enables you to select and view the HTML Manuals included on the CD-ROM on your computer screen. The manual describes all of the functions and troubleshooting for the machine. Follow the instructions below to use the User Manual CD-ROM (e-Manual).

System Requirements

The User Manual CD-ROM (e-Manual) can be used in the following system environments.

- OS (Operating System)
- Windows 2000 SP4, Windows XP, Windows Vista, Windows 7 (Internet Explorer 6 is required if you are using Windows 2000 SP4.)
 Mac OS X v10.4.x, v10.5.x
- Web Browser
- Windows: Internet Explorer 6, 7, 8
- Mac: Safari 2, 3, 4
- Flash Player
- Flash Player 8 or later

Ø NOTE

- The memory and CPU required to run each operating system are also required.
- A display with the resolution of 1024×768 pixels or higher is required.
- The User Manual CD-ROM (e-Manual) may not operate correctly if Flash Player is not installed or a version of Flash Player earlier than Flash Player 8.0 is installed on your computer.

5 Appendix

Using the User Manual CD-ROM (e-Manual)

- When using the e-Manual with Windows, follow the steps below.
- Install the e-Manual on your computer.
- 1. Insert the User Manual CD-ROM on your computer.
- 2. Select the language.
- 3. Click [Install] button.
- 4. The installation starts automatically.
- 5. When the installation finished, press [OK].
- 6. To display the e-Manual, double-click on the shortcut icon [D460_Manual_us] on the desktop.

Display the e-Manual directly from the CD-ROM.


- 1. Insert the User Manual CD-ROM on your computer.
- 2. Select the language.
- 3. To display the e-Manual, click [Display manual].
- When using the e-Manual with Macintosh, follow the steps below.
- 1. Insert the User Manual CD-ROM in your computer.
- 2. Drag-and-drop the [D460_Manual_us] folder into the location you want to save it.
- 3. Open the [D460_Manual_us] folder.
- 4. Double click index.html, and the e-Manual is displayed.

MOTE

- If the menu is not displayed automatically after you insert the CD-ROM, follow the procedure below.
 Windows XP: click [Start] on the Windows task bar → [My Computer].
 Windows Vista/7: click [Start] on the Windows task bar → [Computer].
 Windows 2000: double-click [My Computer] on the Windows desktop.
- Right-click on the CD-ROM icon and select [Open], then double-click start.exe.
- Depending on the operating system you are using, a security protection message may be displayed. In this case, allow the contents to be displayed.

When you start the e-Manual, the screen below is displayed.

If you are using a browser such as Internet Explore for Windows XP, ActiveX blocks pop-ups in the background. If the e-Manual is not displayed properly, look for an information bar at the top of the page and click the information bar.

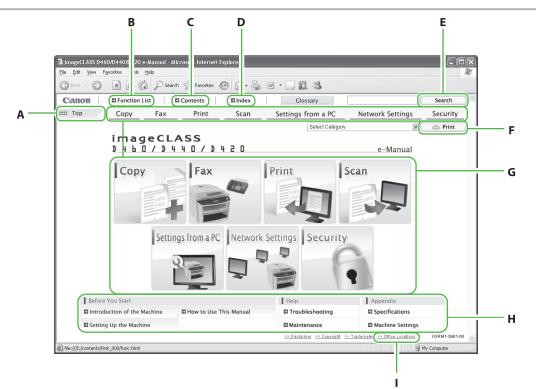

A [Top]

Click to return to the top page.

B [Function List]

Click to display the topic pages for function categories.

C [Contents]

Click to display the topic pages for Contents.

D [Index]

Click to display the topic pages for Index.

E [Keyword Search]

Click to display a list of the topic page titles that include the phrase you enter. Click a title to display the corresponding topic page.

F [Print]

Click to print all categories or a single category.

G Function Categories

Select a function category to display the list of image icons for the topics corresponding to that function. Click an image icon or [Display Function List] to display the topic pages for the function category.

H Appendix Categories

Select an appendix category to display the topic pages not related to functions, such as the maintenance and troubleshooting topics.

I [Office Locations] Click to display Canon contact details in a separate window.

🧷 ΝΟΤΕ

- When performing a search, make sure to enter a phrase that will match a keyword. Depending on the phrase you enter, the correct search results may not be displayed.
- Topic pages can be printed by page or by category.
- The background color and images of the Topic Page may not be printed, depending on the web browser settings.

Contacting Service Center

When you have a problem with your machine and you cannot solve it even if you refer to the manuals or online help, please contact our Canon Authorized Service Facilities or the Canon Customer Care Center at 1-800-OK-CANON between the hours of 8:00 A.M. to 8:00 P.M. EST for U.S.A. and 9:00 A.M. to 8:00 P.M. EST for Canada Monday through Friday.

Canadian customer support is available on-line at www.canon.ca or by calling 1-800-652-2666 Monday through Friday from 9:00 A.M. to 8:00 P.M. EST

Trademarks

Canon, the Canon logo, imageCLASS, and NetSpot are trademarks of Canon Inc. Microsoft, Windows, Windows Server, and Windows Vista are trademarks or registered trademarks of Microsoft Corporation in the U.S. and/or other countries.

All other product and brand names are registered trademarks, trademarks or service marks of their respective owners.

Copyright

Copyright © 2009 by Canon Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon Inc.

Disclaimers

The information in this document is subject to change without notice.

CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR NON-INFRINGEMENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.



CANON INC. 30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

CANON MARKETING JAPAN INC. 16-6, Konan 2-chome, Minato-ku, Tokyo 108-8011, Japan

CANON U.S.A., INC. One Canon Plaza, Lake Success, NY 11042, U.S.A.

CANON EUROPA N.V.

Bovenkerkerweg, 59-61, 1185 XB Amstelveen, The Netherlands

CANON CHINA CO. LTD. 15F Jinbao Building No.89, Jinbao Street, Dongcheng District, Beijing 100005, PRC

CANON SINGAPORE PTE LTD 1 HarbourFront Avenue, #04-01 Keppel Bay Tower, Singapore 098632

CANON AUSTRALIA PTY LTD 1 Thomas Holt Drive, North Ryde, Sydney NSW 2113, Australia

CANON GLOBAL WORLDWIDE SITES

http://www.canon.com/



120V